

KODAK RETINA FIELD CASE, MODELS C AND D

FIG.	PART NO.	PART NAME	REQD.
30	N-4335	Shoulder Strap Assy.	1
30	N-4392	Screw - Camera retaining	1
30	N-4393	Plate - Camera retaining screw	1
30	N-4394	Plate - Snap button stud catch.	1
30	N-4402	Cap - Snap button	1
30	N-4403	Socket - Snap button cap	1
30	N-4404	Post - Snap button	1
30	N-4405	Stud - Snap button post	1
30	N-4406	Sleeve - Snap button post sleeve	1
30	N-4767	Loop - Strap	2
30	N-5084	Field Case Cover Assy (1/1.9-50mm, Model C)	1
30	N-5085	Field Case Bottom Assy	1
30	N-5086	Field Case Cover Assy (1/2.8-50mm, Model D)	1
30	121434	Stud - Shoulder strap	2

Always give PART NUMBER and NAME when ordering parts.

EASTMAN KODAK COMPANY • ROCHESTER 4, NEW YORK

ORDER PARTS FROM APPARATUS PARTS SERVICE • EASTMAN KODAK COMPANY, ROCHESTER 4, N. Y. •

Corrected to DECEMBER 1959

PARTS LIST No. 5525

KODAK RETINA III S CAMERA
WITH
SYNCHRO COMPUR SHUTTER
AND
Kodak Retina Field Case
Models C and D



EASTMAN KODAK COMPANY • ROCHESTER 4, N. Y.

KODAK RETINA III S CAMERA

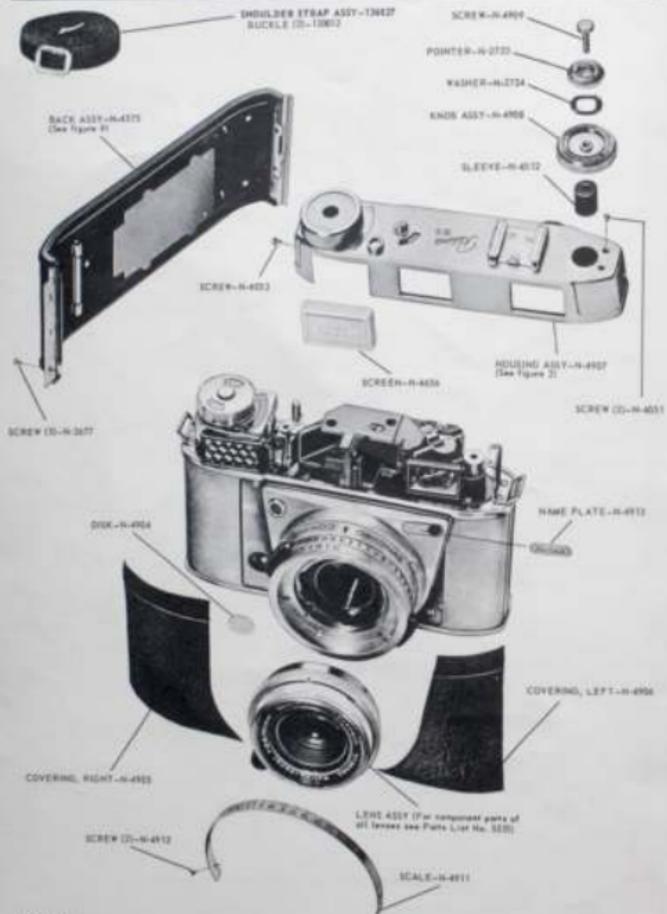


FIGURE 1

Always give PART NUMBER and NAME when ordering parts.

KODAK RETINA III S CAMERA

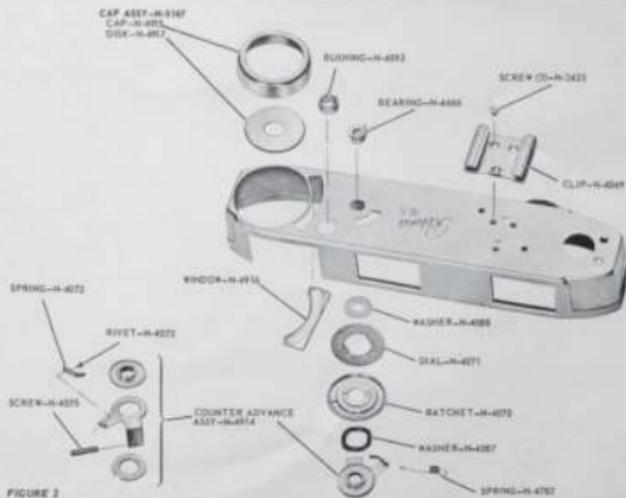


FIGURE 2

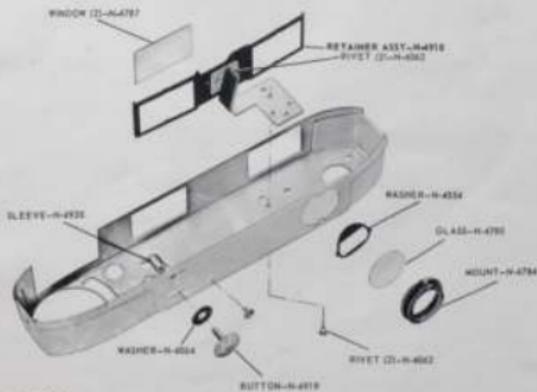


FIGURE 3

Always give PART NUMBER and NAME when ordering parts.

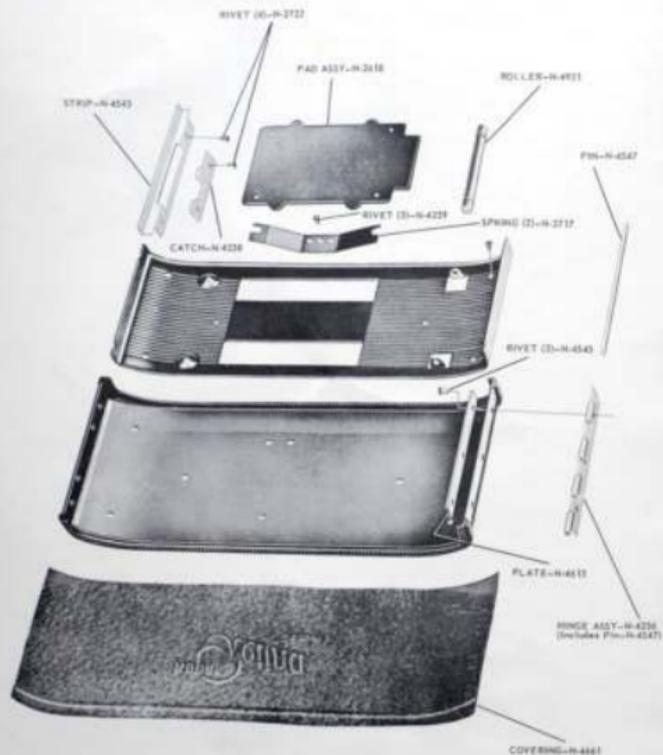


FIGURE 4

4.

Always give PART NUMBER and NAME when ordering parts

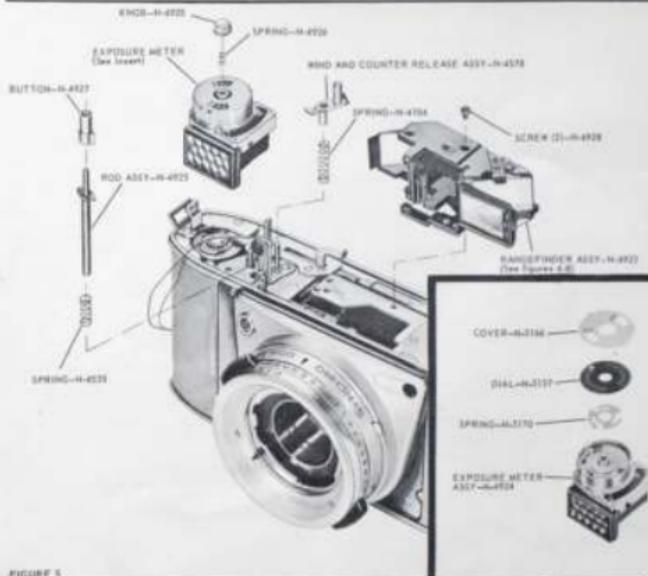


FIGURE 5

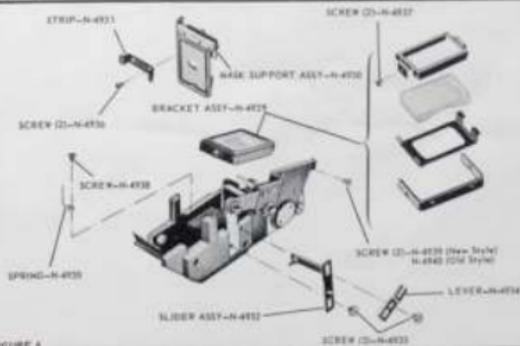


FIGURE 6

Always give PART NUMBER and NAME when ordering parts

5.

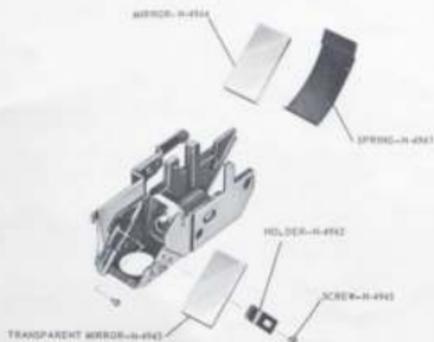


FIGURE 7

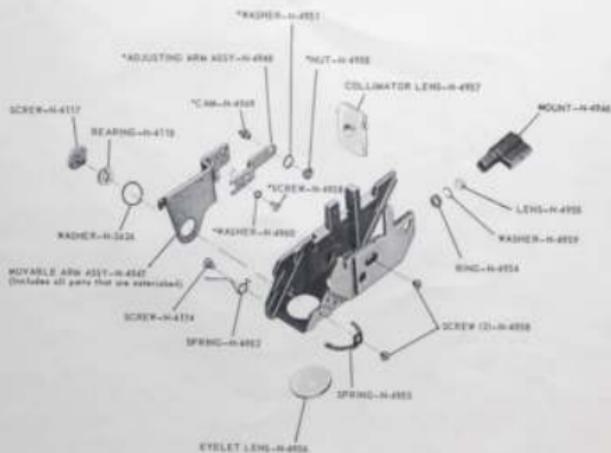


FIGURE 8

Always give PART NUMBER and NAME when ordering parts

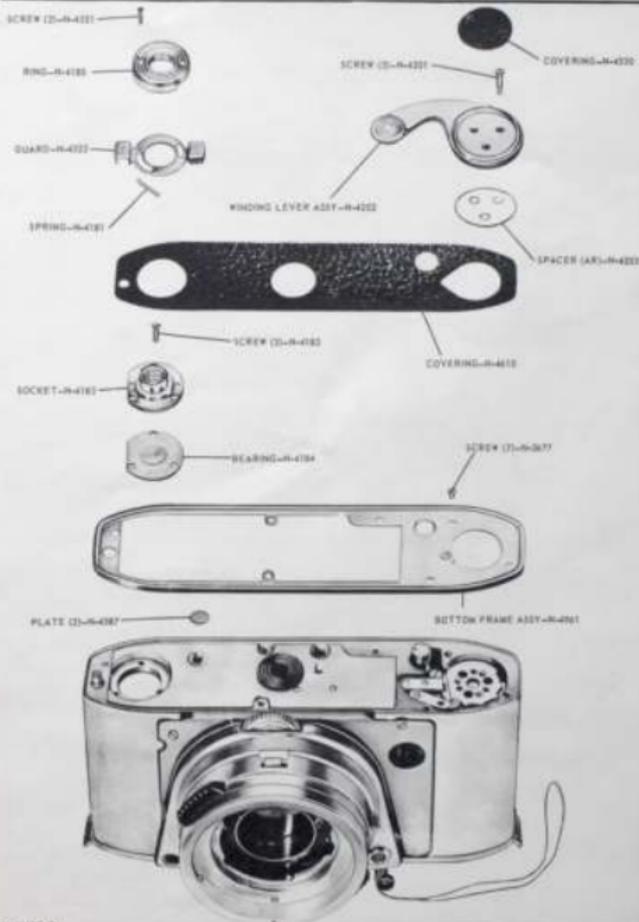


FIGURE 9

Always give PART NUMBER and NAME when ordering parts



FIGURE 10

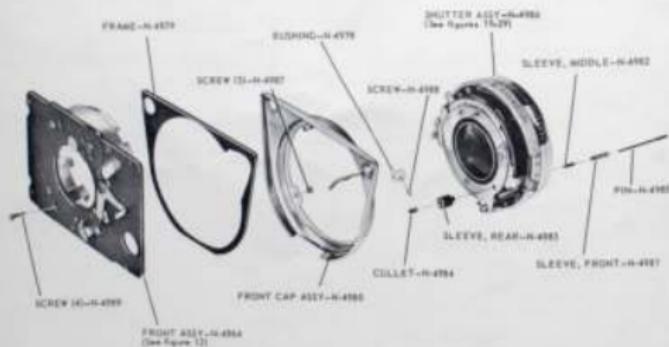


FIGURE 11

Always give PART NUMBER and NAME when ordering parts

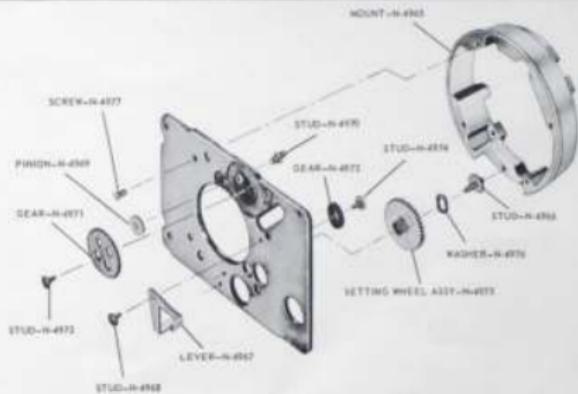


FIGURE 12

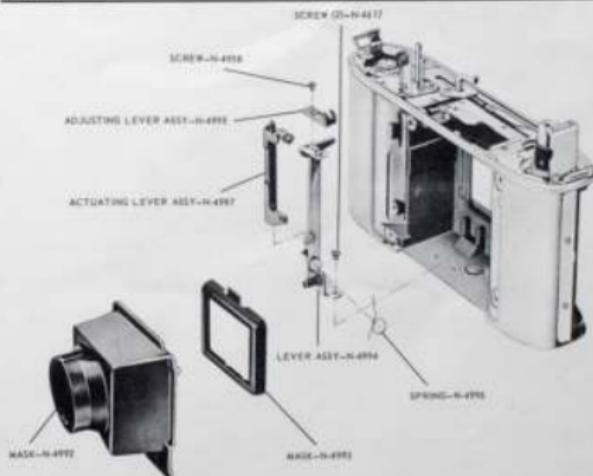


FIGURE 13

Always give PART NUMBER and NAME when ordering parts

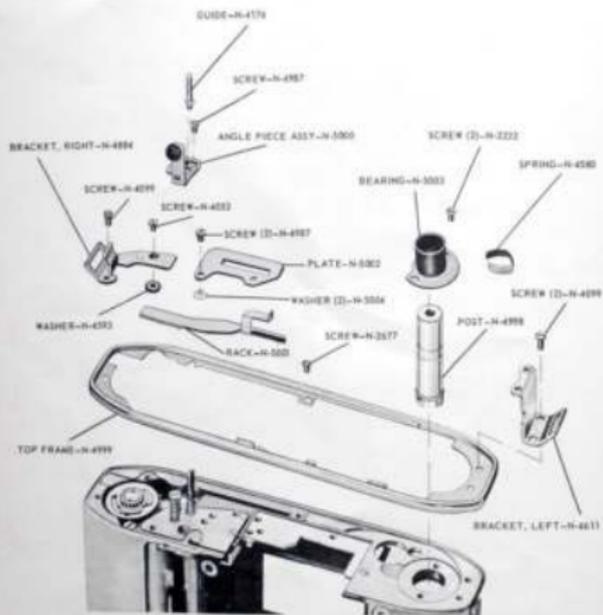


FIGURE 14

10

Always give PART NUMBER and NAME when ordering parts

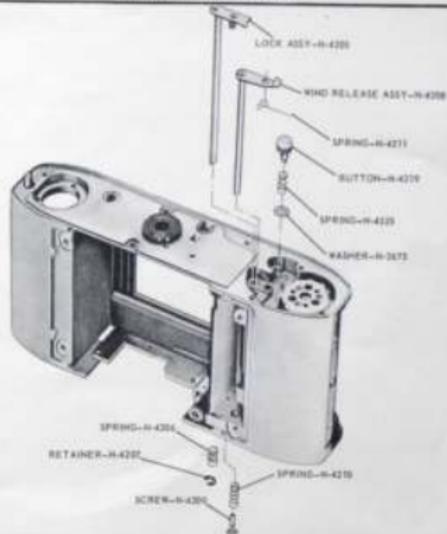


FIGURE 15

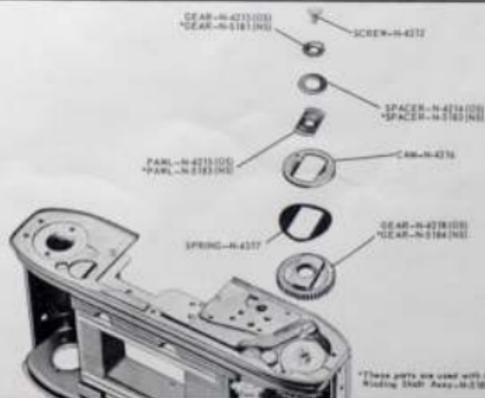


FIGURE 16

Always give PART NUMBER and NAME when ordering parts

11

*See Figure 18 for parts used with this assembly.

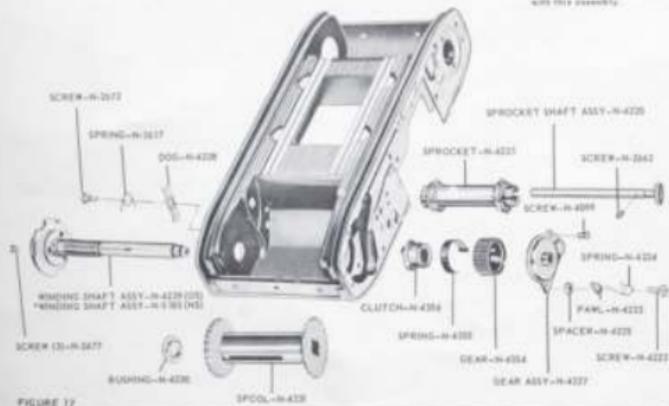


FIGURE 17

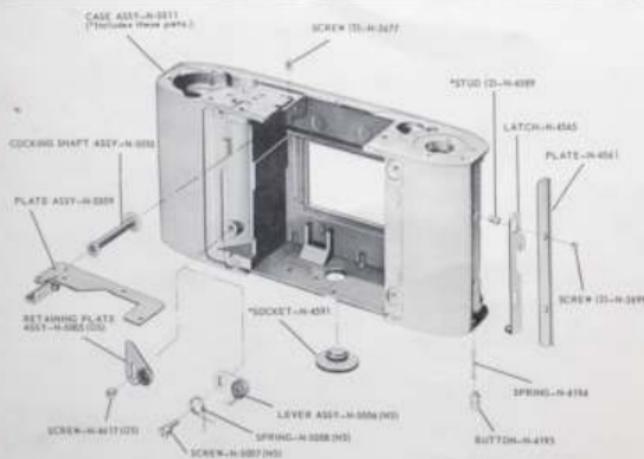


FIGURE 18

Always give PART NUMBER and NAME when ordering parts

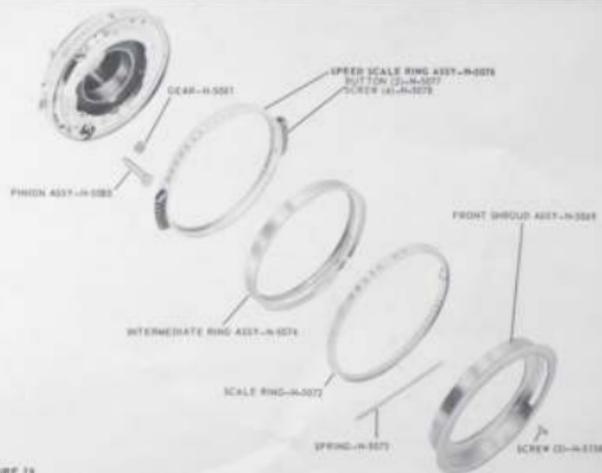


FIGURE 19

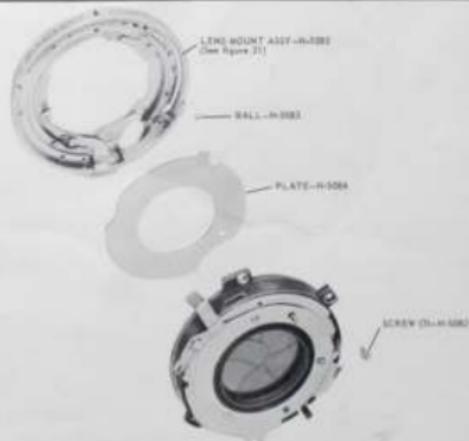


FIGURE 20

Always give PART NUMBER and NAME when ordering parts

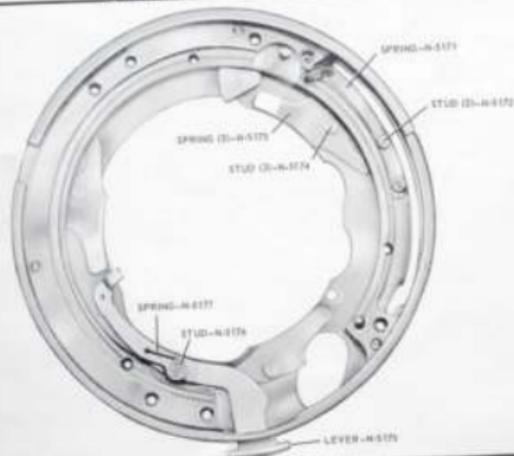


FIGURE 21

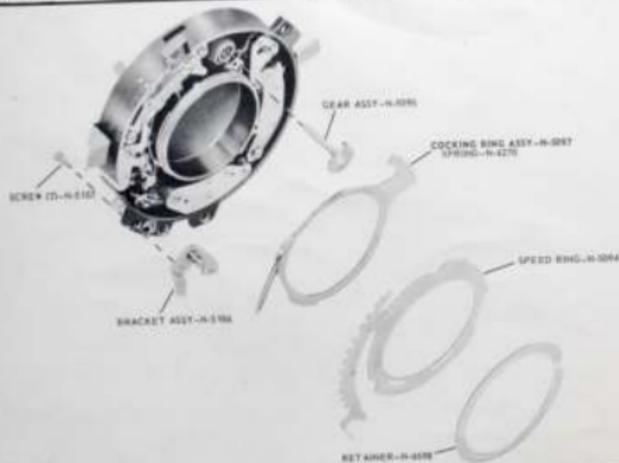


FIGURE 22

Always give PART NUMBER and NAME when ordering parts

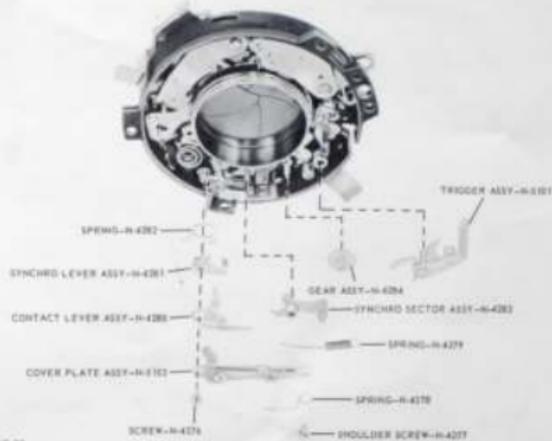


FIGURE 23

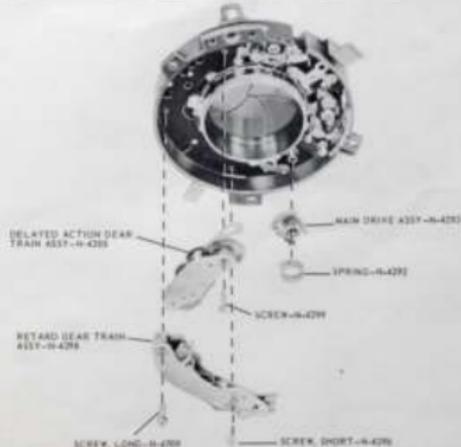


FIGURE 24

Always give PART NUMBER and NAME when ordering parts



FIGURE 25

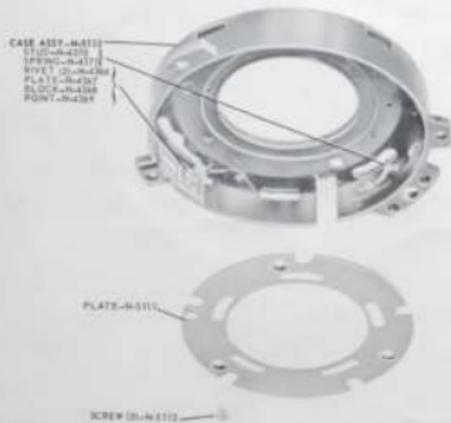


FIGURE 26

Always give PART NUMBER and NAME when ordering parts

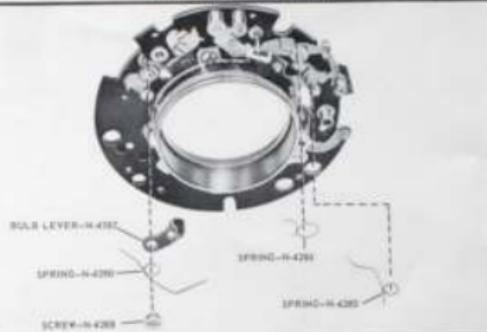


FIGURE 27



FIGURE 28

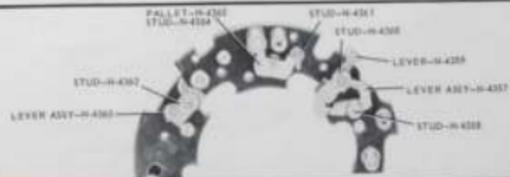


FIGURE 29

Always give PART NUMBER and NAME when ordering parts



FIGURE 30. KODAK RETINA FIELD CASE, MODELS C and D

Always give PART NUMBER and NAME when ordering parts

FIG.	PART NO.		PART NAME	REQD.
	U.S.	Gencon		
14	N-2322	G-2467/1	Screw - Rewind post bearing	2
2	N-2423	G-2036/6	Screw - Accessory clip	2
9	N-2426	G-011564	Washer - Movable arm screw tension	1
17	N-2617	G-016066	Spring - Rewind release dog	1
4	N-2618	G-0161334/1	Film Tension Pad Assy.	1
17	N-2662	G-2533/1	Screw - Spiccket shaft	1
17	N-2672	G-016085	Screw - Rewind release dog	1
15	N-2675	G-4623/1	Washer - Rewind release button	1
1,9,14,17,18	N-2677	G-2507/1	Screw - Back to case (1), Bottom frame to case (7), Top frame (1), Winding shaft Assy (1), Support plate Assy (1)	1
18	N-2699	G-2114/1	Screw - Back latch	2
4	N-2717	G-016302	Spring - Tension pad	2
1	N-2722	G-1357/4	Rivet - Back catch (2), Finishing strip (2)	4
1	N-2723	G-016670	Pointer - Film indicator	1
1	N-2724	G-016623	Washer - Tension	1
2	N-4049	G-021738	Clip - Accessory	2
1	N-4051	G-2507/6	Screw - Housing to carrying strap bracket, left	1
1	N-4052	G-2533/1	Screw - Finder housing to carrying strap bracket, left	1
3	N-4064	G-1221/1	Rivet - Viewfinder reinforcement plate	4
2	N-4064	G-4048/0	Washer - Counter power button	1
2	N-4070	G-021718	Ratchet - Counter	1
2	N-4071	G-021720	Dial - Counter	1
1	N-4072	G-021711	Spring - Coaster actuating	1
2	N-4073	G-1366/1	Rivet - Coaster actuating spring	1
1	N-4075	G-2544/1	Screw - Exposure counter adjusting	1
1	N-4087	G-021717	Washer - Counter ratchet tension	1
2	N-4088	G-4638/1	Washer - Counter ratchet spacing	2
2	N-4092	G-021706	Bushing - Body release	1
14,17	N-4099	G-2537/1	Screw - Carrying strap bracket, left (2), right (1), Bushing and gear Assy (1)	4
5	N-4104	G-021624	Spring - Wind and counter release	1
8	N-4117	G-021427	Screw - Movable arm	1
8	N-4118	G-021425	Bearing - Movable arm	1
8	N-4137	G-021225	Screw - Arm Assy actuating spring	1
14	N-4176	G-021617	Guide - Wind and counter release	1
9	N-4180	G-021612	Ring - Tripod socket outer	1
9	N-4181	G-021611	Spring - Back latch button guard	3
9	N-4182	G-2527/1	Screw - Tripod socket to case	1
9	N-4183	G-021595	Socket - Tripod	1
9	N-4184	G-021594	Bearing - Counter	1
18	N-4193	G-021018	Button - Back latch	18
18	N-4194	G-021013	Spring - Back latch button	3
9	N-4201	G-2526/1	Screw - Winding lever	1
9	N-4202	G-021602/1	Winding Lever Assy	1
9	N-4203	G-021605	Spacer - Wind lever	1
15	N-4205	G-021540/1	Film Advance Lock Assy	1
15	N-4206	G-021584	Spring - Film advance lock Assy	1
15	N-4207	G-4994/4	Retainer - Film advance lock spring	1
15	N-4208	G-021570/1	Wind Release Assy	1
15	N-4209	G-021578	Screw - Wind release adjusting	1
15	N-4210	G-021577	Spring - Wind release	1
15	N-4211	G-021574	Spring - Wind release throw-out	1
16	N-4212	G-021550	Screw - Winding shaft	1
16	N-4213	G-021549	Gear - Winding shaft	2
18	N-4214	G-4630/0	Spacer - Winding shaft pinion	1
16	N-4215	G-021545	Pawl - Winding shaft	1
16	N-4216	G-021544	Cam - Winding shaft	1
16	N-4217	G-021543	Spring - Tension	1
16	N-4218	G-021532	Gear - Film advance drive	1
15	N-4219	G-021564	Button - Rewind release	1
17	N-4220	G-021555/1	Sprocket Shaft Assy	1
17	N-4221	G-021560	Sprocket	1
17	N-4222	G-021540	Screw - Drive gear pawl	1

Always give PART NUMBER and NAME when ordering parts

KODAK RETINA III 5 CAMERA

FIG.	PART NO. U.S.	GENRES	PART NAME	REQD.
17	N-4223	G-021538	Pawl - Drive gear	1
17	N-4224	G-021539	Spring - Drive gear pawl	1
17	N-4225	G-021536	Spacer - Drive gear pawl	1
17	N-4227	G-021527/1	Bushing and Gear Assy	1
17	N-4228	G-021561	Dog - Rewind release	1
17	N-4229	G-021500/1	Winding Shaft Assy	1
17	N-4230	G-021516	Bushing - Take-up spool	1
17	N-4231	G-021518/1	Spool - Take-up	1
4	N-4236	G-021321/1	Hinge - Back	1
4	N-4238	G-021104	Catch - Back	1
4	N-4239	G-1371/1	Rivet - Film tension pad spring	1
9	N-4321	G-02328/3	Screw - Tripod socket outer ring	1
9	N-4322	G-021610	Guard - Back latch button	1
15	N-4325	G-021563	Spring - Rewind release button	1
17	N-4354	G-021524	Gear - Clutch	1
17	N-4355	G-016540	Spring - Clutch pressure	1
17	N-4356	G-021522	Clutch	1
2	N-4466	G-021721	Bearing - Release and counter	1
1	N-4512	G-021781	Sleeve - Rewind post	1
5	N-4530	G-025667	Covering - Winding lever	1
5	N-4535	G-023626	Spring - Body release trip	1
5	N-4543	G-023293	Strip - Back finishing	1
4	N-4545	G-1379/1	Rivet - Hinge to back	1
4	N-4547	G-7050/1	Pin - Hinge	1
14	N-4552	G-021637	Screw - Carrying strap handle, right	1
3	N-4574	G-023737	Washer - Eyepiece	1
18	N-4580	G-023015	Plate - Back latch	1
18	N-4585	G-023010	Latch - Back	1
1	N-4575	G-025290/2	Back Assy.	1
5	N-4578	G-023620/1	Wind and Counter Release Assy	1
14	N-4580	G-021635	Spring - Clutch pressure	1
9	N-4587	G-023330	Plate - Cloning	1
18	N-4589	G-023074	Rivet - Back latch guide	1
18	N-4591	G-023094	Socket - Positioning	1
14	N-4593	G-023539	Washer - Setting rack guide	1
9	N-4610	G-023336	Covering - Case, bottom	1
18	N-4611	G-023636	Bracket - Carrying strap, left	1
4	N-4613	G-021295	Plate - Reinforcement	1
3, 18	N-4617	G-2224/5	Screw - Lens frame lever to case, 2L Retaining	3
1	N-4656	G-025673	Screen - Diffusing	1
1	N-4661	G-025555	Covering - Back	1
2	N-4762	G-028724	Spring - Counter advance	1
3	N-4784	G-028725	Mount - Eyepiece	1
3	N-4785	G-0191/0	Glass - Eyepiece	1
3	N-4787	G-0194/0	Window - Viewfinder	1
14	N-4884	G-023838	Bracket - Carrying strap, right	1
1	N-4904	G-027343	Disk -	1
1	N-4905	G-027357	Covering - Right side	1
1	N-4906	G-027358	Covering - Left side	1
1	N-4907	G-027700/2	Housing Assy.	1
1	N-4908	G-027765/1	Rewind Knob Assy	1
1	N-4909	G-027774	Screw - Rewind knob	1
1	N-4911	G-027910/9	Scale - Distance	1
1	N-4912	G-2615/0	Screw - Distance scale	2
1	N-4913	G-9003/0	Plate - Name	1
2	N-4914	G-027710/1	Counter Advance Assy.	1
2	N-4915	G-027740	Cap - Exposure meter	1
2	N-4916	G-0225/0	Window - Exposure meter	1
2	N-4917	G-0226/0	Disk - Photoglass	1
1	N-4918	G-027730/1	Retainer Assy -	1
3	N-4919	G-028704	Button - Counter setting	1
3	N-4920	G-028705	Sleeve - Counter setting button	1
3	N-4921	G-021309	Roller Film	1

Always give PART NUMBER and NAME when ordering parts.

KODAK RETINA III 5 CAMERA

FIG.	PART NO. U.S.	GENRES	PART NAME	REQD.
5	N-4922	G-027401/2	Rangefinder Assy	1
5	N-4923	G-027425/1	Body Release Push Rod Assy	1
5	N-4924	G-027643/2	Exposure Meter Assy	1
5	N-4925	G-027685	Knob - Exposure meter	1
5	N-4926	G-027686	Spring - Exposure meter	1
5	N-4927	G-027927	Button - Body release	1
5	N-4928	G-3925/4	Screw - Rangefinder Assy to case	1
6	N-4929	G-027430/1	Bracket Assy	1
6	N-4930	G-027430/1	Mask Support Assy	1
6	N-4931	G-027450	Strip - Mask support	1
6	N-4932	G-027460/1	Slider Assy	1
6	N-4933	G-027464	Screw - Slider lever	1
6	N-4934	G-027465	Lever - Slider	1
6	N-4935	G-027475	Spring - Mask support strip	2
6	N-4936	G-2114/4	Screw - Mask to bracket	2
6	N-4937	G-2171/4	Screw - Mask to bracket	2
6	N-4938	G-2487/4	Screw - Mask support spring	1
6	N-4939	G-2588/1	Screw - Mask Assy to movable arm (New style, filterster head)	2
6	N-4940	G-2597/4	Screw - Mask Assy to movable arm (Old style, counter sunk)	2
7	N-4941	G-027473	Spring - Mirror	1
7	N-4942	G-028440	Holder - Mirror	1
7	N-4943	G-0195/9	Mirror - Transparent	1
7	N-4944	G-0222/9	Mirror	1
7	N-4945	G-2596/4	Screw - Mirror holder	1
8	N-4946	G-027402	Mount - Rangefinder lens	1
8	N-4947	G-027410/1	Movable Arm Assy	1
8	N-4948	G-027413/1	Adjusting Arm Assy	1
8	N-4949	G-027416	Cam - Fast adjusting	1
8	N-4950	G-027418	Nut - Wind and counter release pin	1
8	N-4951	G-027418	Washer - Wind and counter release pin	1
8	N-4952	G-027428	Spring - Movable arm	1
8	N-4953	G-027470	Spring - Eylet glass retaining	1
8	N-4954	G-028405	Ring - Rangefinder lens retaining	1
8	N-4955	G-0193/0	Lens - Rangefinder	1
8	N-4956	G-0194/0	Lens - Eylet	1
8	N-4957	G-0231/0	Lens - Collimator	1
8, 13	N-4958	G-2042/4	Screw - Rangefinder lens mount (2), Adjusting arm (1)	1
8	N-4959	G-4051/0	Washer - Rangefinder lens	1
8	N-4960	G-4654/4	Washer - Adjusting arm to movable arm	1
8	N-4961	G-027025/1	Bottom Frame Assy	1
10	N-4962	G-2610/1	Screw - Front cover	6
10	N-4963	G-4983/4	Washer - Spring	4
11	N-4964	G-027302/2	Front Assy	1
11	N-4965	G-027202	Mount - Shutter	1
11	N-4966	G-027308	Shaft - Setting wheel	1
11	N-4967	G-027212	Lever - Body release	1
11	N-4968	G-027214	Stud - Body release lever	1
11	N-4969	G-027216	Gear - Shutter setting coupler piston	1
11	N-4970	G-027221	Stud - Coupler	1
11	N-4971	G-027220	Gear - Shutter setting idler	1
11	N-4972	G-027222	Stud - Shutter setting idler gear	1
11	N-4973	G-027225	Gear - Setting wheel slider	1
11	N-4974	G-027226	Stud - Setting wheel slider	1
11	N-4975	G-027240/1	Setting Wheel Assy	1
11	N-4976	G-027248	Washer - Setting wheel tension	4
11	N-4977	G-3057/1	Screw - Shutter mount to front	1
11	N-4978	G-022755	Bushing - Insulating	1
11	N-4979	G-027250	Frame - Ornamental	1
11	N-4980	G-027255/1	Front Cover Assy	1
11	N-4981	G-027265	Sleeve - Guide, front	1
11	N-4982	G-027268	Sleeve - Guide, middle	1
11	N-4983	G-027267	Sleeve - Guide, rear	1
11	N-4984	G-027269	Collar - Rangefinder guide pin	1

Always give PART NUMBER and NAME when ordering parts.

FIG.	U.S.	PART NO. German	PART NAME	REQD.
11	N-4985	G-027270	Pis - Guide	1
11	N-4986	G-027805	Shutter Complete Assy	1
11,14	N-4987	G-2509/1	Screw - Front cover Assy to front (3) Angle piece Assy to case (1), Setting rack guide plate to case (2)	1
11	N-4988	G-2570/1	Screw - Insulating bushing	1
11	N-4989	G-2600/1	Screw - Shutter to shutter mount	4
10	N-4990	G-027260/1	Cable Drum Assy	1
10	N-4991	G-027263	Cord - Transmission	1
13	N-4992	G-027091	Mask - Light tunnel	1
13	N-4993	G-027092	Mask	1
13	N-4994	G-027095/1	Accessory Lens Frame Lever Assy	1
13	N-4995	G-027105/1	Accessory Lens Frame Adjusting Lever Assy	1
13	N-4996	G-027117	Spring - Lens frame lever	1
13	N-4997	G-027130/1	Rangefinder Actuating Lever Assy	1
14	N-4998	G-026630	Post - Rewind	1
14	N-4999	G-027028	Frame - Top	1
14	N-5000	G-027150/1	Angle Piece Assy	1
14	N-5001	G-027615	Rack - Setting	1
14	N-5002	G-027616	Plate - Setting rack guide	1
14	N-5003	G-027632	Bearing - Rewind post	1
14	N-5004	G-4626/1	Washer - Setting rack guide plate screw	2
18	N-5005	G-027020/1	Retaining Plate Assy	1
18	N-5006	G-027030/1	Lever - Tensioning	1
18	N-5007	G-027032	Screw - Tensioning lever	1
18	N-5008	G-027033	Spring - Tensioning lever	1
18	N-5009	G-027125/1	Support Plate Assy	1
18	N-5010	G-027140/1	Shutter Cocking Shaft Assy	1
18	N-5011	G-027092/2	Case Assembly	1
2	N-5157	G-027660	Dial - Film speed	1
3	N-5166	G-027482	Cover - Film speed dial	1
3	N-5167	G-027740/1	Film Speed Window Cap Assy	1
5	N-5170	G-027668	Spring - Film speed dial tension	1
16	N-5181	G-034549	Gear - Winding shaft (New style)	1
16	N-5182	G-4663/0	Spacer - Winding shaft piston (New style)	1
16	N-5183	G-035545	Pin - Winding shaft (New style)	1
16	N-5184	G-034532	Gear - Film advance drive (New style)	1
17	N-5185	G-034500	Winding Shaft Assy (New style)	1
1	120012		Buckle - Camera shoulder strap	2
1	136827		Camera Shoulder Strap Assy	1

SYNCHRO COMPUR SHUTTER FOR THE KODAK RETINA III S CAMERA

FIG.	PART NO.	PART NAME	REQD.
22	N-4270	Spring - Cocking ring	1
22	N-4276	Screw - Synchro cover plate	1
23	N-4277	Screw - Synchro cover plate, shoulder	1
23	N-4278	Spring - Main drive lock	1
23	N-4279	Spring - Synchro gear	1
23	N-4280	Contact Lever Assy	1
23	N-4281	Spring - Synchro lever	1
23	N-4282	Synchro Selector Assy	1
23	N-4284	Synchro Gear Assy	1
27	N-4285	Spring - Blade operating check	1
27	N-4286	Spring - Synchro lock	1
27	N-4287	Lever - Bulb	1
27	N-4288	Screw - Bulb lever	1
27	N-4290	Spring - Self timer	1
27	N-4292	Spring - Main drive	1
24	N-4293	Main Drive Assy	1
28	N-4294	Plate - Synchro gear spring anchor	1
28	N-4295	Screw - Synchro gear spring anchor plate	1

Always give PART NUMBER and NAME when ordering parts

FIG.	PART NO.	PART NAME	REQD.
24	N-4296	Screw - Retard gear train, short	1
24	N-4296	Retard Gear Train Assy	1
24	N-4299	Screw - Delayed action gear train	1
24	N-4300	Delayed Action Gear Train Assy	1
24	N-4301	Stop - Main drive gear	1
24	N-4302	Screw - Main drive stop	1
28	N-4304	Screw - Shutter tube retaining	2
25	N-4312	Screw - Case to mechanism plate	1
28	N-4357	Lever - Synchro lock	1
29	N-4358	Stud - Synchro lock lever	1
29	N-4359	Lever - Synchro	1
29	N-4360	Stud - Synchro lever	1
29	N-4361	Stud - Synchro gear	1
29	N-4362	Stud - Time release lever	1
29	N-4363	Lever - Time release	1
29	N-4364	Stud - Pallet	1
29	N-4365	Pallet	2
26	N-4366	Rivet - Contact plate	2
26	N-4367	Plate - Contact block retaining	1
26	N-4368	Block - Contact	1
26	N-4369	Point - Contact	1
26	N-4370	Stud - Synchro selector tension spring	1
26	N-4371	Spring - Synchro selector tension	1
22	N-4698	Retainer - Speed ring	1
24	N-4709	Screw - Retard gear train, long	1
19	N-5069	Front Thread Assy	1
19	N-5072	Ring - Diaphragm scale	1
19	N-5073	Spring - Diaphragm scale ring	1
19	N-5074	Intermediate Brass Ring Assy	1
19	N-5076	Speed Scale Ring Assy	1
19	N-5077	Button - Speed scale ring	2
19	N-5078	Screw - Speed scale ring button	1
19	N-5080	Coupler Shaft and Pinion Assy	1
19	N-5081	Screw - Coupler shaft idler	1
20	N-5082	Screw - Shutter to lens mount	2
20	N-5083	Ball - Speed scale ring	1
20	N-5084	Plate - Dust cover	1
20	N-5085	Lens Mount Assy	1
25	N-5088	Flash Ring Retaining Plate Assy	1
25	N-5089	Screw - Flash ring retaining plate	1
25	N-5090	Flash Set Lever Assy	1
22	N-5094	Ring - Speed	1
22	N-5095	Cocking Ring Gear Assy	1
22	N-5097	Cocking Ring and Spring Assy	1
23	N-5101	Trigger Assy	1
23	N-5103	Synchro Cover Plate Assy	1
22	N-5106	Coupler Shaft Idler Gear Bearing Bracket Assy	1
22	N-5107	Screw - Coupler idler gear bracket	2
25	N-5108	Plate - Shutter, common	4
25	N-5109	Blade - Shutter, notched	1
25	N-5110	Blade - Shutter, cover	1
26	N-5111	Plate - Case filler	1
26	N-5112	Screw - Case filler plate	8
26	N-5113	Shutter Case Assy	1
26	N-5115	Ring - Blade control	1
28	N-5116	Mechanism Plate Assy	1
21	N-5171	Spring - Detent ball	1
21	N-5172	Stud - Detent ball spring	1
21	N-5173	Spring - Lens mount tension	3
21	N-5174	Stud - Lens mount tension spring	3
21	N-5175	Lever - Lens lock	1
21	N-5176	Stud - Lens lock lever	1
21	N-5177	Spring - Lens lock lever	1
21	N-5219	Tube - Shutter	1

Always give PART NUMBER and NAME when ordering parts