

FIGURE 10

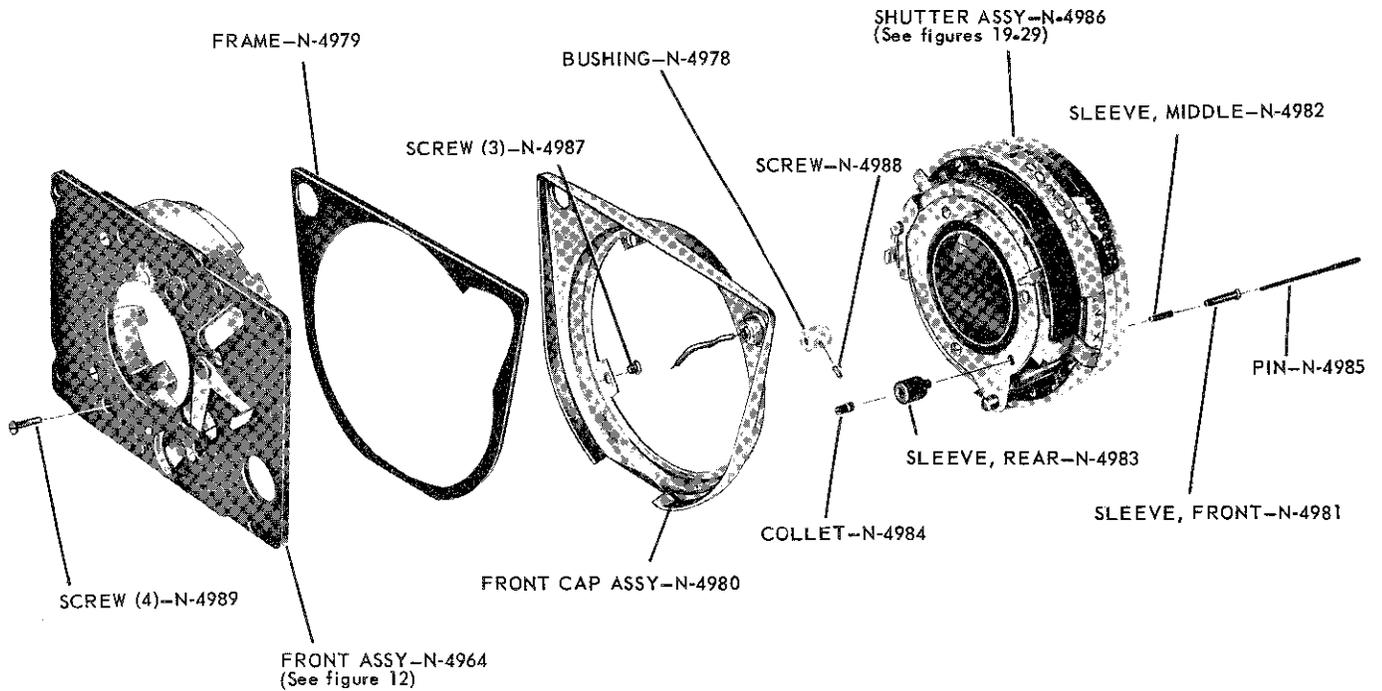


FIGURE 11

KODAK RETINA REFLEX S CAMERA PARTS LIST

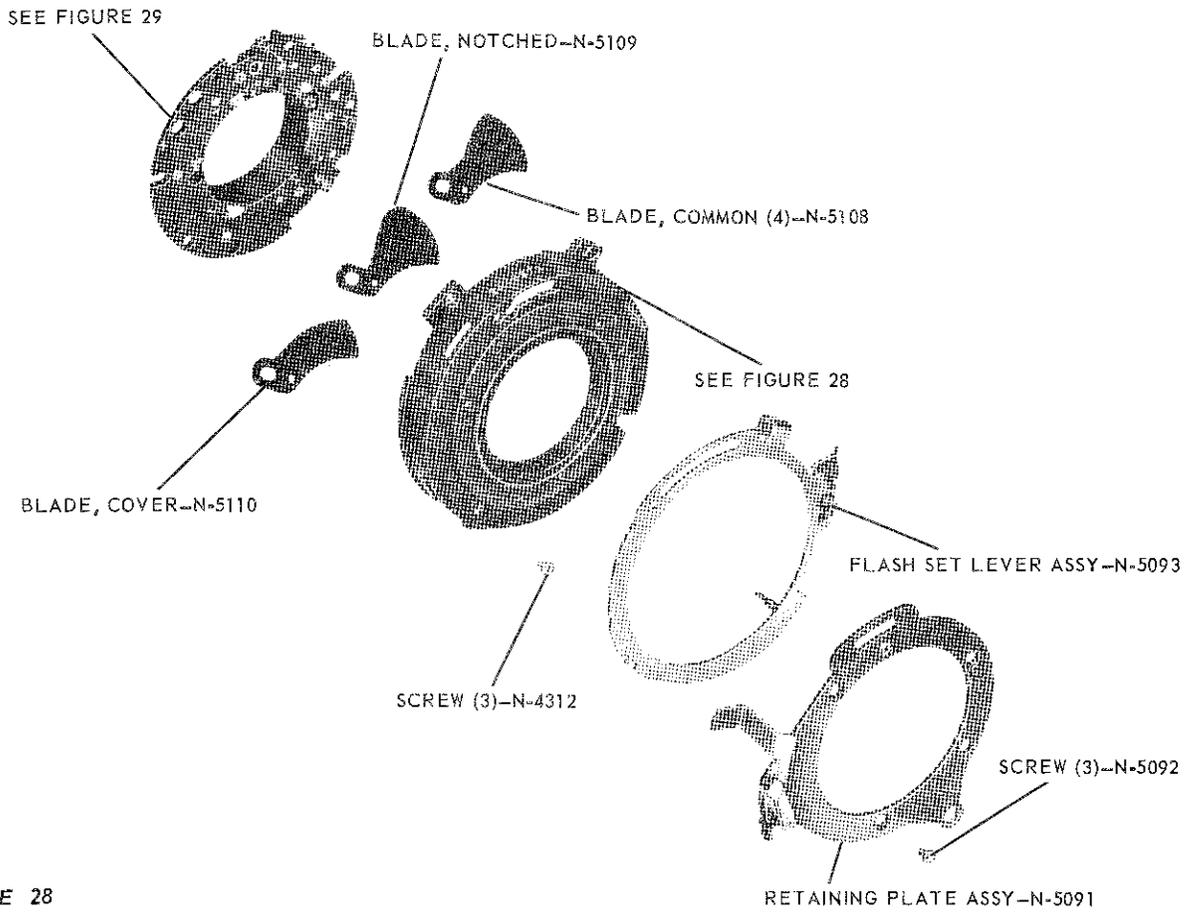


FIGURE 28

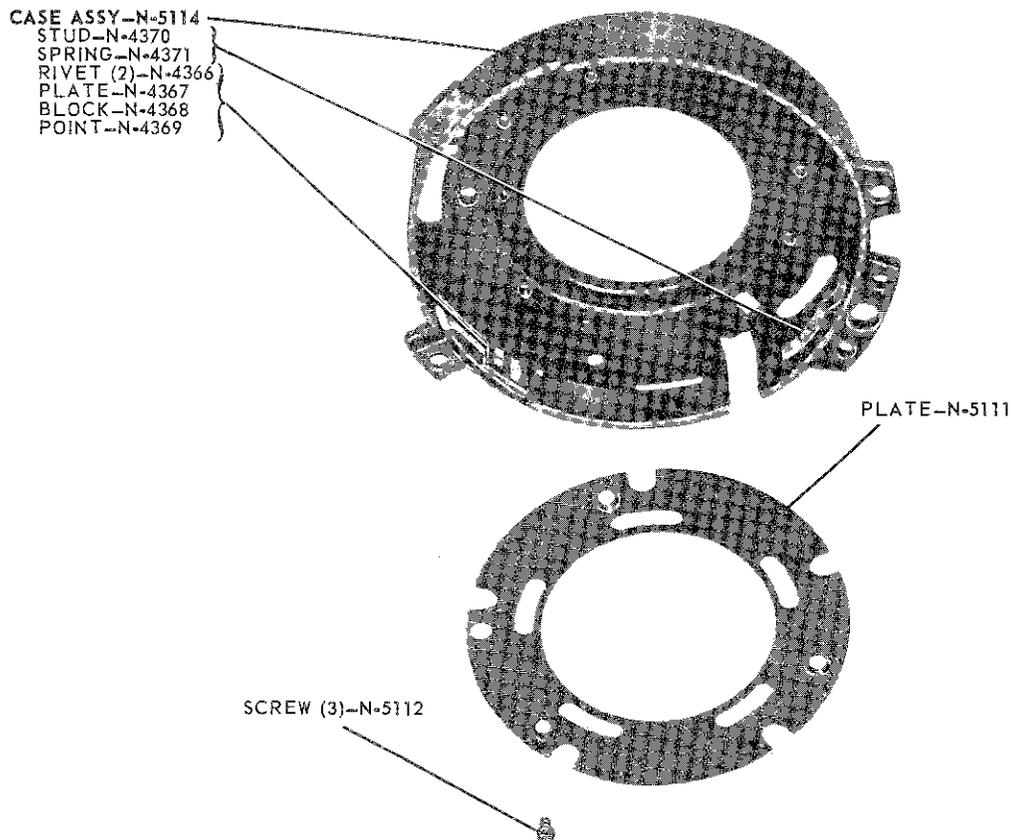


FIGURE 29

KODAK RETINA REFLEX S CAMERA PARTS LIST

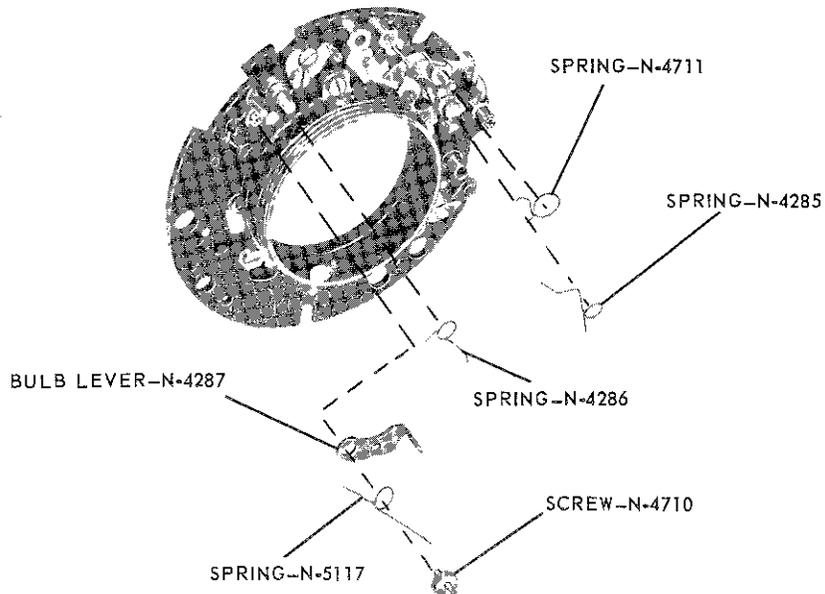


FIGURE 30

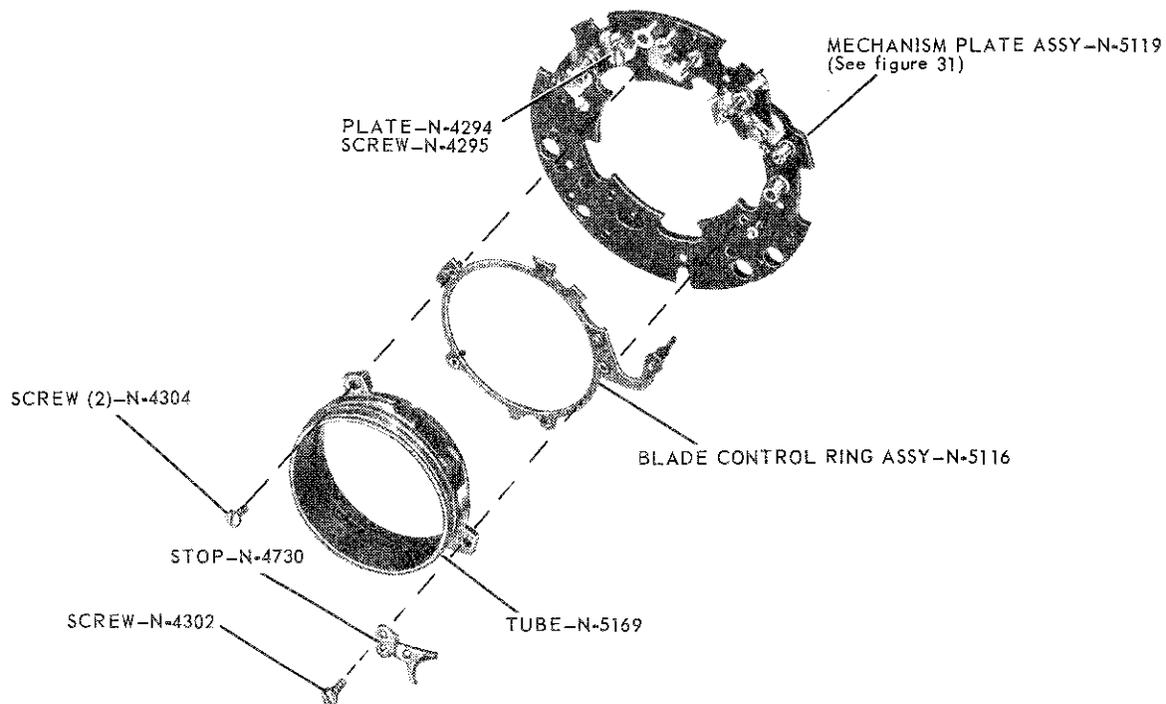


FIGURE 31

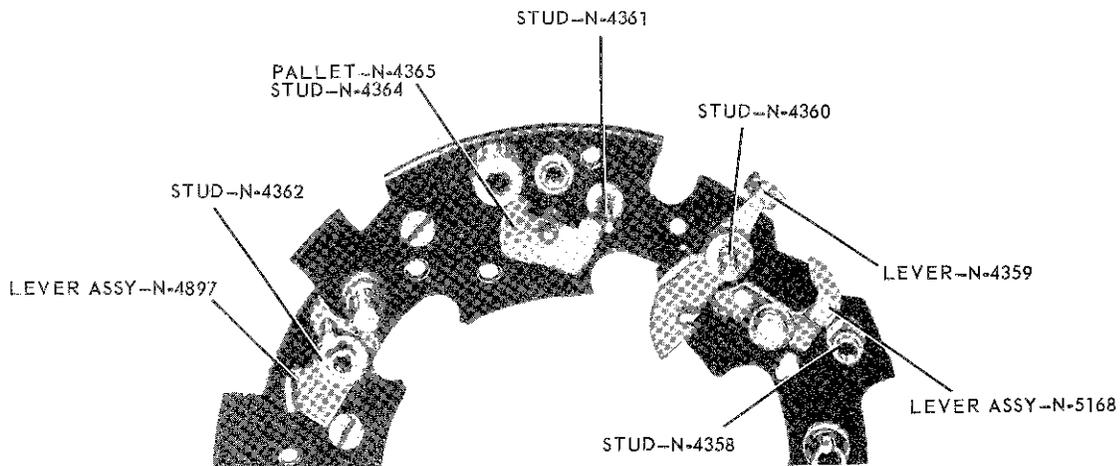


FIGURE 32

KODAK RETINA REFLEX S CAMERA PARTS LIST

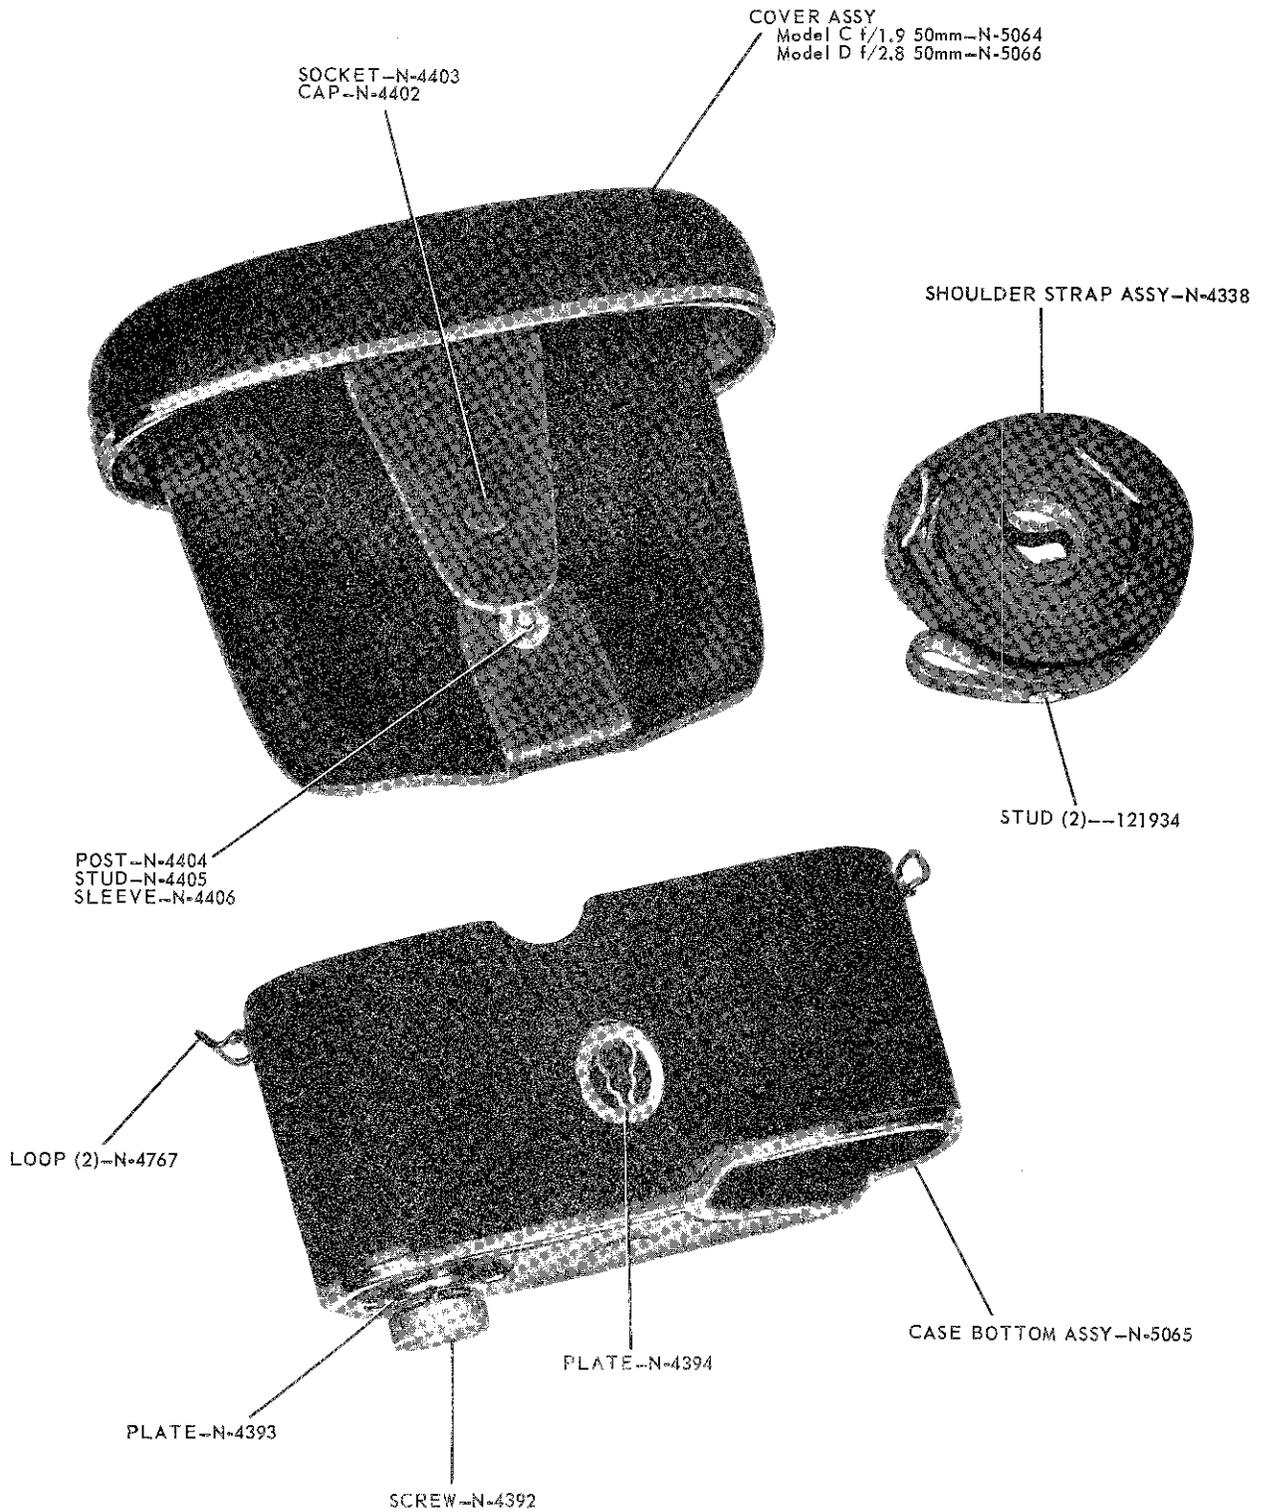


FIGURE 33. KODAK RETINA FIELD CASE, Models C and D

KODAK RETINA REFLEX S

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
13	N-2222	G-2467/1	Screw - Rewind post bearing	2
4	N-2423	G-2036/6	Screw - Clip	3
17	N-2617	G-016086	Spring - Rewind release dog	1
2	N-2618	G-016334/1	Film Tension Pad Assy.	1
17	N-2662	G-2533/1	Screw - Sprocket shaft	1
17	N-2672	G-016085	Screw - Rewind release dog.	1
15	N-2675	G-4623/1	Washer - Rewind release button	1
1,11 14,17	N-2677	G-2507/1	Screw - Back Assy (3), Front cover plate (2), Bottom frame (7), Winding shaft assy (3)	15
20	N-2699	G-2114/1	Screw - Back latch plate	2
2	N-2717	G-016302	Spring - Tension pad	2
2	N-2722	G-1357/4	Rivet	4
1	N-2723	G-016670	Pointer - Film indicator	1
1	N-2724	G-016623	Washer - Tension.	1
4	N-4001	G-018724	Spring - Exposure counter	1
3	N-4051	G-2507/6	Screw - Finder housing to carrying strap bracket, left	2
3	N-4052	G-2538/6	Screw - Finder housing to carrying strap bracket, right	1
6	N-4063	G-025704	Button - Counter setting	1
6	N-4064	G-4048/0	Washer - Counter setting button	1
4	N-4070	G-021718	Ratchet - Counter	1
4	N-4071	G-021720	Dial - Counter	1
5	N-4072	G-021711	Spring - Counter actuating.	1
5	N-4073	G-1366/1	Rivet - Counter actuating spring.	1
5	N-4075	G-2544/1	Screw - Exposure counter adjusting.	1
4	N-4087	G-021717	Washer - Counter ratchet tension	1
4	N-4088	G-4638/1	Washer - Counter ratchet spacing.	1
4	N-4092	G-021706	Bushing - Body release.	1
13,17	N-4099	G-2537/1	Screw - Roller thrust bearing assy (1), Carrying strap bracket, left (2), right (1), Bushing and gear assy (1).	5
7	N-4104	G-021624	Spring - Wind and counter release.	1
18	N-4115	G-2258/4	Setscrew - Mirror latch bracket.	1
13	N-4176	G-021617	Wind and counter release guide.	1
8	N-4180	G-021612	Ring - Tripod socket, outer	1
8	N-4181	G-021611	Spring - Back latch button guard.	1
14	N-4182	G-2527/1	Screw - Tripod socket.	3
14	N-4183	G-021595	Socket - Tripod	1
14	N-4184	G-021594	Bearing - Cassette	1
20	N-4193	G-021018	Button - Back latch.	1
20	N-4194	G-021013	Spring - Back latch button	1
8	N-4201	G-2526/1	Screw - Winding lever.	3
8	N-4202	G-021602/1	Lever - Winding.	1
8	N-4203	G-021605	Spacer - Wind lever	AR
15	N-4205	G-021580/1	Film Advance Lock Assy.	1
15	N-4206	G-021584	Spring - Film advance lock assy.	1
15	N-4207	G-4984/4	Retainer - Film advance lock spring	1
15	N-4208	G-021570/1	Wind Release Assy.	1
15	N-4209	G-021578	Screw - Wind release adjusting.	1
15	N-4210	G-021577	Spring - Wind release	1
15	N-4211	G-021574	Spring - Wind release throw-out.	1
16	N-4212	G-021550	Screw - Winding shaft.	1
16	N-4213	G-021549	Gear - Winding shaft (Old style)	1
16	N-4214	G-4630/0	Spacer - Winding shaft pinion (Old style)	1
16	N-4215	G-021545	Pawl - Winding shaft (Old style)	1
16	N-4216	G-021544	Cam - Winding shaft.	1
16	N-4217	G-021543	Spring - Tension	1
16	N-4218	G-021532	Gear - Film advance drive (Old style)	1
15	N-4219	G-021564	Button - Rewind release	1
17	N-4220	G-021555/1	Sprocket Shaft Assy	1
17	N-4221	G-021560	Sprocket.	1
17	N-4222	G-021540	Screw - Drive gear pawl	1
17	N-4223	G-021538	Pawl - Drive gear	1
17	N-4224	G-021539	Spring - Drive gear pawl.	1
17	N-4225	G-021536	Spacer - Drive gear pawl.	1

KODAK RETINA REFLEX S

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
17	N-4227	G-021527/1	Bushing and Gear Assy	1
17	N-4228	G-021567	Dog - Rewind release	1
17	N-4229	G-021500/1	Winding Shaft Assy (Old style)	1
17	N-4230	G-021516	Bushing - Take-up spool	1
17	N-4231	G-021518/1	Take-Up Spool Assy	1
2	N-4236	G-021321/1	Back Hinge Assy	1
2	N-4238	G-021104	Catch - Back	1
2	N-4239	G-1371/1	Rivet - Film tension pad spring	3
8	N-4321	G-2528/6	Screw - Tripod socket outer ring	2
8	N-4322	G-021610	Guard - Back latch button	1
15	N-4325	G-021563	Spring - Rewind release button	1
17	N-4354	G-021524	Gear - Clutch	1
17	N-4355	G-016540	Spring - Clutch pressure	1
17	N-4356	G-021522	Clutch	1
4	N-4466	G-021721	Bearing - Release and counter	1
1	N-4512	G-023761	Sleeve - Rewind post	1
3	N-4528	G-025753	Screw - Housing	1
8	N-4530	G-025607	Covering - Winding lever	1
3	N-4534	G-2509/1	Screw - Upper frame	1
7	N-4535	G-023628	Spring - Body release trip	1
2	N-4543	G-023293	Strip - Back finishing	1
21	N-4544	G-025685	Frame - Spacing	1
2	N-4545	G-1379/1	Rivet - Hinge to back	3
2	N-4547	G-7050/1	Pin - Hinge	1
21	N-4550	G-2487/4	Screw - Bracket to lens block (2), Prism mask (1)	3
13	N-4552	G-023637	Screw - Carrying strap bracket, right	1
6	N-4554	G-025728	Mask - Eyepiece	1
10,18,19	N-4556	G-2079/4	Screw - Leaf spring (1), Light guard retaining (2), Spring retaining plate (2)	5
18	N-4558	G-025033	Screw - Adjusting	1
20	N-4561	G-023015	Plate - Back latch	1
18	N-4562	G-025035	Screw - Mirror adjusting bracket assy	1
20	N-4564	G-025024	Lock - Slide	1
20	N-4565	G-023010	Latch - Back	1
20	N-4569	G-025130	Spring - Slide pressure	1
20	N-4570	G-025132	Lever - Mirror actuating	1
20	N-4571	G-025148	Screw - Mirror setting guide	2
21	N-4572	G-0187/5	Prism - Finder roof	1
21	N-4574	G-025682	Box - Finder	1
1	N-4575	G-025290/2	Back Assy	1
13	N-4576	G-023615	Rack - Setting	1
6	N-4577	G-025724	Mount - Eye	1
7	N-4578	G-023620/1	Wind Release Button Assy	1
13	N-4580	G-021635	Spring - Clutch pressure	1
14	N-4581	G-025030	Spring - Slide lock pressure	1
21	N-4584	G-025695	Mask - Penta prism	1
3,13	N-4586	G-2532/1	Screw - Prism bracket (2), Roller thrust bearing assy (1)	3
3,8	N-4587	G-023350	Plate - Closing	3
20	N-4588	G-025027	Screw - Aperture cover lock	1
20	N-4589	G-023014	Stud - Back latch guide	2
20	N-4591	G-023004	Socket - Flash bracket locating	1
13	N-4593	G-023639	Washer - Setting rack guide	1
18	N-4597	G-025038	Pin - Mirror bracket spring anchor	1
21	N-4598	G-025693	Mask - Prism	1
18	N-4602	G-025196	Guard - Light	1
21	N-4605	G-2585/4	Screw - Prism clamping	6
19	N-4606	G-023150	Pin - Mirror and light blocking flap	1
8	N-4610	G-023356	Covering - Bottom	1
13	N-4611	G-023636	Bracket - Carrying strap, left	1
9,11	N-4612	G-2490/1	Screw - Control shaft adjusting (1) Body release arm assy (1)	2
2	N-4613	G-021295	Plate - Hinge reinforcing	1
20	N-4616	G-025040	Stud - Mirror setting (1), Release guide (1) Aperture lever guide (1)	3
4,19	N-4617	G-2224/1	Screw - Accessory shoe base (4), Support angle piece assy to case (2)	6

KODAK RETINA REFLEX S

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
19	N-4619	G-025152	Spacer - Mirror and light blocking flap	1
19	N-4621	G-023153	Spacer - Housing and light flap.	1
21	N-4622	G-0183/0	Disk - Wedge.	1
21	N-4624	G-025690/1	Bracket - Prism mounting.	1
19	N-4626	G-025249	Strip - Mirror protective.	1
20	N-4630	G-025135/1	Mirror Release Latch Assy	1
19	N-4632	G-025158	Plate - Spring retaining.	1
21	N-4638	G-0186/0	Lens - Upper finder	1
21	N-4639	G-0184/0	Glass - Ground	1
21	N-4642	G-0185/0	Lens - Finder, bottom.	1
21	N-4648	G-025697	Gasket - Prism clamp, rubber	1
19	N-4653	G-025155	Spring - Light blocking flap	1
9	N-4655	G-025170/1	Control Shaft Assy	1
1	N-4656	G-025673	Mask - Light.	1
20	N-4657	G-025125/1	Light Blocking Flap Latch Assy	1
3	N-4658	G-025206/1	Flash Post Assy.	1
11	N-4660	G-025271	Spring - Pressure	1
2	N-4661	G-025355	Covering - Back.	1
18	N-4663	G-025037	Spring - Slide retainer tension	1
6	N-4666	G-0188/0	Lens - Eyepiece.	1
3	N-4671	G-025680/2	Viewfinder Assy.	1
18	N-4673	G-025032/1	Mirror Adjusting Bracket Assy.	1
19	N-4674	G-025100/1	Aperture Cover Assy	1
13	N-4675	G-023675/1	Bearing - Roller thrust	1
13	N-4792	G-021632	Bearing - Rewind post.	1
7	N-4855	G-025660	Stud - Housing support	1
13	N-4884	G-025638	Bracket - Carrying strap, right	1
21	N-4886	G-025691	Pad - Clamp bracket.	2
3	N-4904	G-025753	Disk.	1
1	N-4908	G-027765/1	Rewind Knob Assy	1
1	N-4909	G-027774	Screw - Rewind knob.	1
3	N-4911	G-027910/9	Scale - Distance, feet	1
3	N-4912	G-2615/0	Screw - Distance scale	2
4	N-4914	G-025710/1	Counter Advance Assy.	1
4	N-4915	G-027740	Cap - Exposure meter.	1
4	N-4916	G-0225/0	Window - Exposure meter	1
4	N-4917	G-0226/0	Disk - Plexiglass	1
6	N-4919	G-028704	Button - Counter setting (Late model housing).	1
6	N-4920	G-028705	Sleeve - Counter setting button.	1
2	N-4921	G-021309	Roller - Film	1
7	N-4924	G-027643/2	Exposure Meter Assy	1
3	N-4925	G-027685	Knob - Exposure meter	1
3	N-4926	G-027686	Spring - Exposure Meter	1
7	N-4927	G-027927	Button - Body release.	1
14	N-4961	G-027025/1	Bottom Frame Assy	1
9	N-4962	G-2610/1	Screw - Front to Case.	4
9	N-4963	G-4988/4	Washer - Spring.	8
11	N-4977	G-2027/1	Screw - Bearing plate.	2
9,13	N-4987	G-2509/1	Screw - Top frame to front frame (2), Angle piece (1).	3
12	N-4991	G-027263	Cord - Transmission	1
13	N-4998	G-026630	Post - Rewind	1
13	N-5000	G-027150/1	Angle Piece Assy.	1
13	N-5004	G-4626/1	Washer - Roller thrust bearing assy	1
20	N-5005	G-027020/1	Retaining Plate Assy.	1
20	N-5006	G-027030/1	Lever - Tensioning.	1
20	N-5007	G-027032	Screw - Tensioning lever.	1
20	N-5008	G-027033	Spring - Tensioning lever	1
3	N-5012	G-034357	Covering - Right side	1
3	N-5013	G-034358	Covering - Left side.	1
3	N-5014	G-034700/2	Housing	1
4	N-5015	G-034737	Base - Accessory shoe	1
4	N-5016	G-034738	Clip.	1
7	N-5017	G-034625/1	Plunger - Body release.	1

KODAK RETINA REFLEX S

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
9	N-5018	G-034191/1	Cam Assy.	1
10	N-5019	G-034230	Gear	1
10	N-5020	G-034231	Bushing	1
10	N-5021	G-034232	Screw - Shutter release control lever	1
9	N-5022	G-034638	Pad - Leather	2
10	N-5023	G-034265/1	Shutter Release Control Lever Assy	1
10	N-5024	G-034270	Plate - Cover	1
10	N-5025	G-034286	Disk - Insulating	1
10	N-5026	G-034805	Shutter	1
10	N-5027	G-034942	Gear	1
10	N-5028	G-034945	Spring - Leaf.	1
10	N-5030	G-2509/4	Screw - Cover plate to front assy.	1
10	N-5031	G-2611/4	Screw - Shutter to front assy.	4
11	N-5032	G-034202/1	Front Assy (Old style).	1
11	N-5033	G-034204/1	Front Assy (New style)	1
11	N-5034	G-034208/1	Body Release Arm Assy	1
11	N-5035	G-034212	Screw - Arm assy to front assy	2
11	N-5036	G-034242/1	Switch	1
11	N-5037	G-034245/1	Setting Knob Plate Assy.	1
11	N-5038	G-034249	Covering - Front frame.	2
11	N-5039	G-034252	Rod - Toothed	1
11	N-5040	G-034263	Plate - Bearing	1
11	N-5041	G-034275	Frame - Front.	1
11	N-5042	G-034280	Covering - Front frame, left	1
11	N-5043	G-034282	Covering - Front frame, right	1
11	N-5044	G-034287	Wire I	1
11	N-5045	G-034288	Wire II.	1
11	N-5046	G-034289	Gear	1
11	N-5047	G-034928	Bracket - Control "O".	1
11	N-5048	G-2613/4	Screw - Switch.	1
11	N-5049	G-2614/4	Screw - Setting knob plate assy.	3
11	N-5050	G-2622/6	Screw - Front frame.	1
11	N-5051	G-4662/1	Washer.	2
11	N-5052	G-7159/0	Pin - Grooved	1
12	N-5053	G-034260/1	Cable Drum Assy.	1
13	N-5054	G-034028	Top Frame Assy	1
18	N-5055	G-0227/9	Mirror.	1
19	N-5056	G-034095/1	Support Angle Piece Assy	1
19	N-5057	G-034110/1	Mirror Holder Assy	1
20	N-5058	G-027023	Screw - Retaining plate	1
20	N-5059	G-027026	Spring - Tensioning	1
20	N-5060	G-034140/1	Slider Guide Plate Assy.	1
20	N-5061	G-034146	Spring - Lock catch	1
20	N-5062	G-034002/2	Case Assy.	1
7	N-5157	G-027680	Dial - Film speed.	1
7	N-5166	G-027682	Cover - Film speed dial	1
4	N-5167	G-027740/1	Film Speed Window Cap Assy.	1
7	N-5170	G-027668	Spring - Film speed dial tension.	1
9	N-5179	G-2623/1	Screw - Control shaft adjusting (New style).	1
11	N-5180	G-4053/0	Washer - Switch mounting	1
16	N-5181	G-034549	Gear - Winding shaft (New style).	1
16	N-5182	G-4663/0	Spacer - Winding shaft pinion (New style).	1
16	N-5183	G-035545	Pawl - Winding shaft (New style).	1
16	N-5184	G-034532	Gear - Film advance drive (New style).	1
17	N-5185	G-034500/1	Winding Shaft Assy (New style).	1
19	N-5186	G-034157	Spring - Mirror	1
18	N-5187	G-025161/1	Mirror Latch Assy.	1
1	120012		Buckle - Shoulder strap.	2
1	136827		Shoulder Strap Assy	1

SYNCHRO COMPUR SHUTTER FOR THE KODAK RETINA REFLEX S

FIG.	PART NO.	PART NAME	REQD.
26	N-4276	Screw - Synchro cover plate.	1
26	N-4277	Screw - Synchro cover plate, shoulder	1
26	N-4278	Spring - Main drive lock	1
26	N-4279	Spring - Synchro gear	1
26	N-4280	Contact Lever Assy	1
26	N-4281	Synchro Lever Assy	1
26	N-4282	Spring - Synchro lever	1
26	N-4284	Synchro Gear Assy	1
30	N-4285	Spring - Blade operating check	1
30	N-4286	Spring - Synchro lock	1
30	N-4287	Lever - Bulb	1
27	N-4292	Spring - Main drive	1
31	N-4294	Plate - Synchro gear spring anchor	1
31	N-4295	Screw - Synchro gear spring anchor plate	1
27	N-4296	Screw - Retard gear train, short	1
27	N-4298	Retard Gear Train Assy	1
27	N-4299	Screw - Delayed action gear train	1
27	N-4300	Delayed Action Gear Train Assy	1
31	N-4302	Screw - Main drive stop	1
31	N-4304	Screw - Shutter tube retaining	2
28	N-4312	Screw - Case to mechanism plate	1
32	N-4358	Stud - Synchro lock lever	1
32	N-4359	Lever - Synchro	1
32	N-4360	Stud - Synchro lever	1
32	N-4361	Stud - Synchro gear	1
32	N-4362	Stud - Time release lever	1
32	N-4364	Stud - Pallet	1
32	N-4365	Pallet	1
29	N-4366	Rivet - Contact plate	2
29	N-4367	Plate - Contact block retaining	1
29	N-4368	Block - Contact	1
29	N-4369	Point - Contact	1
29	N-4370	Stud - Synchro selector tension spring	1
29	N-4371	Spring - Synchro selector tension	1
25	N-4698	Retainer - Speed ring	1
25	N-4704	Spring - Cocking ring	1
27	N-4709	Screw - Retard gear train, long	1
30	N-4710	Screw - Bulb lever	1
30	N-4711	Spring - Bulb lever	1
31	N-4730	Stop - Main drive gear	1
32	N-4897	Lever - Time release	1
22	N-5068	Screw - Front shroud retainer, long	1
22	N-5070	Front Shroud Assy	1
22	N-5072	Ring - Diaphragm scale	1
22	N-5073	Spring - Diaphragm scale ring	1
22	N-5075	Intermediate Brass Ring Assy	1
22	N-5076	Speed Scale Ring Assy	1
22	N-5077	Button - Speed scale ring	2
22	N-5078	Screw - Speed scale ring button	4
22	N-5079	Ring - Lens diaphragm opening	1
22	N-5080	Coupler Shaft and Pinion Assy	1
22	N-5081	Gear - Coupler shaft idler	1
23	N-5082	Screw - Shutter to lens mount	3
23	N-5083	Ball - Speed scale ring	1
23	N-5084	Plate - Dust cover	1
23	N-5086	Lens Mount Assy	1
23	N-5087	Gear - Lens diaphragm ring idler	1
28	N-5091	Flash Ring Retaining Plate Assy	1
28	N-5092	Screw - Flash ring retaining plate	3
28	N-5093	Lever - Flash set	1
25	N-5094	Ring - Speed	1

SYNCHRO COMPUR SHUTTER FOR THE KODAK RETINA REFLEX S

FIG.	PART NO.	PART NAME	REQD.
25	N-5096	Cocking Ring Gear Assy	1
25	N-5098	Cocking Ring and Spring Assy.	1
25	N-5099	Lock Lever Assy	1
27	N-5100	Main Drive Assy	1
26	N-5102	Trigger Assy.	1
26	N-5104	Synchro Cover Plate Assy	1
26	N-5105	Synchro Sector Assy.	1
25	N-5106	Coupler Shaft Idler Gear Bearing Bracket Assy.	1
25	N-5107	Screw - Coupler idler gear bracket.	2
28	N-5108	Blade - Shutter, common.	4
28	N-5109	Blade - Shutter, notched	1
28	N-5110	Blade - Shutter, cover.	1
29	N-5111	Plate - Case filler	1
29	N-5112	Screw - Case filler plate.	3
29	N-5114	Shutter Case Assy	1
31	N-5116	Ring - Blade control.	1
30	N-5117	Spring - Self timer	1
31	N-5119	Mechanism Plate Assy	1
22	N-5158	Screw - Front shroud retainer	2
32	N-5168	Synchro Lock Lever Assy	1
31	N-5169	Tube - Shutter	1
24	N-5171	Spring - Detent ball.	1
24	N-5172	Stud - Detent ball spring	1
24	N-5173	Spring - Lens mount tension.	3
24	N-5174	Stud - Lens mount tension spring	3
24	N-5175	Lever - Lens lock	1
24	N-5176	Stud - Lens lock lever.	1
24	N-5177	Spring - Lens lock lever	1
25	N-5218	Spring - Cocking ring lock lever	1

KODAK RETINA FIELD CASE MODELS C AND D

33	N-4338	Shoulder Strap Assy	1
33	N-4392	Screw - Camera retaining	1
33	N-4393	Plate - Camera retaining screw	1
33	N-4394	Plate - Snap button stud catch.	1
33	N-4402	Cap - Snap button	1
33	N-4403	Socket - Snap button cap	1
33	N-4404	Post - Snap button	1
33	N-4405	Stud - Snap button post	1
33	N-4406	Sleeve - Snap button post sleeve	1
33	N-4767	Loop - Strap	2
33	N-5064	Field Case Cover Assy (Model C, f/1.9-50mm)	1
33	N-5065	Field Case Bottom Assy	1
33	N-5066	Field Case Cover Assy (Model D, f/2.8-50mm)	1
33	121934	Stud - Shoulder strap	2

Always give **PART NUMBER** and **NAME** when ordering parts

EASTMAN KODAK COMPANY • ROCHESTER 4, NEW YORK

ORDER PARTS FROM APPARATUS PARTS SERVICE • EASTMAN KODAK COMPANY, ROCHESTER 4, N. Y.

Corrected to DECEMBER 1959

PARTS LIST No. 5525

KODAK RETINA IIIS CAMERA


WITH

SYNCHRO COMPUR SHUTTER

AND

Kodak Retina Field Case

Models C and D

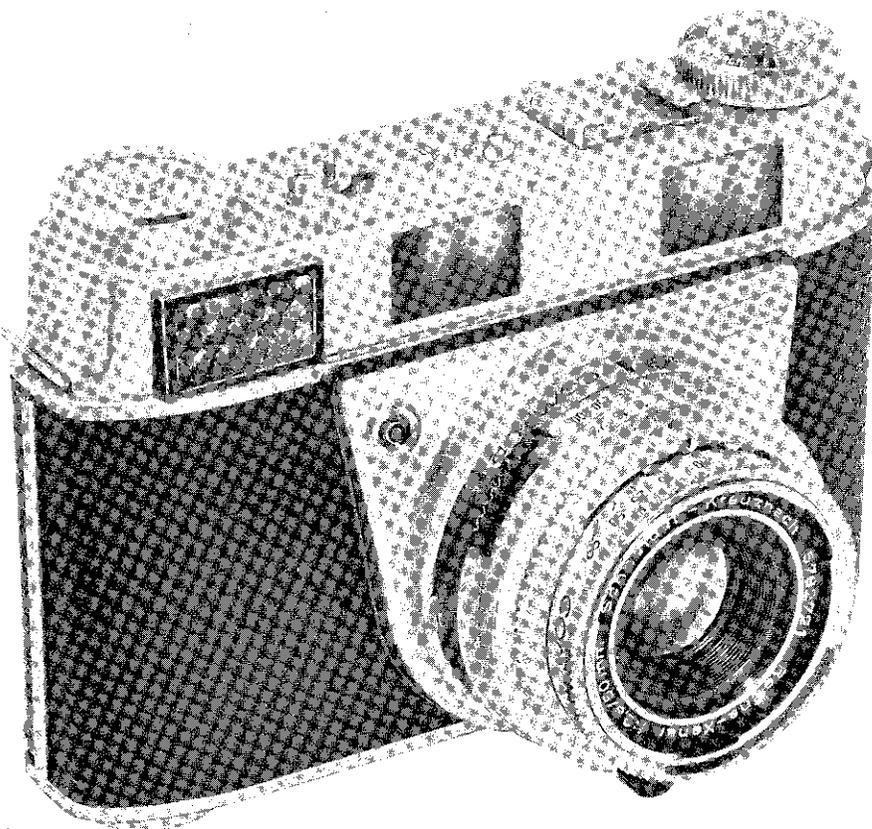

EASTMAN KODAK COMPANY • ROCHESTER 4, N. Y.

KODAK RETINA III S CAMERA

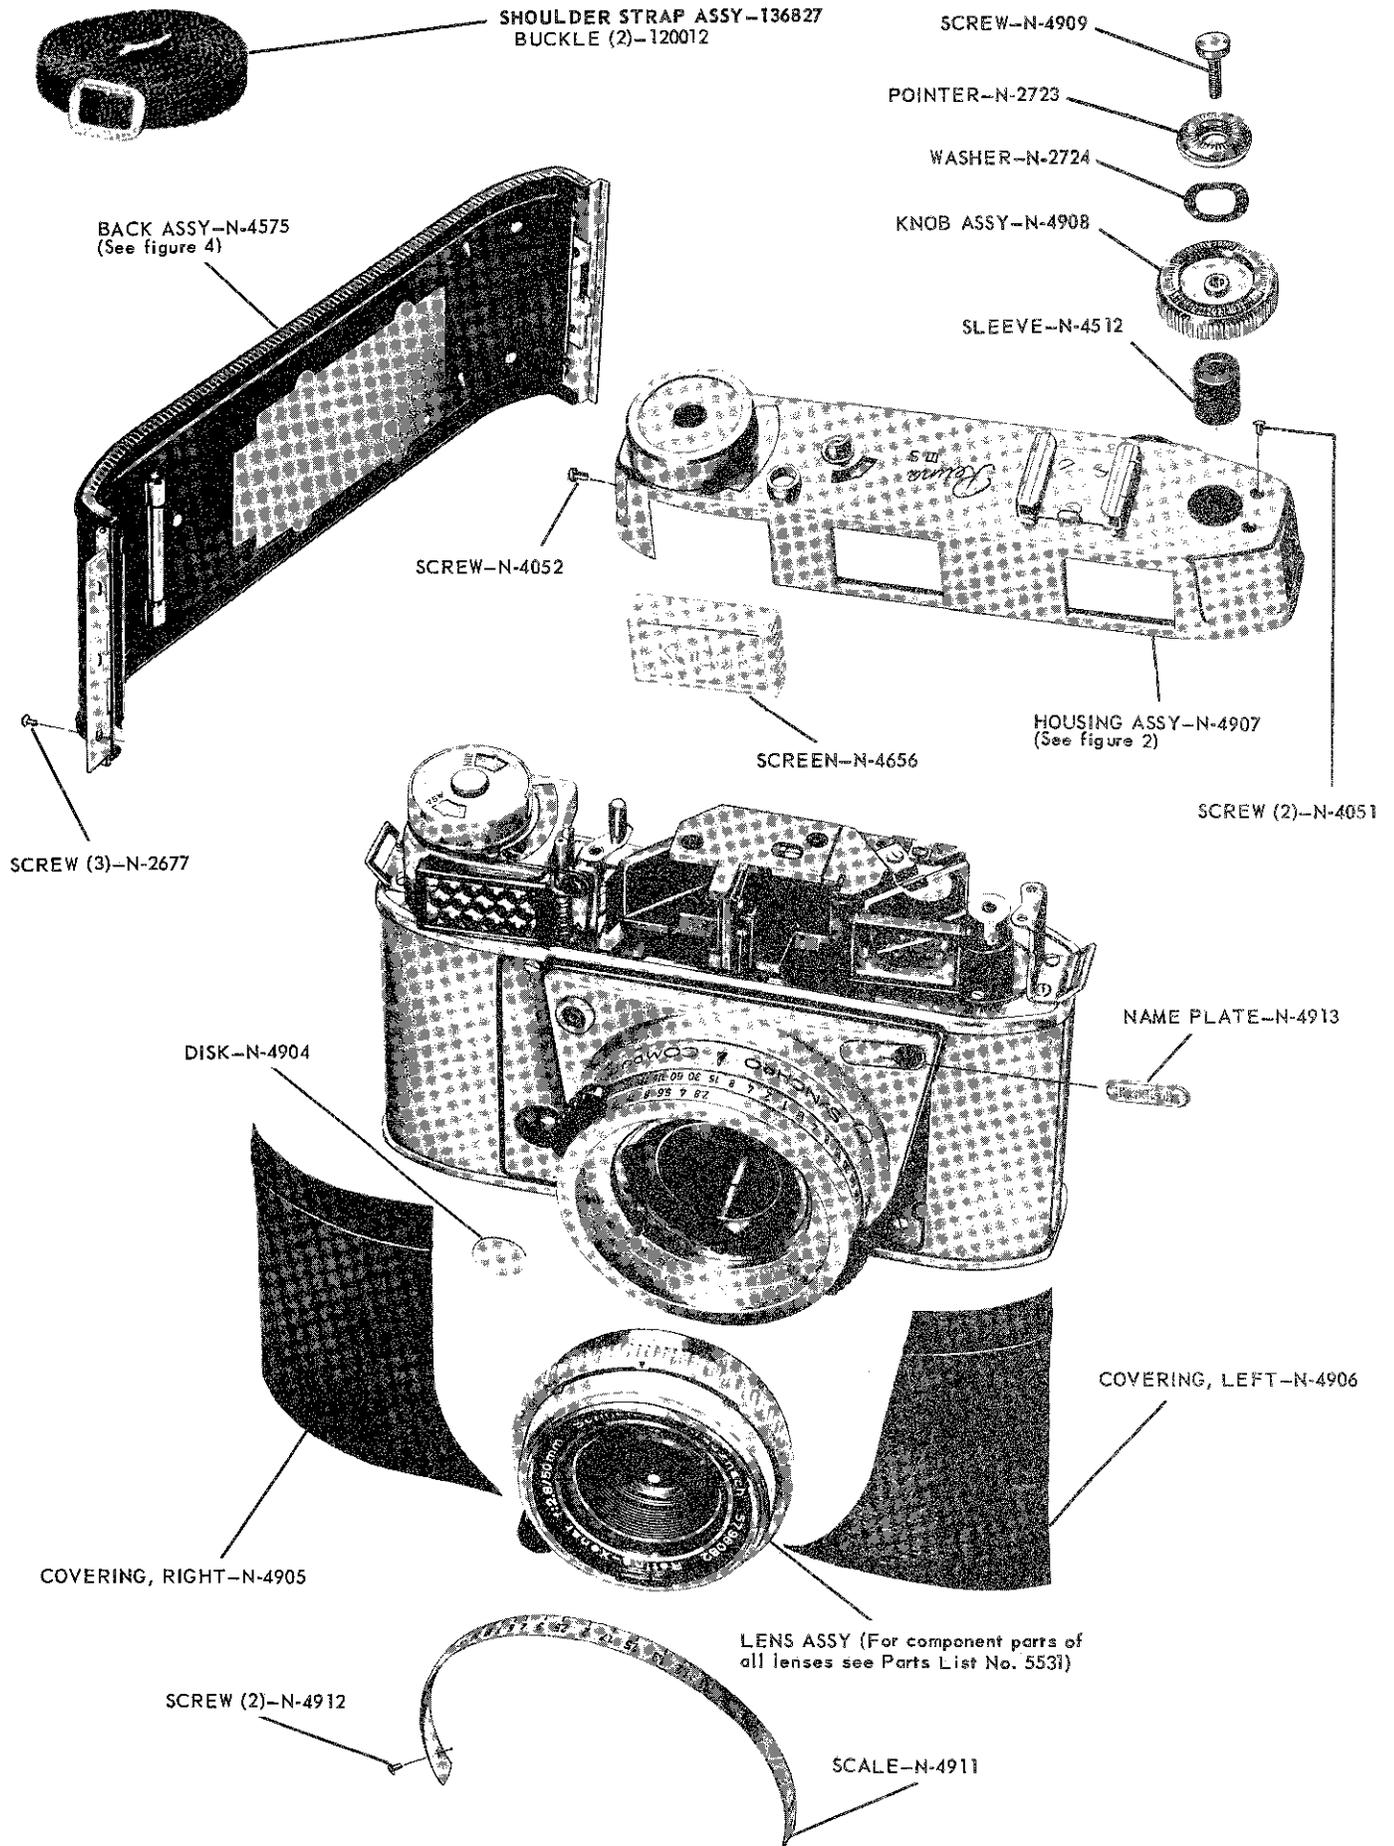


FIGURE 1

KODAK RETINA III S CAMERA

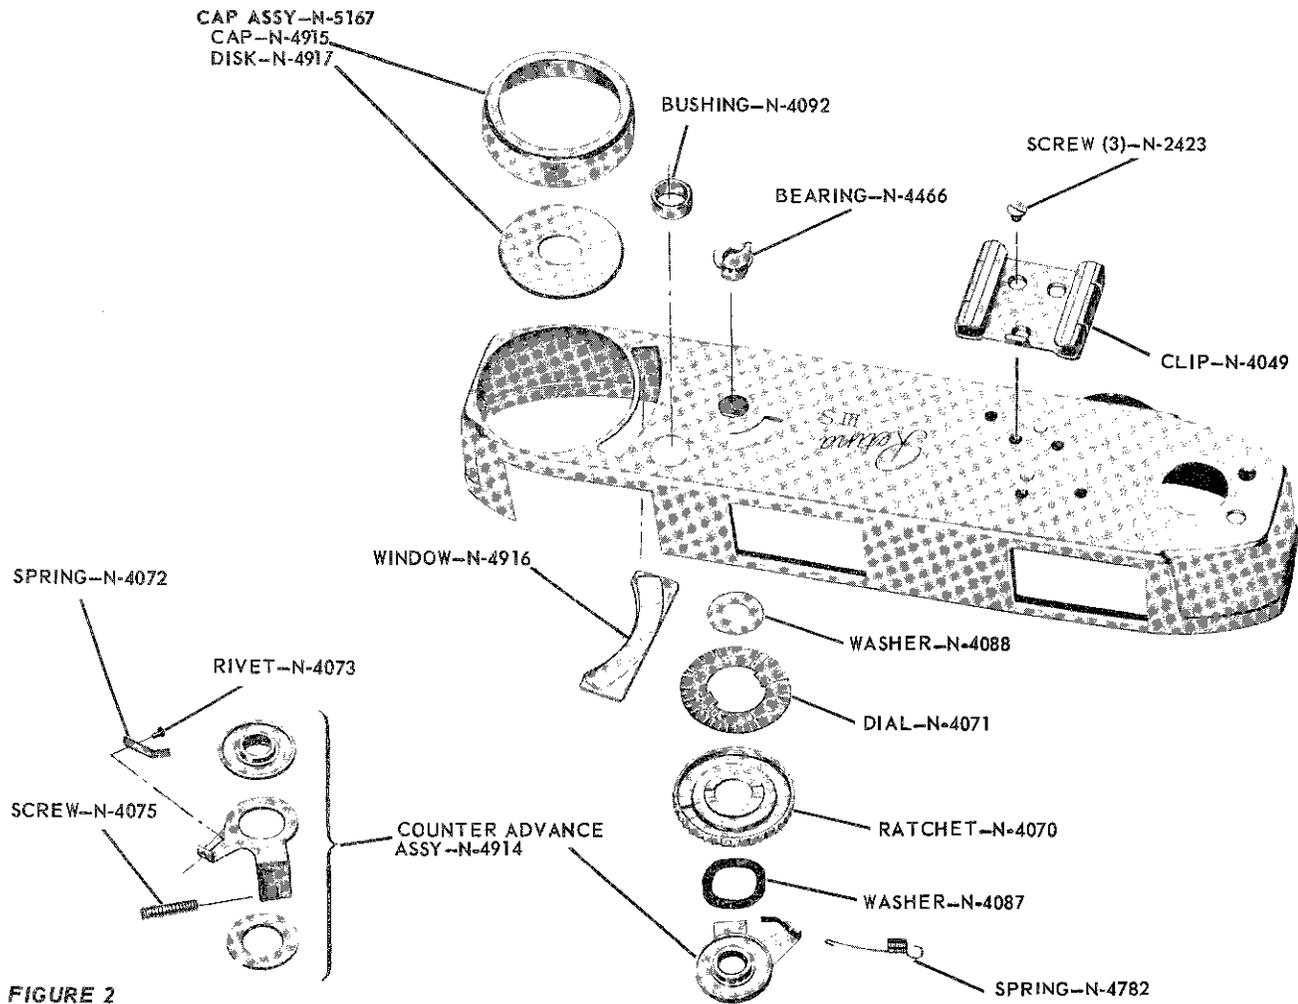


FIGURE 2

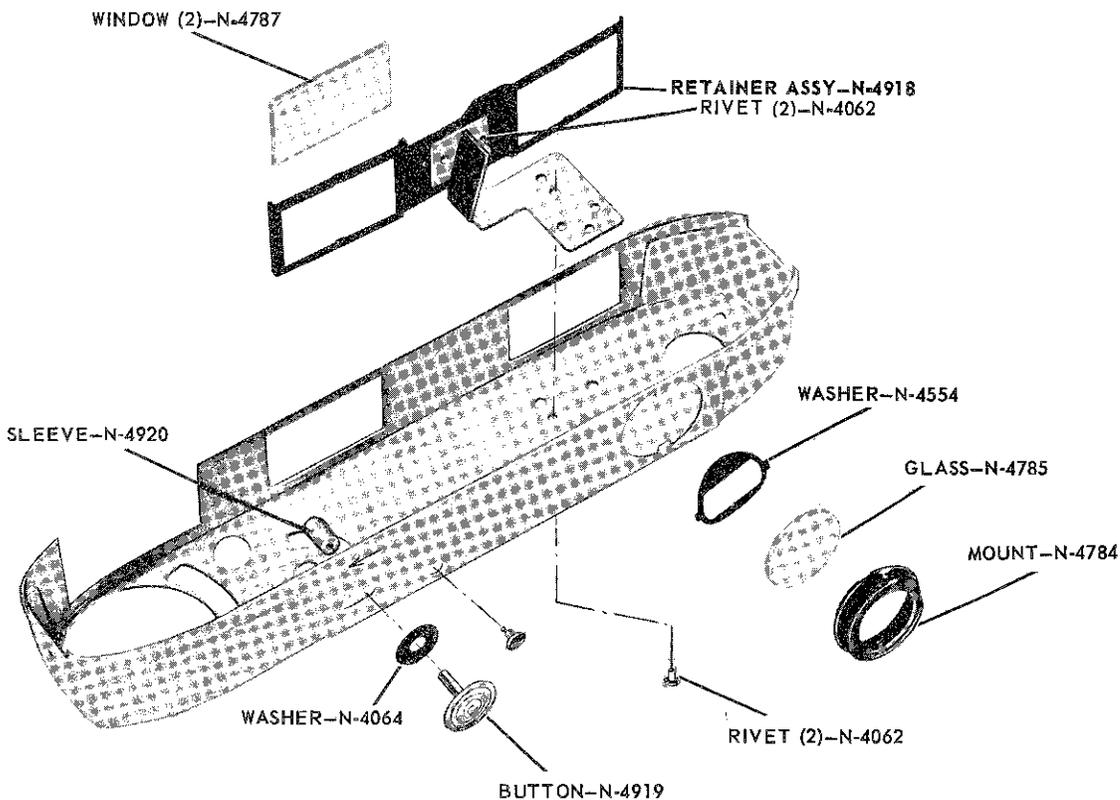


FIGURE 3

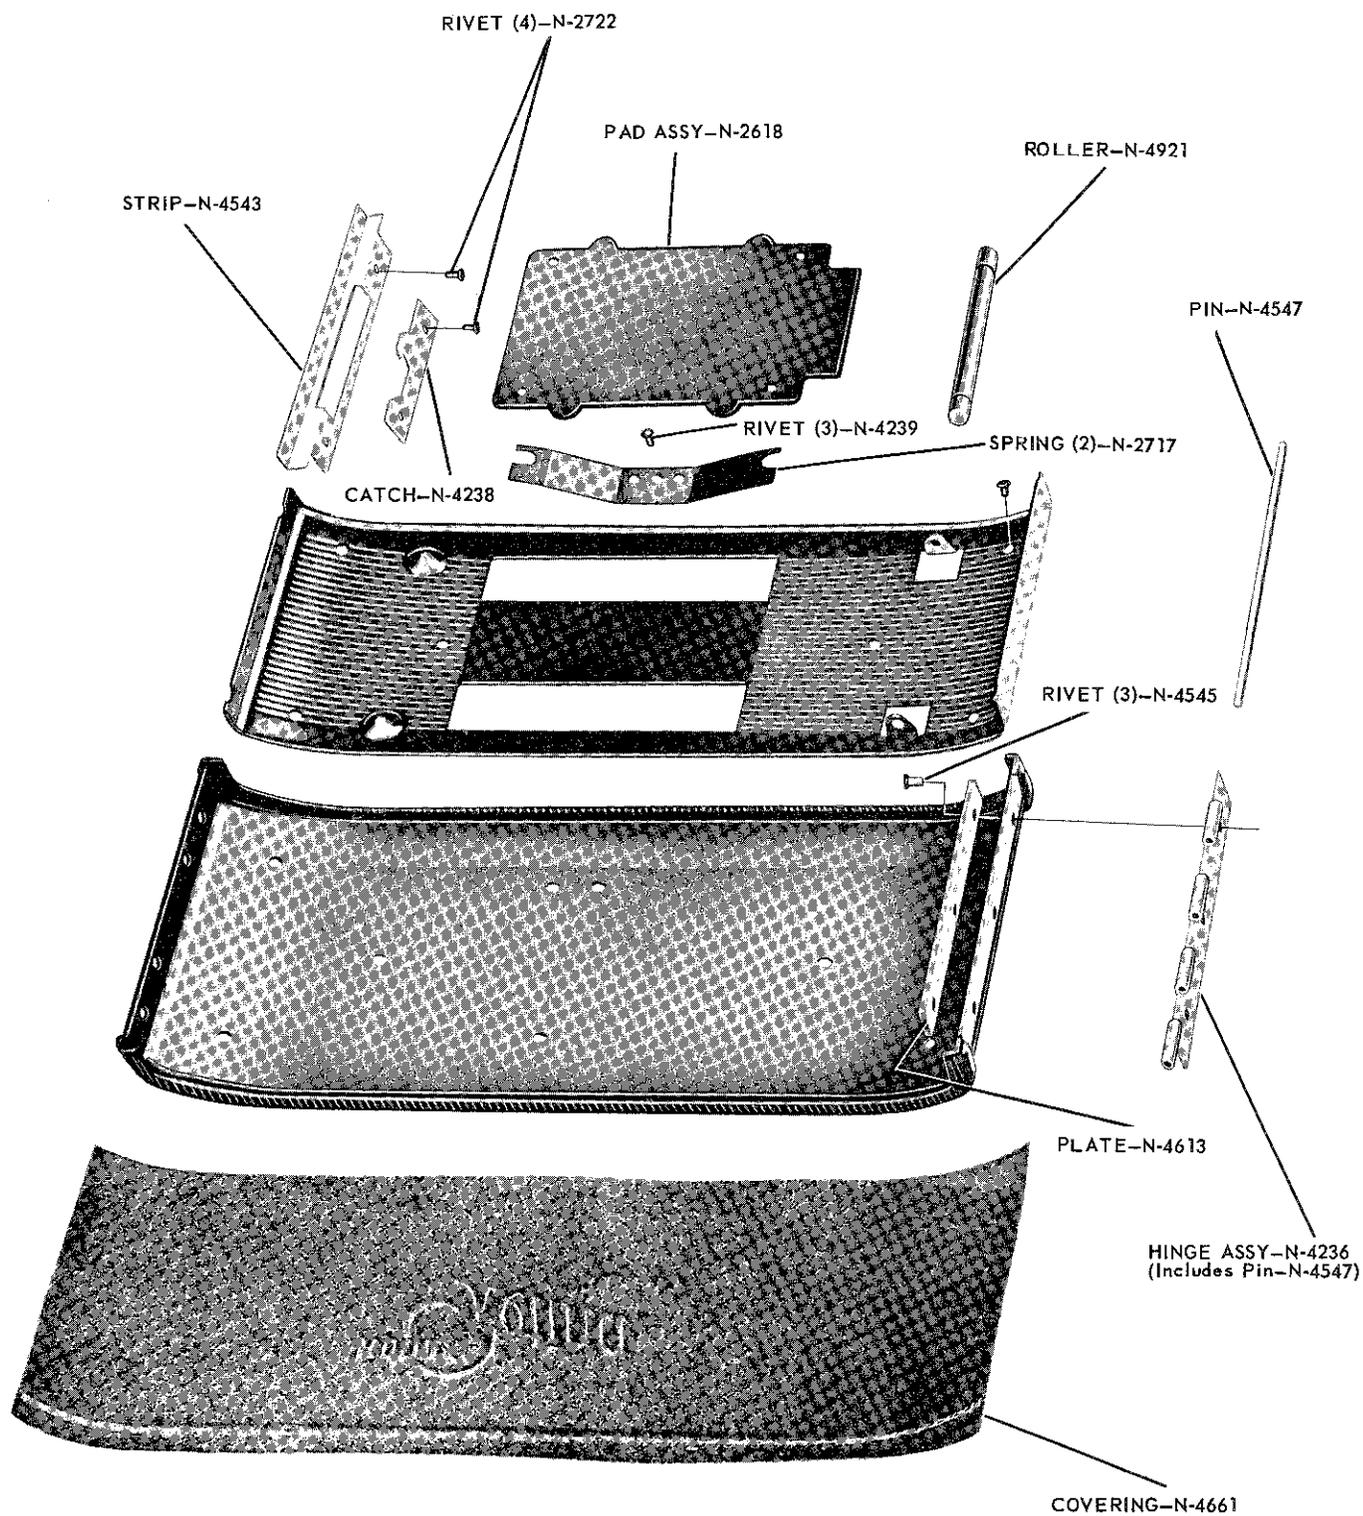


FIGURE 4

KODAK RETINA III S CAMERA

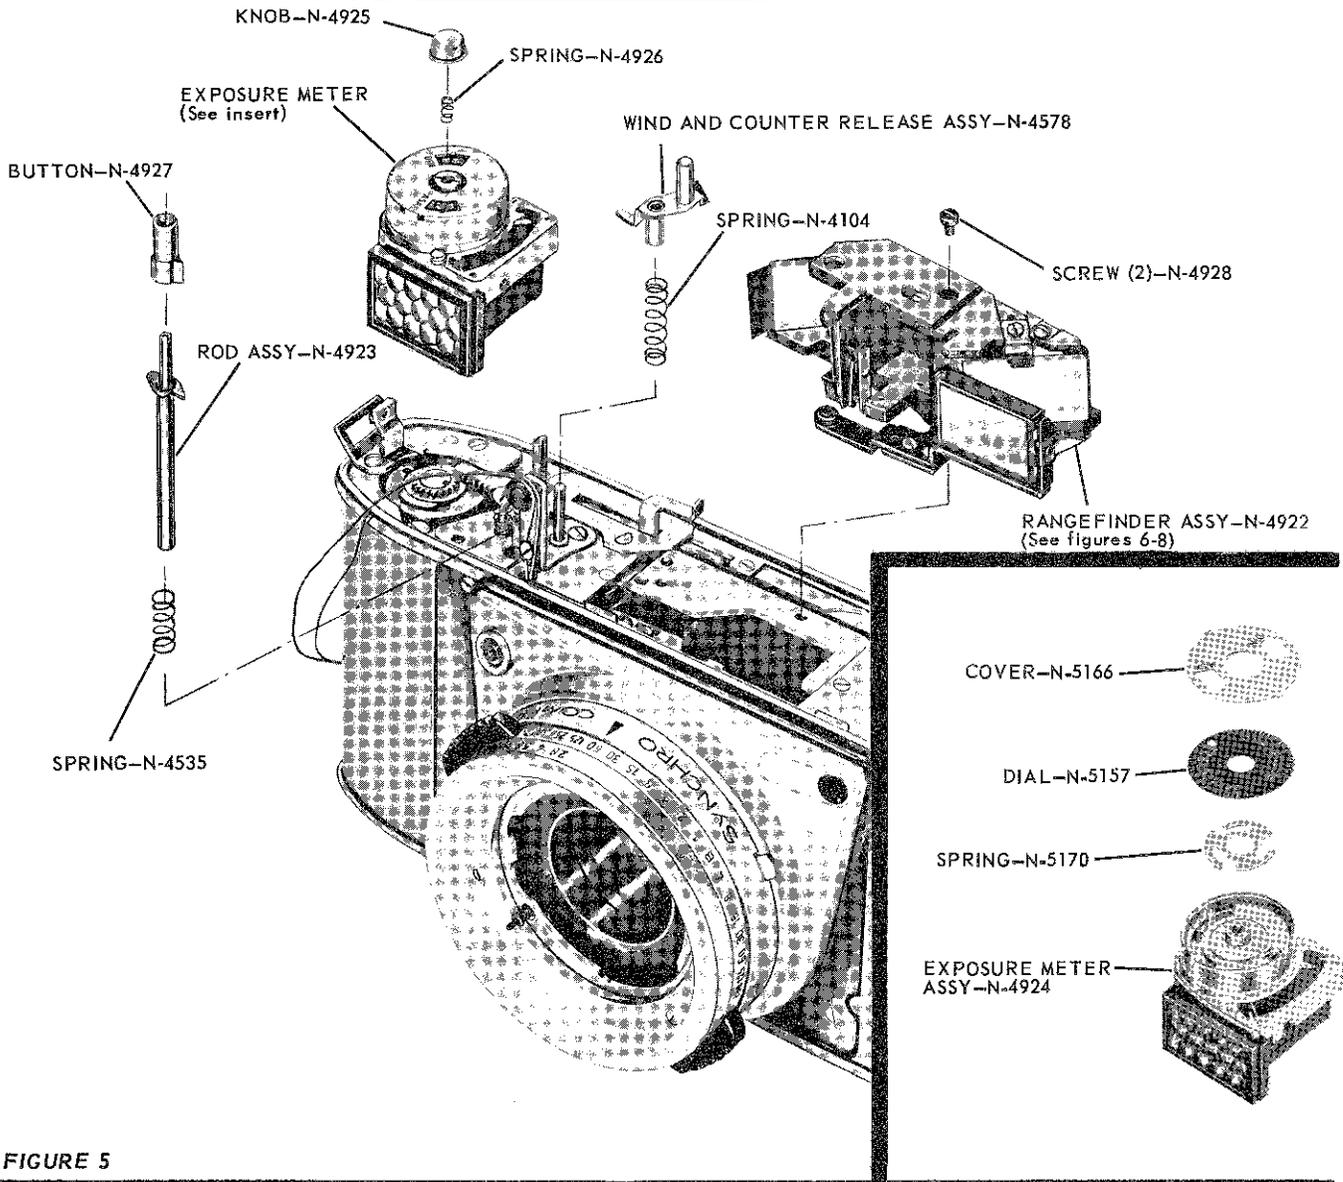


FIGURE 5

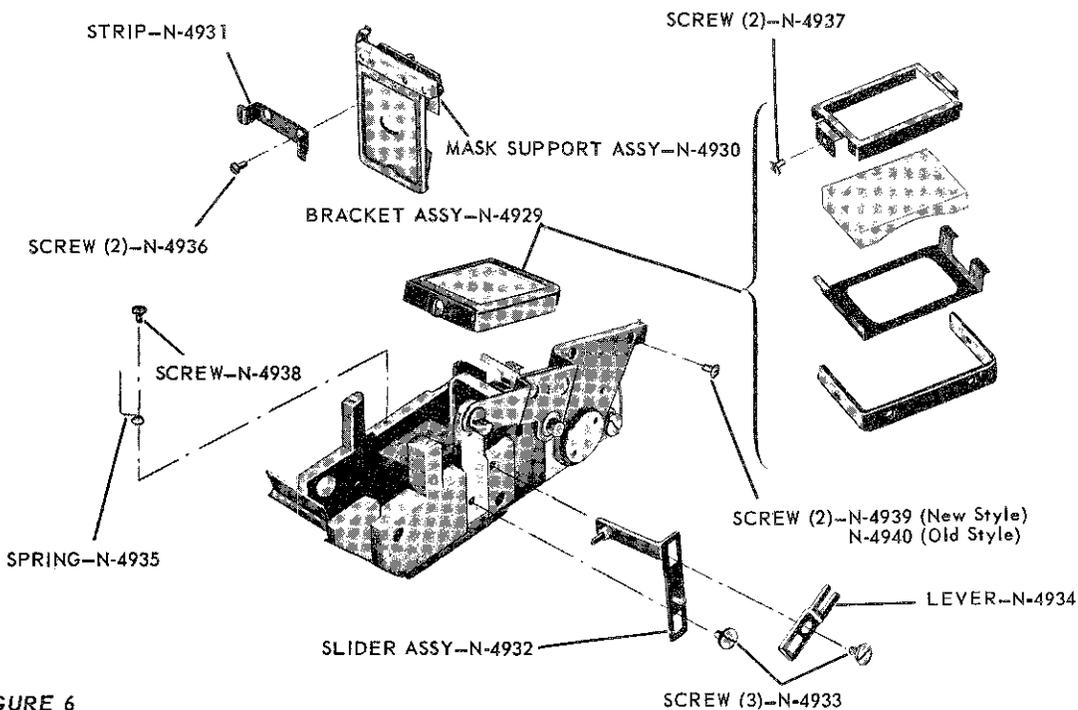


FIGURE 6

Always give PART NUMBER and NAME when ordering parts

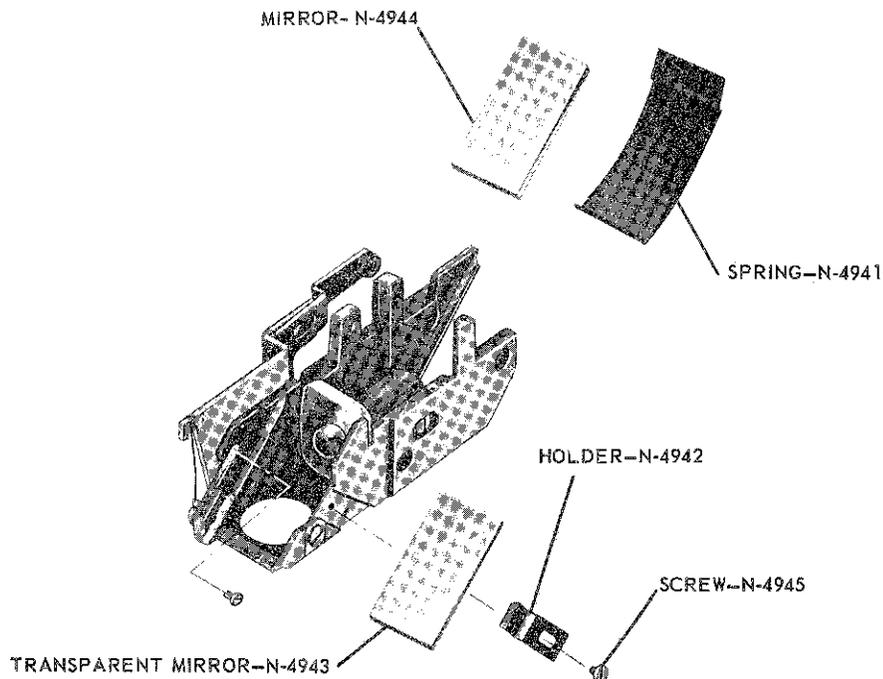


FIGURE 7

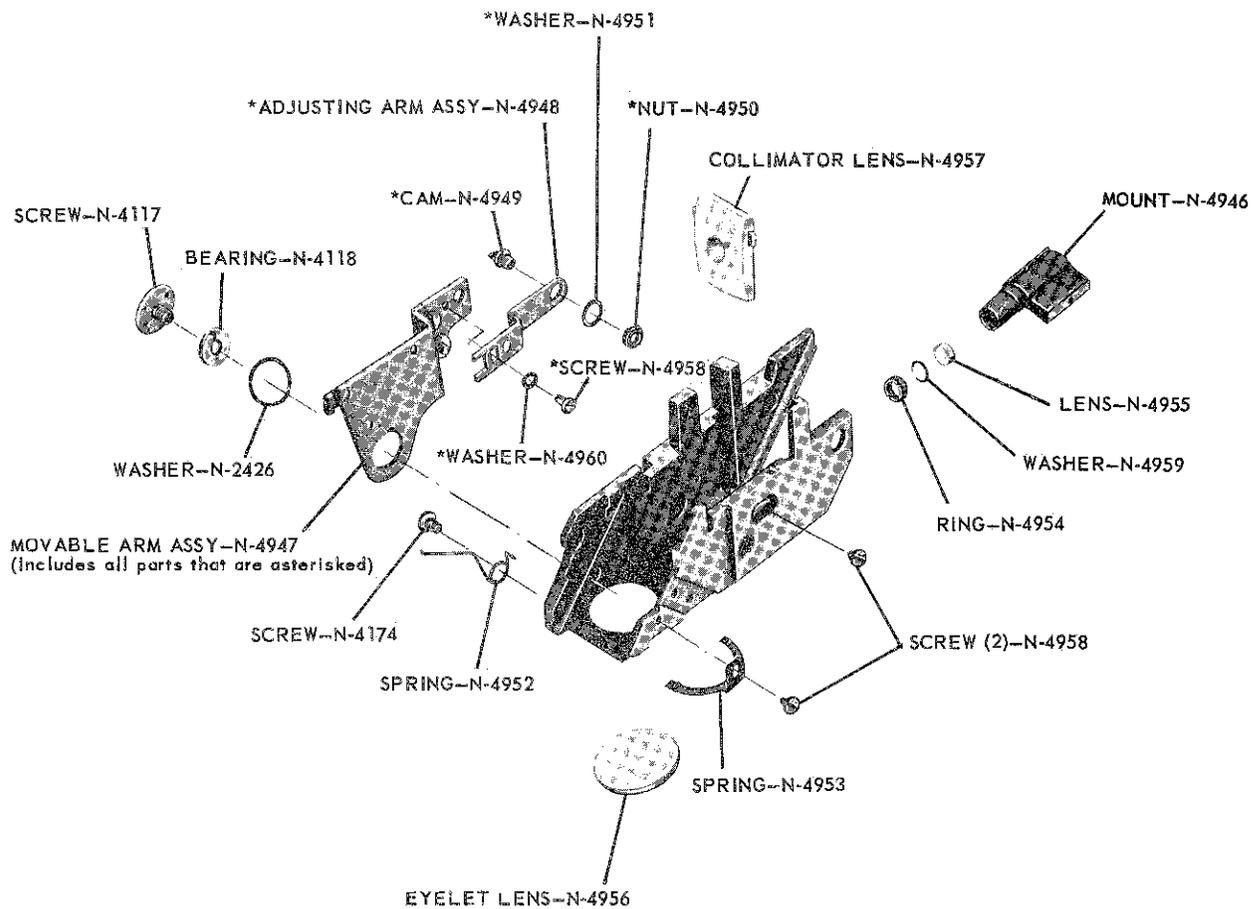


FIGURE 8

KODAK RETINA III S CAMERA

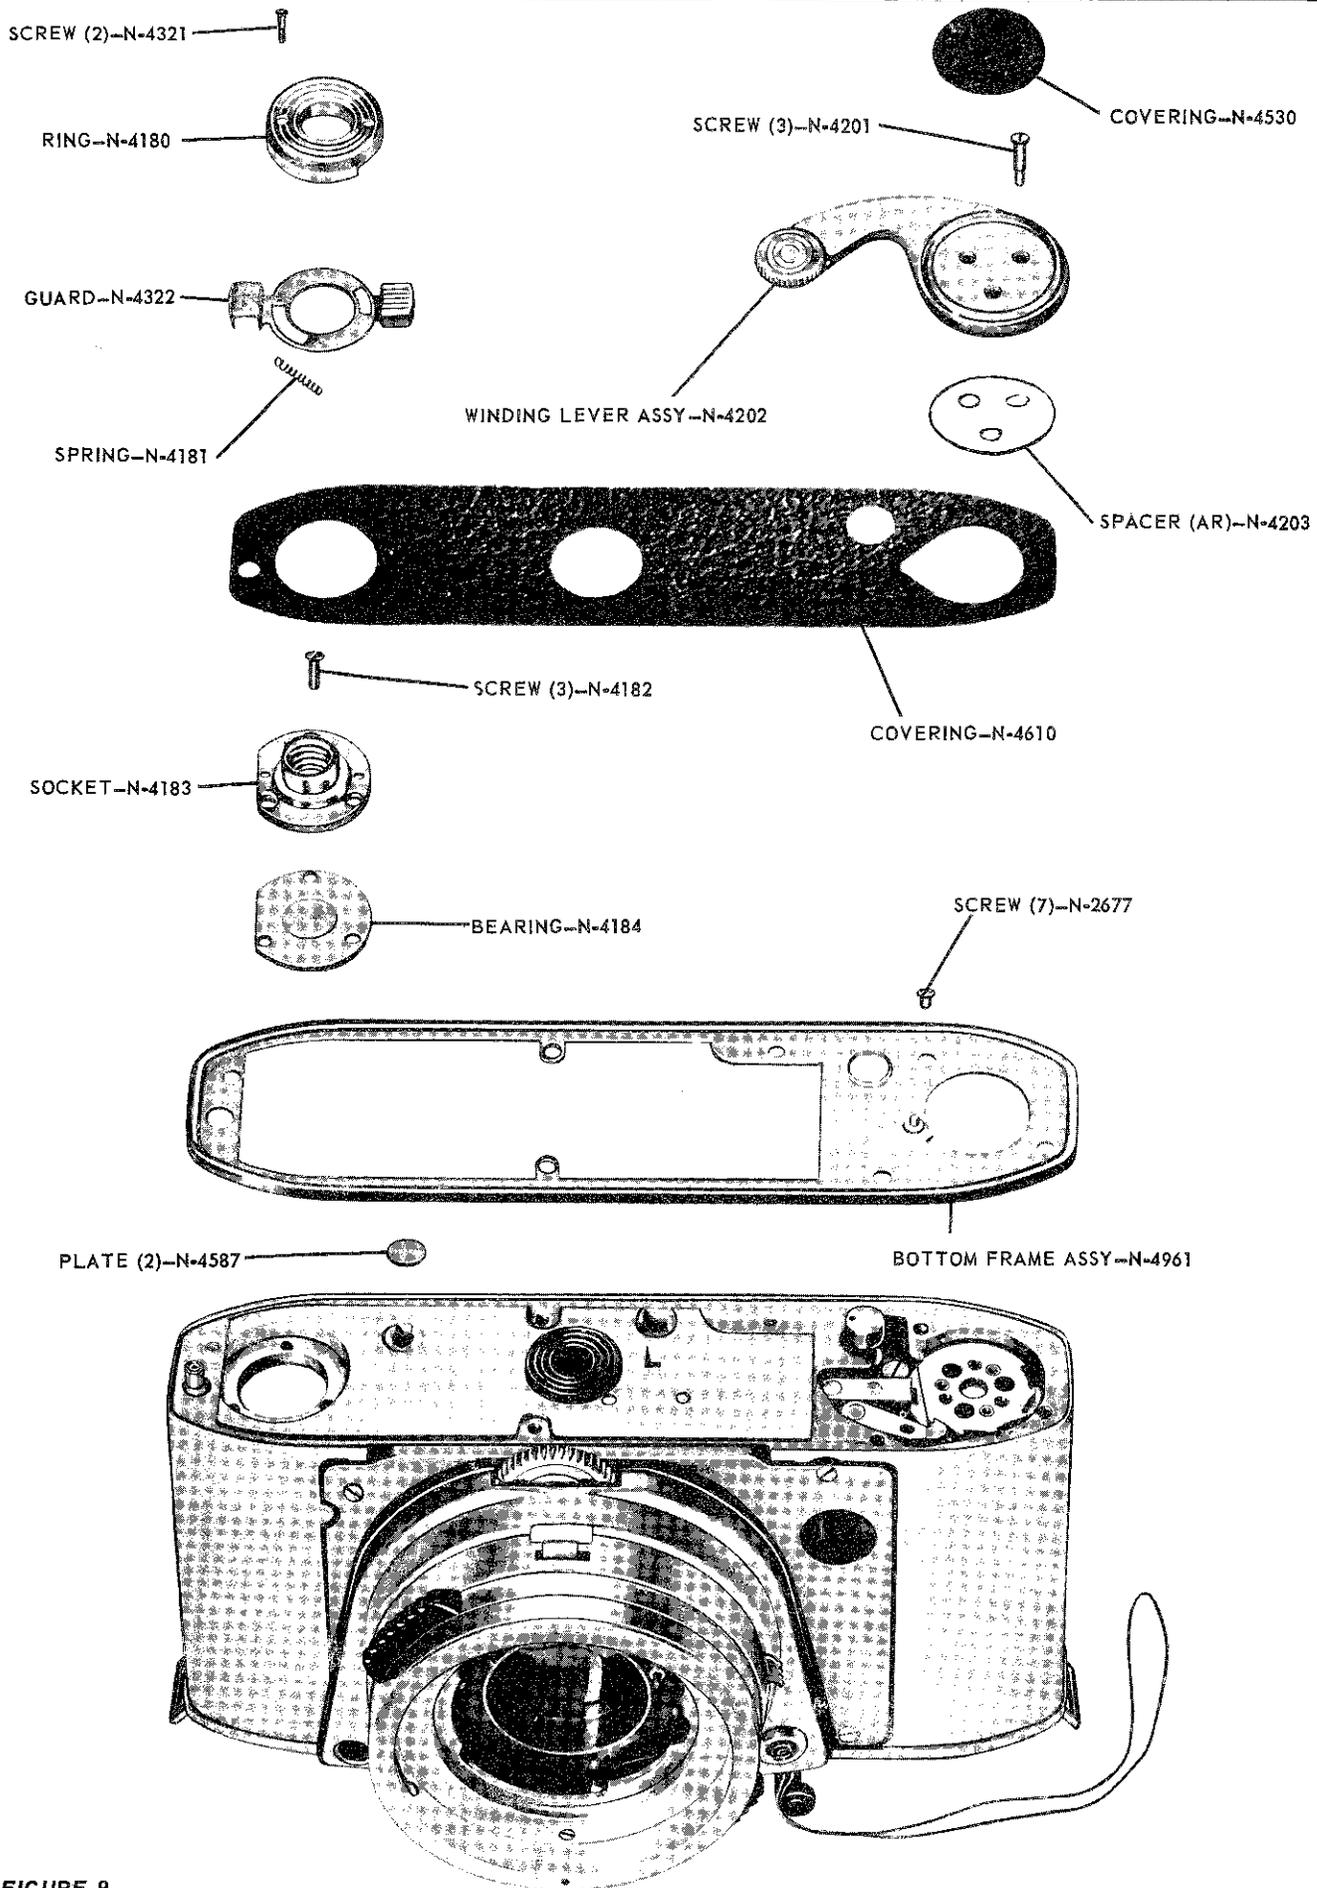


FIGURE 9

Always give PART NUMBER and NAME when ordering parts