

PART NO.	PART NAME	FIG.	PART NO.	PART NAME	FIG.
N-6591	Counter Ratchet Assembly	7	N-6615	Pawl	11
N-6592	Counter Slide Assembly	7	N-6616	Rivet - Pawl	11
N-6593	Ratchet Lever Assembly	7	N-6617	Spring - Pawl	11
N-6594	Spring - Ratchet lever assembly . .	7	N-6618	Bearing Plate Assembly	11
N-6595	Lever - Stop	7	N-6619	Post - Angular.	11
N-6596	Screw - Ratchet spring lever assembly	7	N-6620	Frame - Front.	11
N-6597	Spring - Stop lever	7	N-6621	Cable Drum Assembly.	12
N-6598	Covering - Bottom Assembly	7	N-6622	Frame - Top.	13
N-6599	Screw - Tripod socket locating . . .	7	N-6623	Post - Rewind	13
N-6600	Ring - Tripod socket	7	N-6624	Top Bracket Assembly	13
N-6601	Covering - Tripod socket ring . . .	7	N-6625	Bracket - Top	13
N-6602	Screw - Tripod socket ring	7	N-6626	Spring - Rewind post.	13
N-6603	Washer - Disk friction	7	N-6627	Roller - Top bracket (Right).	13
N-6604	Washer - Counter Slide Assembly (.002)	7	N-6628	Plate - Hold down.	13
N-6605	Washer - Counter Slide Assembly (.004)	7	N-6629	Winding Release Assembly.	14
N-6606	Cam Assembly.	8	N-6630	Bearing Angle Assembly	18
N-6607	Washer - Cam Assembly (.008). . .	8	N-6631	Mirror Holder Assembly.	18
N-6608	Yarn - Front Assembly.	9	N-6632	Back Latch Assembly	19
N-6609	Shutter Complete	9	N-6633	Adjusting Plate Assembly	19
N-6610	Bracket Control.	10	N-6634	Aperture Actuating Slide Assembly	19
N-6611	Back Assembly	1	N-6635	Mirror Slide Assembly	19
N-6612	Front Assembly.	10	N-6636	Mirror Release Slide Assembly . .	19
N-6613	Wire - Contact	10	N-6637	Slide Guide Plate Assembly	19
N-6614	Release Slide Assembly.	10	N-6638	Case Assembly	19
			N-6639	Washer - Slide assembly.	19
			N-6753	Governing Shaft Assembly	8

SYNCHRO COMPUR-X SHUTTER

N-4276	Screw - Cover plate assembly (Left)	24	N-5083	Ball - Speed scale ring	21
N-4277	Screw - Cover plate assembly (Right).	24	N-5084	Plate - Dust cover	21
N-4278	Spring - Main drive lock	24	N-5087	Gear - Diaphragm ring idler	21
N-4280	Contact Lever Assembly	24	N-5092	Screw - Case assembly to mechanism plate assembly	26
N-4285	Spring - Blade operating check. . .	24	N-5094	Ring - Speed	23
N-4287	Lever - Bulb.	25	N-5096	Cocking Ring Gear Assembly	23
N-4292	Spring - Main drive	24	N-5098	Cocking Ring Assembly.	23
N-4296	Screw - Retard gear train assembly	25	N-5099	Lock Lever Assembly.	23
N-4298	Retard Gear Train Assembly	25	N-5100	Main Drive Assembly	24
N-4299	Screw - Delayed action gear train assembly.	25	N-5102	Trigger Assembly	24
N-4304	Screw - Shutter tube retaining . . .	28	N-5107	Screw - Coupler idler gear	21
N-4366	Rivet - Contact block retaining plate	27	N-5108	Blade - Shutter, common.	26
N-4367	Plate - Contact block retaining. . .	27	N-5109	Blade - Shutter, notched	26
N-4368	Block - Contact	27	N-5110	Blade - Shutter, cover.	26
N-4369	Point - Contact	27	N-5111	Plate - Case assembly filler	27
N-4698	Retainer - Speed ring	23	N-5112	Screw - Case filler to case assembly	27
N-4709	Screw - Retard gear train assembly	25	N-5116	Blade Control Ring Assembly. . . .	28
N-4711	Spring - Bulb lever.	25	N-5158	Screw - Shroud retaining.	20
N-4730	Stop - Main drive gear	28	N-5169	Tube - Shutter.	28
N-5070	Shroud Assembly	20	N-5171	Spring - Detent ball	22
N-5072	Ring - Diaphragm scale.	20	N-5172	Stud - Detent ball spring	22
N-5073	Spring - Diaphragm scale	20	N-5173	Spring - Lens mount tension.	22
N-5075	Intermediate Ring Assembly.	20	N-5174	Stud - Lens mount tension spring .	22
N-5079	Ring - Lens diaphragm opening. . .	20	N-5175	Lever - Lens lock	22
N-5081	Gear - Coupler idler.	20	N-5176	Stud - Lens lock lever	22
N-5082	Screw - Shutter to lens mount. . . .	21	N-5177	Spring - Lens lock lever	22

PART NO.	PART NAME	FIG.	PART NO.	PART NAME	FIG.
N-5218	Spring - Cocking ring lock lever . .	23	N-6665	Speed Ring Assembly	20
N-5292	Pinion Assembly	20	N-6666	Lens Mount Assembly	21
N-5293	Coupler Idler Gear Bracket Assembly.	21	N-6667	Cover Plate Assembly.	24
N-6477	Spring - Cocking ring assembly . .	23	N-6668	Delayed Action Gear Train Assembly.	25
N-6662	Screw - Lens mount assembly to idler gear assembly.	21	N-6669	Retaining Plate Assembly	26
N-6663	Button - Speed ring assembly. . . .	20	N-6670	Flash Set Lever Assembly.	26
N-6664	Screw - Speed ring assembly button	20	N-6671	Case Assembly	27
			N-6672	Mechanism Plate Assembly	28
			N-6673	Screw - Bulb lever.	25

KODAK RETINA FIELD CASE, MODELS F and G

N-4338	Shoulder Strap Assembly.	29	N-5801	Bottom Assembly.	29
N-4392	Screw - Camera holding	29	N-5802	Cover Assembly Model G (Reflex IV f1.9)	29
N-4393	Plate - Camera holding screw retaining	29	N-5968	Cap	29
N-4394	Plate - Cover stud catch	29	N-5969	Socket	29
N-4406	Sleeve Assembly	29	N-5970	Cap	29
N-4767	Loop - Shoulder strap.	29	N-5971	Button	29
N-5972	Sleeve	29	121934	Stud - Shoulder strap	29
N-5800	Cover Assembly Model F (Reflex IV f2.8)	29			


EASTMAN KODAK COMPANY • ROCHESTER, NEW YORK 14650

Corrected to SEPTEMBER 1965

Parts List No. 769207

KODAK RETINA REFLEX IV CAMERA

Field Case, Models F and G

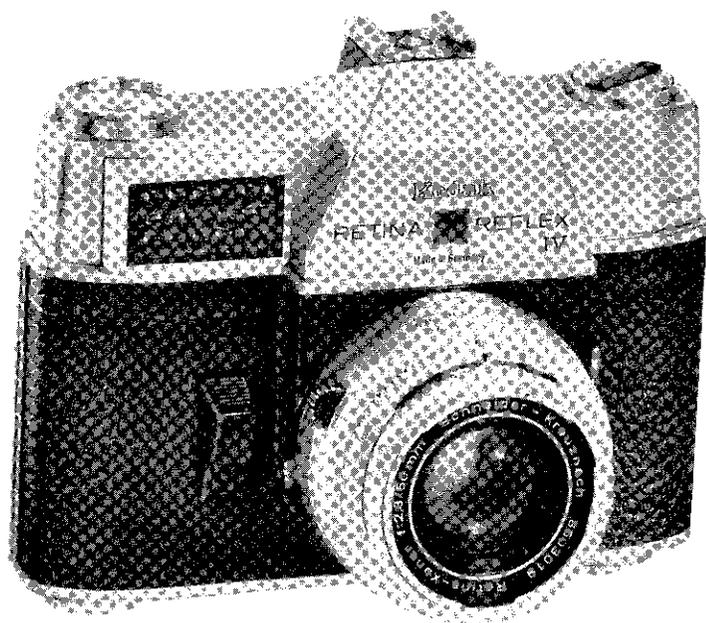

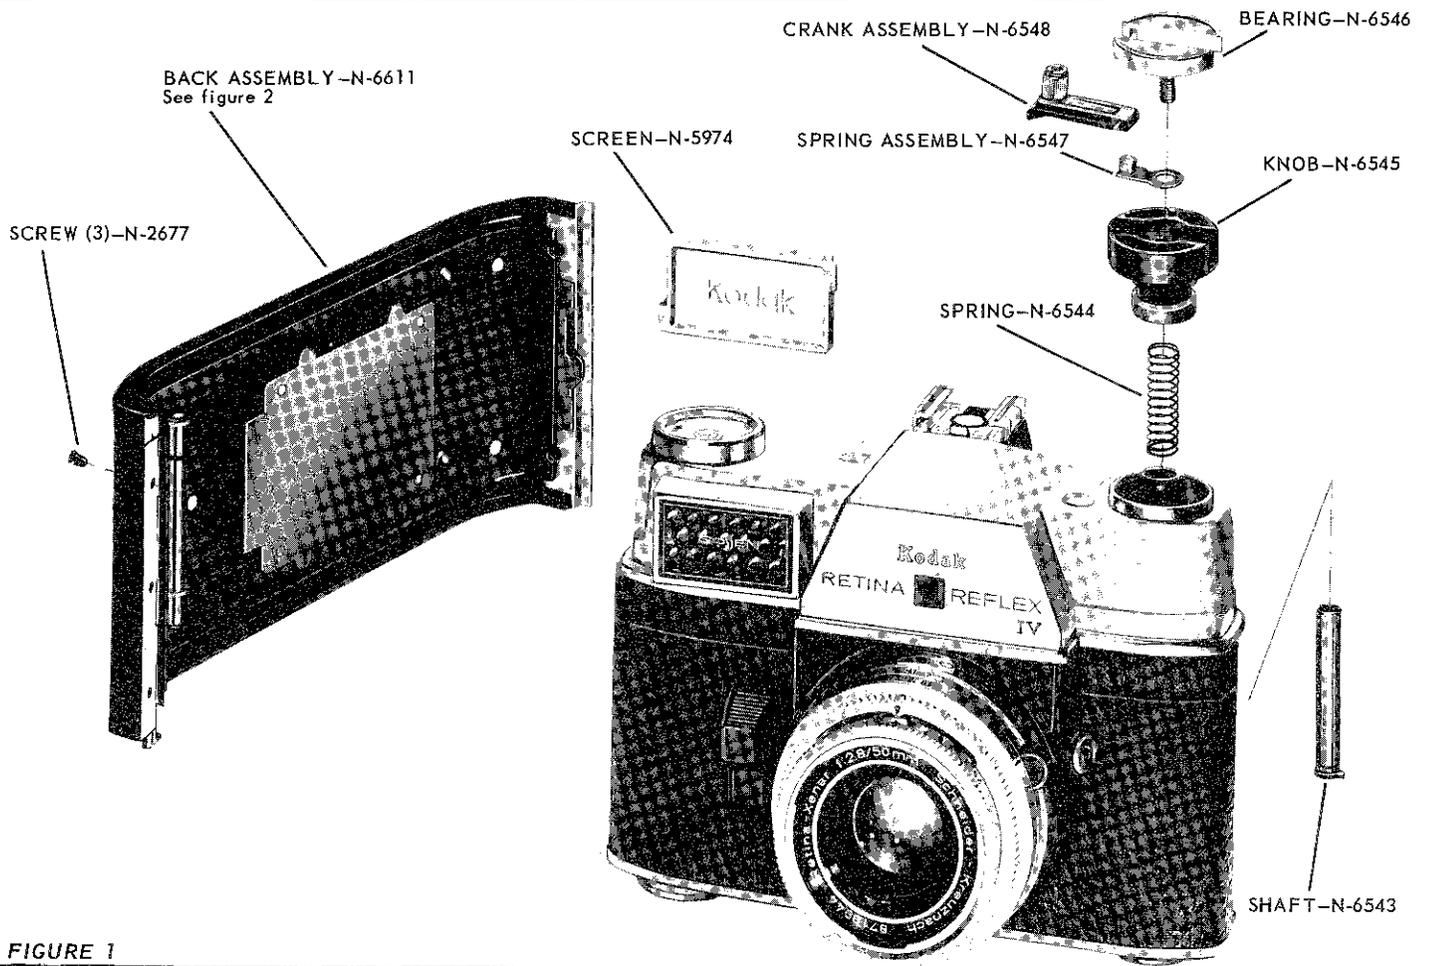


FIGURE 1

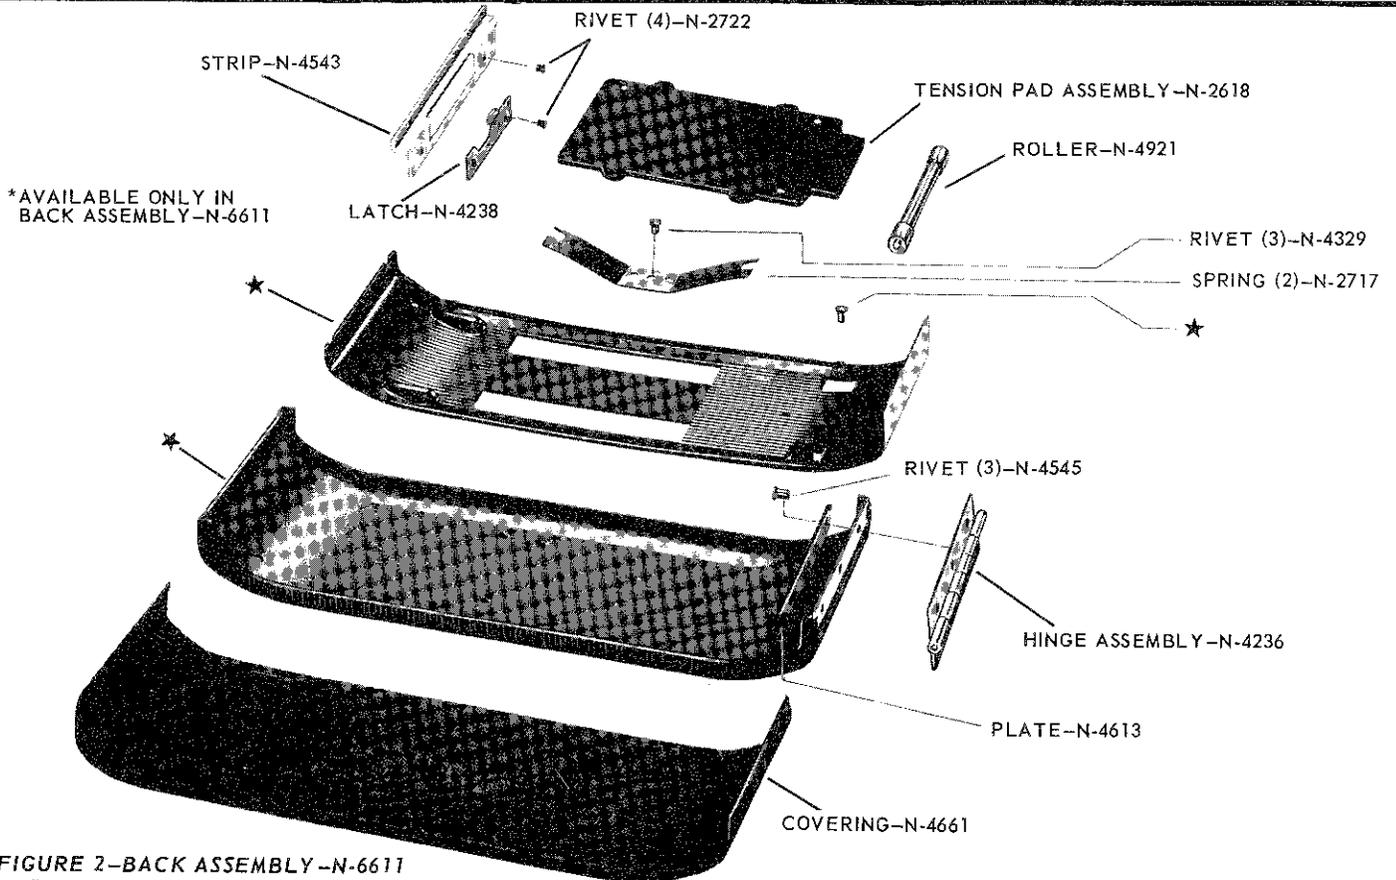


FIGURE 2-BACK ASSEMBLY-N-6611

Corrected to SEPTEMBER 1965

Parts List Supplement No. 769217

KODAK RETINA REFLEX IV CAMERA

Field Case, Models F and G

This supplement is for Parts List No. 769207

The following corrections should be made:

Parts List

Page 18 – Change part number N-5591 to N-5991

Page 19 – Add part number N-6778 Scale – Xenon Lens, 50mm f1.9 . . . Fig 3

Page 2

Figure 2 - Change part Number N4329 to N4239

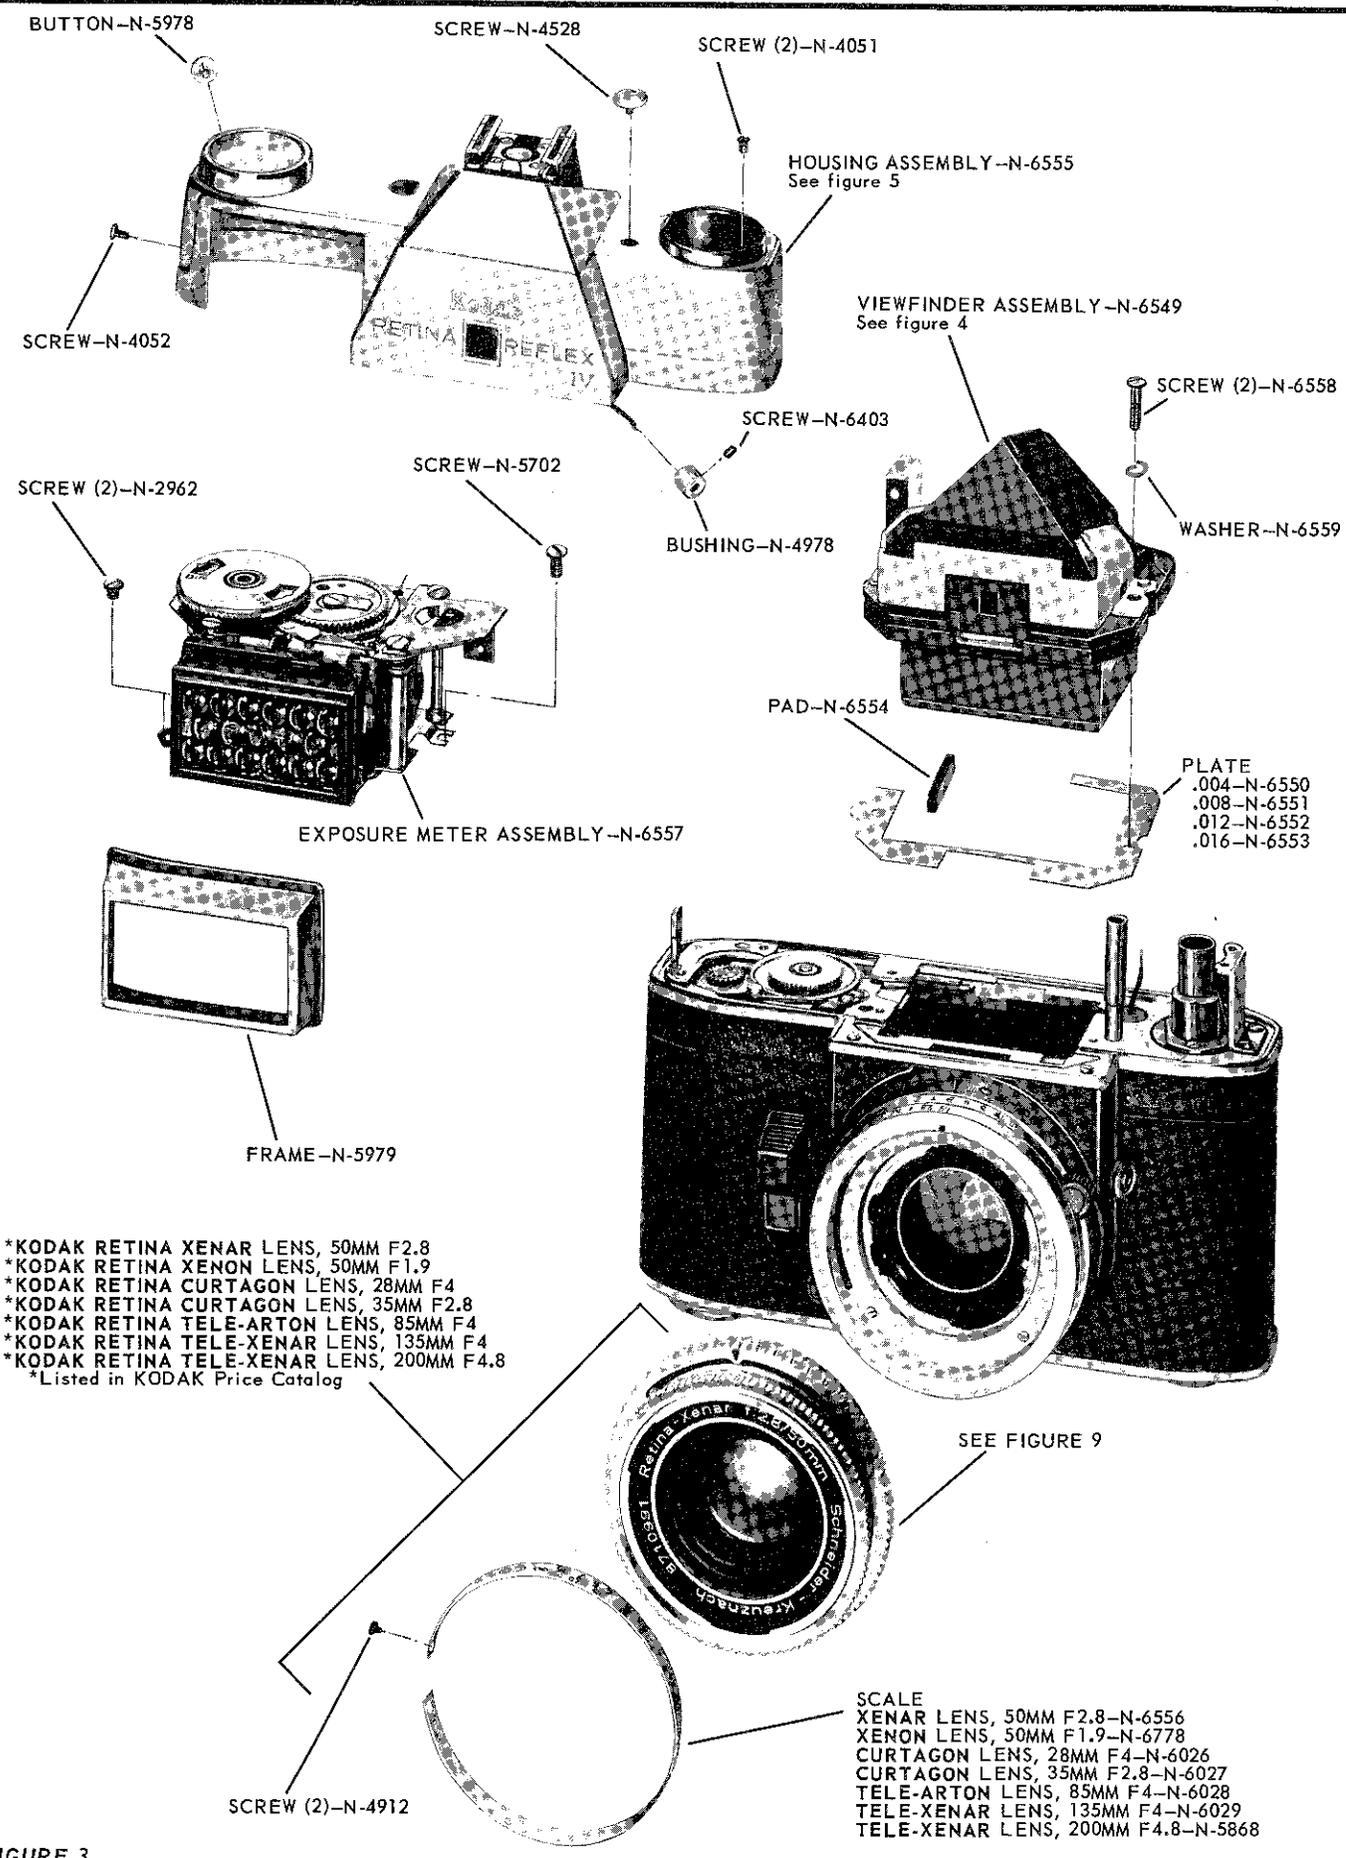


FIGURE 3

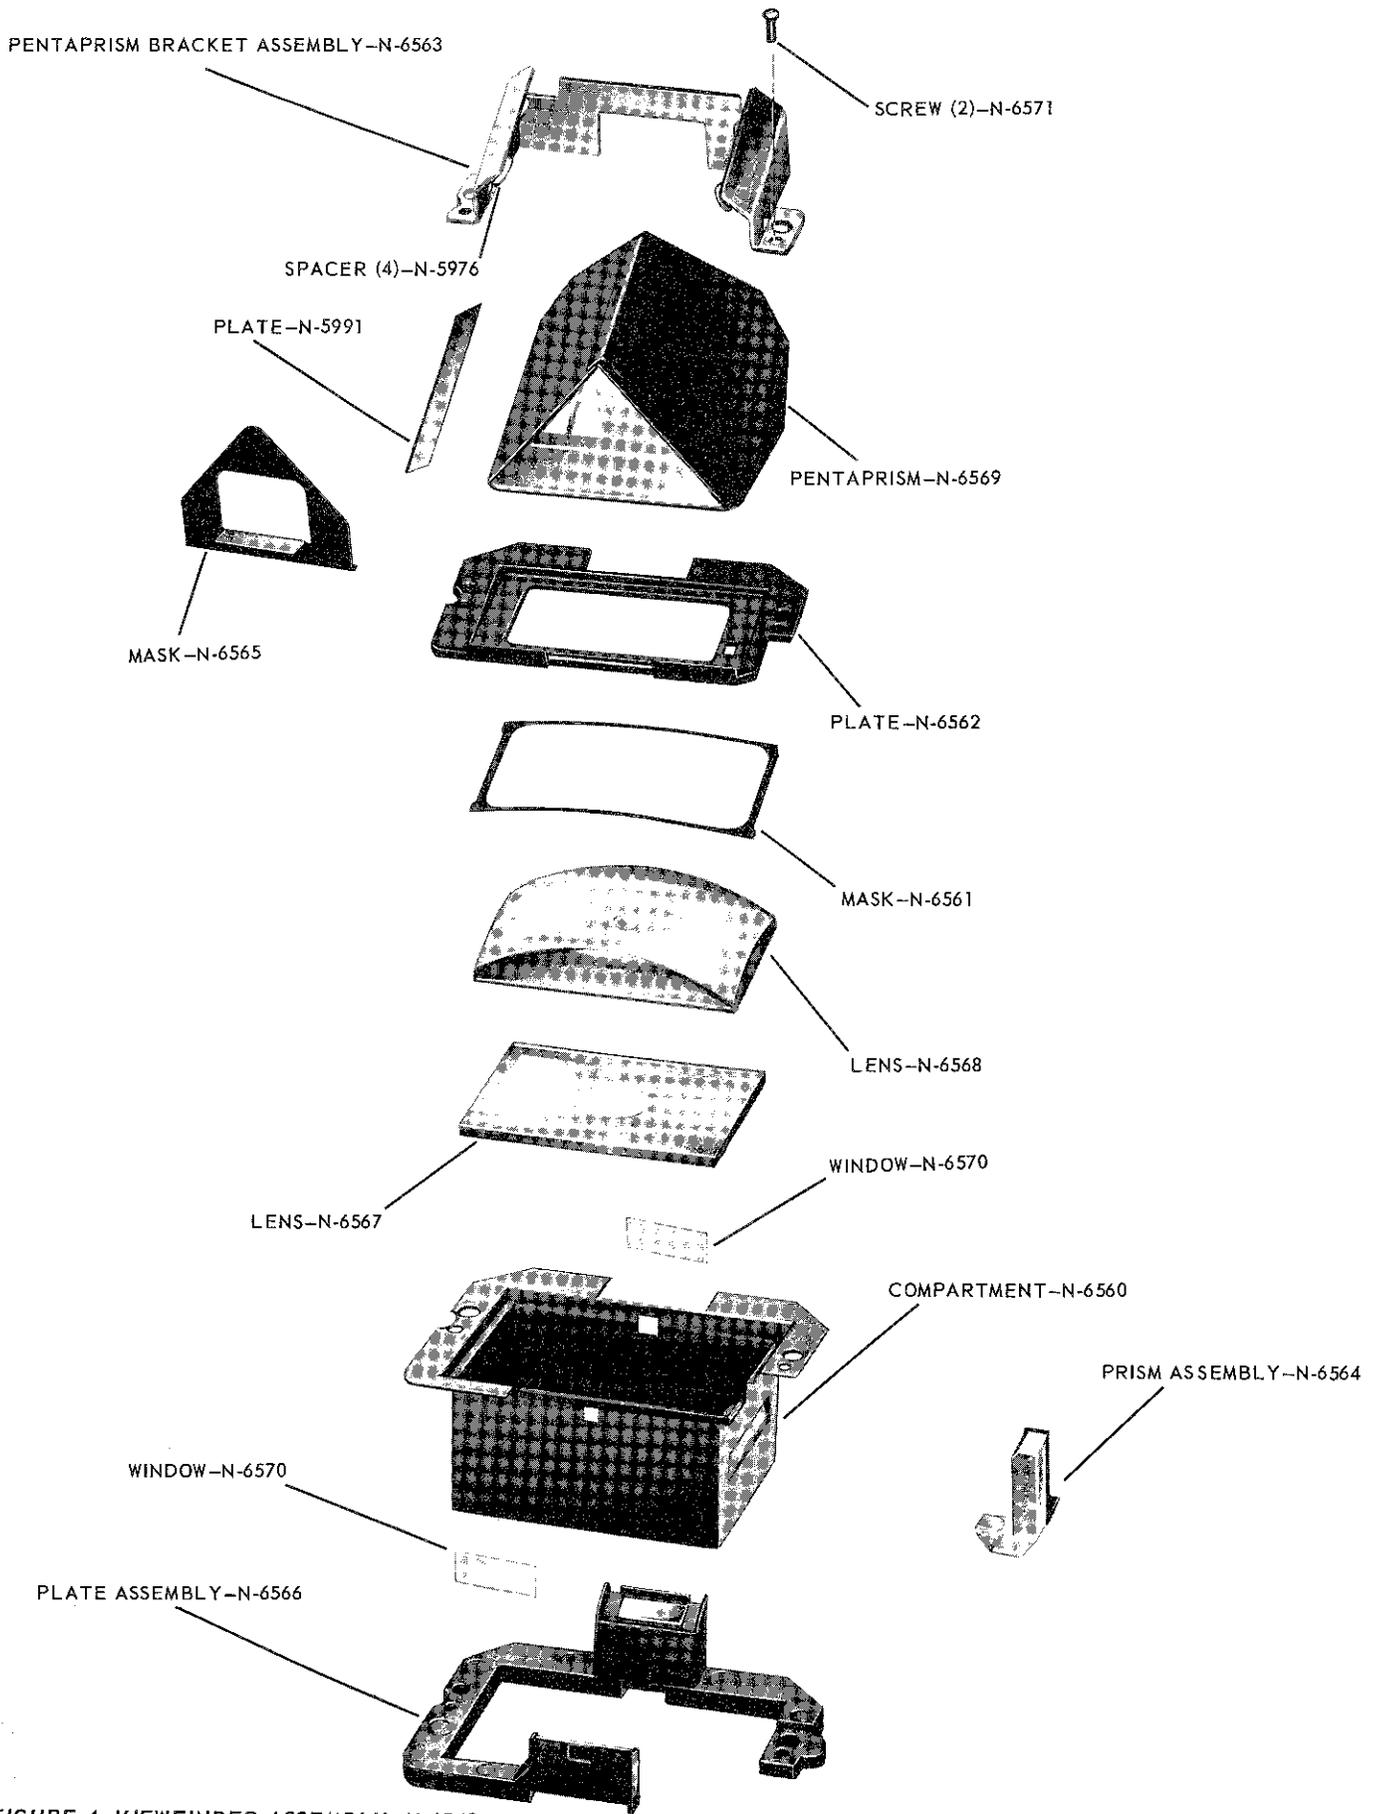


FIGURE 4-VIEWFINDER ASSEMBLY-N-6549

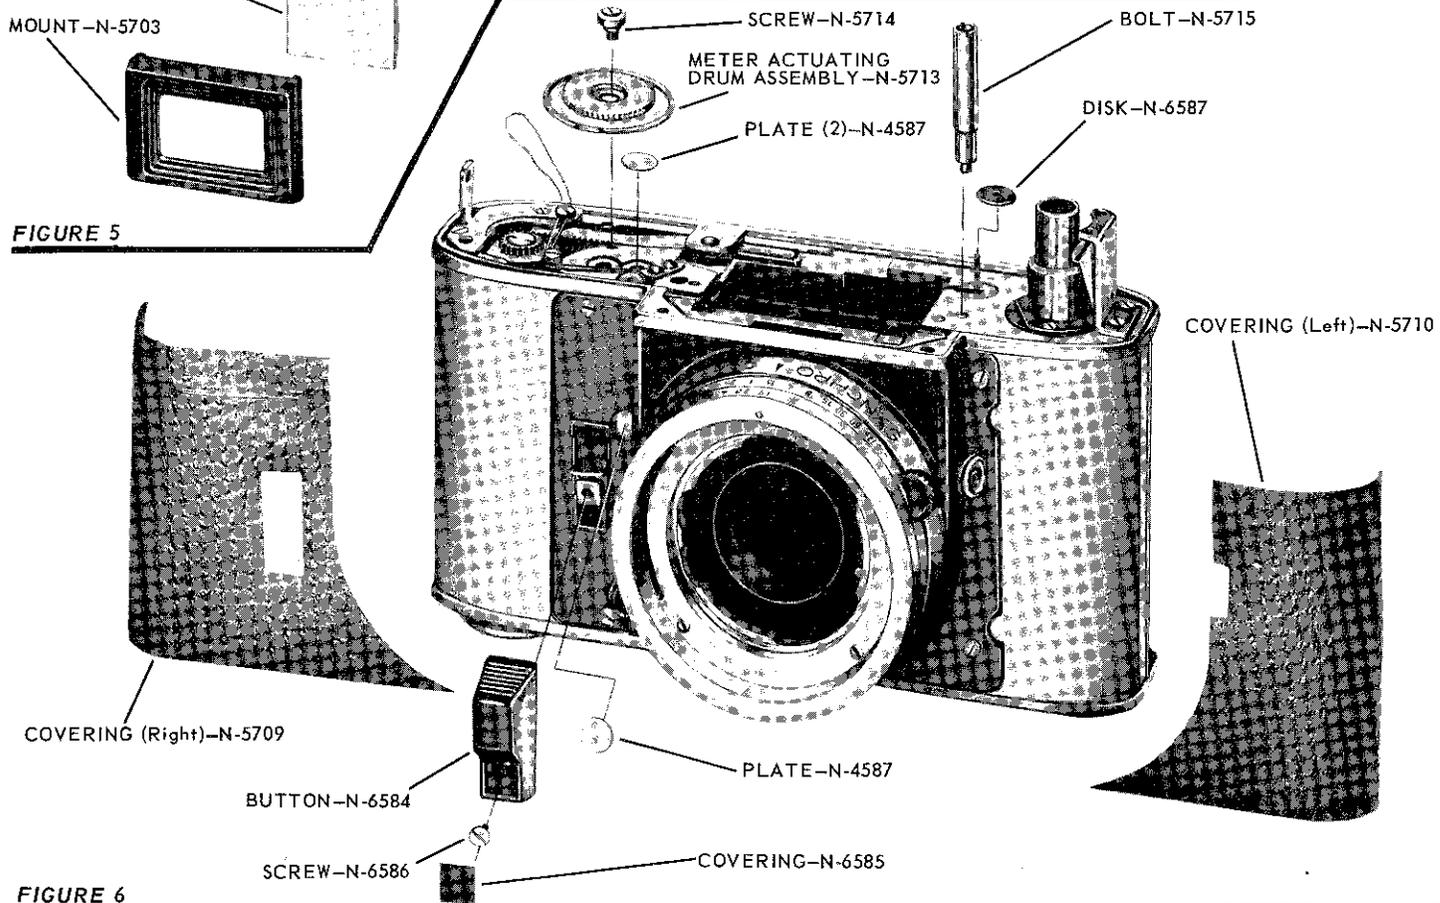
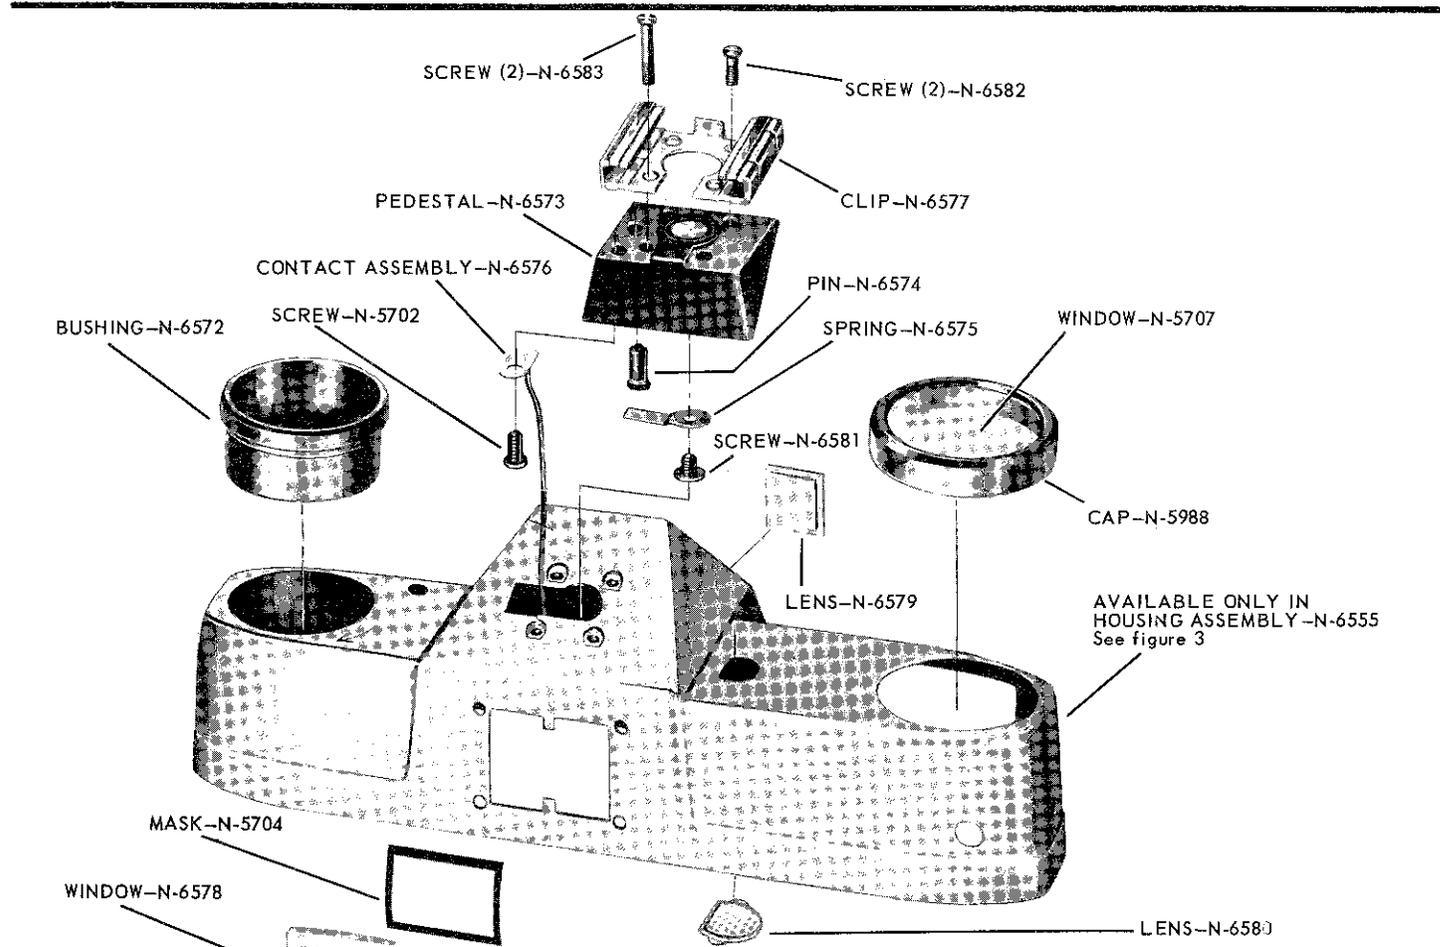


FIGURE 5

FIGURE 6

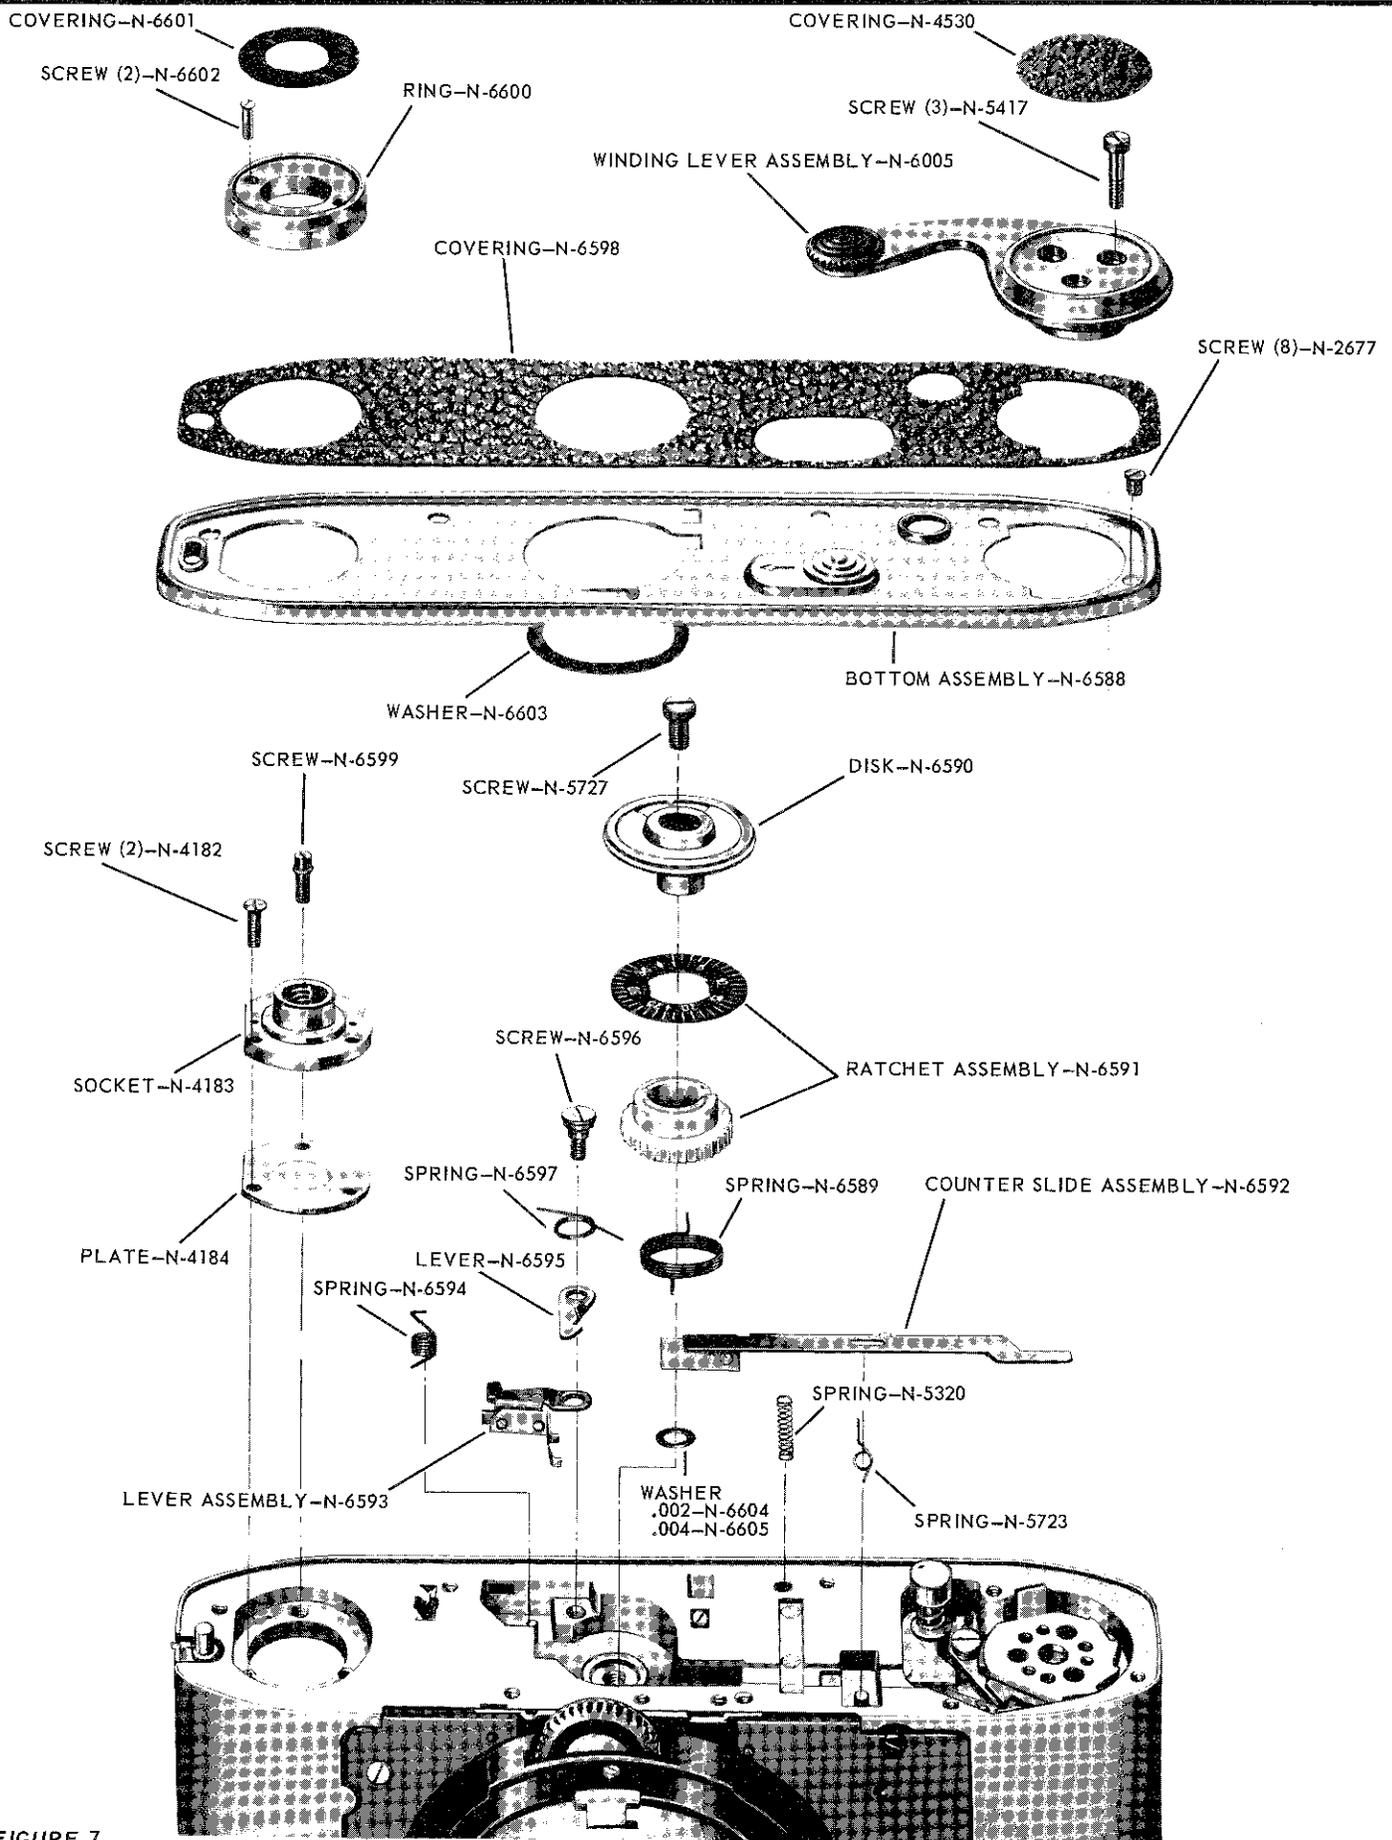


FIGURE 7

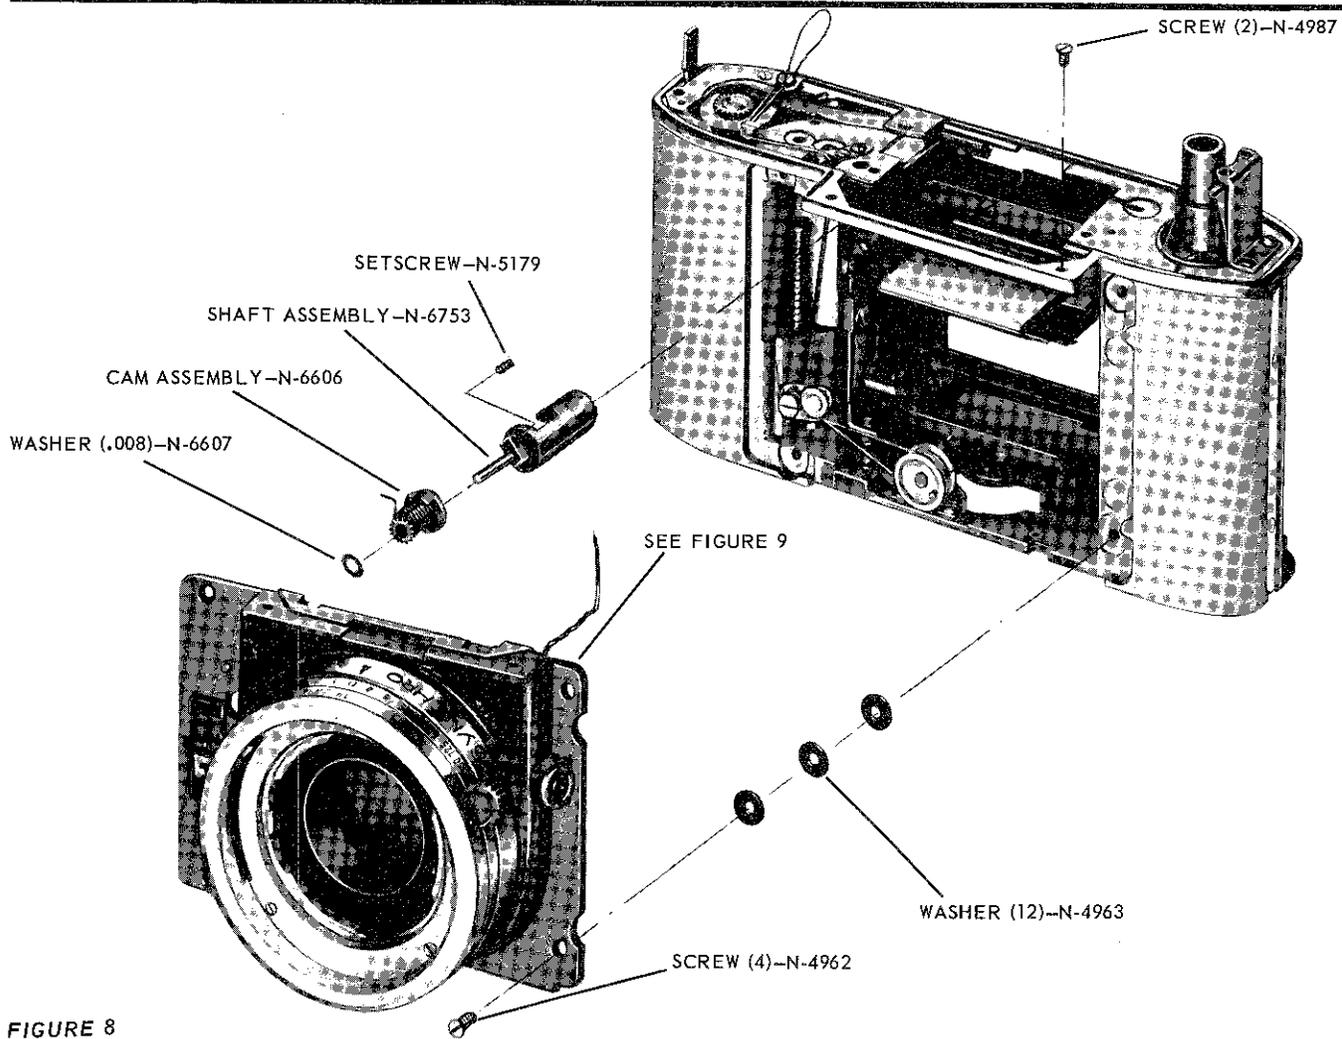


FIGURE 8

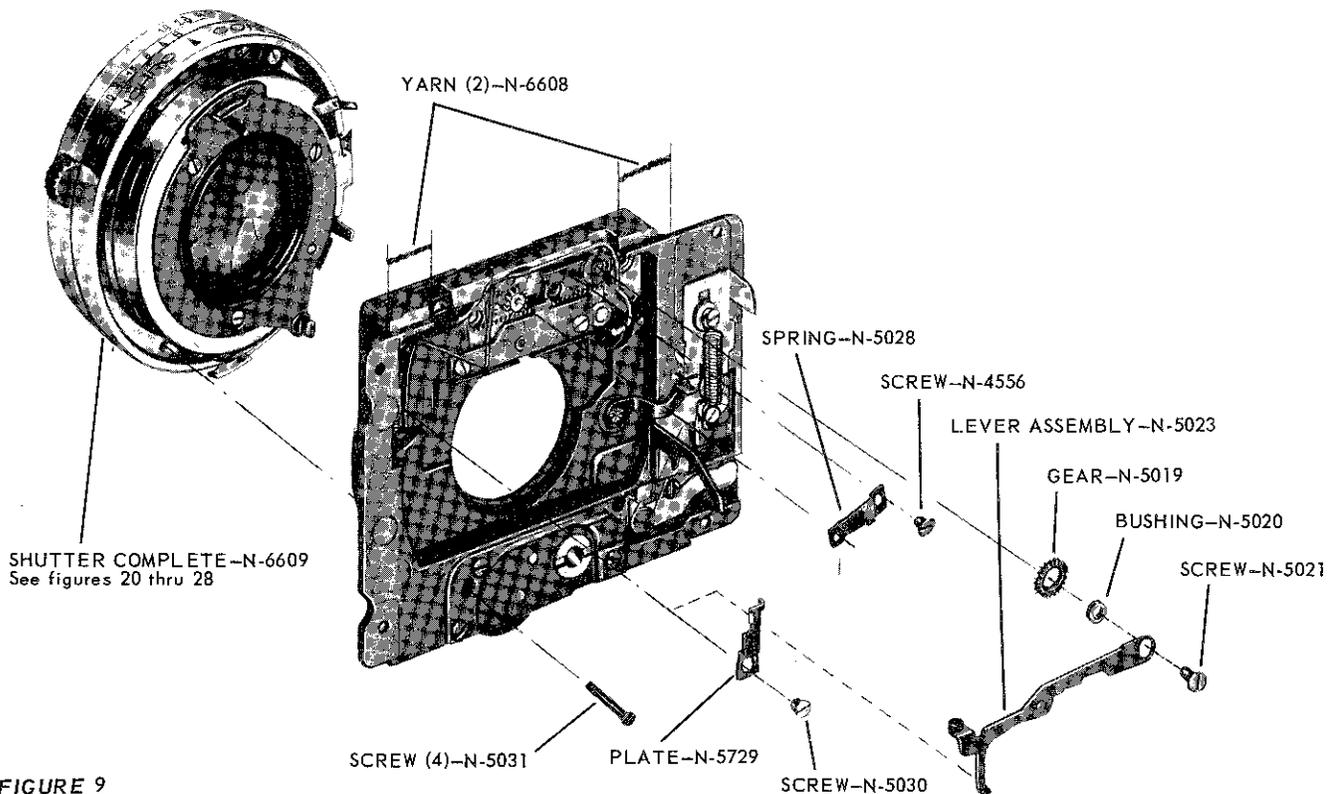


FIGURE 9

KODAK RETINA III S CAMERA

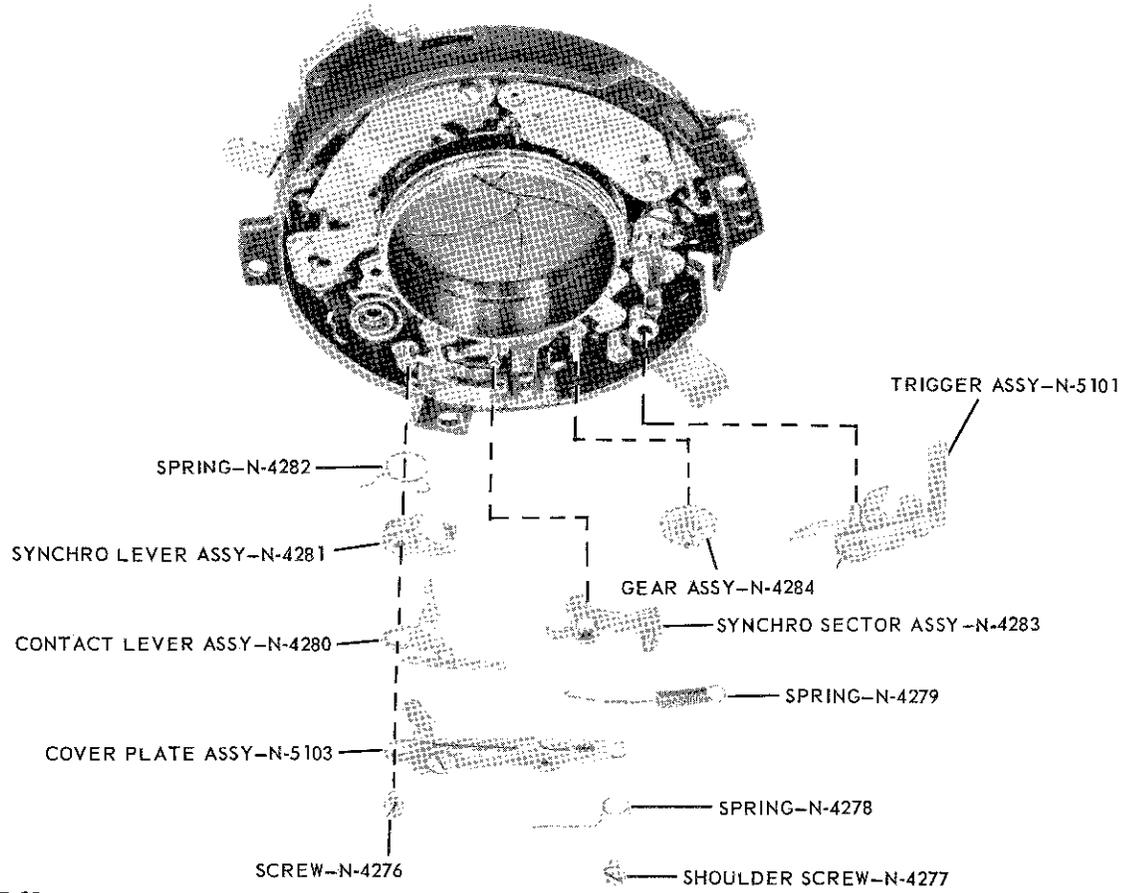


FIGURE 23

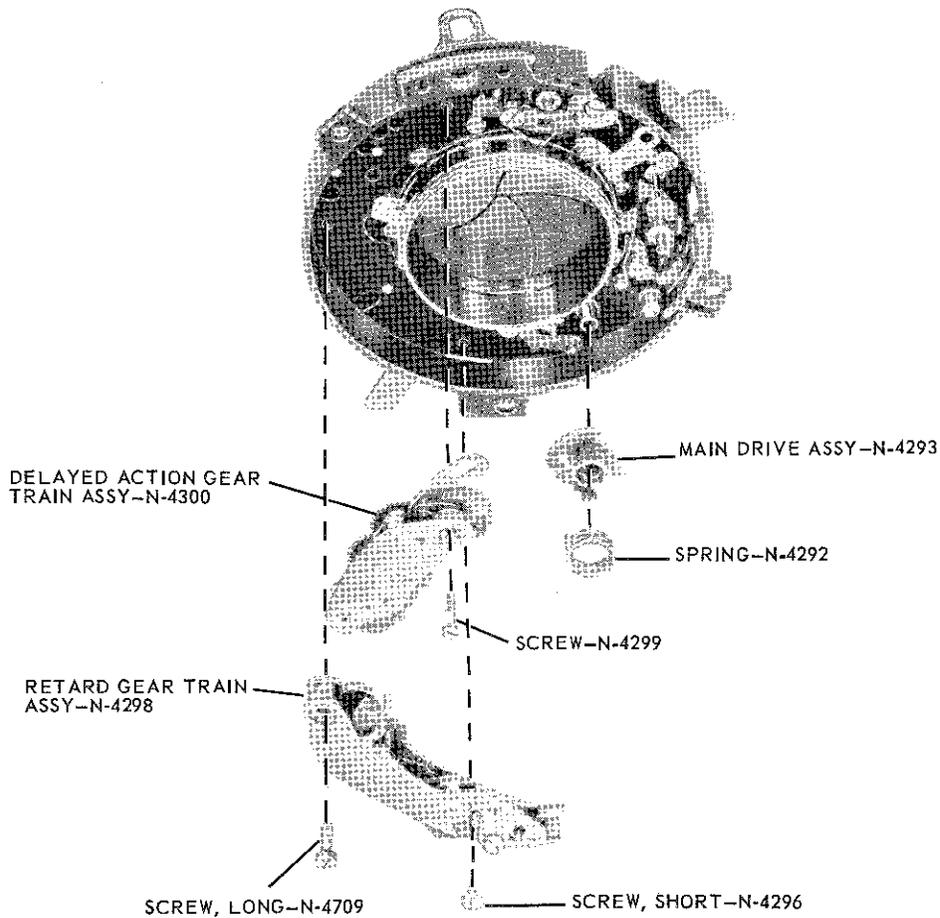


FIGURE 24

Always give PART NUMBER and NAME when ordering parts

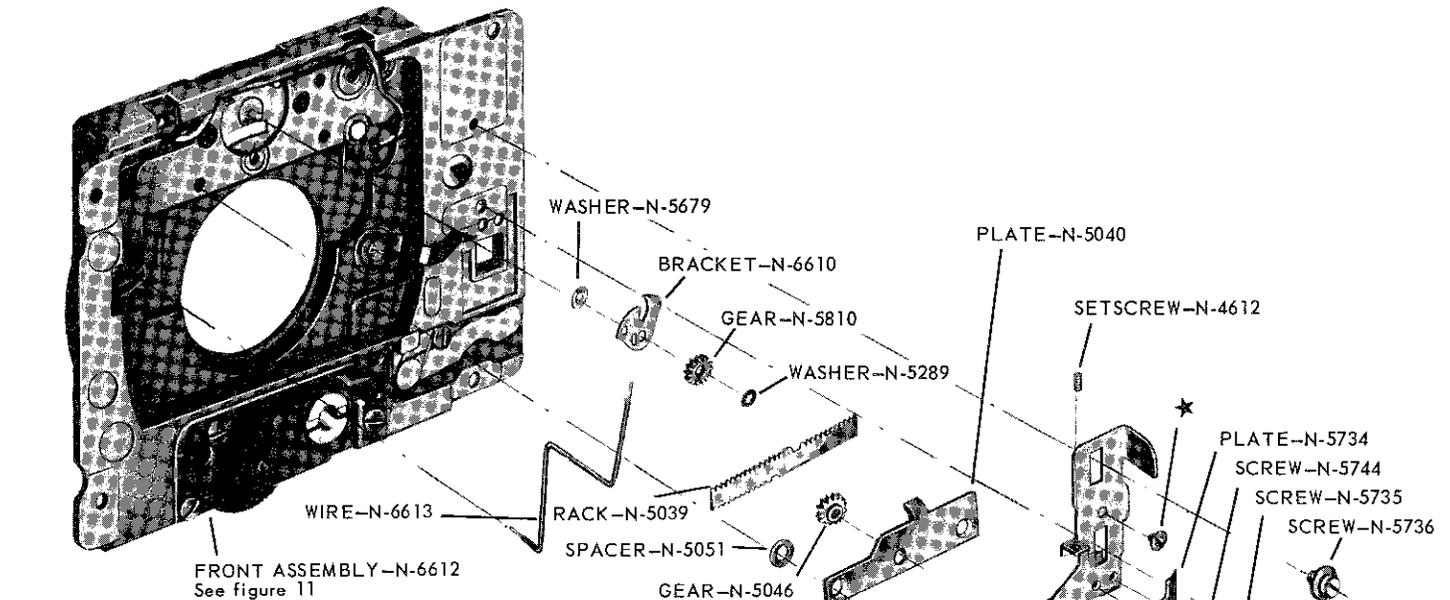


FIGURE 10

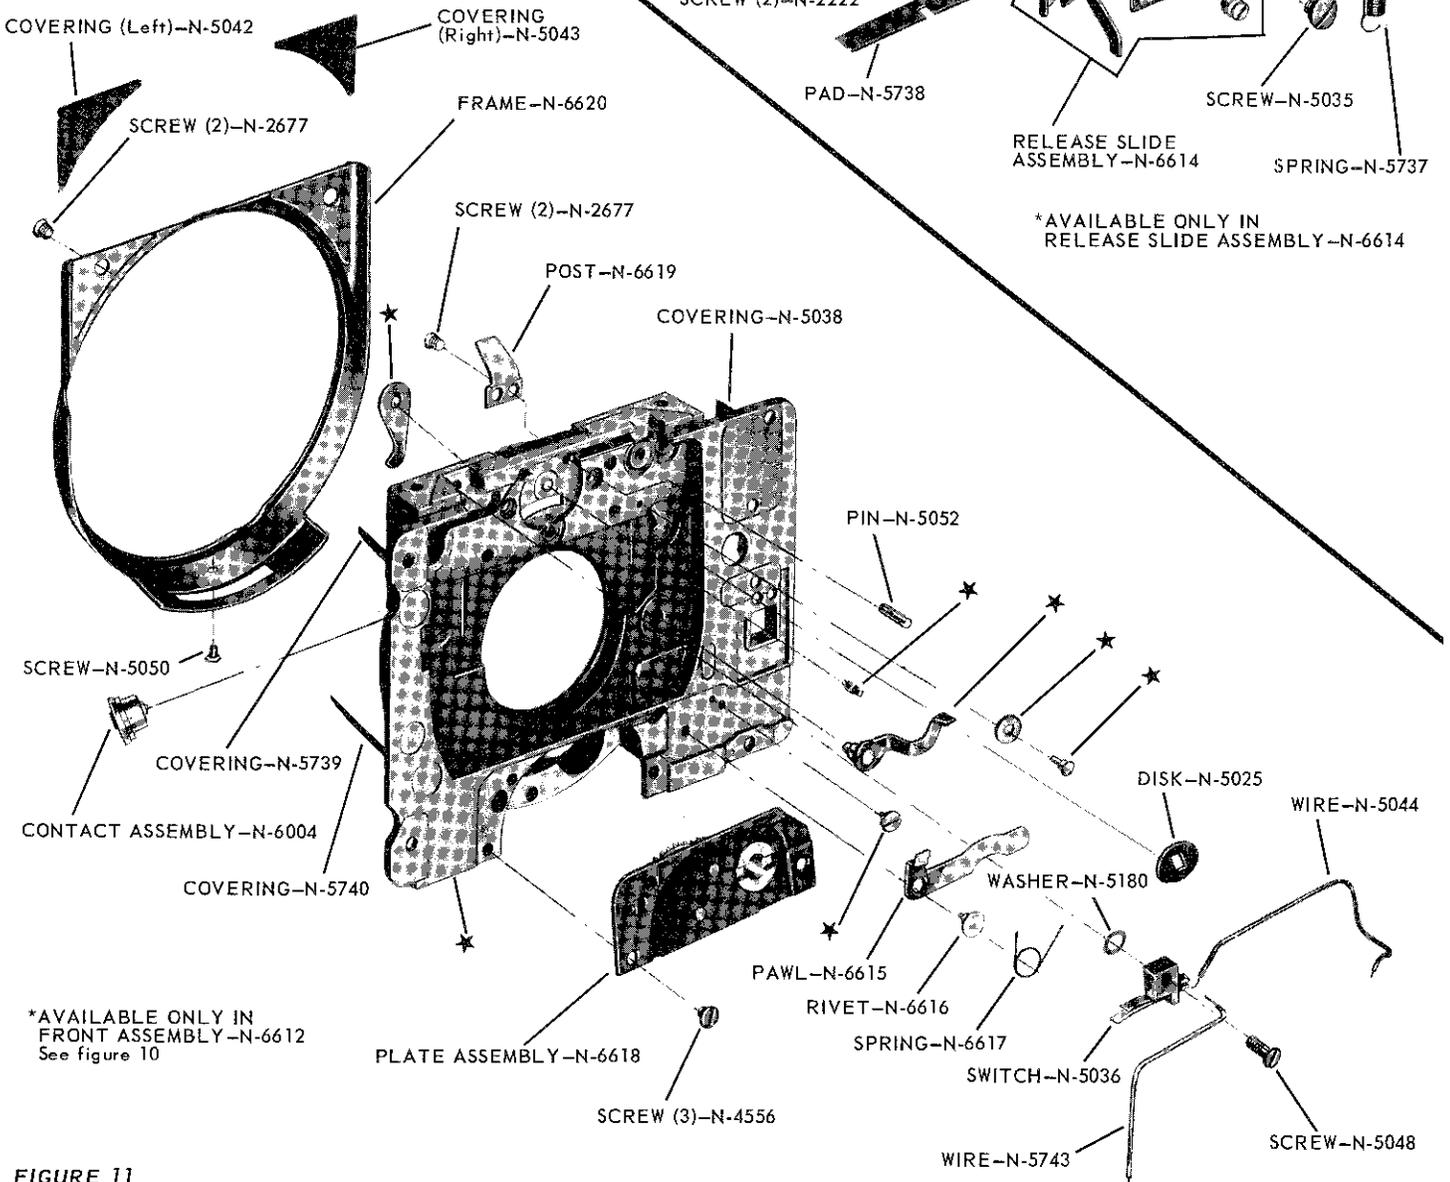


FIGURE 11

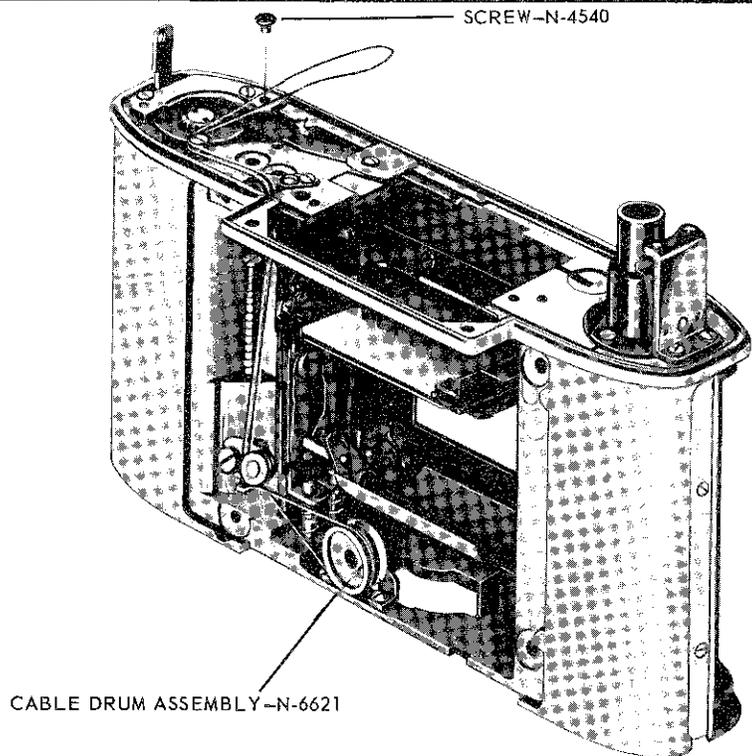


FIGURE 12

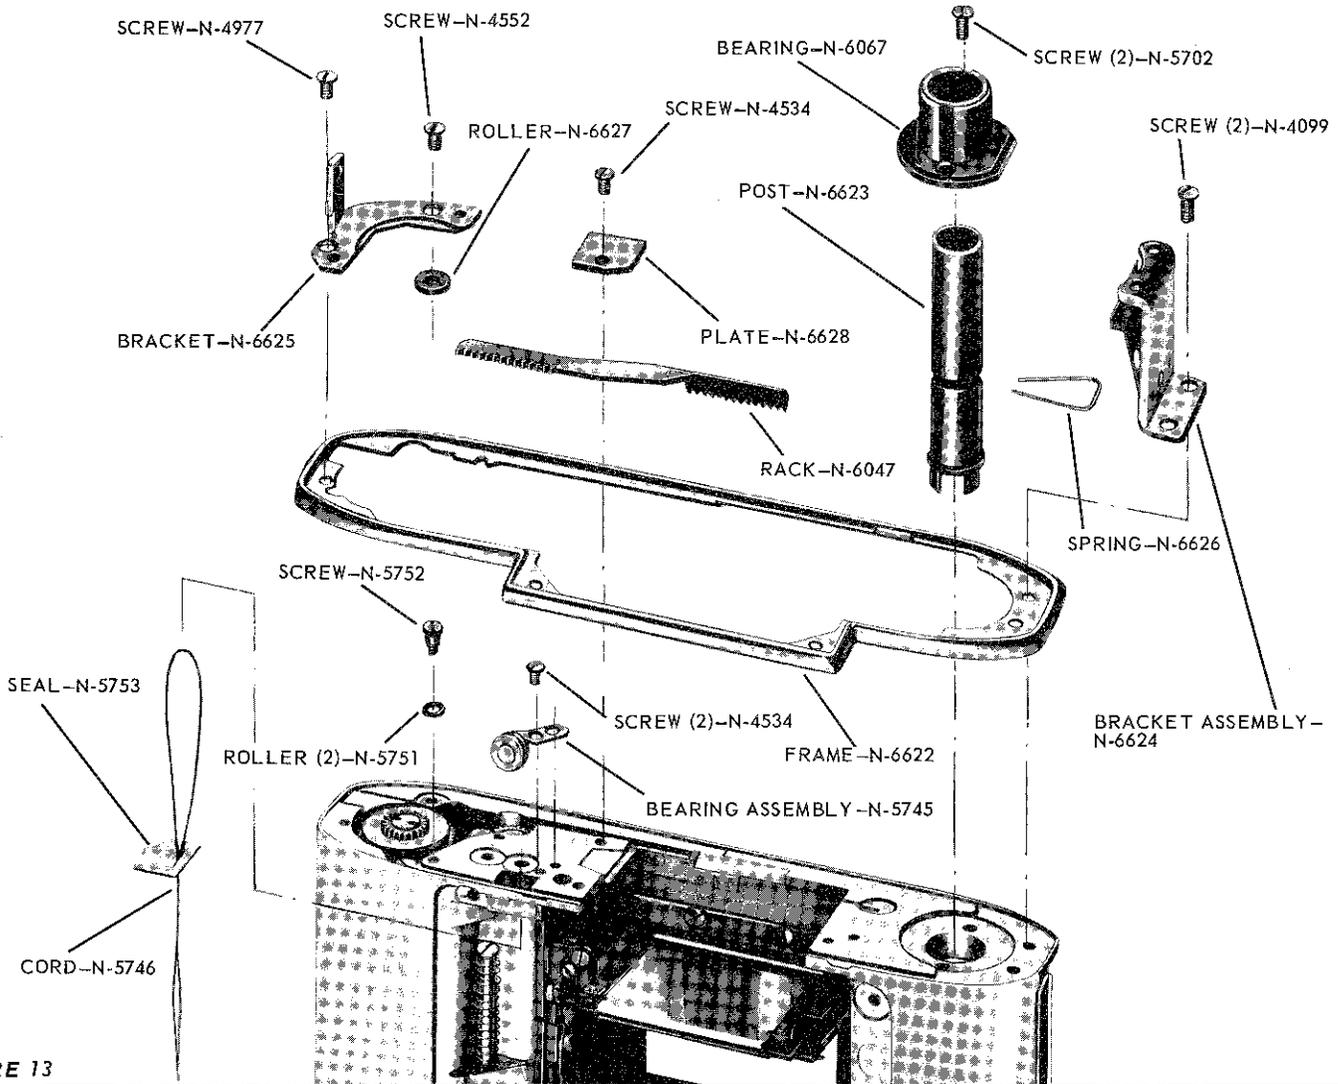


FIGURE 13

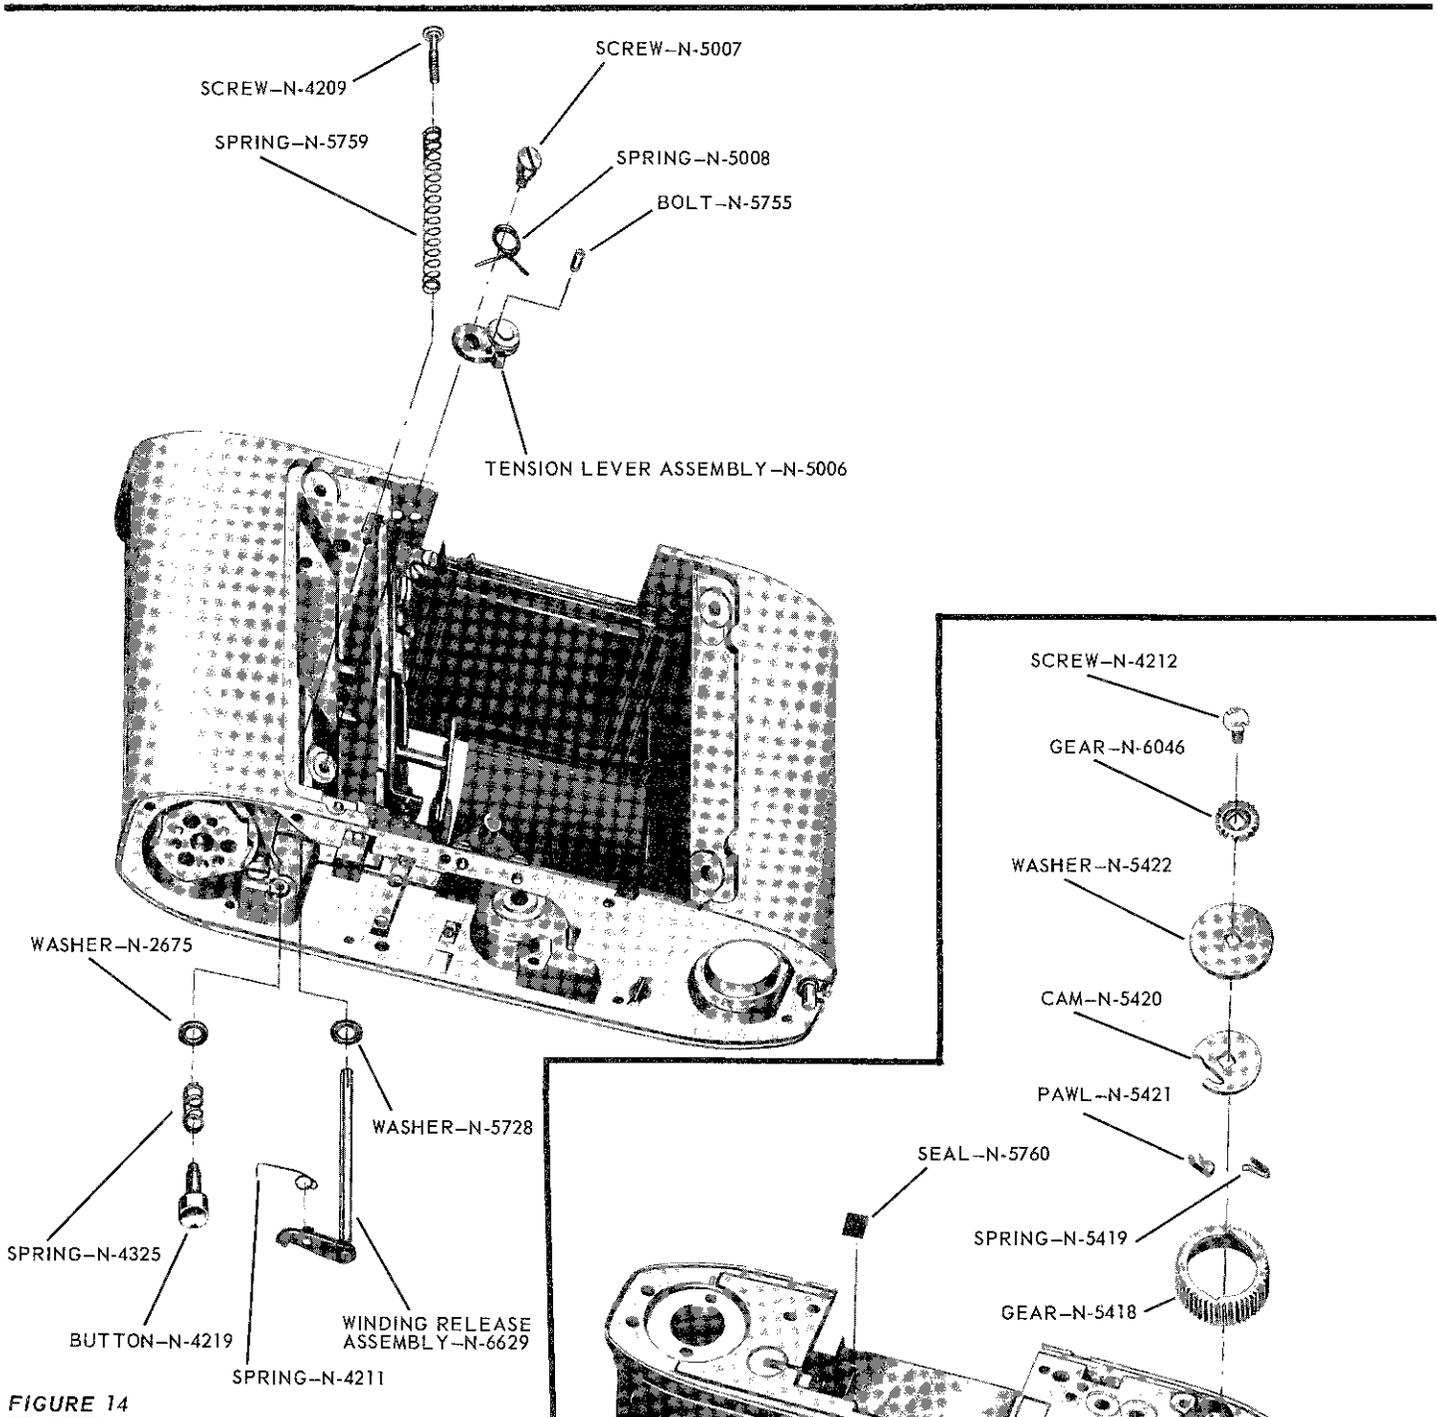


FIGURE 14

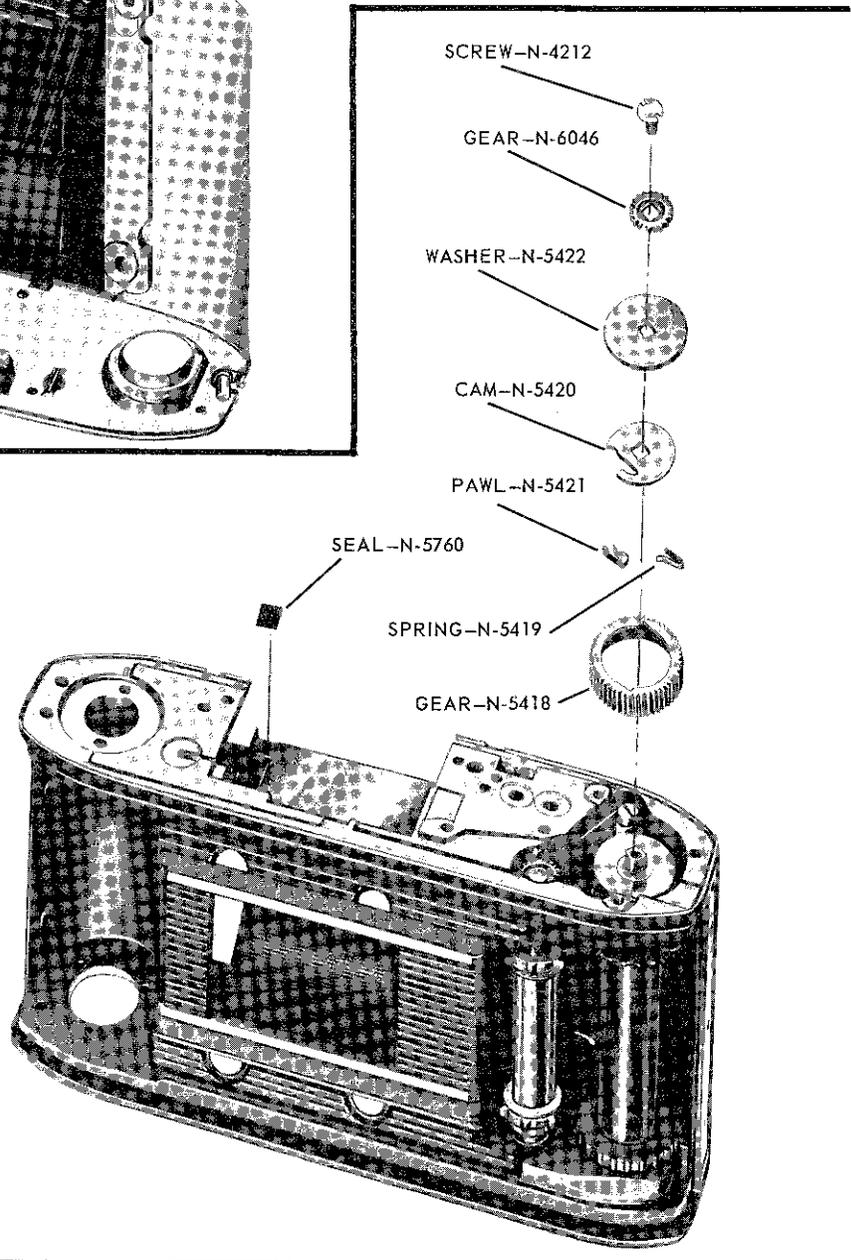


FIGURE 15

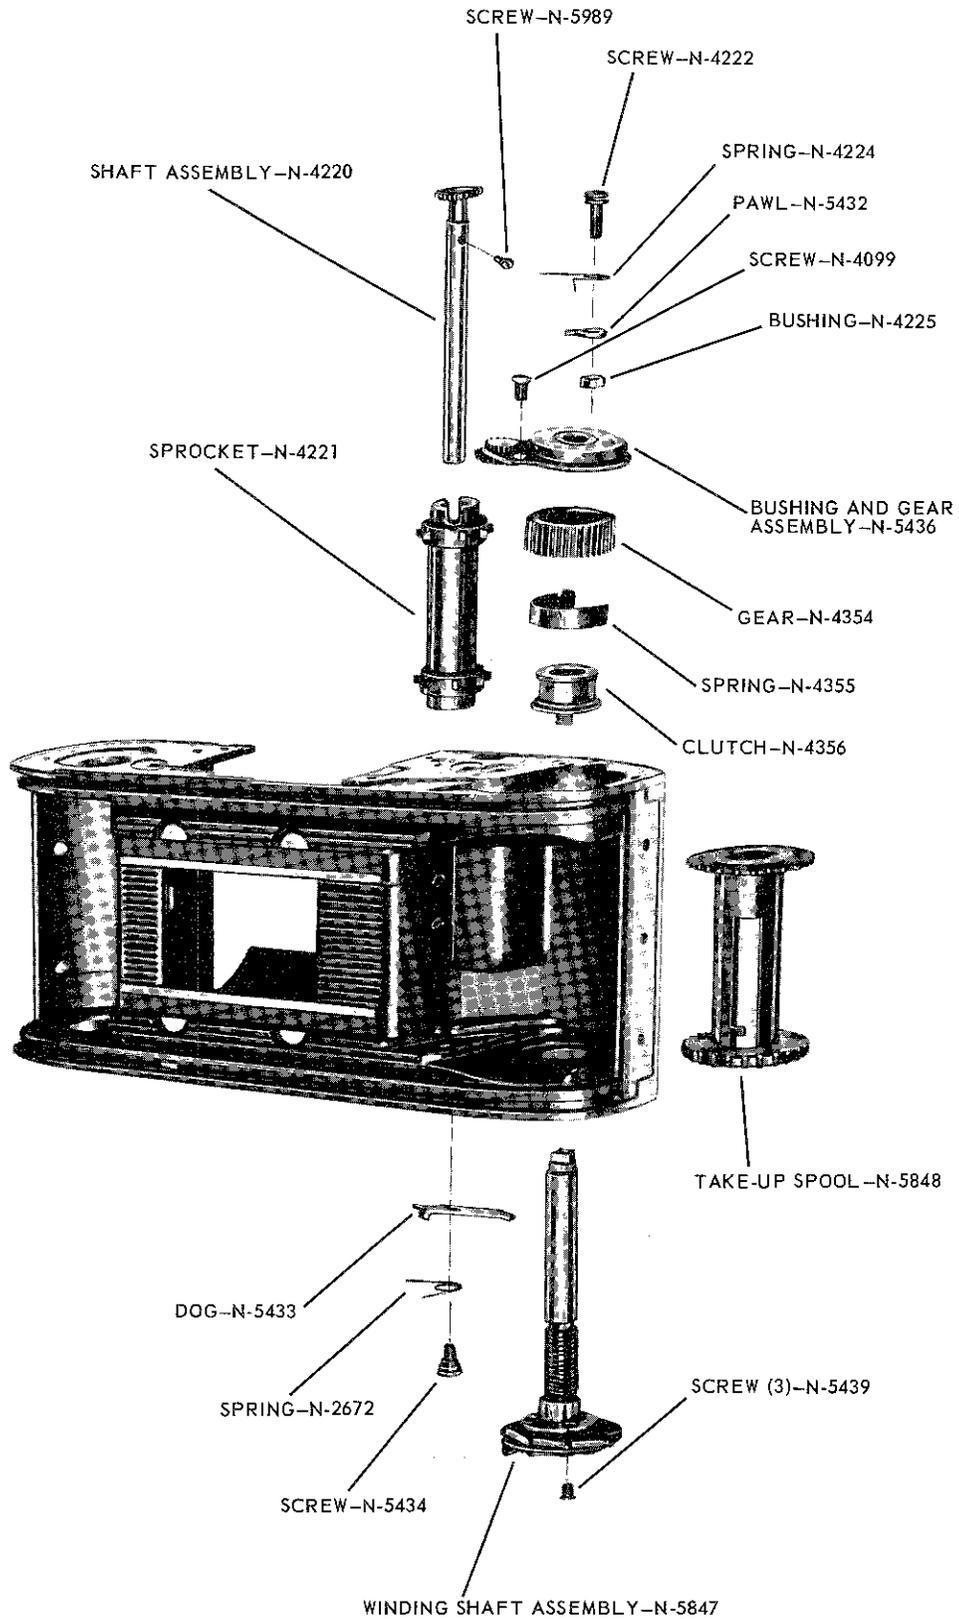


FIGURE 16

*AVAILABLE ONLY IN
LEVER ASSEMBLY-N-5762

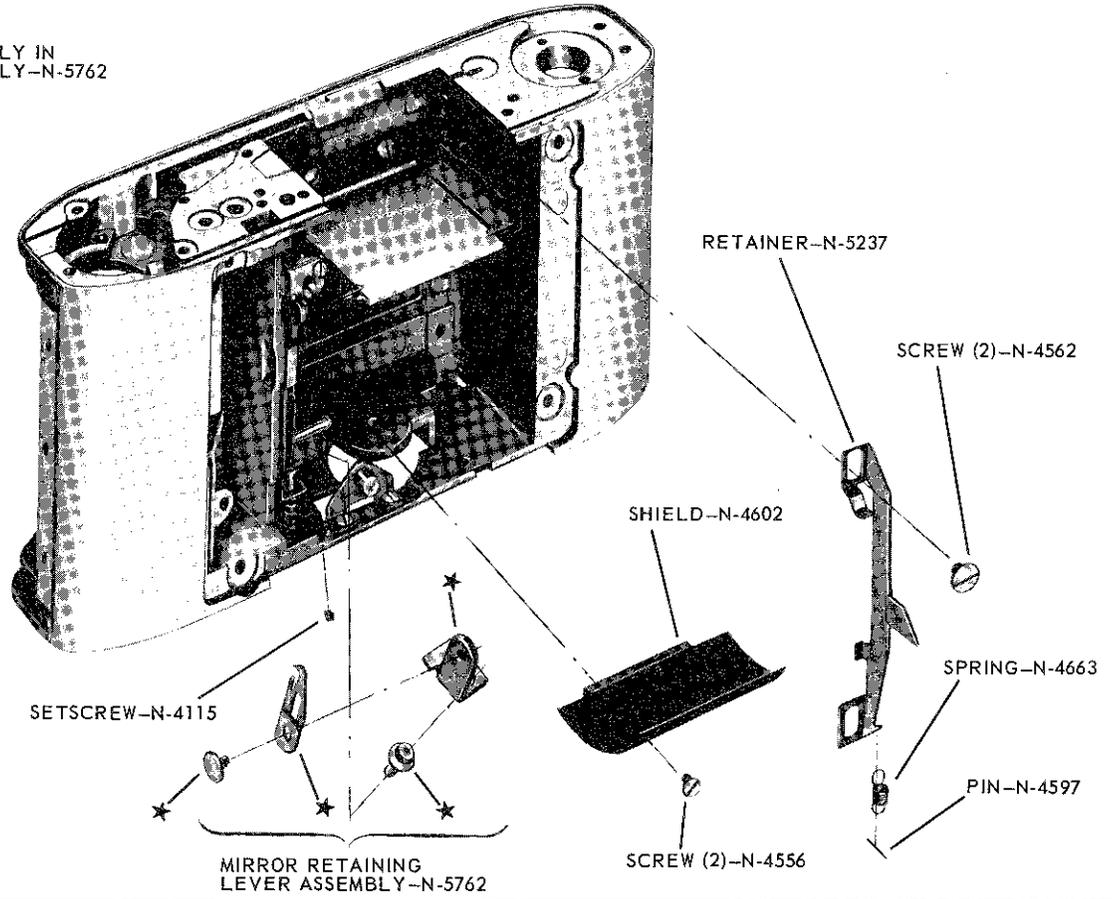


FIGURE 17


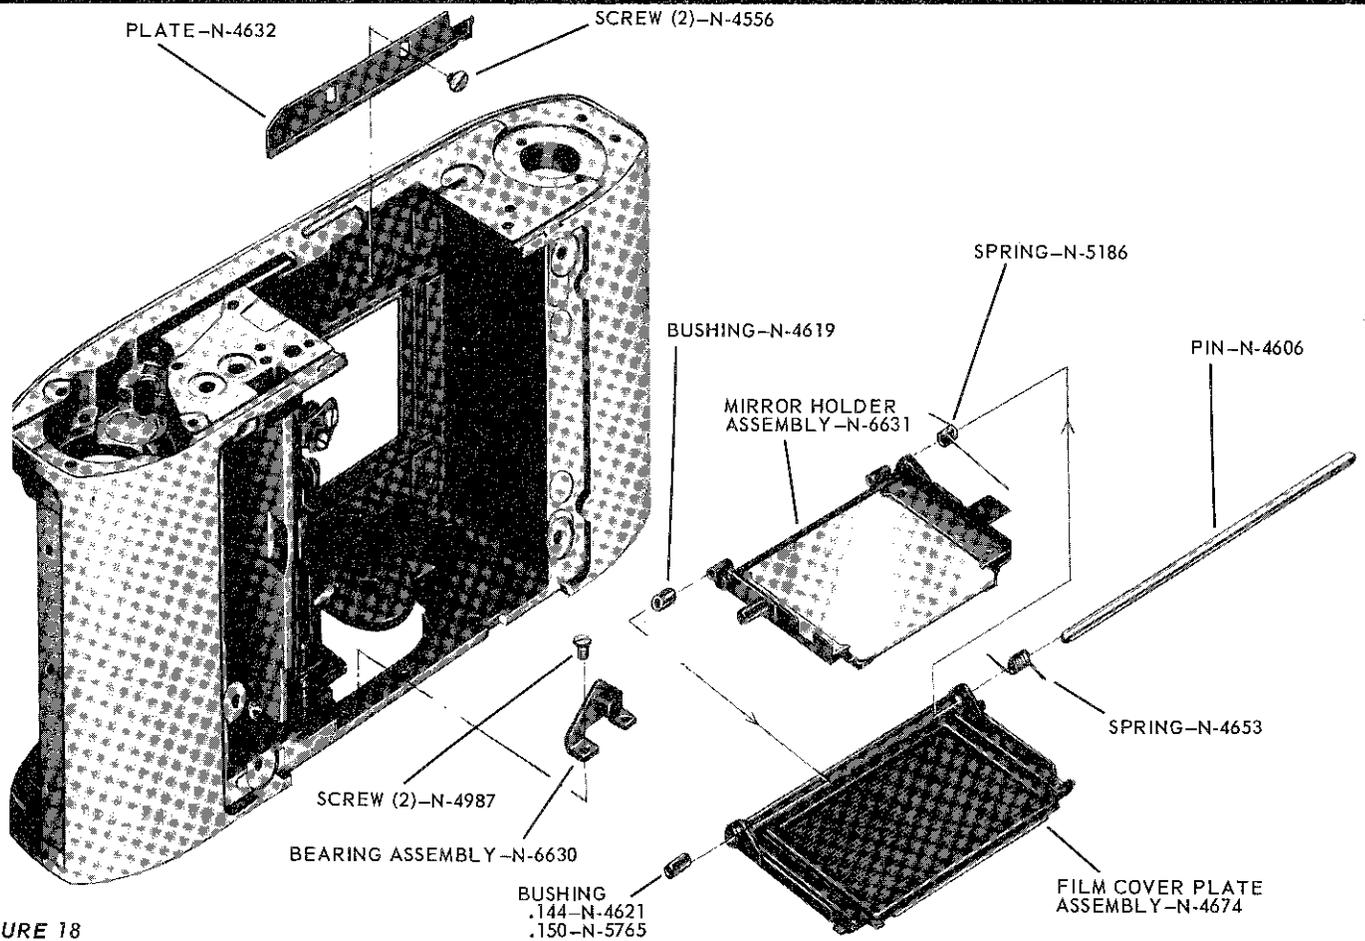


FIGURE 18

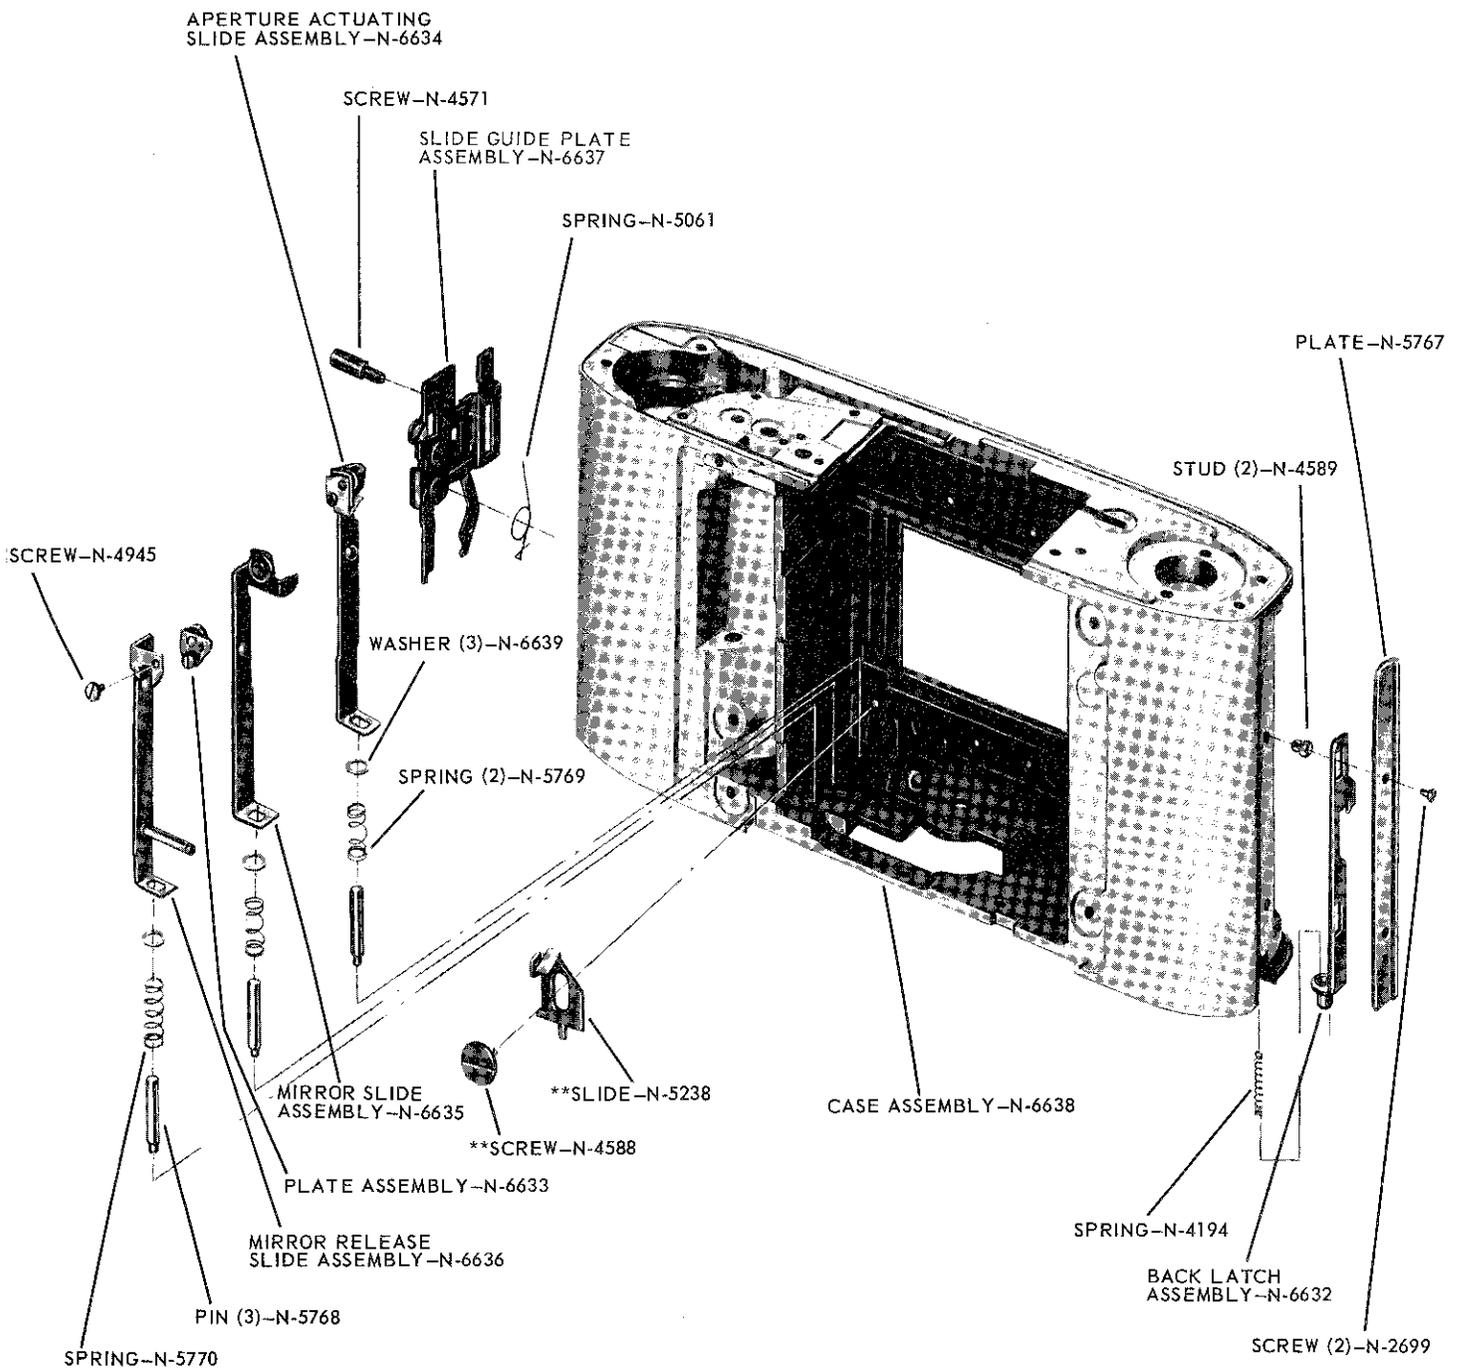

**INCLUDED IN CASE ASSEMBLY-N-6638

FIGURE 19

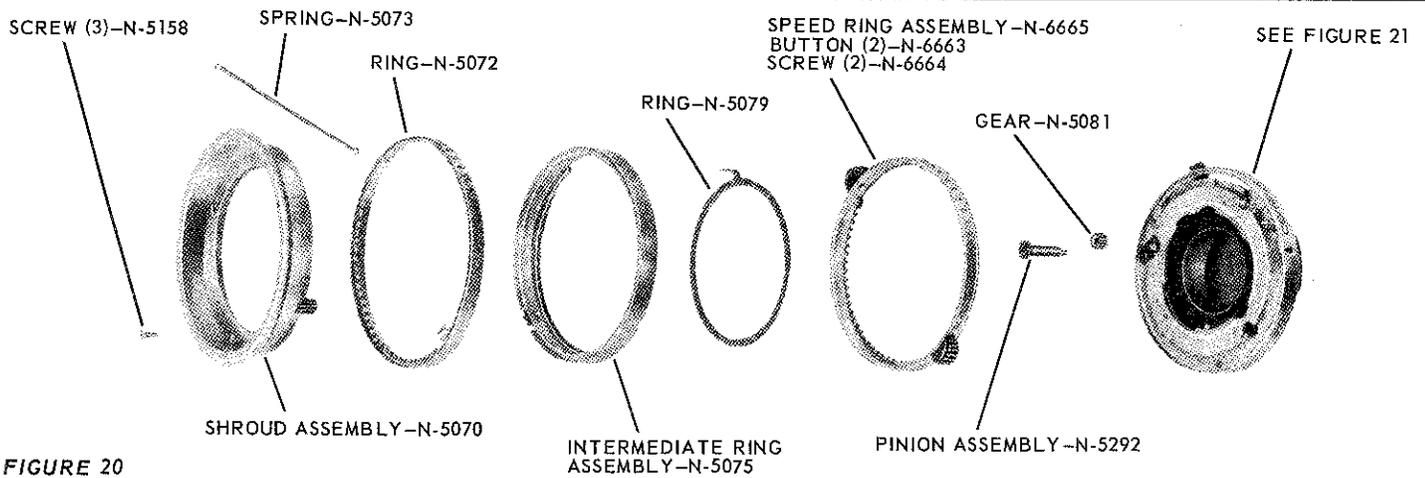


FIGURE 20

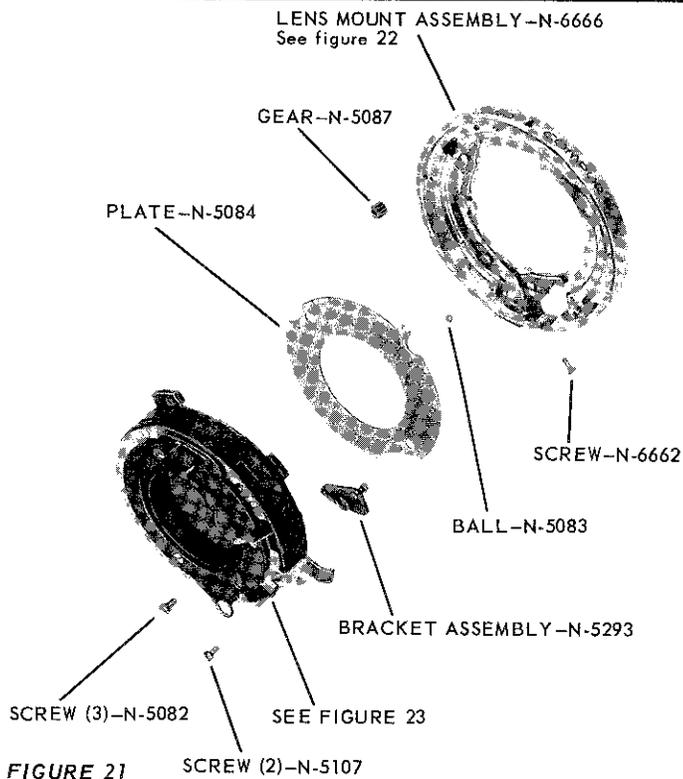


FIGURE 21

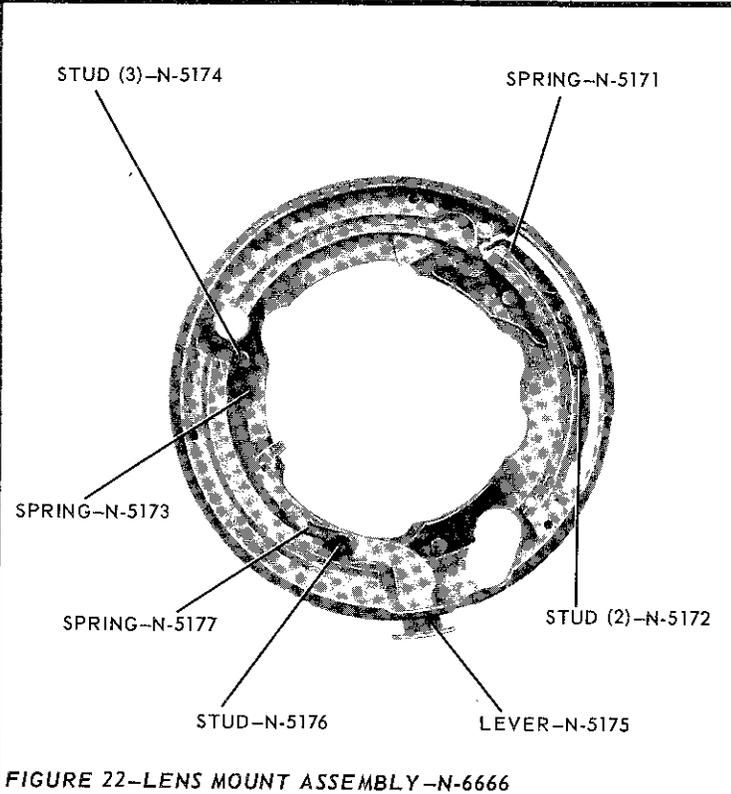


FIGURE 22-LENS MOUNT ASSEMBLY-N-6666

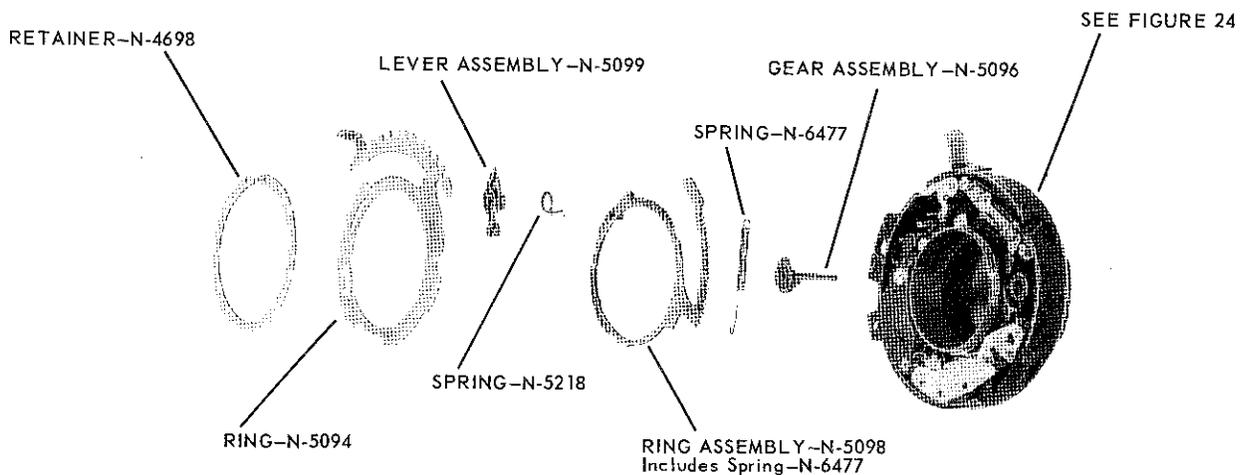


FIGURE 23

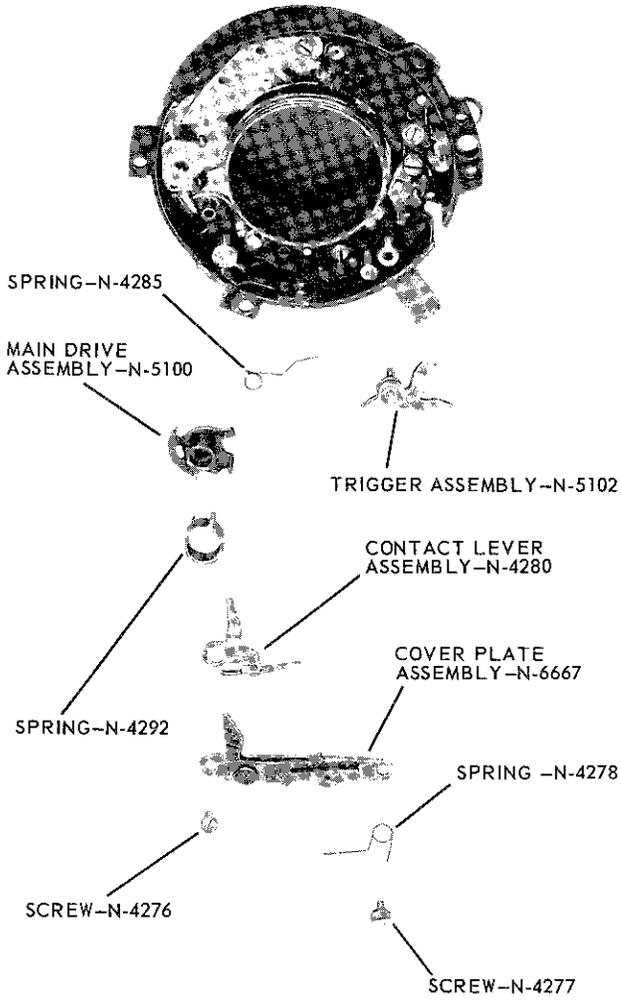


FIGURE 24

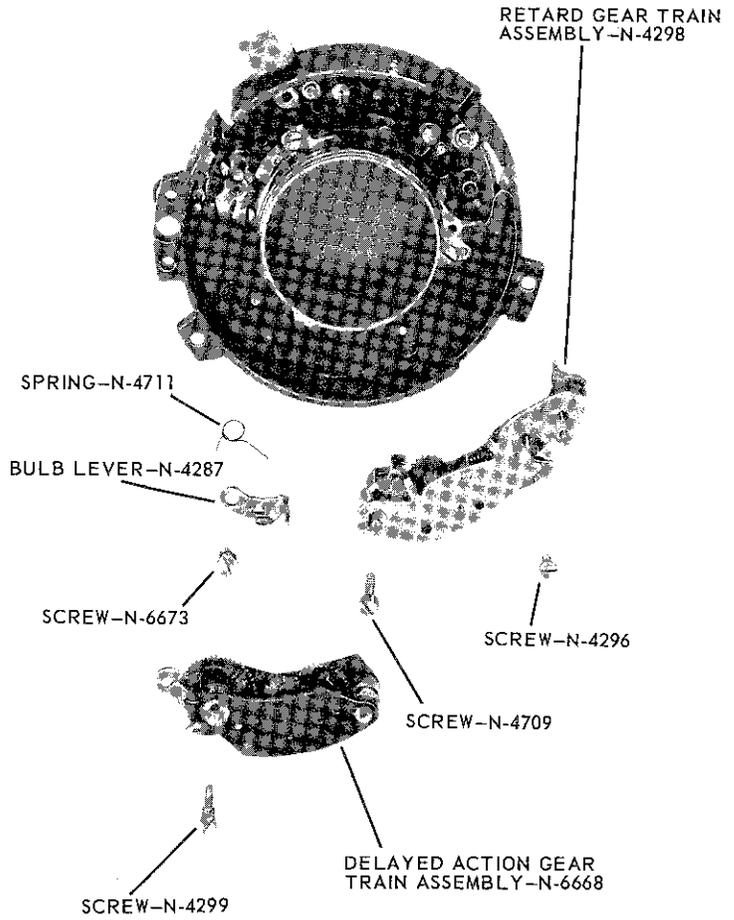


FIGURE 25

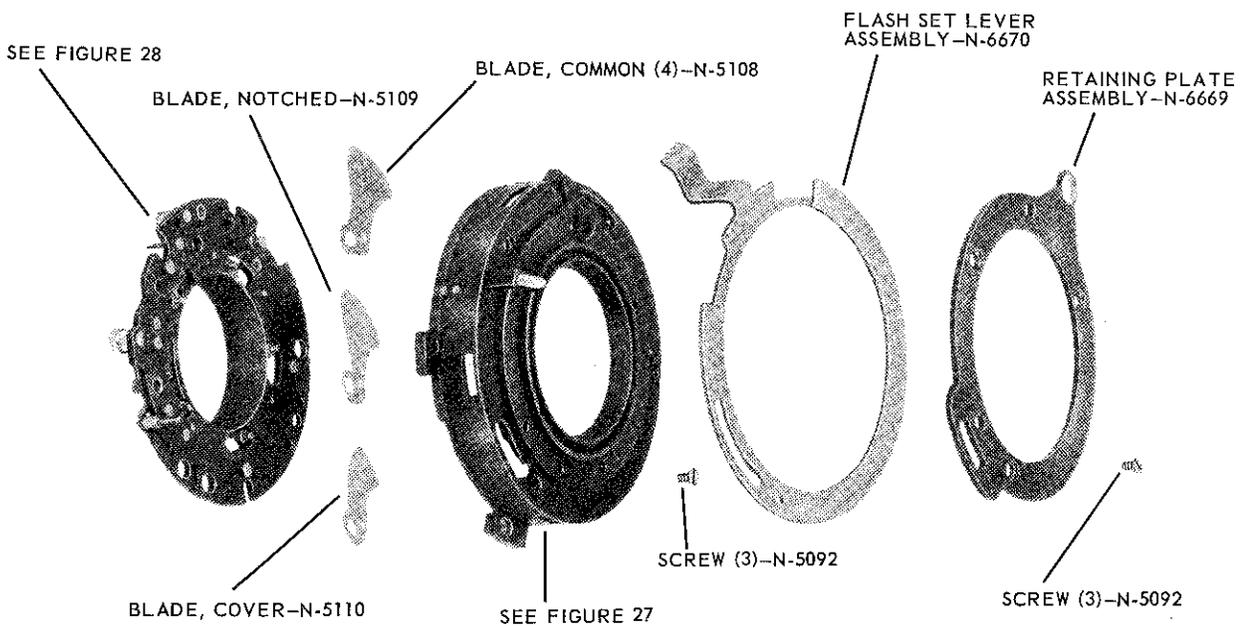


FIGURE 26

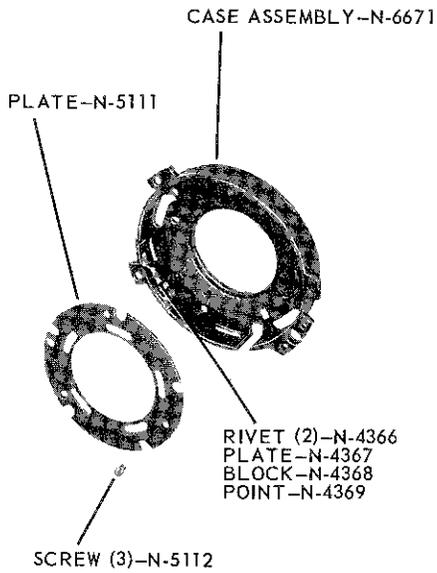


FIGURE 27

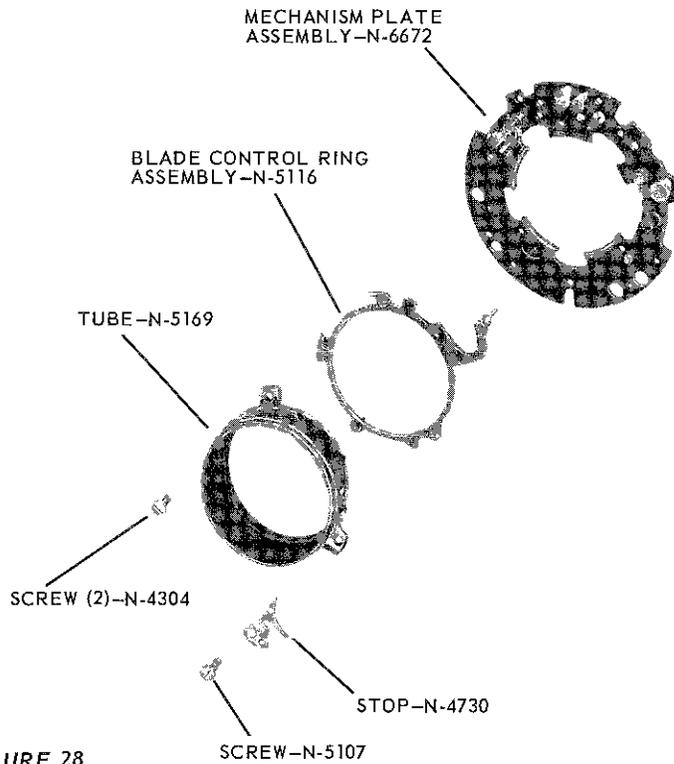


FIGURE 28

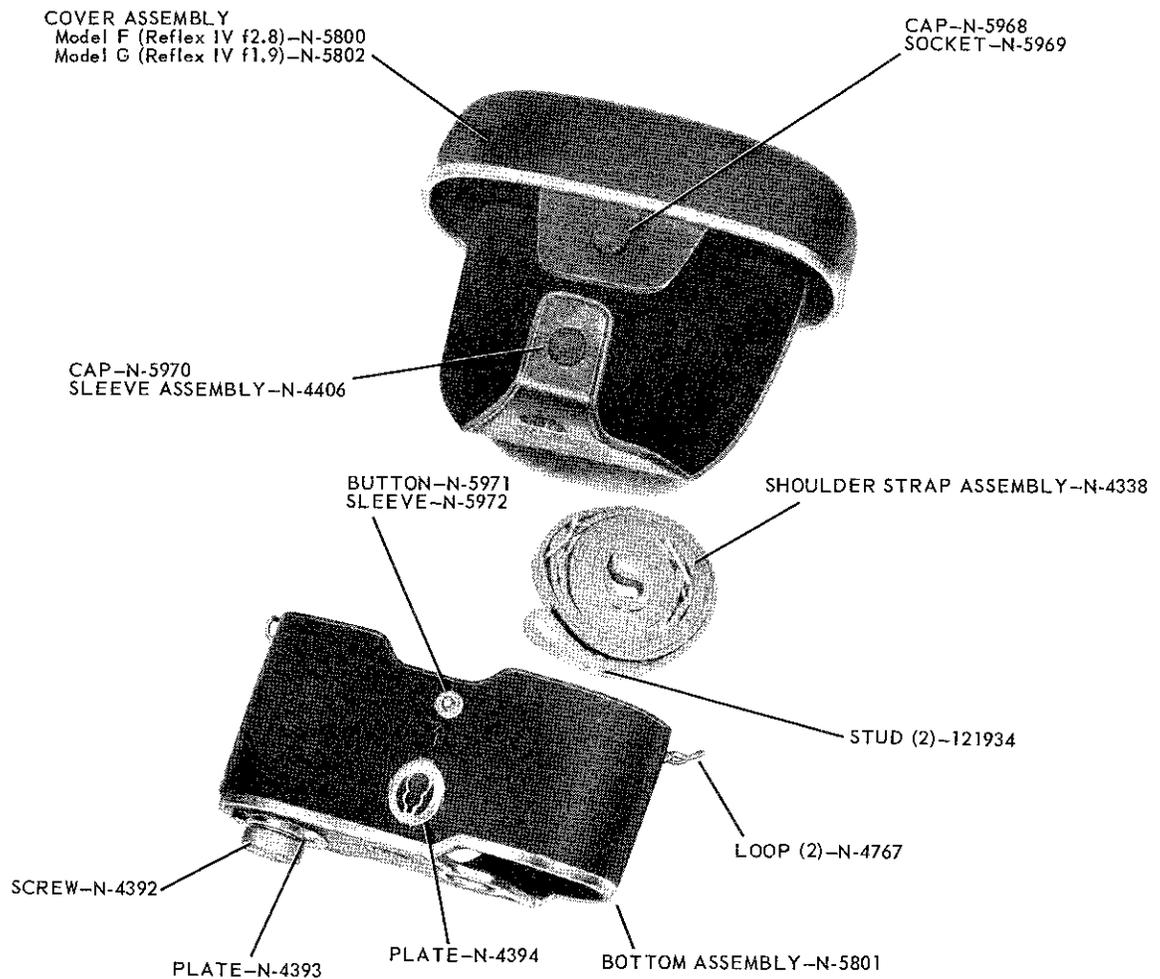


FIGURE 29--KODAK RETINA FIELD CASE, Models F and G

PART NO.	PART NAME	FIG.	PART NO.	PART NAME	FIG.
N-2222	Screw - Bearing plate	10	N-4621	Bushing - Film cover plate assembly (.144).	18
N-2618	Film Tension Pad Assembly.	2	N-4632	Plate - Retaining	18
N-2672	Spring - Rewind release dog.	16	N-4653	Spring - Hinge pin	18
N-2675	Washer - Rewind release button . .	14	N-4661	Covering - Back assembly.	2
N-2677	Screw - Back hinge to case	1	N-4663	Spring - Slide retainer tension . . .	17
N-2699	Screw - Back latch plate to case. .	19	N-4674	Film Cover Plate Assembly.	18
N-2717	Spring - Tension pad.	2	N-4912	Screw - Distance scale	3
N-2722	Rivet - Closing strip to back	2	N-4921	Roller - Film	2
N-2962	Screw - Exposure meter to case. .	3	N-4945	Screw - Mirror release slide assembly to adjusting plate assembly.	19
N-4051	Screw - Top housing to left bracket	3	N-4962	Screw - Front to case.	8
N-4052	Screw - Top housing to right bracket	3	N-4963	Washer - Front to case spacer. . .	8
N-4099	Screw - Bracket to case (Left) . . .	13	N-4977	Screw - Top bracket (Right).	13
N-4115	Setscrew - Prism retaining	17	N-4978	Bushing - Insulating	3
N-4182	Screw - Tripod socket.	7	N-4987	Screw - Case to front assembly . .	8
N-4183	Socket - Tripod	7	N-5006	Tension Lever Assembly.	14
N-4184	Plate - Tripod socket	7	N-5007	Screw - Tension lever assembly. .	14
N-4194	Spring - Back latch assembly. . . .	19	N-5008	Spring - Tension lever assembly. .	14
N-4209	Screw - Pressure spring.	14	N-5019	Gear - Shutter release	9
N-4211	Spring - Winding release assembly	14	N-5020	Bushing - Shutter release	9
N-4212	Screw - Winding shaft.	15	N-5021	Screw - Shutter release.	9
N-4219	Button - Rewind release	14	N-5023	Shutter Release Lever Assembly. .	9
N-4220	Sprocket Shaft Assembly	16	N-5025	Disk - Insulating	11
N-4221	Sprocket - Film.	16	N-5028	Spring - Front assembly leaf	9
N-4222	Screw - Winding assembly.	16	N-5030	Screw - Cover plate	9
N-4224	Spring - Winding shaft assembly pawl	16	N-5031	Screw - Shutter to front assembly.	9
N-4225	Bushing - Winding shaft assembly pawl	16	N-5035	Screw - Release slide assembly . .	10
N-4236	Back Hinge Assembly	2	N-5036	Switch - Contact.	11
N-4238	Latch - Back.	2	N-5038	Covering - Front assembly (Right)	11
N-4239	Rivet - Tension pad spring.	2	N-5039	Rack - Bearing plate.	10
N-4325	Spring - Rewind release button. . .	14	N-5040	Plate - Bearing	10
N-4354	Gear - Winding shaft assembly. . .	16	N-5042	Covering - Frame (Left)	11
N-4355	Spring - Winding shaft assembly clutch	16	N-5043	Covering - Frame (Right)	11
N-4356	Clutch - Winding shaft assembly. .	16	N-5044	Wire - Switch (No. 1)	11
N-4528	Screw - Top housing to distance bolt.	3	N-5046	Gear - Bearing plate.	10
N-4530	Covering - Winding lever assembly.	7	N-5048	Screw - Switch to front	11
	assembly.	7	N-5050	Screw - Frame to front assembly .	11
N-4534	Screw - Hold down plate and bearing assembly	13	N-5051	Spacer - Bearing plate	10
N-4540	Screw - Cable	12	N-5052	Pin - Grooved	11
N-4543	Strip - Closing.	2	N-5061	Spring - Slide guide plate assembly	19
N-4545	Rivet - Hinge.	2	N-5179	Setscrew - Governing shaft assembly.	8
N-4552	Screw - Bracket to case (Right) . .	13	N-5180	Washer - Switch screw	11
N-4556	Screw - Front assembly leaf spring	9	N-5186	Spring - Mirror holder assembly .	18
N-4562	Screw - Slide retainer.	17	N-5237	Retainer - Slide.	17
N-4571	Screw - Slide guide plate assembly	19	N-5238	Slide - Locking	19
N-4587	Plate - Closing	6	N-5289	Washer - Control bracket gear. . .	10
N-4588	Screw - Locking slide.	19	N-5320	Spring - Tension	7
N-4589	Stud - Back latch plate	19	N-5417	Screw - Winding lever assembly. .	7
N-4597	Pin - Slide retainer tension spring	17	N-5418	Gear - Film advance.	15
N-4602	Shield - Light	17	N-5419	Spring - Film advance gear.	15
N-4606	Pin - Film cover plate assembly hinge.	18	N-5420	Cam - Winding shaft assembly . . .	15
N-4612	Setscrew - Release slide assembly	10	N-5421	Pawl - Winding shaft assembly. . .	15
N-4613	Plate - Hinge assembly.	2	N-5422	Washer - Winding shaft assembly cam	15
N-4619	Bushing - Mirror holder assembly	18	N-5432	Pawl - Winding shaft assembly. . .	16
			N-5433	Dog - Rewind release	16
			N-5434	Screw - Rewind release dog.	16
			N-5436	Bushing and Gear Assembly.	16

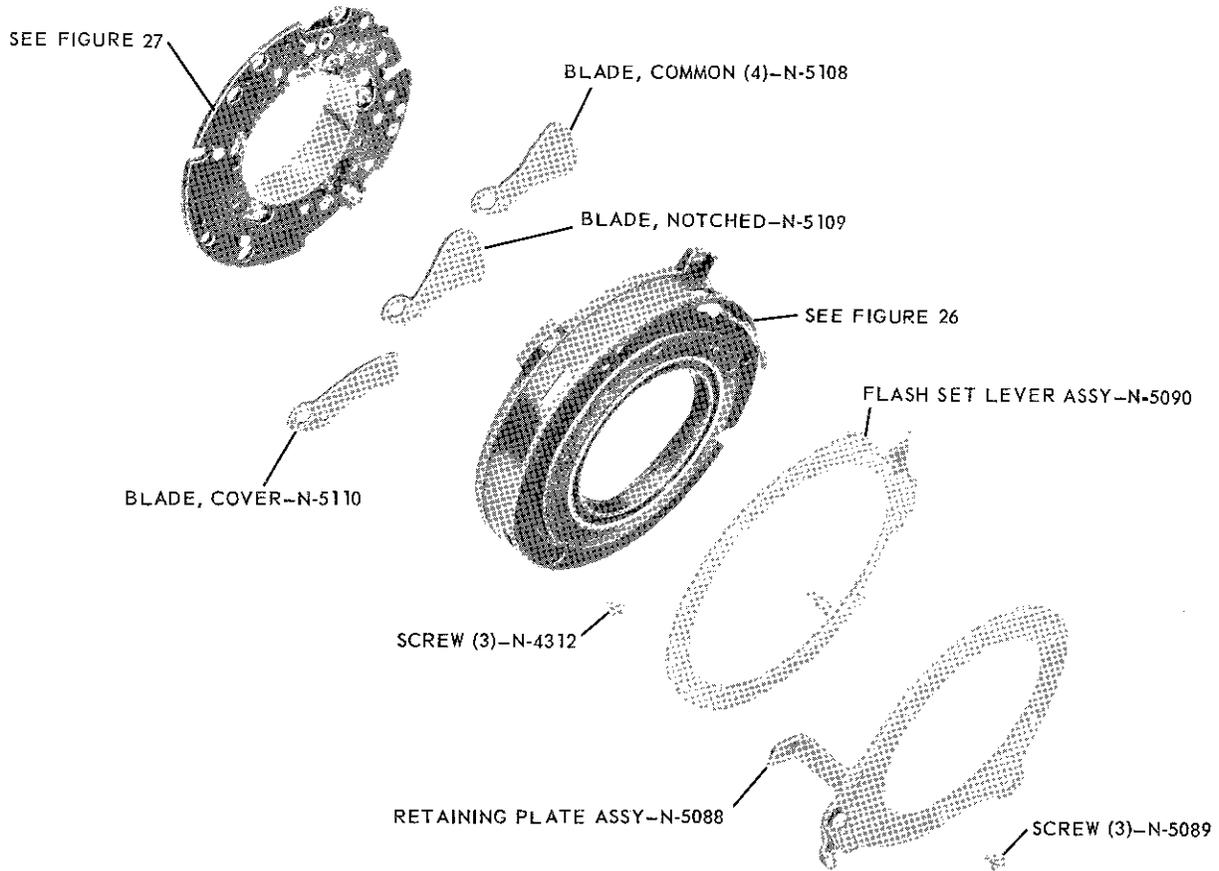


FIGURE 25

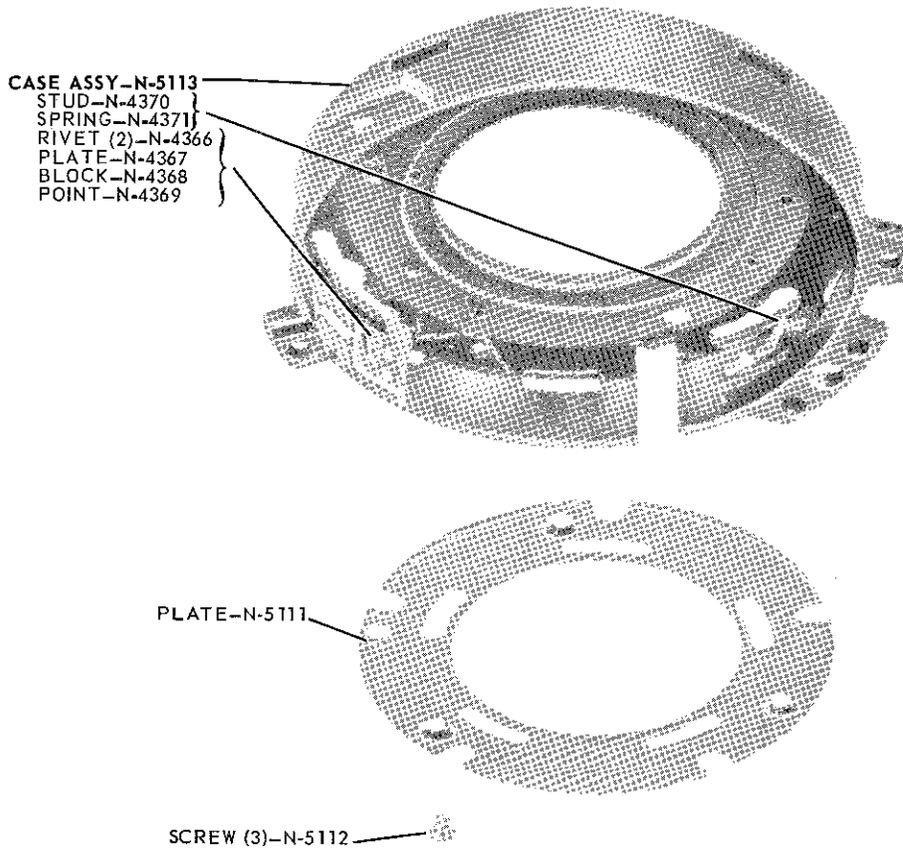


FIGURE 26

PART NO.	PART NAME	FIG.	PART NO.	PART NAME	FIG.
N-5439	Screw - Winding shaft assembly . .	16	N-6026	Scale - Curtagon Lens, 28mm f4. .	3
N-5679	Washer - Control bracket	10	N-6027	Scale - Curtagon Lens, 25mm f2.8.	3
N-5702	Screw - Exposure meter to case. . .	3	N-6028	Scale - Tele-Arton Lens, 85mm f4	3
N-5703	Mount - Top housing eyepiece. . . .	5	N-6029	Scale - Tele-Xenar Lens, 135mm	
N-5704	Mask - Top housing eyepiece	5		f4.	3
N-5707	Window - Meter.	5	N-6046	Gear - Shutter setting rack	15
N-5709	Covering - Side (Right)	6	N-6047	Rack - Setting	13
N-5710	Covering - Side (Left)	6	N-6067	Bearing - Rewind post.	13
N-5713	Meter Actuating Drum Assembly. . .	6	N-6403	Setscrew - Insulating bushing. . . .	3
N-5714	Screw - Cable drum assembly	6	N-6543	Shaft - Rewind.	1
N-5715	Bolt - Distance	6	N-6544	Spring - Rewind knob	1
N-5723	Spring - Counter slide assembly. . .	7	N-6545	Knob - Rewind.	1
N-5727	Screw - Ratchet assembly	7	N-6546	Bearing - Rewind crank.	1
N-5728	Washer - Wind release assembly . . .	14	N-6547	Rewind Spring Assembly	1
N-5729	Plate - Cover	9	N-6548	Rewind Crank Assembly	1
N-5734	Plate - Release slide assembly. . . .	10	N-6549	Viewfinder Assembly	3
N-5735	Screw - Release slide assembly		N-6550	Plate - Viewfinder support (.004) . .	3
	plate.	10	N-6551	Plate - Viewfinder support (.008) . .	3
N-5736	Screw - Bearing.	10	N-6552	Plate - Viewfinder support (.012) . .	3
N-5737	Spring - Tension	10	N-6553	Plate - Viewfinder support (.016) . .	3
N-5738	Pad - Bearing plate	10	N-6554	Pad - Rubber.	3
N-5739	Covering - Front assembly (Left,		N-6555	Top Housing Assembly	3
	top).	11	N-6556	Scale - KODAK RETINA XENAR	
N-5740	Covering - Front assembly (Left,			Lens, 50mm f2.8.	3
	bottom)	11	N-6557	Exposure Meter Assembly.	3
N-5743	Wire - Switch (No. 2)	11	N-6558	Screw - Viewfinder mounting	3
N-5744	Screw - Release slide assembly		N-6559	Washer - Viewfinder mounting	
	plate.	10		screw	3
N-5745	Cord Transmission Bearing		N-6560	Compartment - Viewfinder.	4
	Assembly.	13	N-6561	Mask - Viewfinder	4
N-5746	Cord - Transmission	13	N-6562	Plate - Pentaprism seperator. . . .	4
N-5751	Roller - Cable.	13	N-6563	Pentaprism Bracket Assembly	4
N-5752	Screw - Cable bearing.	13	N-6564	Viewfinder Prism Assembly.	4
N-5753	Seal - Transmission cord dust	13	N-6565	Mask - Pentaprism.	4
N-5755	Bolt - Tension lever assembly	14	N-6566	Viewfinder Bearing Plate Assembly	4
N-5758	Pin - Slide assembly guide.	19	N-6567	Lens - Viewfinder (Flat)	4
N-5759	Spring - Tension	14	N-6568	Lens - Viewfinder (Curved)	4
N-5760	Seal - Dust	15	N-6569	Pentaprism.	4
N-5762	Mirror Retaining Lever Assembly.	17	N-6570	Window - Viewfinder compartment	4
N-5765	Bushing - Film cover plate		N-6571	Screw - Pentaprism bracket	
	assembly (.150).	18		assembly.	4
N-5767	Plate - Back latch assembly.	19	N-6572	Bushing - Winding knob	5
N-5768	Pin - Slide assembly.	19	N-6573	Pedestal - Flashholder.	5
N-5769	Spring - Aperture actuating slide		N-6574	Pin - Contact.	5
	assembly.	19	N-6575	Spring - Contact pin	5
N-5770	Spring - Mirror release slide		N-6576	Flashholder Contact Spring	
	assembly.	19		Assembly.	5
N-5810	Gear - Control bracket	10	N-6577	Clip - Flashholder.	5
N-5847	Winding Shaft Assembly.	16	N-6578	Window - Top housing eyepiece. . .	5
N-5848	Spool - Film take-up.	16	N-6579	Lens - Top housing eyepiece	5
N-5868	Scale - Tele-Xenar Lens, 200mm		N-6580	Lens - Top housing magnifying. . . .	5
	f4.8.	3	N-6581	Screw - Contact pin spring.	5
N-5974	Screen - Diffusing	1	N-6582	Screw - Flashholder clip (Short). . .	5
N-5976	Spacer - Prism bracket assembly. . .	4	N-6583	Screw - Flashholder clip (Long). . .	5
N-5978	Button - Lock	3	N-6584	Button - Release	6
N-5979	Frame - Exposure meter.	3	N-6585	Covering - Release button	6
N-5988	Cap - Meter window	5	N-6586	Screw - Release button	6
N-5989	Screw - Sprocket shaft assembly. . .	16	N-6587	Disk - Insulating	6
N-5591	Plate - Prism protective.	4	N-6588	Bottom Frame Assembly.	7
N-6004	Contact Pin Bearing Assembly	11	N-6589	Spring - Return	7
N-6005	Winding Lever Assembly.	7	N-6590	Disk - Index	7