

ORDER PARTS FROM APPARATUS PARTS SERVICE • EASTMAN KODAK COMPANY, ROCHESTER 4, N. Y.

Corrected to MARCH 1959

PARTS LIST No. 5523


KODAK RETINA REFLEX CAMERA

WITH

SYNCHRO COMPUR SHUTTER

AND

Kodak Retina Reflex Field Case

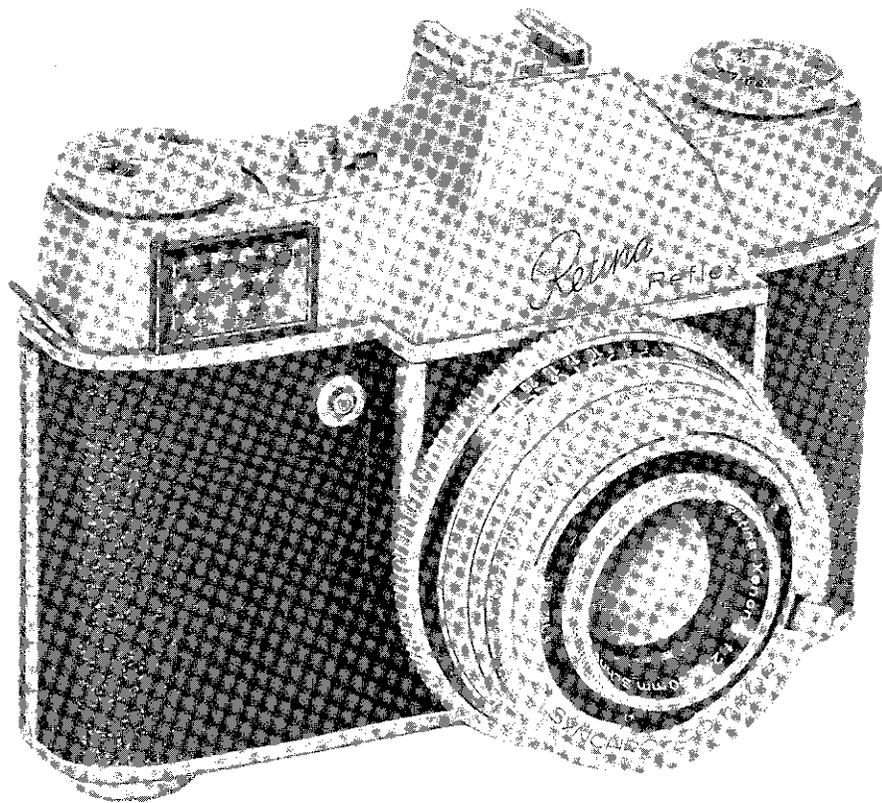

EASTMAN KODAK COMPANY • ROCHESTER 4, N. Y.

KODAK RETINA REFLEX CAMERA

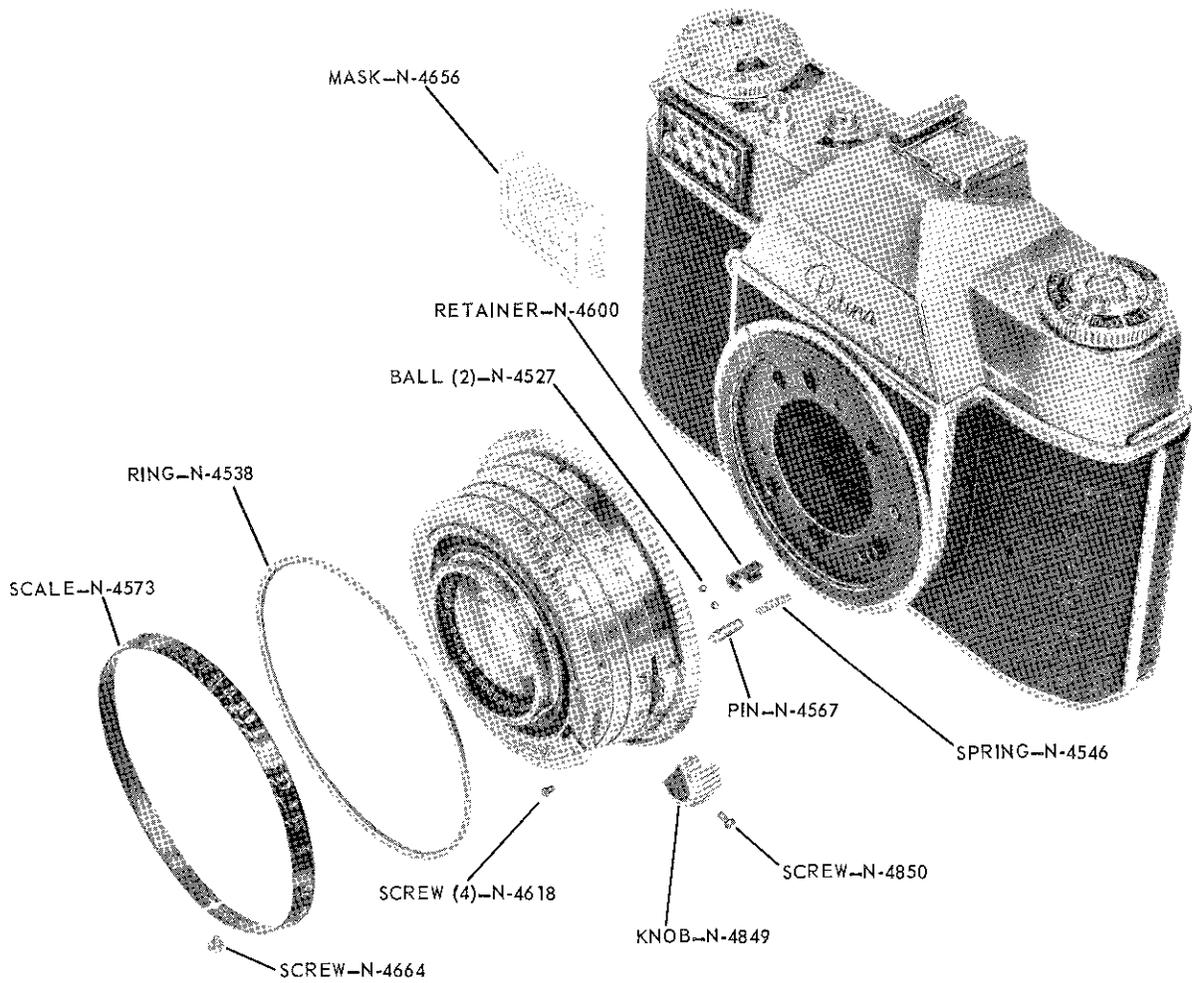


FIGURE 1

SHUTTER COMPLETE-N-4859
(See figures 24 thru 40)

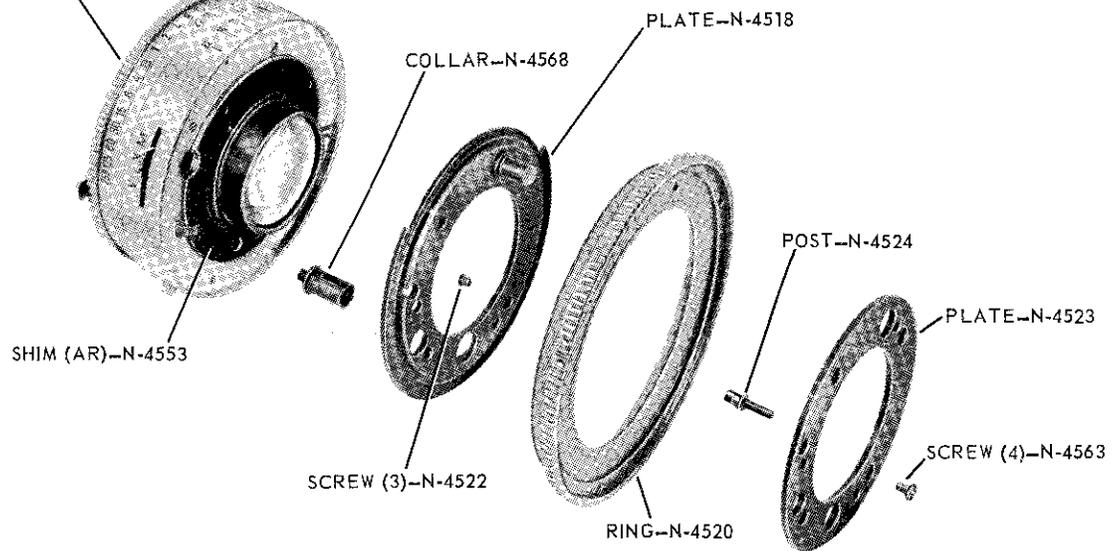


FIGURE 2

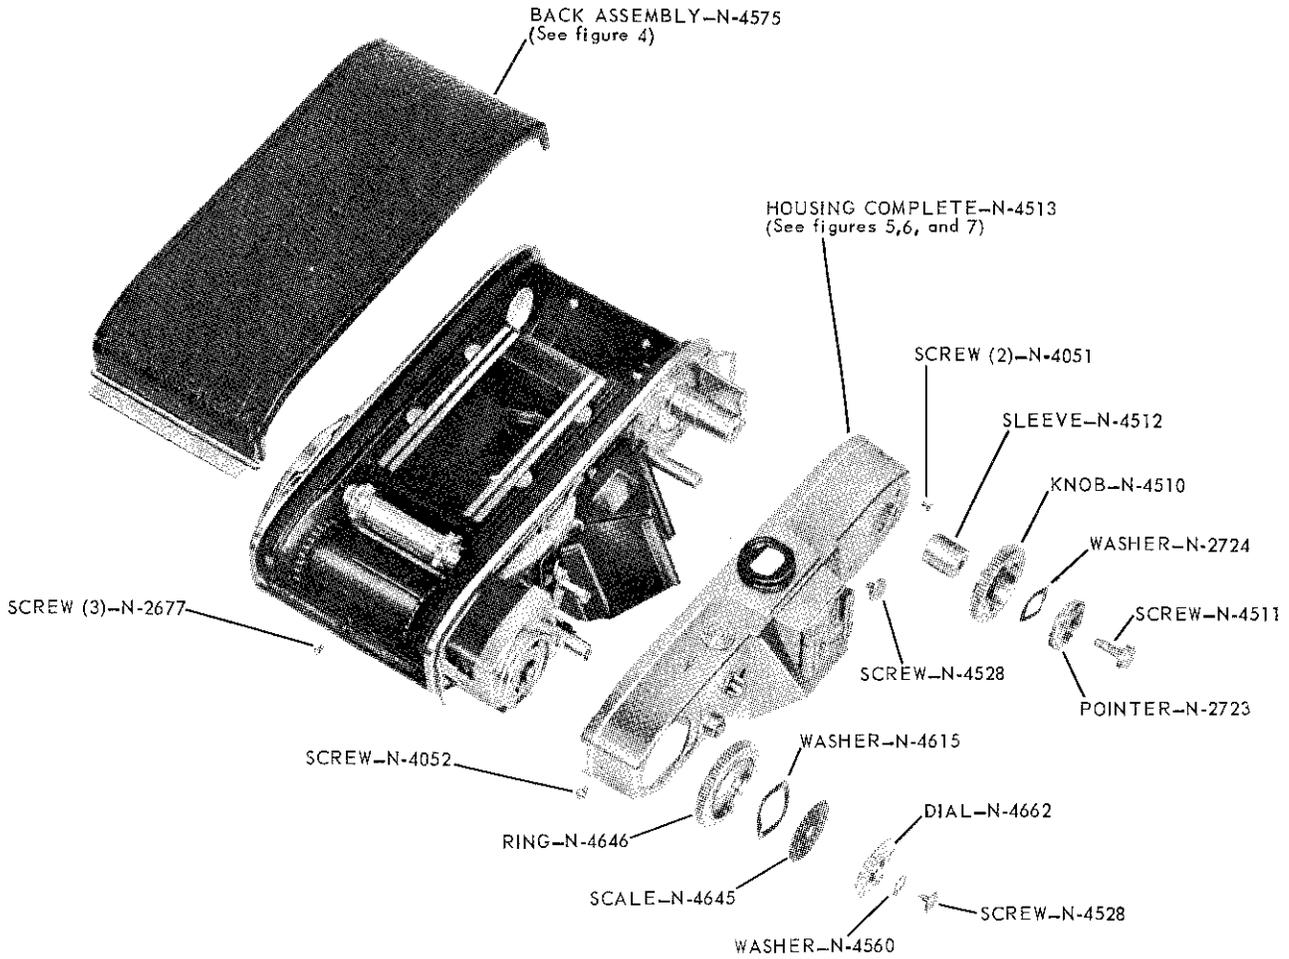


FIGURE 3

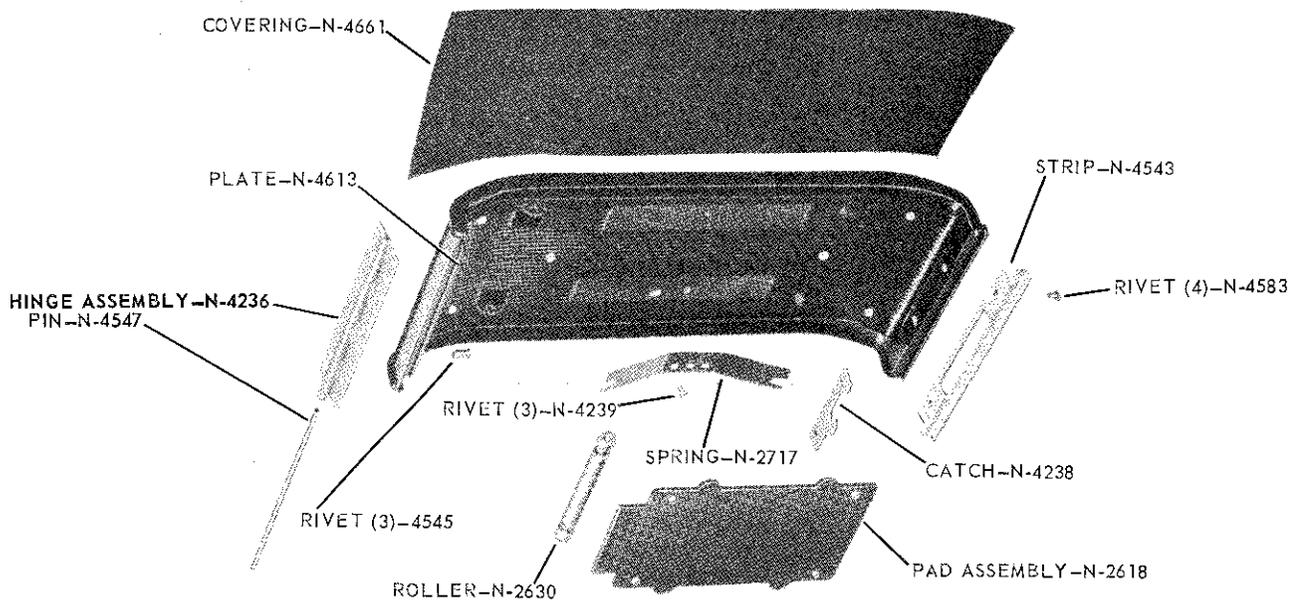


FIGURE 4. BACK ASSY-N-4575

KODAK RETINA REFLEX CAMERA

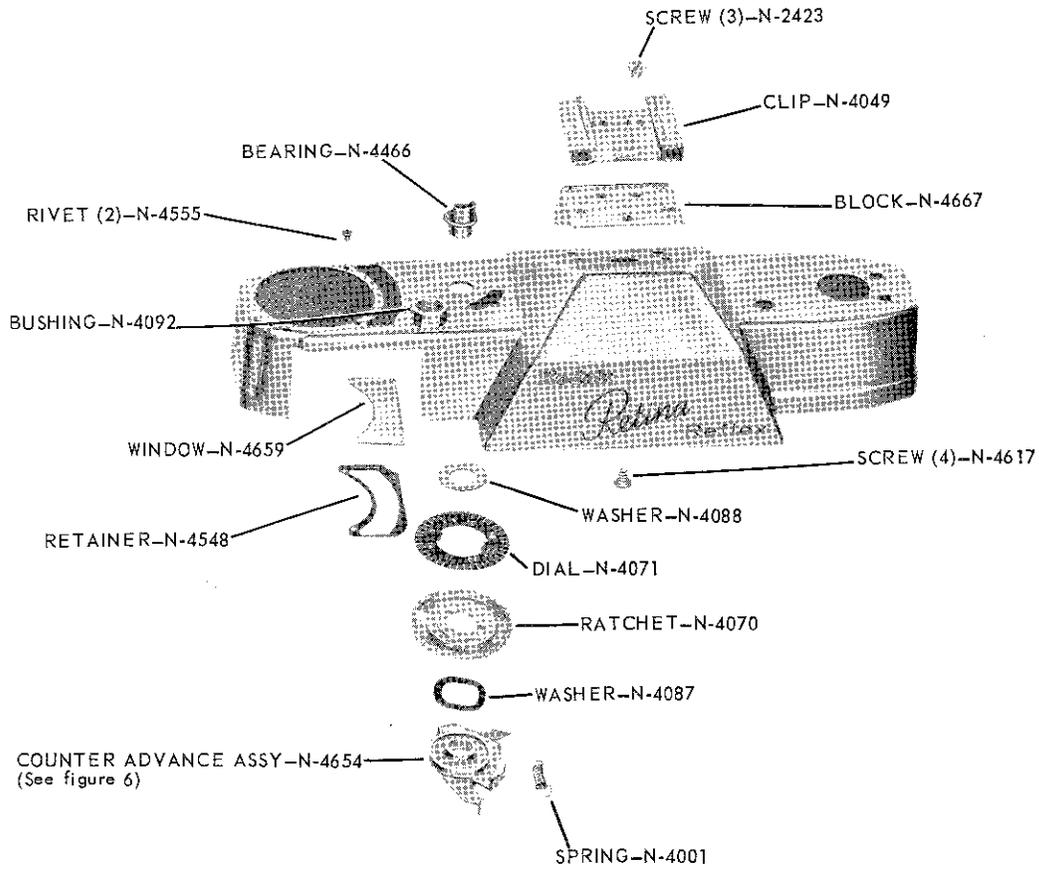


FIGURE 5

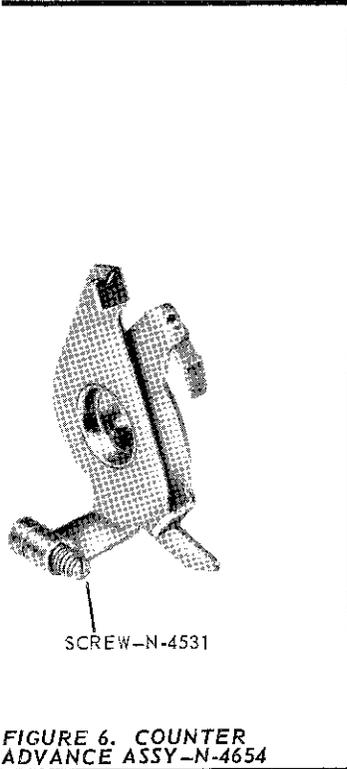


FIGURE 6. COUNTER ADVANCE ASSY-N-4654

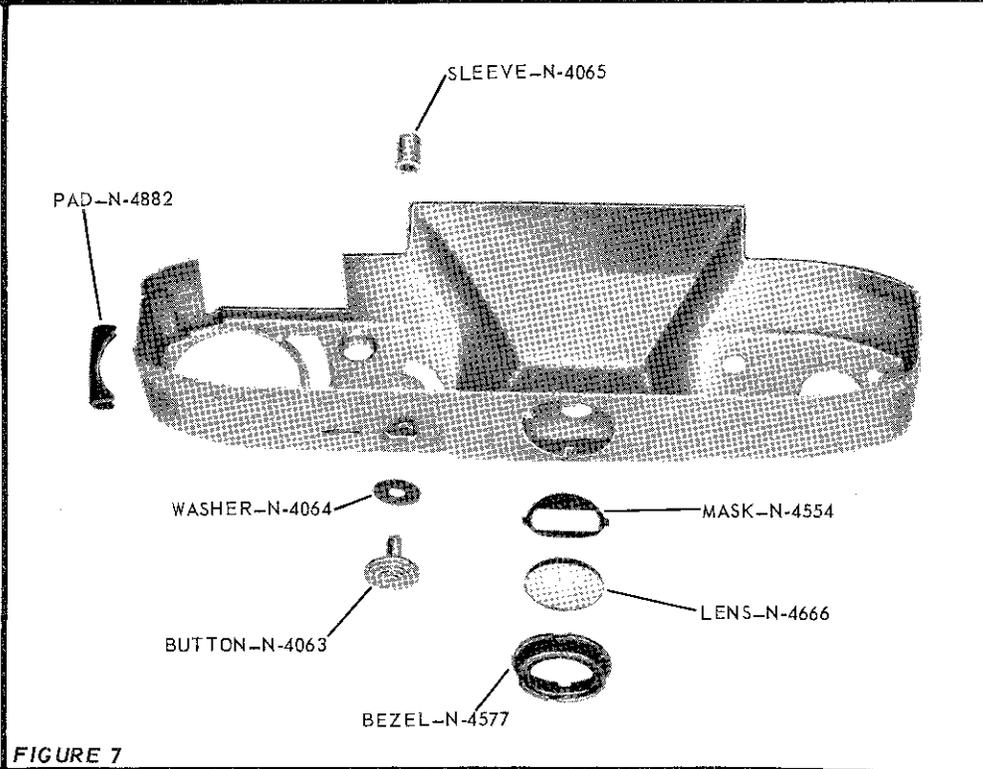


FIGURE 7

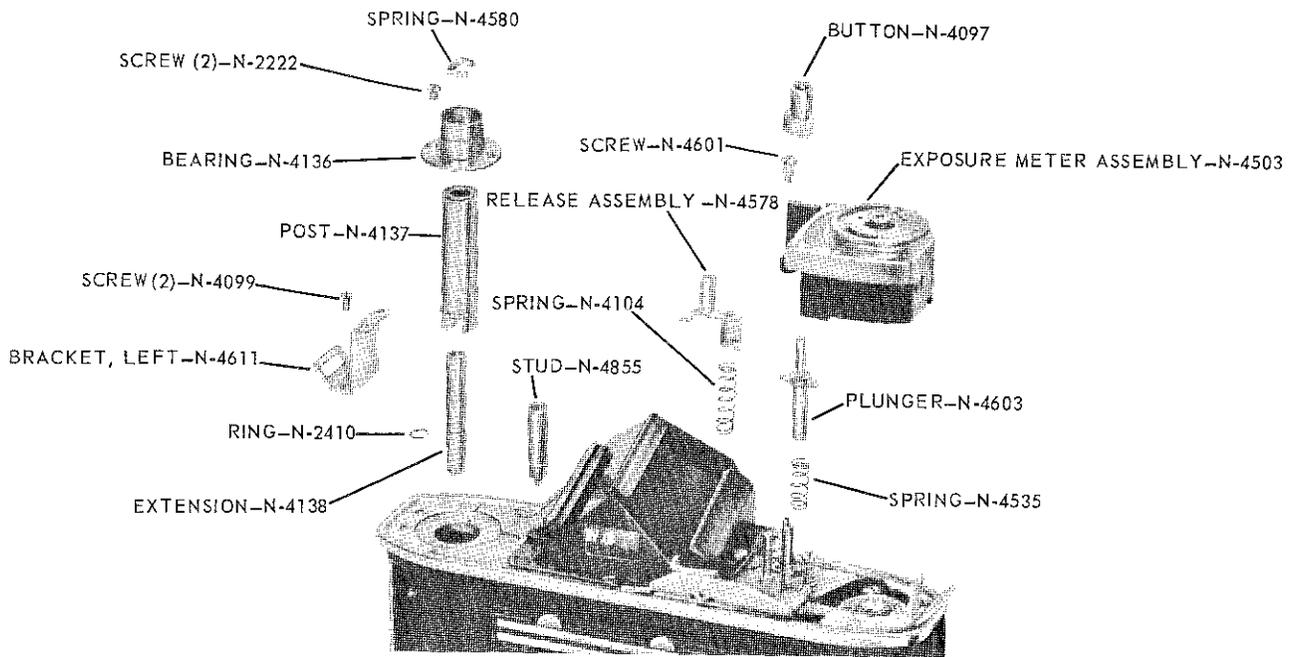


FIGURE 8

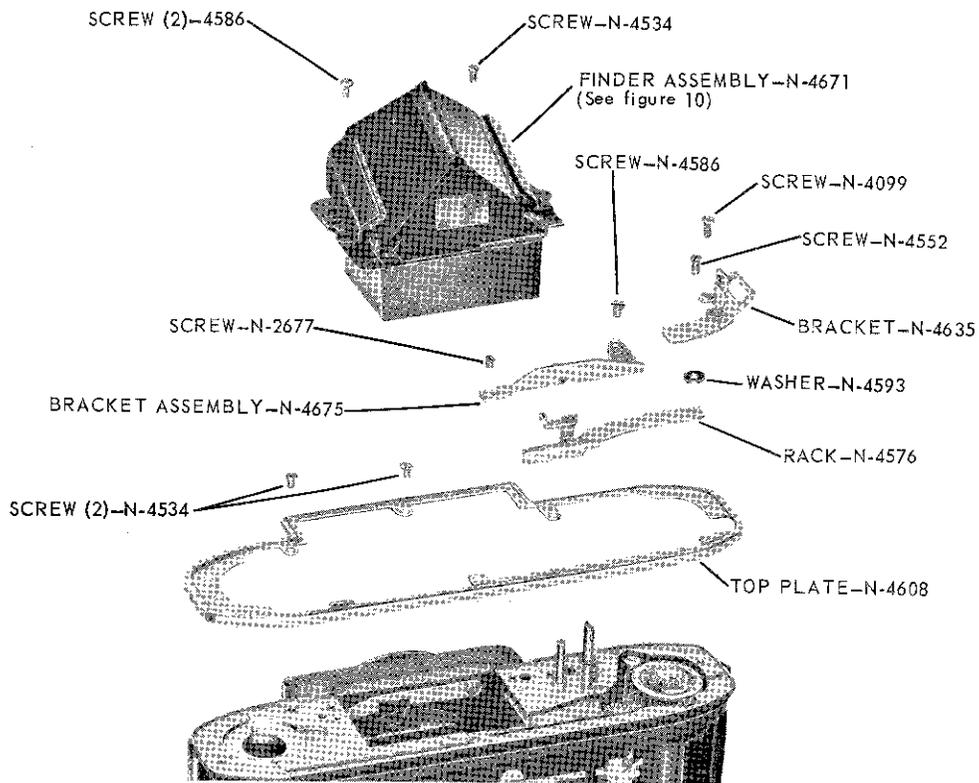


FIGURE 9

KODAK RETINA REFLEX CAMERA

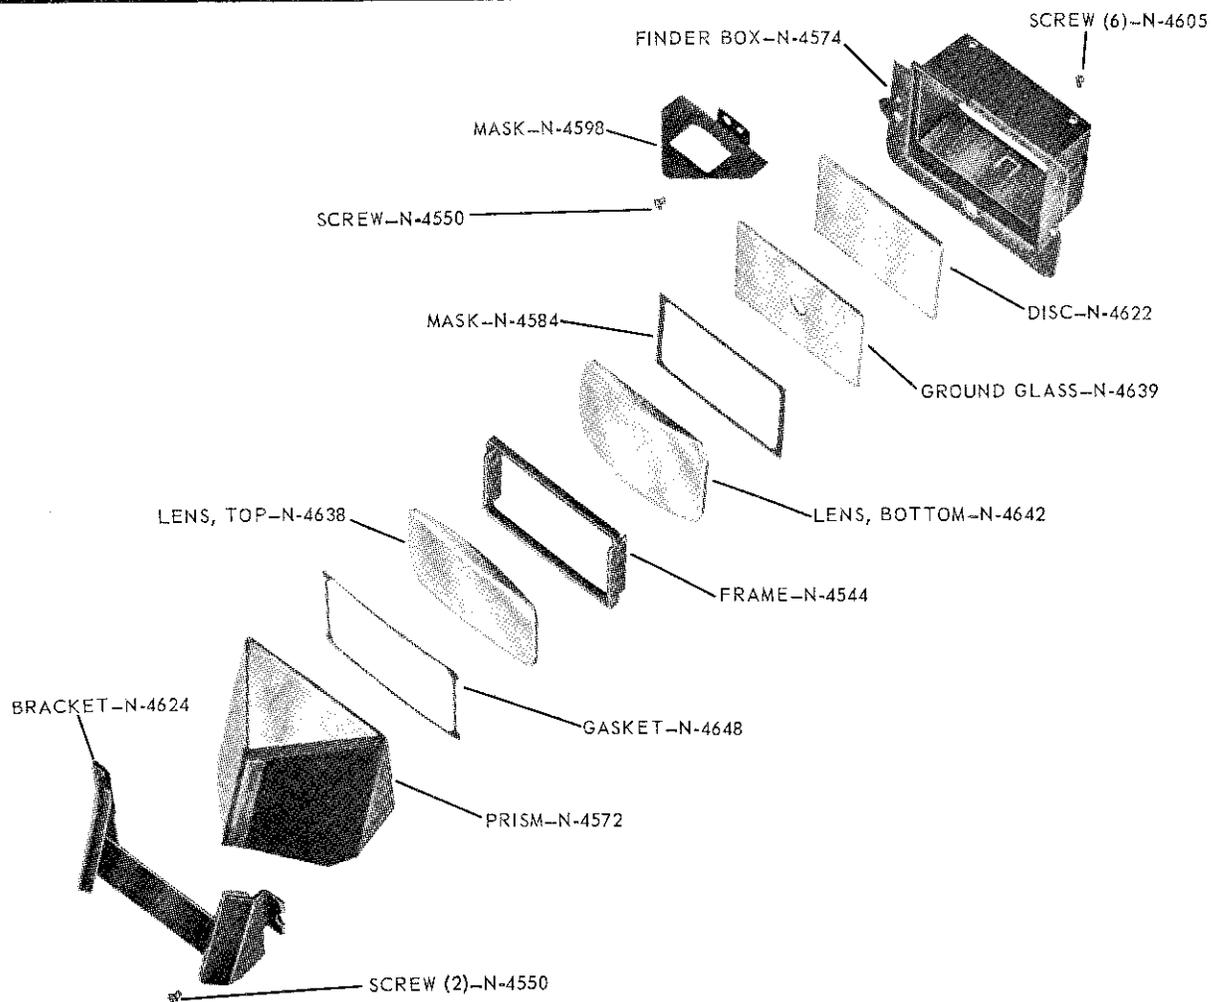


FIGURE 10

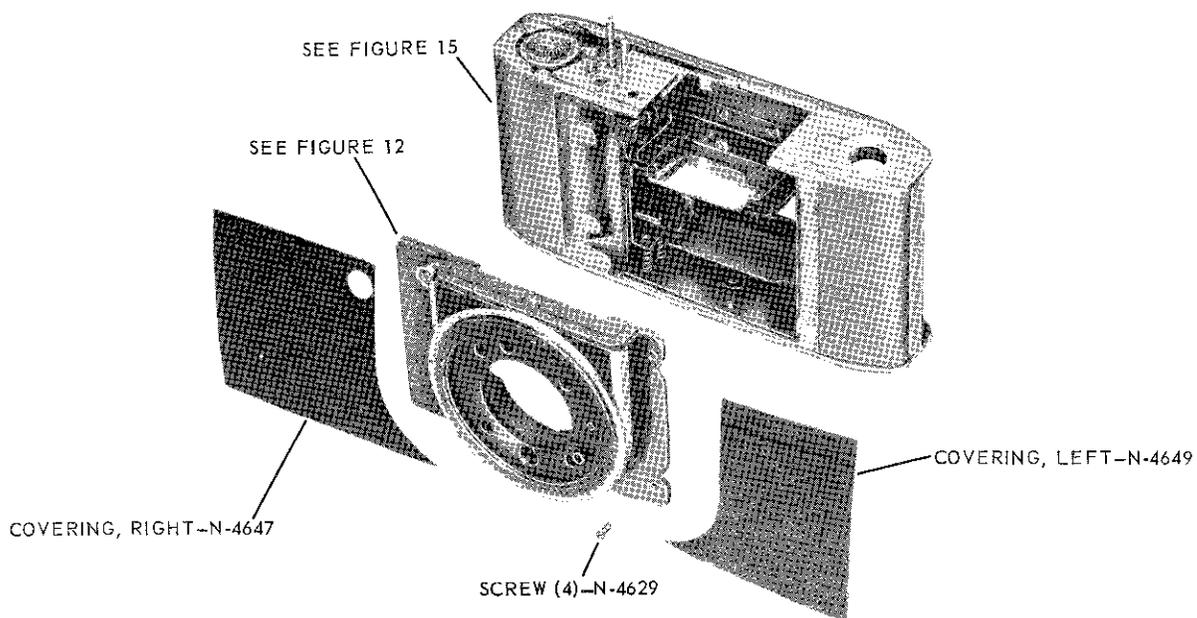


FIGURE 11

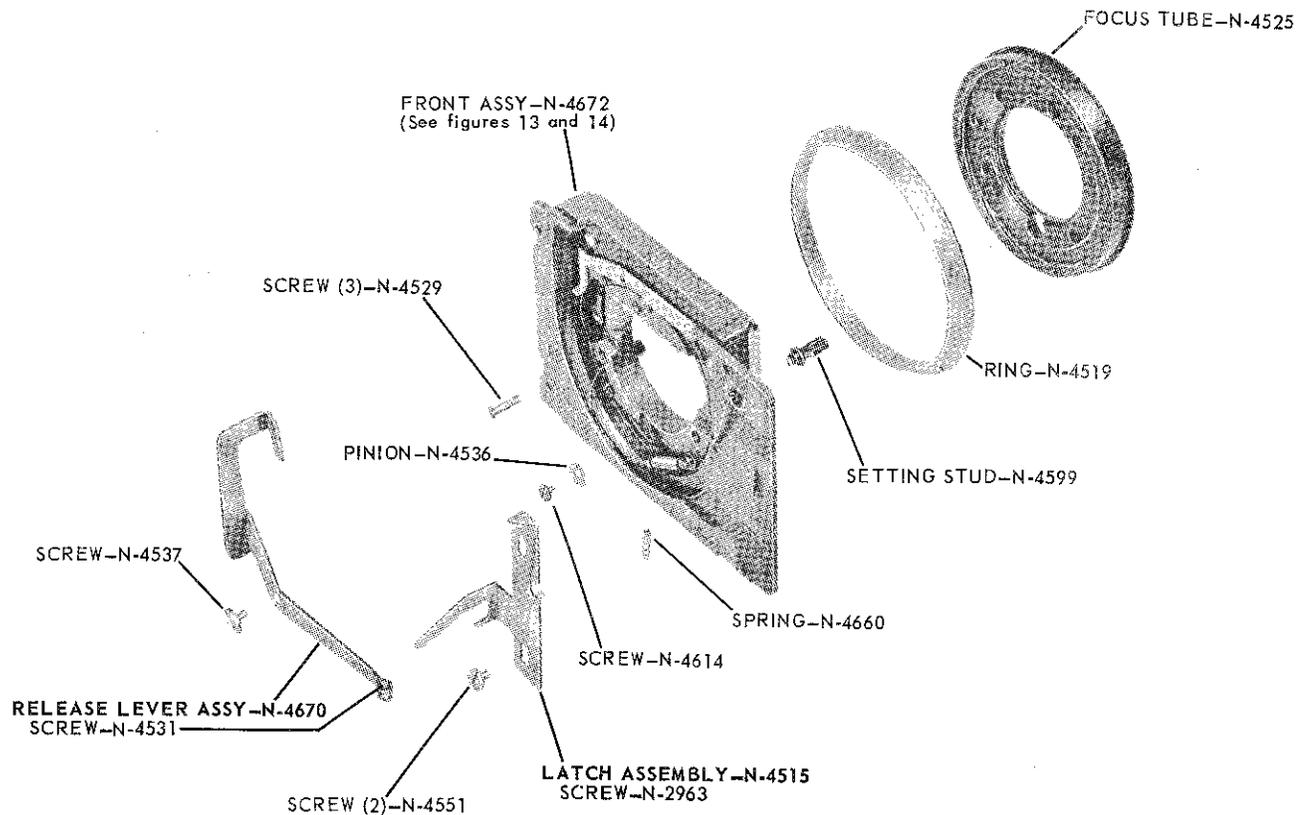


FIGURE 12

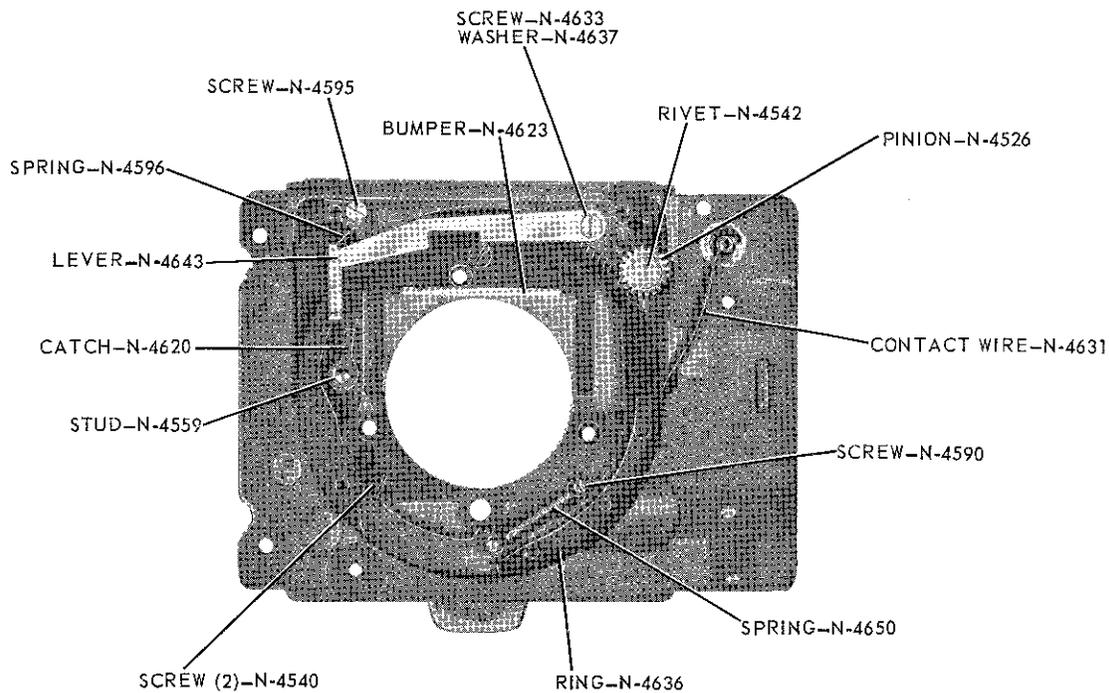


FIGURE 13. FRONT ASSY-N-4672

KODAK RETINA REFLEX CAMERA

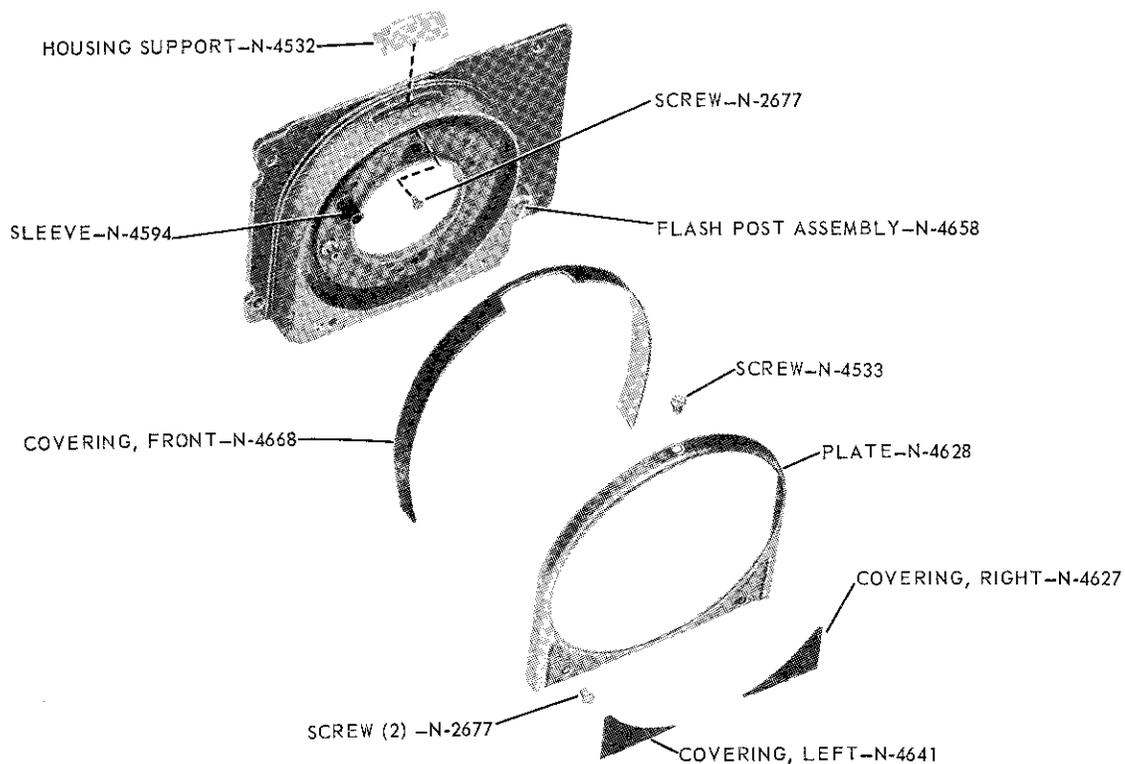


FIGURE 14. FRONT ASSY-N-4672 (Cont'd)

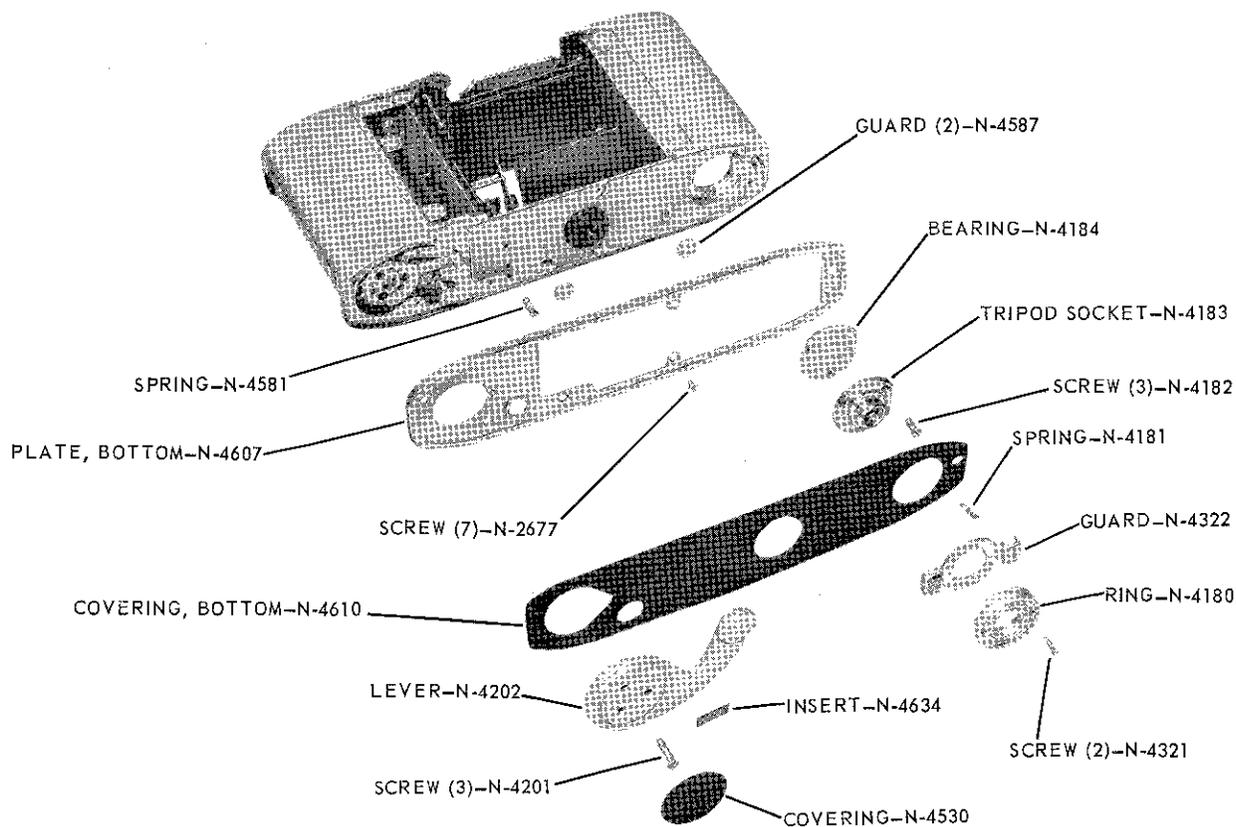


FIGURE 15

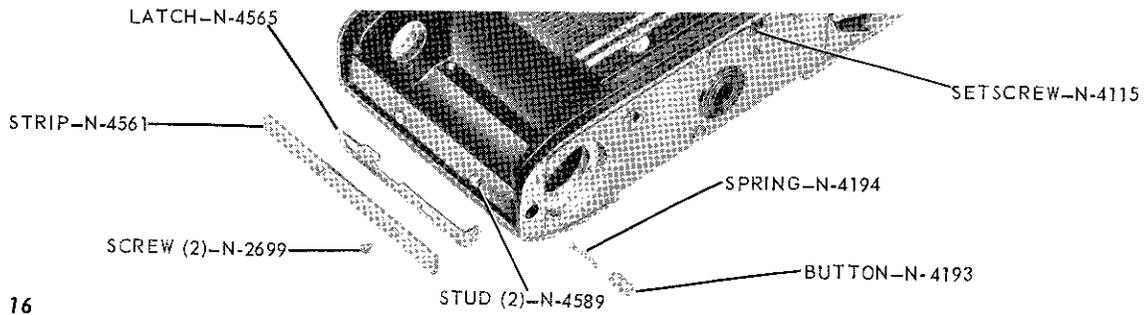


FIGURE 16

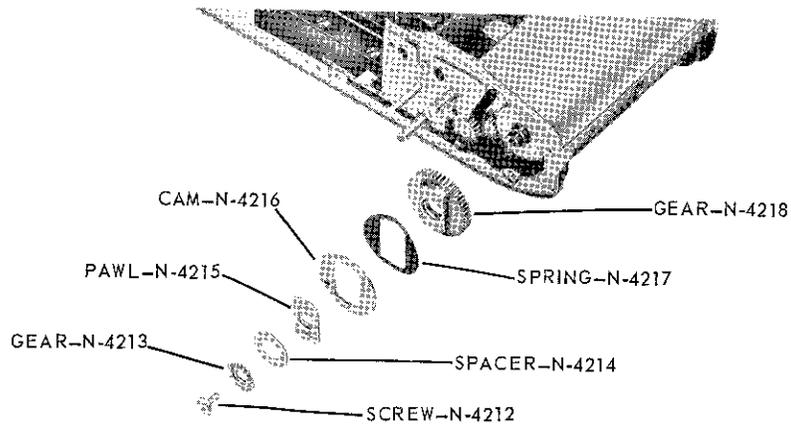


FIGURE 17

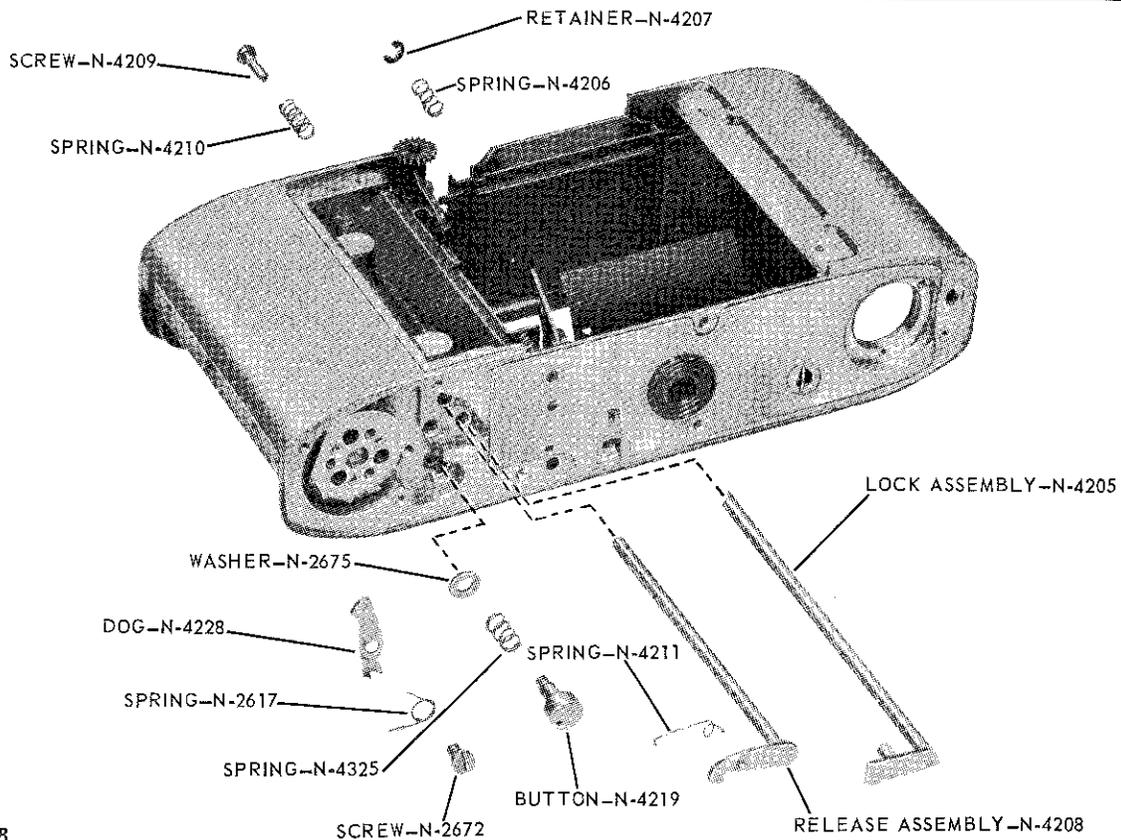


FIGURE 18

KODAK RETINA REFLEX CAMERA

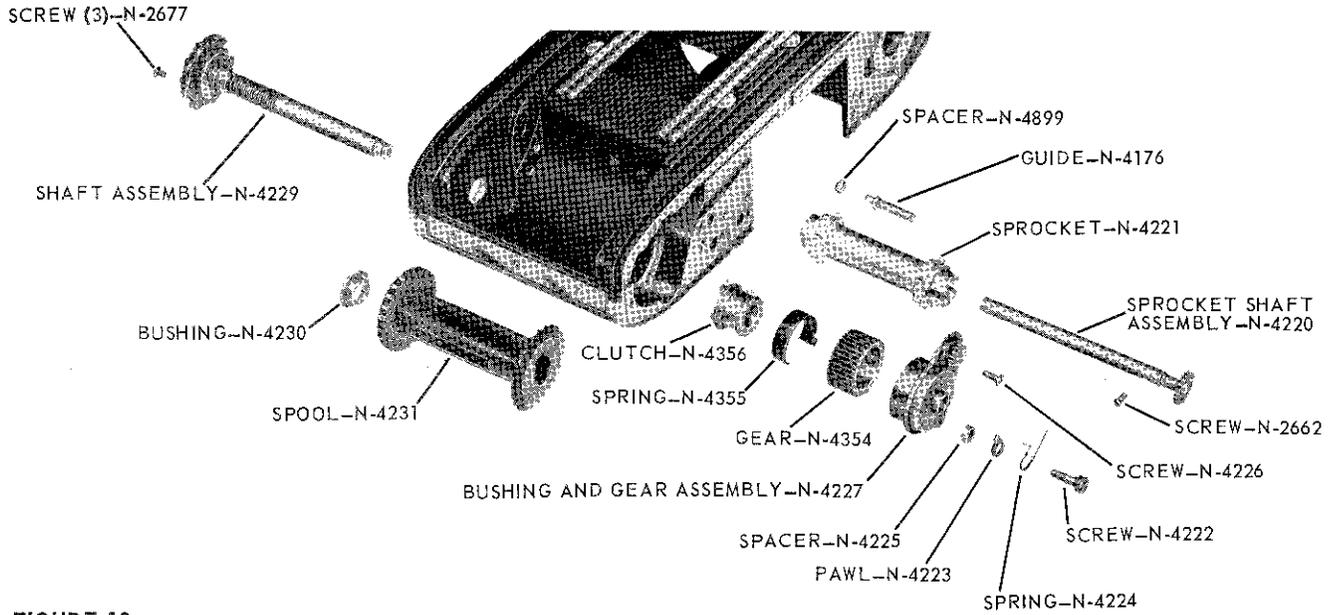


FIGURE 19

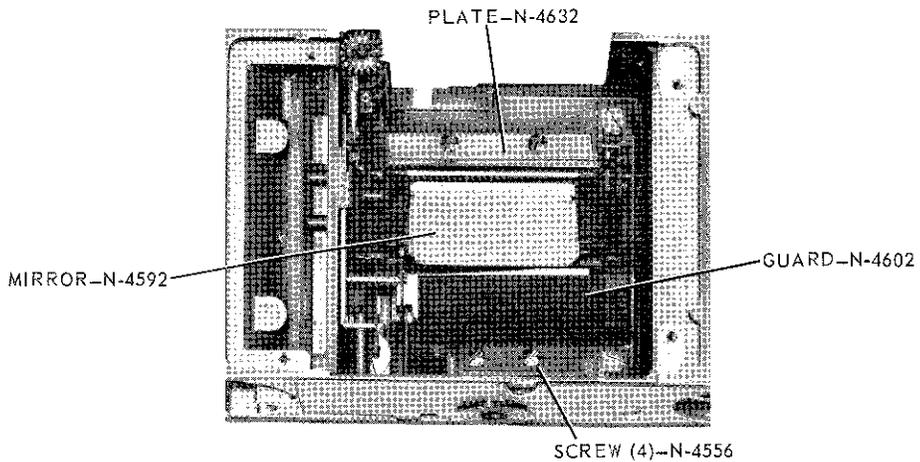


FIGURE 20

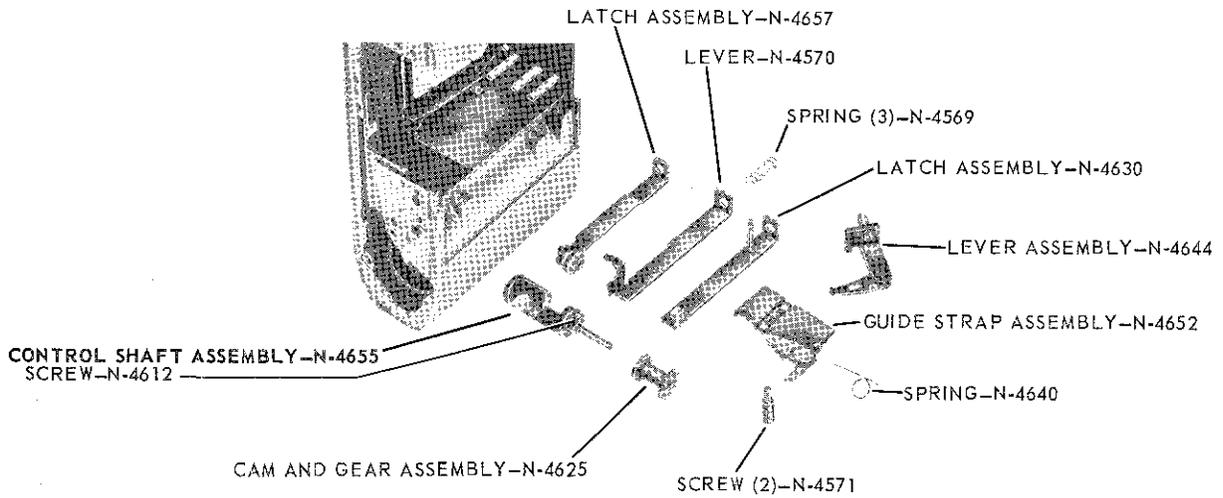


FIGURE 21

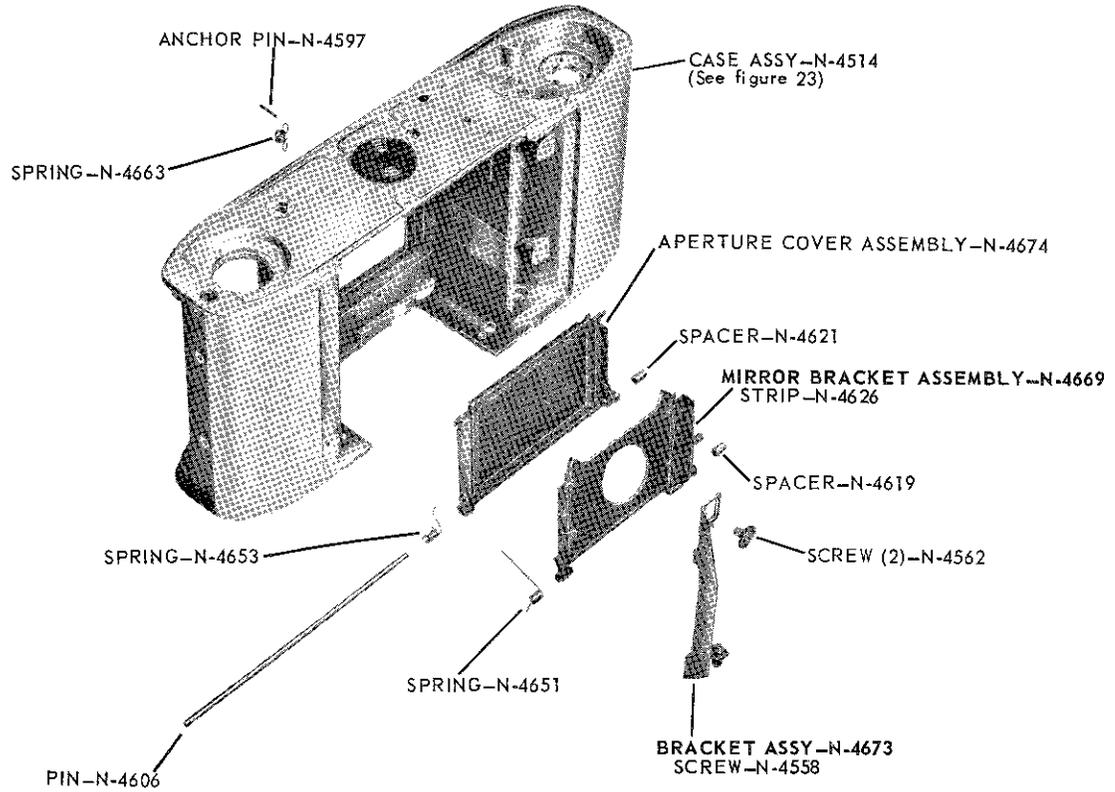


FIGURE 22


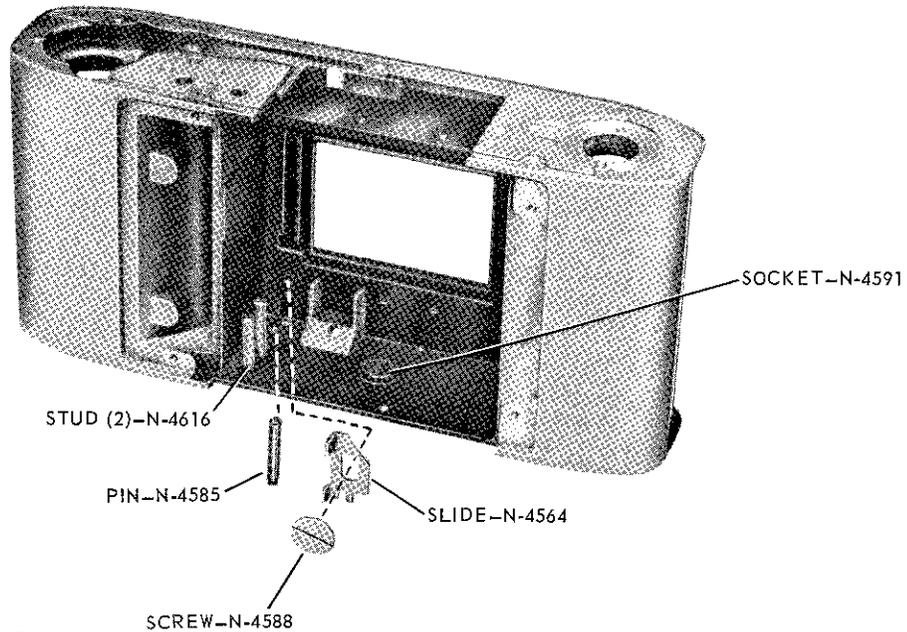


FIGURE 23. CASE ASSY-N-4514

SYNCHRO COMPUR SHUTTER for Kodak Retina Reflex Camera

REAR LENS ASSY—Return complete shutter to Rochester for replacement of this part.

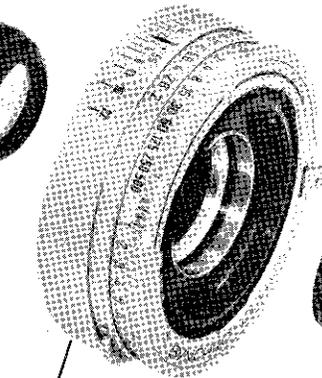


SEE FIGURE 25



SHUTTER ASSY—Available only as Shutter Complete—N-4859 (Refer to figure 2)

FIGURE 24

FRONT LENS ASSY—Return complete shutter to Rochester for replacement of this part.

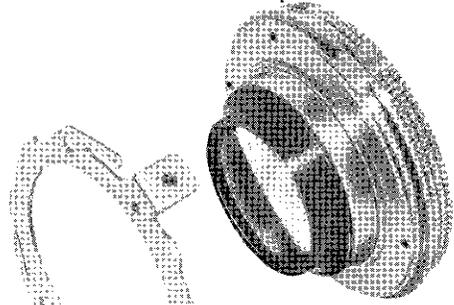


RING—N-4852

SCREW (3)—N-2739

FIGURE 25

DIAPHRAGM SET RING ASSY—N-4683

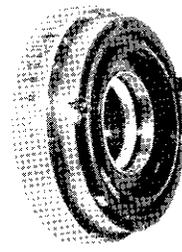

SET RING—N-4681



SCREW (3)—4676




NAME PLATE—N-4677

LIGHT VALUE SCALE AND RING ASSY—N-4682

FIGURE 26

OUTER SHUTTER HOUSING ASSY—N-4694
 SPRING (2)—N-4696
 STUD (2)—N-4697

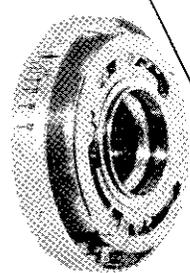

DUST GUARD—N-4693

SCREW (4)—4695



LENS MOUNTING PLATE ASSY—N-4691 (See figure 28)

SCREW (4)—4684

SCREW—N-4258

BLOCK (BLANK)—N-4257

FIGURE 27

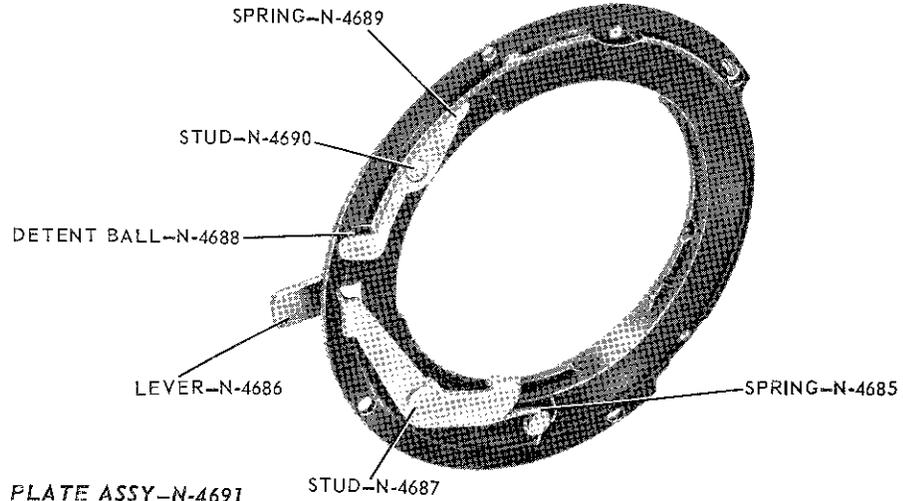


FIGURE 28. LENS MOUNTING PLATE ASSY-N-4691

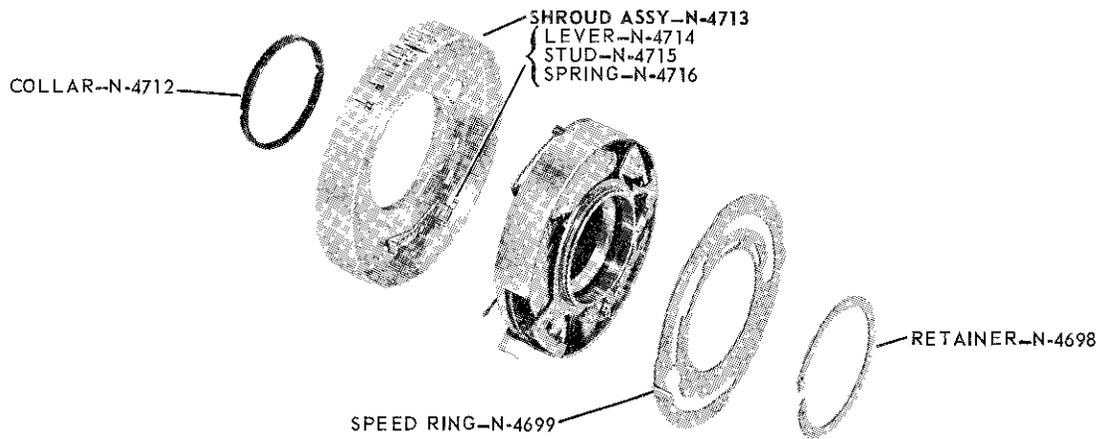


FIGURE 29

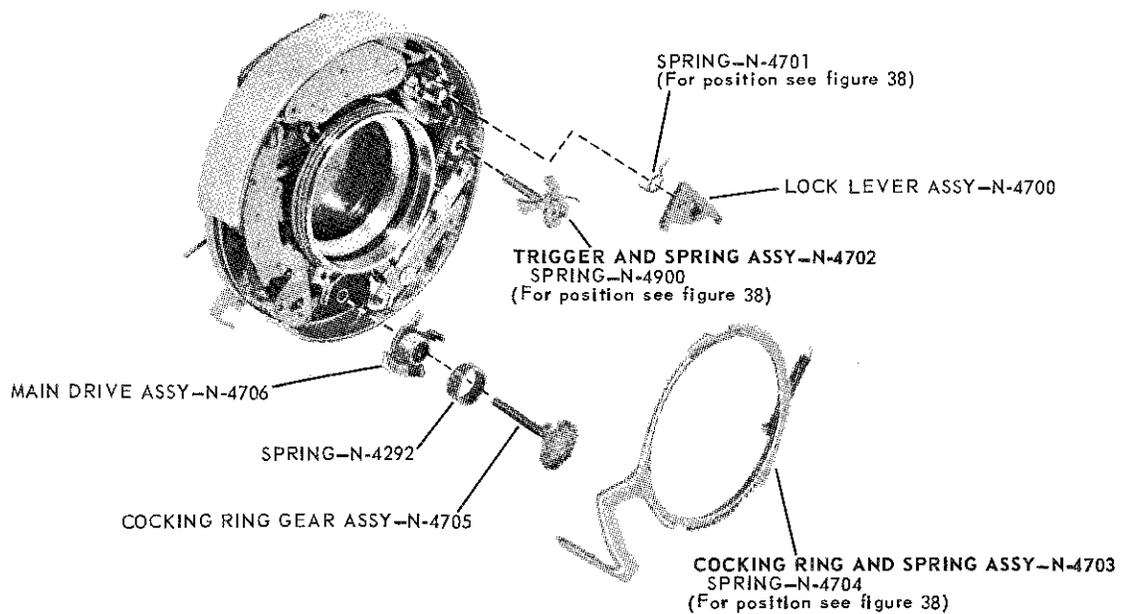


FIGURE 30

SYNCHRO COMPUR SHUTTER for Kodak Retina Reflex Camera

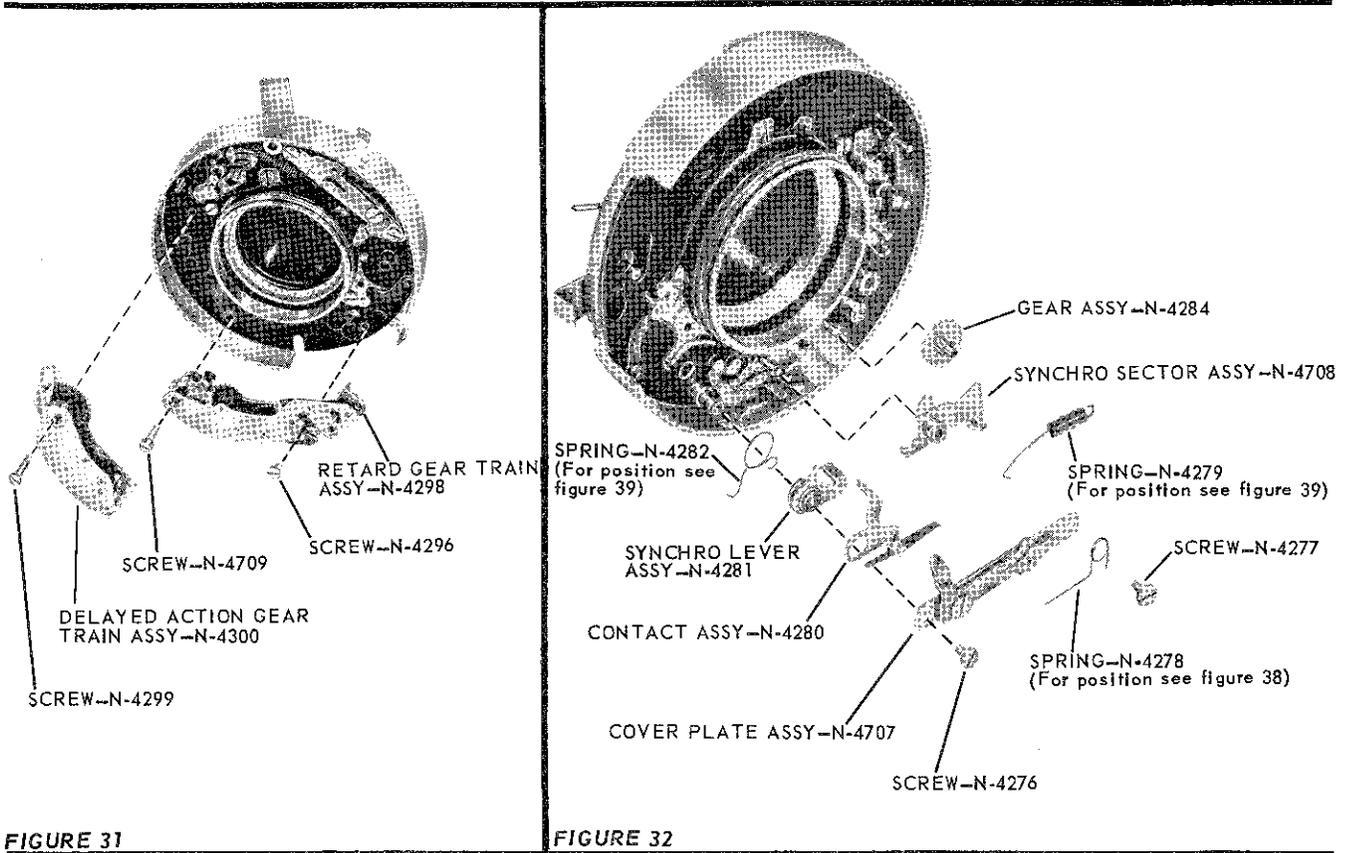


FIGURE 31

FIGURE 32

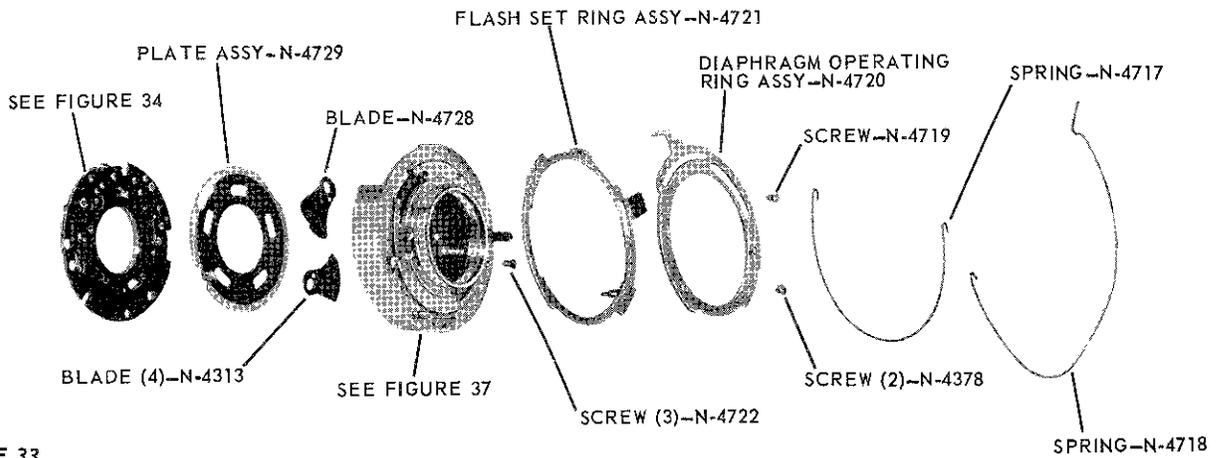


FIGURE 33

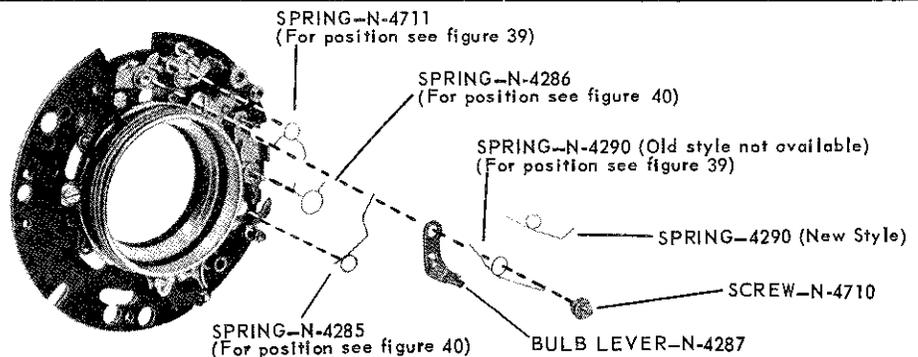


FIGURE 34

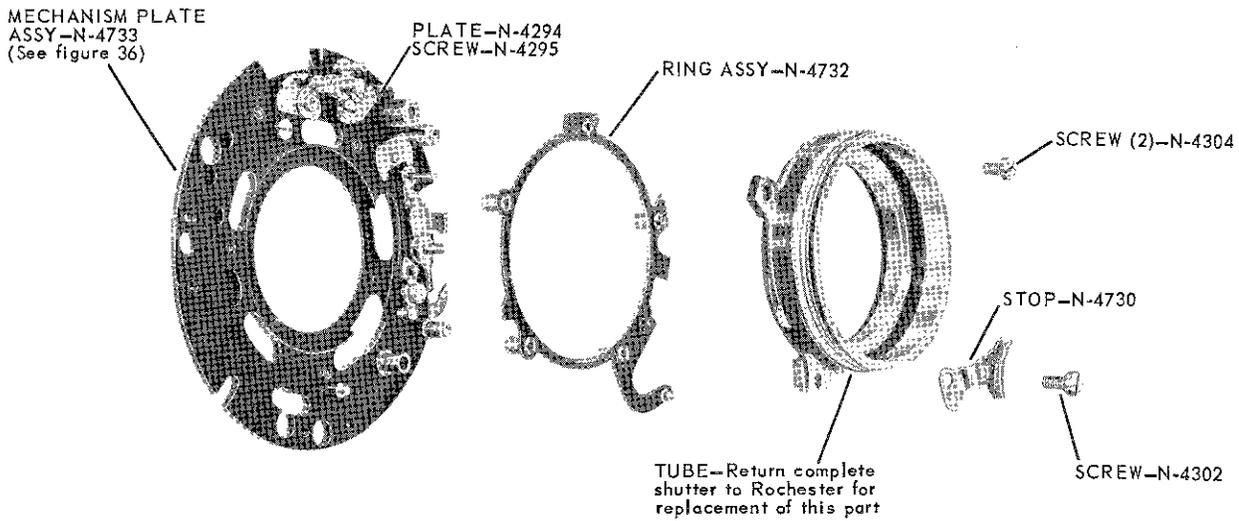


FIGURE 35

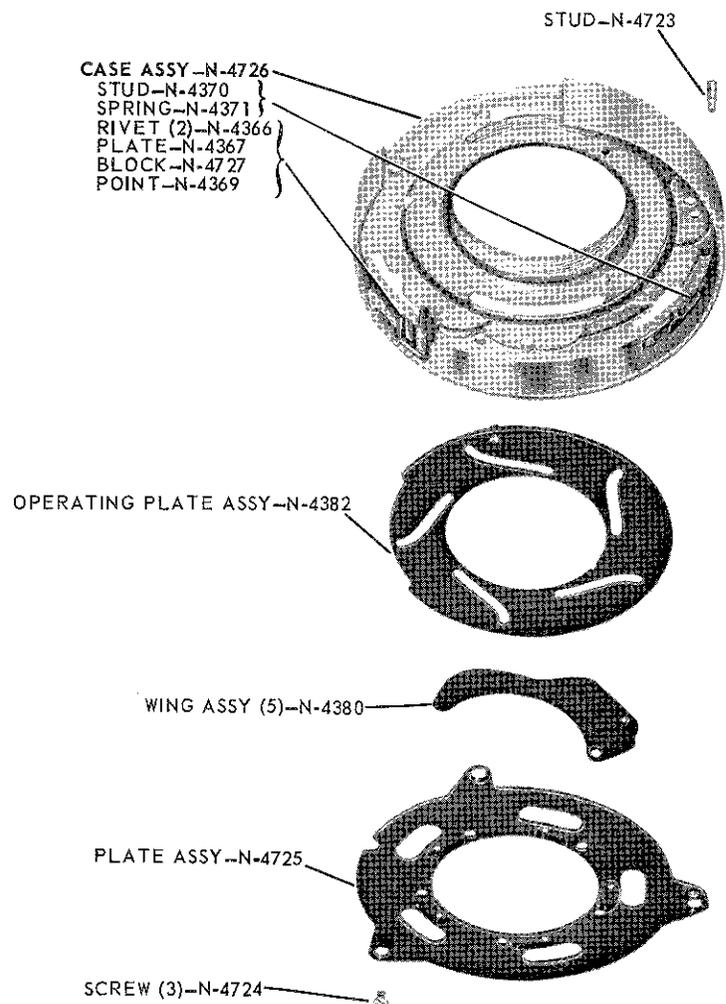
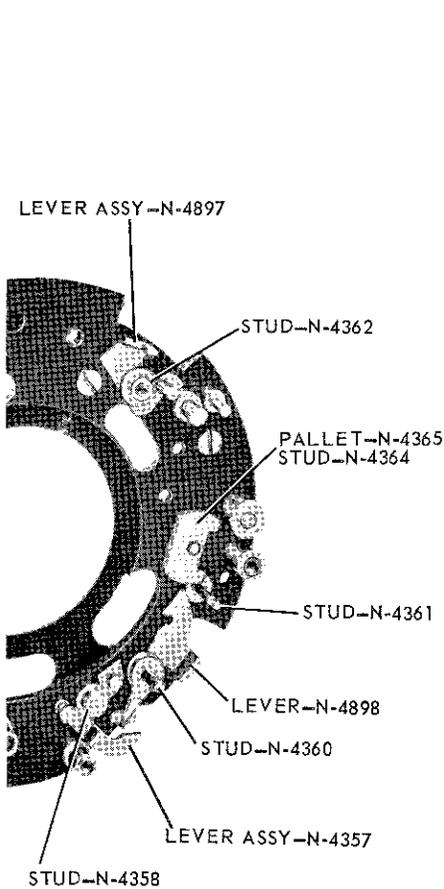


FIGURE 36. MECHANISM PLATE ASSY-N-4733

FIGURE 37

SYNCHRO COMPUR SHUTTER for Kodak Retina Reflex Camera

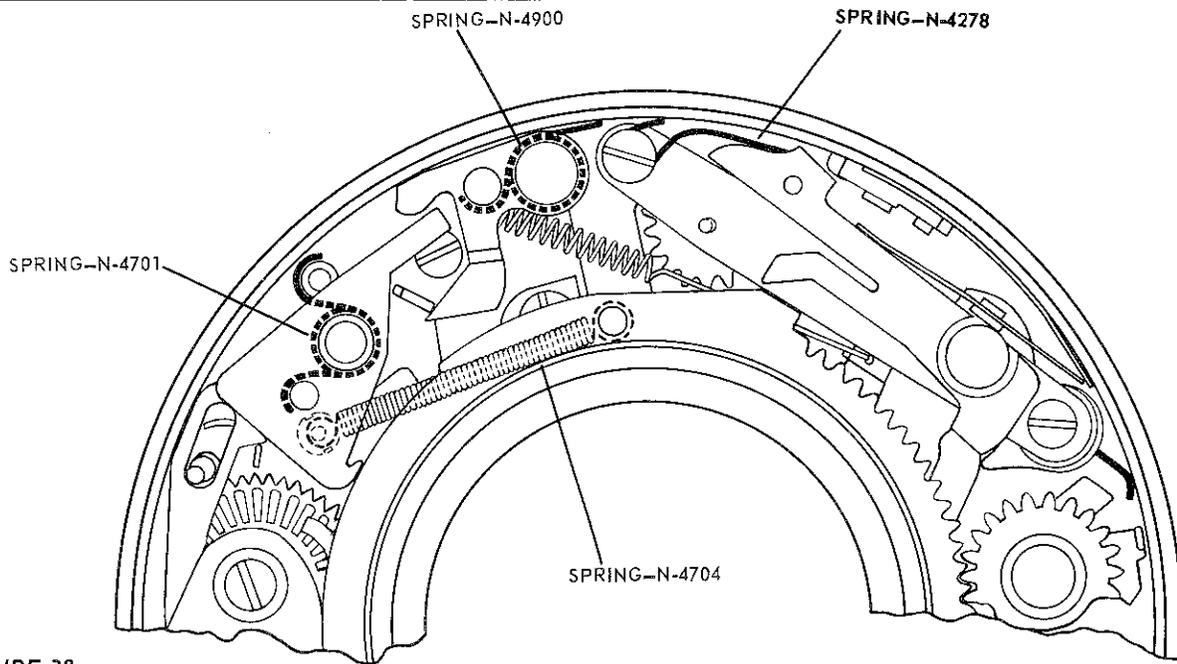


FIGURE 38

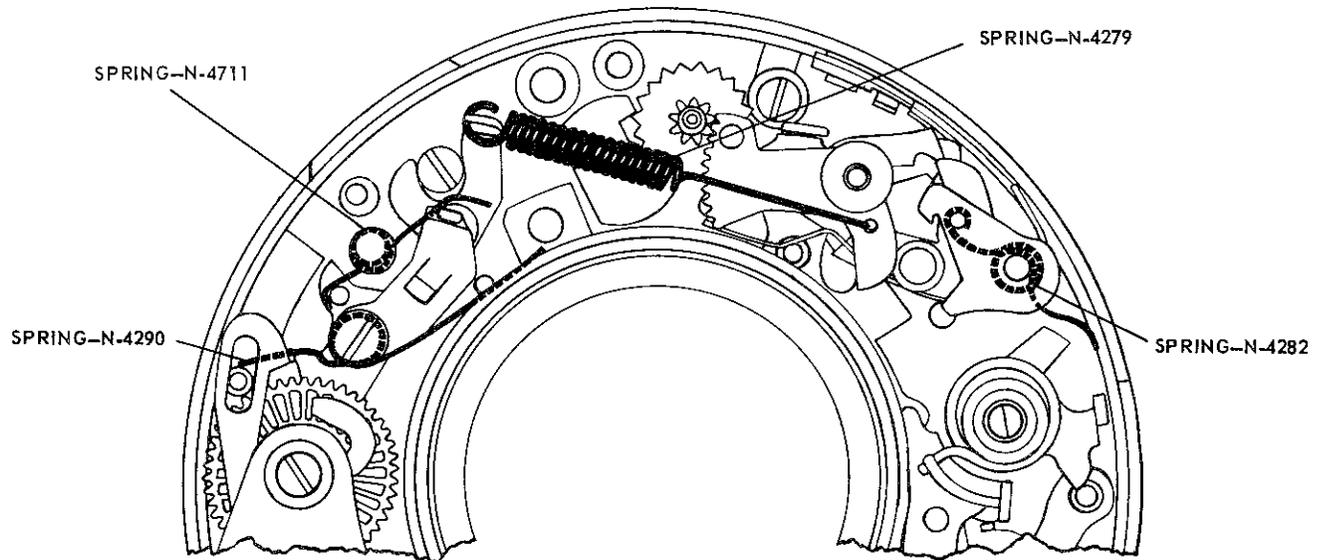


FIGURE 39

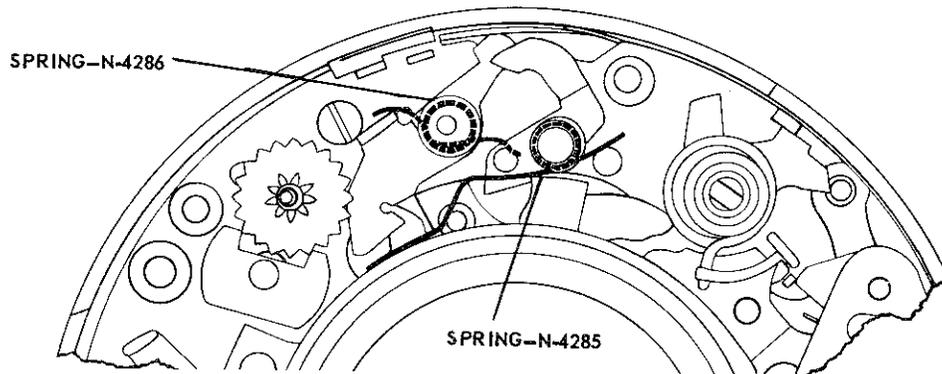


FIGURE 40

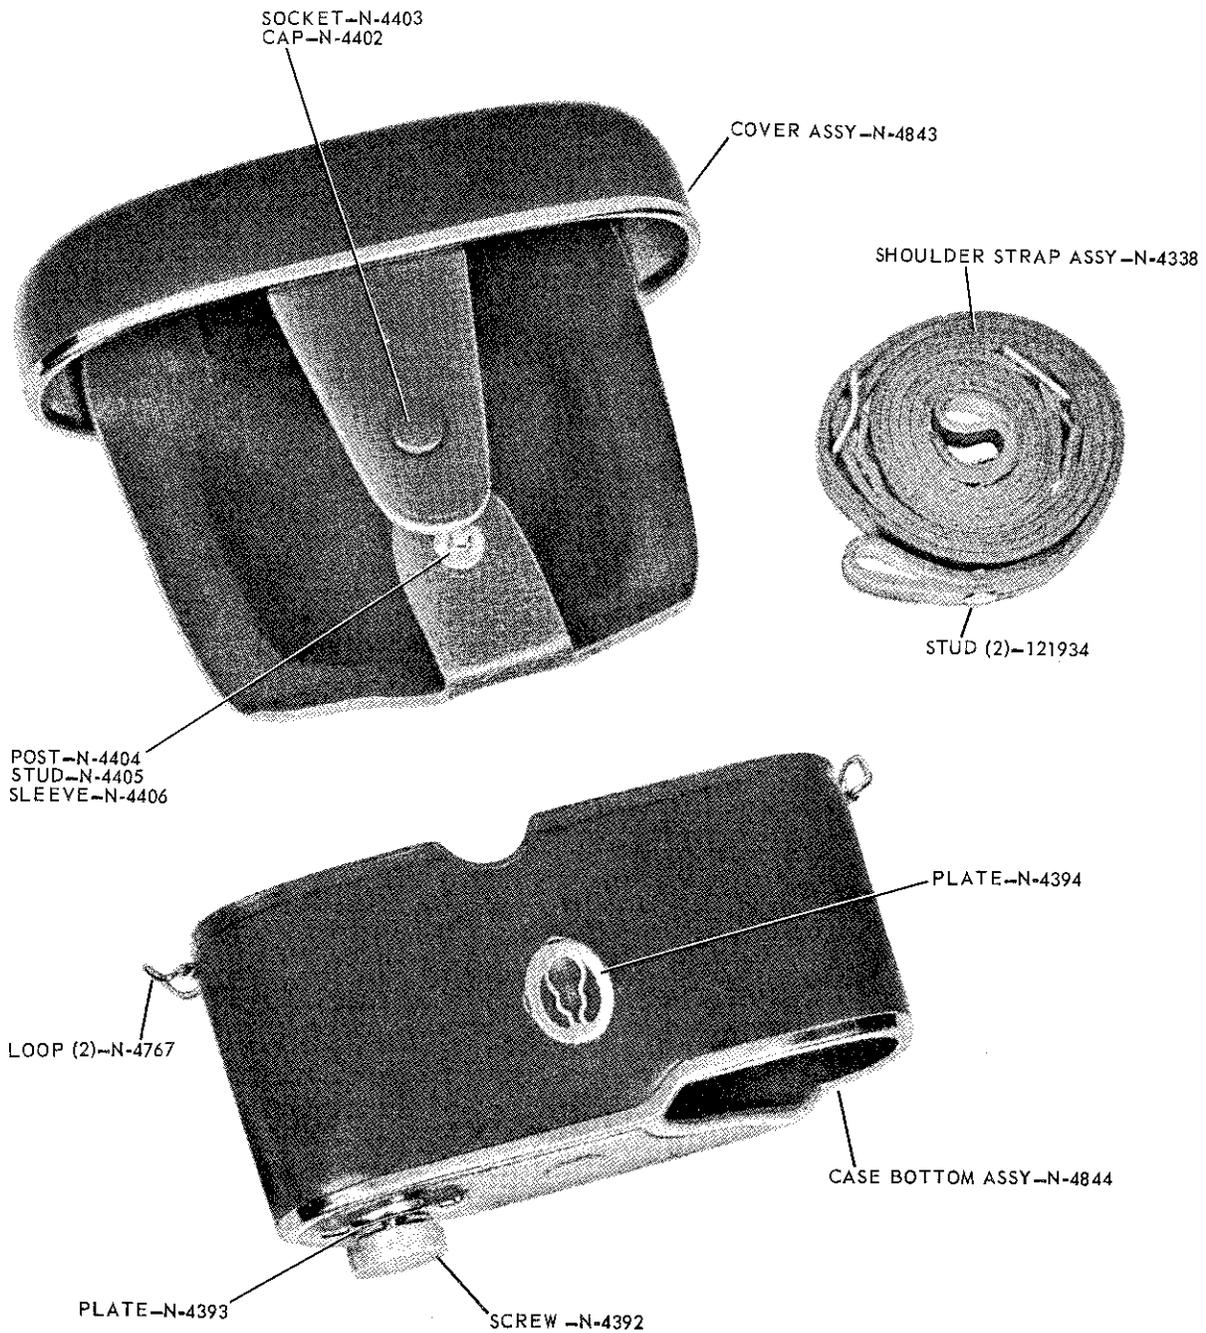


FIGURE 41. KODAK RETINA REFLEX FIELD CASE

KODAK RETINA REFLEX CAMERA

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
8	N-2222	G-2467/1	Screw - Rewind post bearing	2
8	N-2410	G-011544	Ring - Rewind post extension retaining	1
5	N-2423	G-2036/6	Screw - Clip	3
18	N-2617	G-016086	Spring - Rewind release dog	1
4	N-2618	G-016334/1	Film Tension Pad Assembly	1
4	N-2630	G-016309	Roller - Film	1
19	N-2662	G-2508/1	Screw - Sprocket shaft	1
18	N-2672	G-016085	Screw - Rewind release dog	1
18	N-2675	G-4623/1	Washer - Rewind release, bottom	1
3,9 14,15,19	N-2677	G-2507/1	Screw - Back assembly (3), Roller thrust bearing assy (1), Front cover plate (2), Housing support (1), Bottom frame (7), Winding shaft assy (3)	17
16	N-2699	G-2114/1	Screw - Back latch plate	2
4	N-2717	G-016302	Spring - Tension pad	2
3	N-2723	G-016670	Pointer - Film indicator	1
3	N-2724	G-016623	Washer - Film indicator pointer, tension	1
12	N-2963	G-2090/1	Screw - Release latch	1
5	N-4001	G-018724	Spring - Exposure counter	1
5	N-4049	G-021738	Clip	1
3	N-4051	G-2507/6	Screw - Finder housing, left	2
3	N-4052	G-2538/6	Screw - Finder housing, right	1
7	N-4063	G-025704	Button - Counter setting	1
7	N-4064	G-4048/0	Washer - Counter setting button	1
7	N-4065	G-028705	Sleeve - Counter setting button	1
5	N-4070	G-021718	Ratchet - Counter	1
5	N-4071	G-021720	Dial - Counter	1
5	N-4087	G-021717	Washer - Counter ratchet, tension	1
5	N-4088	G-4638/1	Washer - Counter ratchet, spacing	1
5	N-4092	G-021706	Bushing - Body release	1
8	N-4097	G-021927	Button - Body release	1
8,9	N-4099	G-2537/1	Screw - Strap bracket to case, left (2), right (1)	3
8	N-4104	G-021624	Spring - Wind and counter release	1
16	N-4115	G-2258/4	Setscrew - Mirror latch bracket	1
8	N-4136	G-021633	Bearing - Rewind post	1
8	N-4137	G-021630	Post - Rewind	1
8	N-4138	G-021631	Extension - Rewind post	1
19	N-4176	G-021617	Guide - Wind and counter release	1
15	N-4180	G-021612	Ring - Tripod socket, outer	1
15	N-4181	G-021611	Spring - Back latch button guard	1
15	N-4182	G-2527/1	Screw - Tripod socket to case	3
15	N-4183	G-021595	Socket - Tripod	1
15	N-4184	G-021594	Bearing - Cassette	1
16	N-4193	G-021018	Button - Back latch	1
16	N-4194	G-021013	Spring - Back latch button	1
15	N-4201	G-2526/1	Screw - Winding lever	3
15	N-4202	G-021602/1	Lever - Winding	1
18	N-4205	G-021580/1	Film Advance Lock Assembly	1
18	N-4206	G-021584	Spring - Film advance lock assembly	1
18	N-4207	G-4984/4	Retainer - Film advance lock spring	1
18	N-4208	G-021570/1	Wind Release Assembly	1
18	N-4209	G-021578	Screw - Wind release adjusting	1
18	N-4210	G-021557	Spring - Wind release	1
18	N-4211	G-021574	Spring - Wind release throw-out	1
17	N-4212	G-021550	Screw - Drive mechanism to wind shaft	1
17	N-4213	G-021549	Gear - Winding shaft	1
17	N-4214	G-4630/0	Spacer - Winding shaft pinion	1
17	N-4215	G-021545	Pawl - Winding shaft	1
17	N-4216	G-021544	Cam - Winding shaft	1
17	N-4217	G-021543	Spring - Wind shaft cam, tension	1
17	N-4218	G-021532	Gear - Film advance drive	1

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
18	N-4219	G-021564	Button - Rewind release	1
19	N-4220	G-021555/1	Sprocket Shaft Assembly	1
19	N-4221	G-021560/1	Sprocket	1
19	N-4222	G-021540	Screw - Drive gear pawl	1
19	N-4223	G-021538	Pawl - Drive gear	1
19	N-4224	G-021539	Spring - Drive gear pawl	1
19	N-4225	G-021536	Spacer - Drive gear pawl	1
19	N-4226	G-021534	Screw - Bushing and gear assy to case	1
19	N-4227	G-021527/1	Bushing and Gear Assembly	1
18	N-4228	G-021567	Dog - Rewind release	1
19	N-4229	G-021500/1	Winding Shaft Assembly	1
19	N-4230	G-021516	Bushing - Take-up spool	1
19	N-4231	G-021518/1	Spool - Take-up	1
4	N-4236	G-021321/1	Back Hinge Assembly	1
4	N-4238	G-021104	Catch - Back	1
4	N-4239	G-1371/1	Rivet - Film tension pad spring	3
15	N-4321	G-2528/6	Screw - Tripod socket outer ring	2
15	N-4322	G-021610	Guard - Back latch button	1
18	N-4325	G-021563	Spring - Rewind release button	1
19	N-4354	G-021524	Gear - Clutch	1
19	N-4355	G-016540	Spring - Clutch, pressure	1
19	N-4356	G-021522	Clutch	1
5	N-4466	G-021721	Bearing - Release and counter	1
8	N-4503	G-025642/2	Exposure Meter Assembly	1
3	N-4510	G-023765/1	Knob - Rewind	1
3	N-4511	G-023774	Screw - Rewind knob	1
3	N-4512	G-023761	Sleeve - Rewind post	1
3	N-4513	G-025701/2	Housing - Complete	1
22	N-4514	G-025002/2	Case Assembly	1
12	N-4515	G-025208/1	Release Latch Assembly	1
2	N-4518	G-025265/1	Plate - Shutter mounting	1
12	N-4519	G-025266	Ring - Clamping	1
2	N-4520	G-025260/1	Ring - Adjusting	1
2	N-4522	G-2582/4	Screw - Clamping ring	3
2	N-4523	G-025225	Plate - Focus tube spacer	1
2	N-4524	G-025254	Post - Shutter setting	1
12	N-4525	G-025250/1	Tube - Focus	1
13	N-4526	G-023225	Pinion - Shutter set ring drive	1
1	N-4527	G-8901/0	Ball - Shutter trip lever	2
3	N-4528	G-025753	Screw - Meter dial (1), Film speed indicating dial (1) . .	2
12	N-4529	G-2586/4	Screw - Mounting plate to focus assy	3
15	N-4530	G-025607	Covering - Wind lever	1
6,12	N-4531	G-2564/1	Screw - Exposure counter adjusting (1), Shutter release lever adjusting (1)	2
14	N-4532	G-025245	Support - Housing	1
14	N-4533	G-2588/1	Screw - Lens board adjusting	1
9	N-4534	G-2509/1	Screw - Upper frame	3
8	N-4535	G-023628	Spring - Release plate pressure	1
12	N-4536	G-025217	Pinion - Shutter setting	1
12	N-4537	G-025229	Screw - Body release bell crank	1
1	N-4538	G-025267	Ring - Focus scale retainer	1
13	N-4540	G-2583/4	Screw - Ring retainer	2
13	N-4542	G-025227	Rivet - Idler gear	1
4	N-4543	G-023293	Strip - Back finishing	1
10	N-4544	G-025685	Frame - Spacing	1
4	N-4545	G-1379/1	Rivet - Hinge	3
1	N-4546	G-025286	Spring - Contact	1
4	N-4547	G-7050/1	Pin - Hinge	1
5	N-4548	G-025734	Retainer - Light meter window	1
10	N-4550	G-2487/4	Screw - Bracket to lens block (2), Prism mask (1)	3

KODAK RETINA REFLEX CAMERA

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
12	N-4551	G-023212	Screw - Release latch assy	2
9	N-4552	G-023637	Screw	1
2	N-4553	G-025269	Shim	AR
7	N-4554	G-025728	Mask - Eyelet	1
5	N-4555	G-1388/1	Rivet - Light meter window retainer	2
20	N-4556	G-2079/4	Screw - Light guard retaining (2), Spring retaining plate (2)	4
22	N-4558	G-025033	Screw - Mirror adjusting	1
13	N-4559	G-025214	Stud - Shutter release coupling	1
3	N-4560	G-025752	Washer - Top dial tension	1
16	N-4561	G-023015	Strip - Case latch cover	1
22	N-4562	G-025035	Screw - Mirror adjusting bracket	2
2	N-4563	G-2581/1	Screw - Tube assy to shutter	4
23	N-4564	G-025024	Slide - Light blocking flap lock	1
16	N-4565	G-023010	Latch - Back	1
1	N-4567	G-025285	Pin - Flash contact to shutter	1
2	N-4568	G-025268	Collar - Shutter release coupling	1
21	N-4569	G-025130	Spring - Slider pressure	3
21	N-4570	G-025132	Lever - Mirror actuating	1
21	N-4571	G-025148	Screw - Mirror setting guide	2
10	N-4572	G-0187/5	Prism - Finder roof	1
1	N-4573	G-025262/9	Scale - Footage	1
10	N-4574	G-025682	Box - Finder	1
3	N-4575	G-025290/2	Back Assembly	1
9	N-4576	G-023615	Rack - Setting	1
7	N-4577	G-025724	Bezel - Eyelet	1
8	N-4578	G-023620/1	Wind Release Button Assembly	1
8	N-4580	G-021635	Spring - Rewind post friction	1
15	N-4581	G-025030	Spring - Aperture cover latch	1
4	N-4583	G-1357/4	Rivet - Latch and highlight plate to back	4
10	N-4584	G-025695	Mask - Penta prism	1
23	N-4585	G-025039	Pin - Aperture lever guide	1
9	N-4586	G-2532/1	Screw - Prism bracket (2), Roller thrust bearing assy (1)	3
15	N-4587	G-023350	Guard - Mirror bracket spring cover	2
23	N-4588	G-025027	Screw - Aperture cover lock	1
16	N-4589	G-023014	Stud - Latch guide	2
13	N-4590	G-025240	Screw - Set ring spring anchor	1
23	N-4591	G-023004	Socket - Flash bracket locating	1
20	N-4592	G-0182/9	Mirror	1
9	N-4593	G-023639	Washer - Rack guide	1
14	N-4594	G-025284	Sleeve - Flash contact insulating	1
13	N-4595	G-025212	Screw - Shutter control spring	1
13	N-4596	G-025211	Spring - Control lever	1
22	N-4597	G-025038	Pin - Mirror bracket spring anchor	1
10	N-4598	G-025693	Mask - Prism	1
12	N-4599	G-025215	Stud - Shutter setting	1
1	N-4600	G-025222	Retainer - Shutter setting stud ball	1
8	N-4601	G-2589/1	Screw - Exposure meter retaining	1
20	N-4602	G-025196	Guard - Light	1
8	N-4603	G-025625/1	Plunger - Body release	1
10	N-4605	G-2585/4	Screw - Prism clamping	6
22	N-4606	G-023150	Pin - Mirror and light blocking flap	1
15	N-4607	G-023025/1	Plate - Bottom frame assy	1
9	N-4608	G-025028	Top Frame Assembly	1
15	N-4610	G-023356	Covering - Case, bottom	1
8	N-4611	G-023636	Bracket - Carrying strap, left	1
21	N-4612	G-2490/1	Screw - Control shaft adjusting	1
4	N-4613	G-021295	Plate - Hinge reinforcing	1
12	N-4614	G-2587/4	Screw - Gear setting	1

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
3	N-4615	G-025747	Washer - Meter setting ring tension	1
23	N-4616	G-025040	Stud - Mirror setting and release guide	2
5	N-4617	G-2224/1	Screw - Serial block	4
1	N-4618	G-2301/1	Screw - Clamping ring	4
22	N-4619	G-025152	Spacer - Mirror and light blocking flap	1
13	N-4620	G-025213	Lever - Coupling release	1
22	N-4621	G-023153	Spacer - Housing and light flap	1
10	N-4622	G-0183/0	Disc - Wedge	1
13	N-4623	G-025247	Bumper - Mirror	1
10	N-4624	G-025690	Bracket - Prism mounting	1
21	N-4625	G-025191/1	Shutter Setting Cam and Gear Assembly	1
22	N-4626	G-025249	Strip - Mirror protective	1
14	N-4627	G-025282	Leather - Front plate, right	1
14	N-4628	G-025275	Plate - Front cover	1
11	N-4629	G-2027/6	Screw - Front to case	4
21	N-4630	G-025135/1	Mirror Release Latch Assembly	1
13	N-4631	G-025287/1	Wire - Contact	1
20	N-4632	G-025158	Plate - Spring retaining	1
13	N-4633	G-025216	Screw - Control lever	1
15	N-4634	G-021604	Insert - Winding lever assembly protective	1
9	N-4635	G-025638	Bracket - Carrying strap, right	1
13	N-4636	G-025231/1	Shutter Setting Ring Assembly	1
13	N-4637	G-4626/1	Washer - Control lever	1
10	N-4638	G-0186/0	Lens - Upper	1
10	N-4639	G-0184/0	Glass - Ground	1
21	N-4640	G-025146	Spring - Lock catch	1
14	N-4641	G-025280	Leather - Front plate, left	1
10	N-4642	G-0185/0	Lens - Finder, bottom	1
13	N-4643	G-025210	Lever - Control	1
21	N-4644	G-025160/1	Mirror Latch Assembly	1
3	N-4645	G-025748	Scale - Film rating	1
3	N-4646	G-025742	Ring - Meter rotating	1
11	N-4647	G-025354	Covering - Housing, right	1
10	N-4648	G-025697	Gasket - Prism clamp, rubber	2
11	N-4649	G-023352	Covering - Housing, left	1
13	N-4650	G-025242	Spring - Tension	1
22	N-4651	G-025157	Spring - Mirror	1
21	N-4652	G-025140/1	Latch Guide Strap Assembly	1
22	N-4653	G-025155	Spring - Light blocking flap	1
5	N-4654	G-025710/1	Counter Advance Assembly	1
21	N-4655	G-025170/1	Control Shaft Assembly	1
1	N-4656	G-025673	Mask - Light	1
21	N-4657	G-025125/1	Light Blocking Flap Latch Assembly	1
14	N-4658	G-025206/1	Flash Post Terminal Assembly	1
5	N-4659	G-0190/0	Window - Light meter	1
12	N-4660	G-025271	Spring - Pressure	1
4	N-4661	G-025355	Covering - Back	1
3	N-4662	G-025750/1	Dial - Light meter	1
22	N-4663	G-025037	Spring - Mirror adjusting bracket	1
1	N-4664	G-2561/6	Screw - Footage scale	1
7	N-4666	G-0188/0	Lens - Eyelet	1
5	N-4667	G-025737	Block - Clip	1
14	N-4668	G-025248	Leather - Front frame	1
22	N-4669	G-025110/1	Mirror Bracket Assembly	1
12	N-4670	G-025228/1	Shutter Release Lever Assembly	1
9	N-4671	G-025680/2	Finder Assembly	1
12	N-4672	G-025200/2	Front Assembly	1
22	N-4673	G-025032/1	Mirror Adjusting Bracket Assembly	1
22	N-4674	G-025100/1	Aperture Cover Assembly	1
9	N-4675	G-023675/1	Roller Thrust Bearing Assembly	1

KODAK RETINA REFLEX CAMERA

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
1	N-4849	G-025261	Knob - Focus ring	1
1	N-4850	G-2196/2	Screw - Focus ring knob	1
8	N-4855	G-025660	Stud - Housing support	1
2	N-4859	G-025/865	Shutter Complete	1
7	N-4882	G-025730	Pad - Meter retainer	1
19	N-4899	G-4610/1	Spacer - Wind and counter release guide	1

SYNCHRO COMPUR SHUTTER FOR THE RETINA REFLEX CAMERA

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
25	N-2739	G-230/1	Screw - Bayonet lock ring	3
27	N-4257	G-021773	Block - Lens serial number (blank)	1
27	N-4258	G-2546/1	Screw - Lens serial block	1
32	N-4276	G-CROO-418	Screw - Synchro cover plate	1
32	N-4277	G-CROO-418	Screw - Synchro cover plate, shoulder	1
32	N-4278	G-CROO-672	Spring - Main drive lock	1
32	N-4279	G-CROO-641	Spring - Synchro gear	1
32	N-4280	G-CROO-615	Synchro Contact Assembly	1
32	N-4281	G-CROO-612	Synchro Lever Assembly	1
32	N-4282	G-CROO-614	Spring - Synchro lever	1
32	N-4284	G-CROO-632	Synchro Gear Assembly	1
34	N-4285	G-CROO-249	Spring - Blade operating check	1
34	N-4286	G-CROO-619	Spring - Synchro lock	1
34	N-4287	G-CROO-669	Lever - Bulb	1
34	N-4290		Spring - Self timer (old style)	1
34	N-4290		Spring - Self timer (new style)	1
30	N-4292	G-CROO-515	Spring - Main drive	1
35	N-4294	G-CROO-616	Plate - Synchro spring anchor	1
35	N-4295	G-CROO-618	Screw - Synchro anchor plate retaining	1
31	N-4296	G-CROO-323	Screw - Retard gear train, short	1
31	N-4298	G-CROO-300	Retard Gear Train Assembly	1
31	N-4299	G-CROO-416	Screw - Delayed action gear train	1
31	N-4300	G-CROO-400	Delayed Action Gear Train Assembly	1
35	N-4302	G-CROO-260	Screw - Main drive gear stop	1
35	N-4304	G-CROO-261	Screw - Shutter tube retaining	2
33	N-4313	G-CROO-208	Blade - Shutter	4
36	N-4357	G-1110-664	Synchro Lock Lever Assembly	1
36	N-4358		Stud - Synchro lever	1
36	N-4360		Stud - Synchro lever	1
36	N-4361		Stud - Synchro gear	1
36	N-4362		Stud - Time release lever	1
36	N-4364		Stud - Pallet	1
36	N-4365		Pallet	1
37	N-4366	G-1110-153	Rivet - Flash contact	2
37	N-4367		Plate - Flash contact	1
37	N-4369		Point - Flash contact	1
37	N-4370		Rivet - Synchro set lever	1
37	N-4371		Spring - Synchro set lever	1
33	N-4378		Screw - Diaphragm operating ring	1

FIG.	PART NO.		PART NAME	REQD.
	U.S.	German		
37	N-4380		Diaphragm Wing Assembly	5
37	N-4382	G-1110-338/106	Diaphragm Operating Plate Assembly	1
26	N-4676	G-346/739	Screw - Name plate	3
26	N-4677	G-346/738	Name Plate	1
26	N-4681	G-020/539	Ring - Set	1
26	N-4682	G-346/163	Light Value Scale and Ring Assembly	1
26	N-4683	G-346/590	Diaphragm Set Ring Assembly	1
27	N-4684	G-020/743	Screw - Lens mounting	4
28	N-4685	G-030/735	Spring - Bayonet lock	1
28	N-4686		Lever - Bayonet lock	1
28	N-4687		Stud - Bayonet lock lever	1
28	N-4688		Ball - Detent	1
28	N-4689		Spring - Detent ball	1
28	N-4690		Stud - Detent ball spring	1
27	N-4691	G-346/730	Lens Mounting Plate Assembly	1
27	N-4693	G-346/540	Guard - Dust	1
27	N-4694	G-346/746	Outer Shutter Housing Assembly	1
27	N-4695	G-020/055	Screw - Outer case	4
27	N-4696		Spring - Diaphragm setting tension	2
27	N-4697		Stud - Dial set ring tension spring	2
29	N-4698	G-030/567	Retainer - Speed ring	1
29	N-4699	G-020/552	Ring - Speed	1
30	N-4700	G-346/569	Cocking Ring Lock Lever Assembly	1
30	N-4701	G-346/519	Spring - Lock lever	1
30	N-4702	G-346/508	Trigger and Spring Assembly	1
30	N-4703	G-346/528	Cocking Ring and Spring Assembly	1
30	N-4704	G-011/521	Spring - Cocking ring	1
30	N-4705	G-011/517	Cocking Ring Gear Assembly	1
30	N-4706	G-011/514	Main Drive Assembly	1
32	N-4707	G-011/621	Synchro Cover Plate Assembly	1
32	N-4708	G-010/635	Synchro Sector Assembly	1
31	N-4709	G-010/304	Screw - Retard gear train, long	1
34	N-4710	G-230/671	Screw - Bulb lever retainer	1
34	N-4711	G-1110/619	Spring - Bulb lever	1
29	N-4712	G-020/102	Collar - Retaining	1
29	N-4713	G-346/745	Shroud Assembly	1
29	N-4714		Lever - Flash back	1
29	N-4715		Stud - Flash back lever	1
29	N-4716	G-020/749	Spring - Flash back lever	1
33	N-4717	G-011/170	Spring - Diaphragm return	1
33	N-4718	G-011/264	Spring - Blade return	1
33	N-4719	G-011/120	Screw - Diaphragm operating ring anchor	1
33	N-4720	G-346/108	Diaphragm Operating Ring Assembly	1
33	N-4721	G-346/148	Flash Set Ring Assembly	1
33	N-4722	G-005/109	Screw - Case to mechanism plate	3
37	N-4723	G-020/115	Stud - Anchor	1
37	N-4724	G-1110/113	Screw - Diaphragm retainer plate	3
37	N-4725	G-005/116	Diaphragm Ring Retainer Plate Assembly	1
37	N-4726		Shutter Case Assembly	1
37	N-4727		Block - Flash contact	1
33	N-4728	G-011/267	Blade - Shutter, notched	1
33	N-4729	G-011/252	Shutter Blade Spacer Plate Assembly	1
35	N-4730	G-011/299	Stop - Main drive gear	1
35	N-4732	G-005/202	Blade Control Ring Assembly	1
35	N-4733	G-346/201	Mechanism Plate Assembly	1
25	N-4852		Ring - Bayonet lock	1
2	N-4859	G-025/865	Shutter Complete	1
36	N-4897		Time Release Lever Assembly	1
36	N-4898		Lever - Synchro	1
30	N-4900		Spring - Trigger	1

KODAK RETINA REFLEX FIELD CASE

FIG.	PART NO.	PART NAME	REQD.
38	N-4843	Cover Assembly	1
38	N-4402	Cap - Snap button	1
38	N-4403	Socket - Snap button cap	1
38	N-4404	Post - Snap button	1
38	N-4405	Stud - Snap button post	1
38	N-4406	Sleeve - Snap button post stud	1
38	N-4393	Plate - Camera retaining screw	1
38	N-4392	Screw - Camera retaining	1
38	N-4394	Plate - Snap button stud catch	1
38	N-4844	Case Bottom Assembly	1
38	N-4338	Shoulder Strap Assembly	1
38	N-4767	Loop - Strap	2
38	121934	Stud - Shoulder strap	2

Always give PART NUMBER and NAME when ordering parts

EASTMAN KODAK COMPANY • ROCHESTER 4, NEW YORK