


# YASHICA FR II

ASSEMBLING CHART




**YASHICA CO., LTD.**  
TOKYO JAPAN

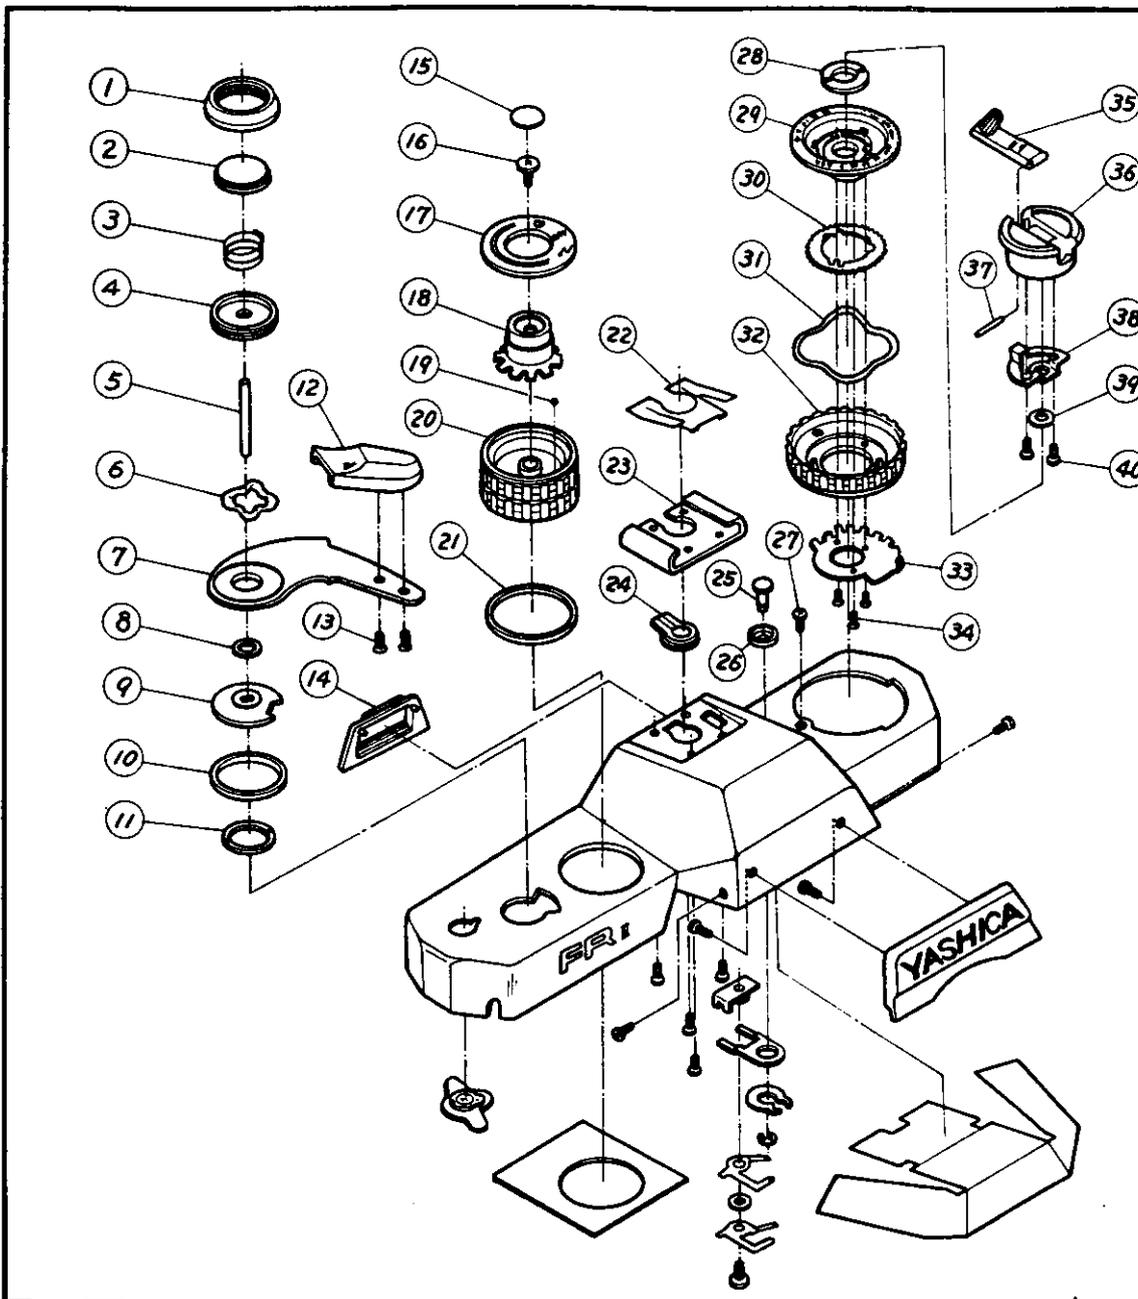

PARTS NO	DESCRIPTION	QTY
1	134-627 R Button Holder	1
2	132-628 R Button	1
3	132-629 R Button SP	1
4	132-623 R Button Holder Bush	1
5	132-624 R Shaft	1
6	121-659 W Lever Friction S'	1
7	★ W Lever Sub Ass'y	1
8	60113110 Washer	1
9	132-617 W Lever Base	1
10	132-616 W Lever Collar	1
11	132-122 Top Cover Nut	1
12	142-602 W Lever Knob	1
13	61814524 Screw	2
14	★ Light-gathering Cover	1
15	142-420 S Dial Indicator Face	1
16	66001028 Screw	1
17	062-442 S Dial Name Plate	1
18	061-444 S Dial Indicator	1
19	66702020 Steel Ball	1
20	062-443 S Dial knob Ass'y	1
21	★ S Dial knob Nut	1
22	134-128 Shoe Plate	1
23	132-136 Acc'y Shoe	1
24	131-K02 Shoe Contactor Ass'y	1
25	132-120 B Check Button	1
26	★ B Check Button Holder	1
27	61812521 Screw	1
28	142-434 ASA Dial S.S.	1
29	142-433 ASA Dial	1
30	★ ASA Dial Ratchet	1
31	142-437 ASA Dial Spring Washer	1
32	★ ASA Dial knob	1
33	★ ASA Dial Click Plate	1
34	61802224 Screw	3
35	132-635 Crank Arm Ass'y	1
36	132-634 Rewind knob	1
37	132-638 Crank Arm Shaft	1
38	132-639 Crank Arm Spring	1
39	60123112 Washer	1
40	63913024 Screw	2


7, 12, 13	143-091	W Lever Ass'y
21-26 & P2 41-44		
50-57, 59-61,	062-160	Top Cover Ass'y
35-40	056-623	Rewind knob Ass'y (132-D02)
29-34	062-122	ASA Dial knob Ass'y
	PARTS NO	DESCRIPTION

NOTE : (Parts with marked "★" are not Available)

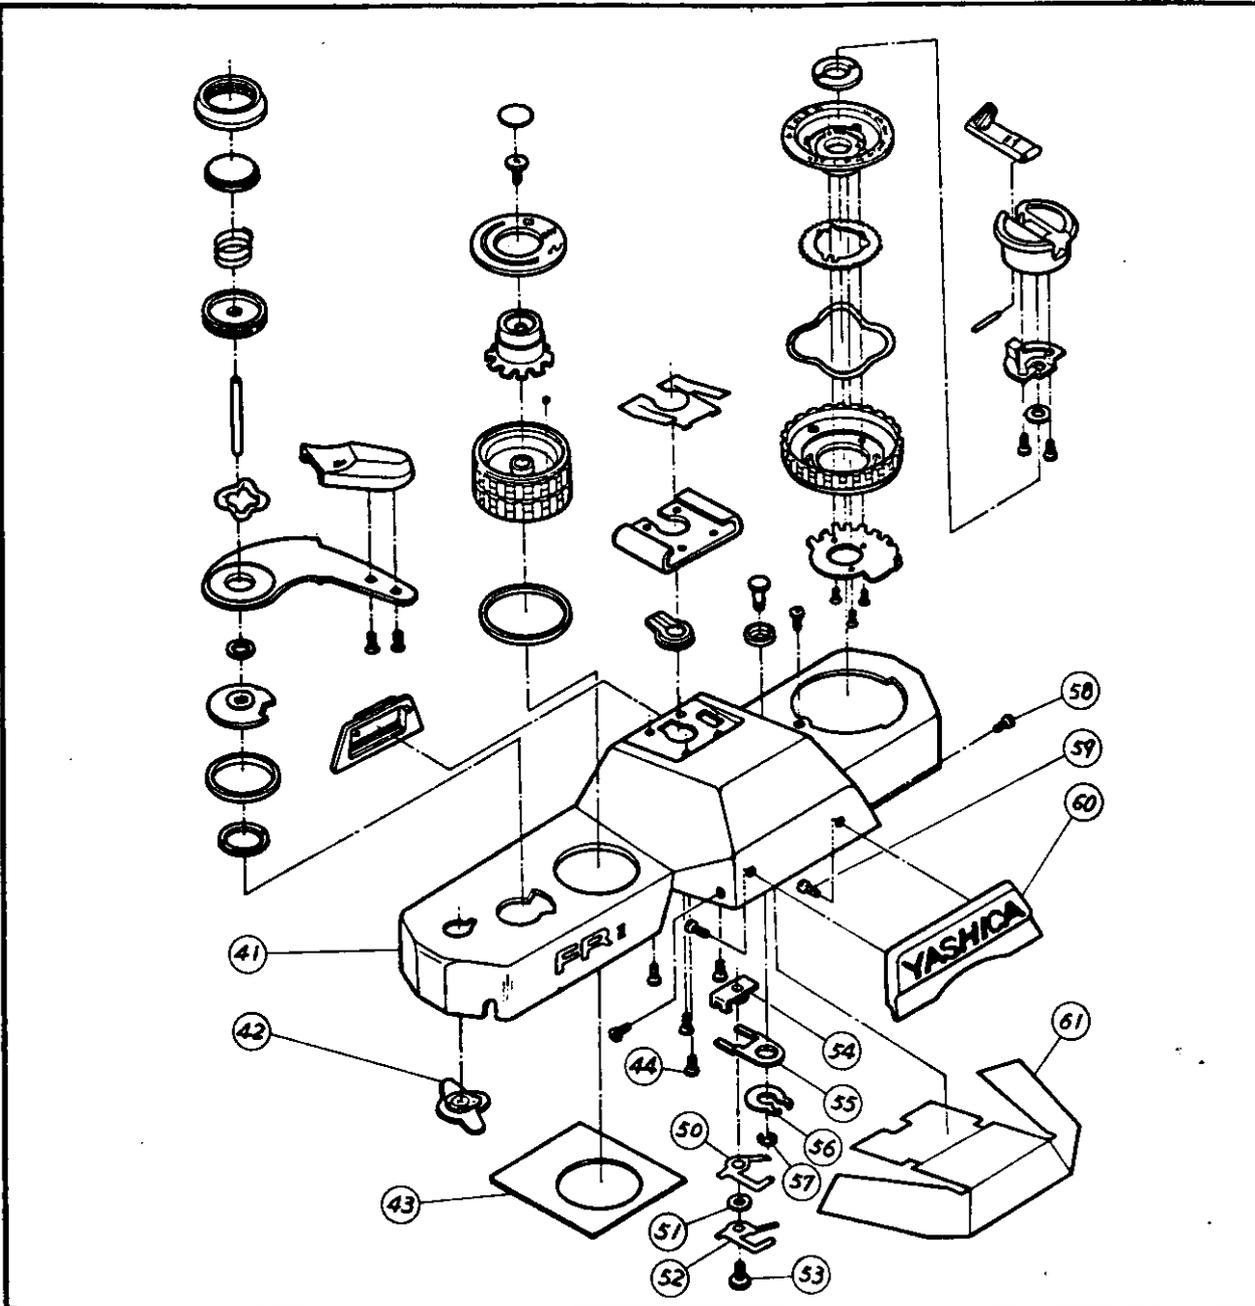


	PARTS NO	DESCRIPTION	QTY
	41	★ Top Cover	1
	42	142-121 C Window	1
	43	142-594 Top Cover Insulating Sheet(2)	1
	44	61911822 Screw	2
	45	★	
	46	★	
	47	★	
	48	★	
	49	★	
	50	142-118 B Checker Contactor(1)	1
	51	142-117 B Checker Contactor Spacer	1
	52	142-119 B Checker Contactor(2)	1
	53	66001023 Screw	1
	54	142-116 B Checker Contactor Base	1
	55	142-120 B Checker Contactor Base Plate	1
	56	66175024 GS Ring	1
	57	66101525 E Ring(E-15)	1
	58	61902529 Screw	2
	59	61912024 Screw	2
	60	143-123 YASHICA Plate	1
	61	132-141 Top Cover Insulating Sheet(1)	1

NOTE : (Parts with marked "★" are not Available)

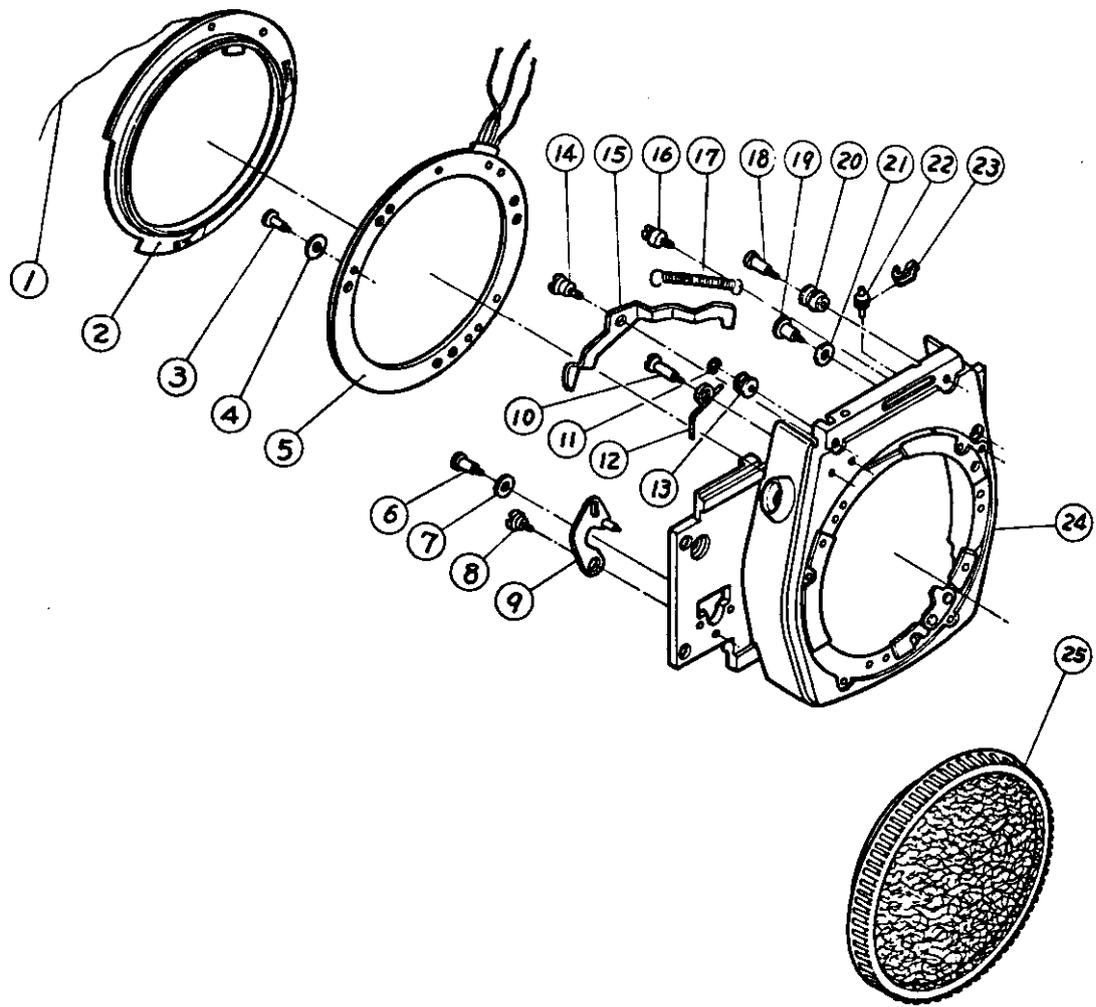

	PARTS NO	DESCRIPTION	QTY
1	★	Aperture String	1
2	141-H01	Sliding Connector Sub Ass'y	1
3	★	Sliding Connector Stopper	1
4	★	Washer	1
5	141-H02	Aperture Resistor Sub Ass'y	1
6	141-805	Idle Lever S.S.	1
7	131-396	Washer	1
8	131-383	Idle Lever Shaft	1
9	142-H03	Idle Lever Ass'y	1
10	132-820	Lock Lever SP Shaft	1
11	66100825	E Ring(E-08)	1
12	132-814	Lock Lever SP	1
13	128-163	Roller(A)	1
14	128-159	Lock Lever Shaft	1
15	132-813	Lock Lever	1
16	128-162	Aperture Resistor SP Post	1
17	128-161	Aperture Resistor SP	1
18	128-167	SP Holder Shaft	1
19	143-805	Sliding Connector S.S.	1
20	128-194	SP Holder	1
21	131-396	Washer	1
22	143-830	Roller Shaft(1)	1
23	131-824	Roller Shaft Hook	1
24	★	Mount Base	1
25	128-118	Body Cap	1
	66701220	Steel Ball	6
	128-173	Spacer Ring	6
	128-192	Aperture Resistor Plate Washer	1




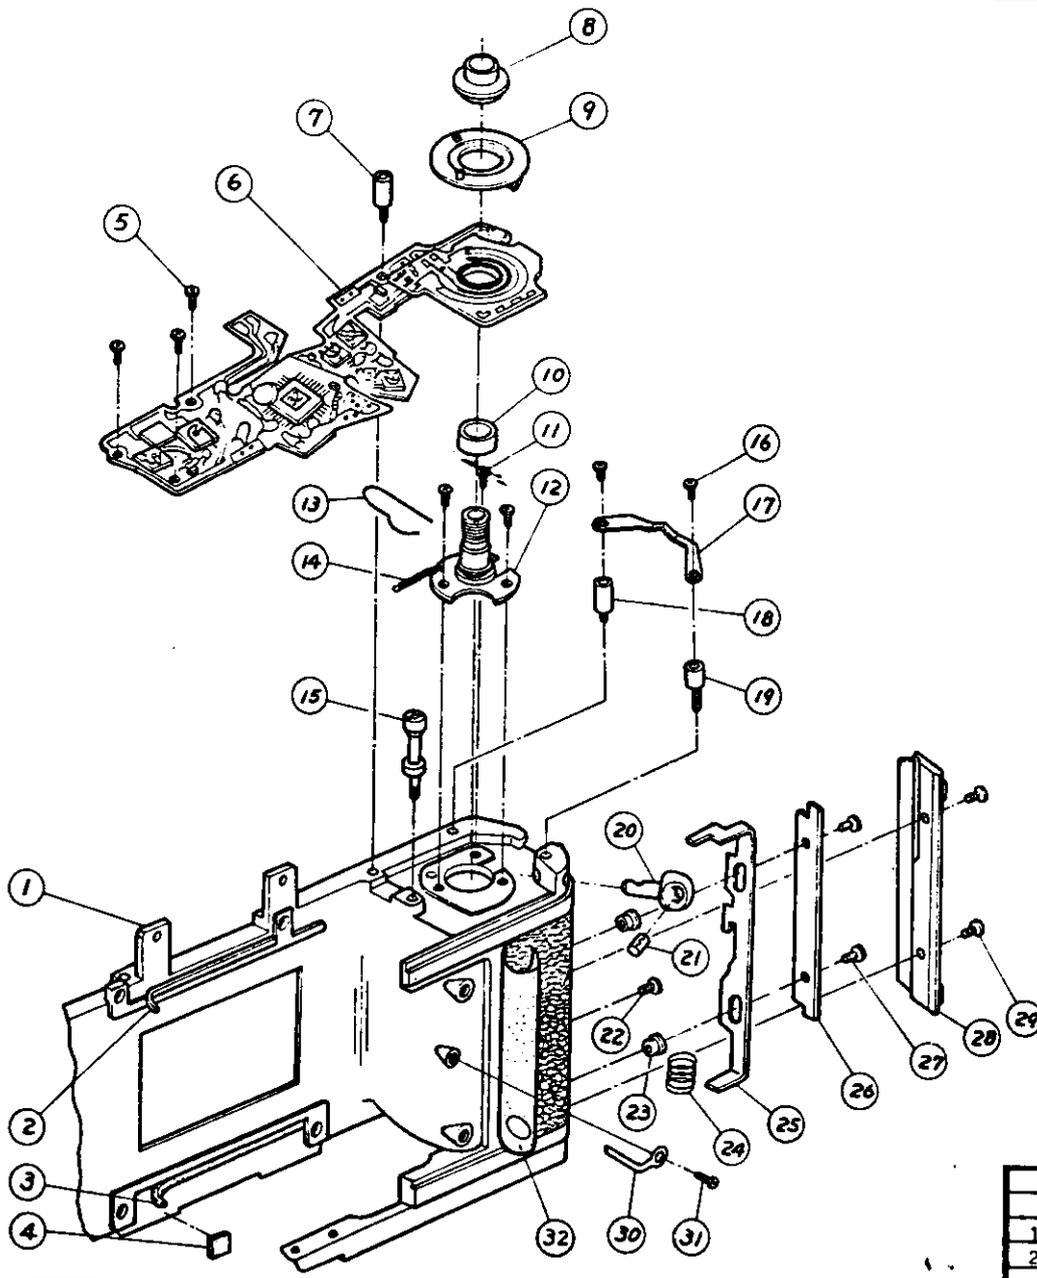

PARTS NO	DESCRIPTION	QTY
1	★ Body	1
2	131-387 S Base Plate Moquette(Upper)	1
3	131-388 S Base Plate Moquette(Lower)	1
4	★	
5	61912522 Screw	3
6	062-503 Amplifier Ass'y	1
7	142-461 Flexible Post	1
8	142-439 ASA Contact Base Shaft	1
9	061-475 ASA Contact Ass'y	1
10	142-443 ASA Base Plate Supporter	1
11	61923024 Screw	3
12	143-603 Rewind Shaft Holder	1
13	312-606 Rewind Shaft SP	1
14	★	
15	142-114 Top Cover Setting Post	1
16	61912524 Screw	2
17	142-438 ASA Dial Click Spring	1
18	142-440 ASA Base Plate Setting Post	1
19	132-486 Strap Holder Screw	1
20	142-102 Strap Holder	1
21	★ Reinforcement Ring	1
22	132-134 Lock Claw Guide Pin	1
23	131-118 BC Lock Shaft	1
24	131-121 BC Lock Plate SP	1
25	132-132 BC Lock Plate	1
26	131-117 BC Lock Plate Cover	1
27	131-392 BC Lock Plate Cover Screw	2
28	132-103 Body Supporter	1
29	61912224 Screw	2
30	131-236 MB Wire Fixer	1
31	61911524 Screw	1
32	143-103 Front Leather(Right)	1

12,13,132-631	143-D02	Rewind Shaft Holder Ass'y
20,21,	142-S01	Strap Holder Ass'y
	PARTS NO	DESCRIPTION


NOTE : (Parts with marked "★" are not Available)

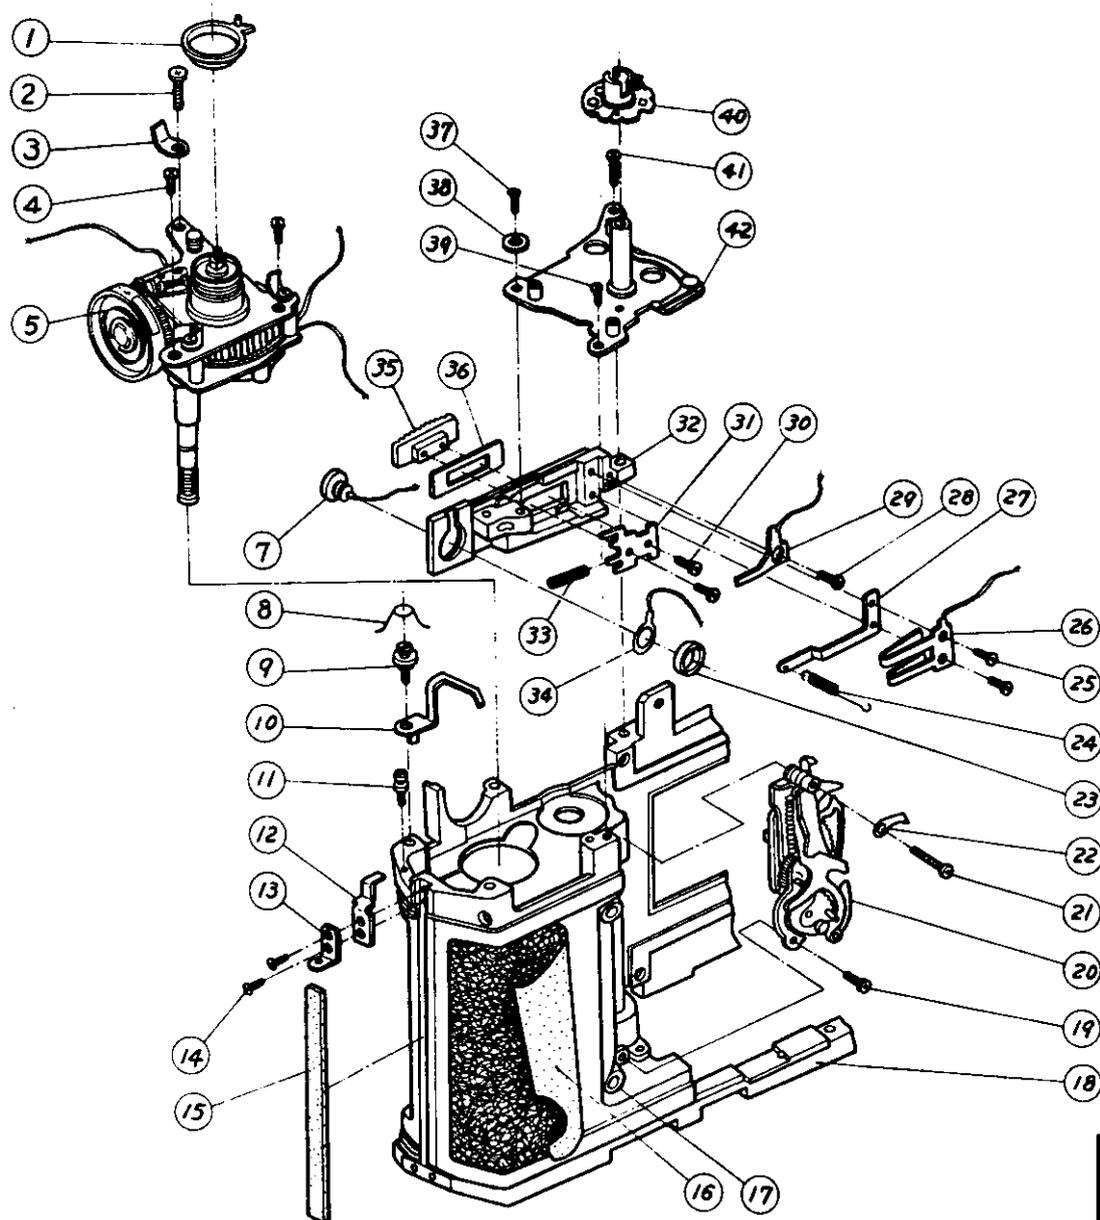

	PARTS NO	DESCRIPTION	QTY
1	132-459	Switch Reverse Ring	1
2	61916524	Screw	1
3	110928	Cord Fixer	1
4	63913024	Screw	2
5	061-540	Winding Mechanism Ass'y	1
6	★		
7	258-005	R Socket Holder Ass'y(132-PO4)	1
8	132-862	C Reverse SP	1
9	132-860	C Reverse Lever Shaft	1
10	132-859	C Reverse Lever	1
11	132-861	C Reverse SP Post	1
12	132-858	C Stopper	1
13	131-148	Hinge Shaft Holder(Upper)	1
14	61813524	Screw	2
15	132-111	Body Hinge Moquette	1
16	143-104	Front Leather(Left)	1
17	132-877	Mount Base Washer	4
18	★	Body	1
19	63902524	Screw	1
20	131-370	Self Timer	1
21	131-371	ST Screw(Upper)	1
22	110-928	Cord Fixer	1
23	132-413	R Socket Nut	1
24	142-444	Lock Reverse SP	1
25	61911822	Screw	2
26	132-407	Slide Switch SP	1
27	132-410	Switch Click SP	1
28	61912224	Screw	1
29	132-411	Slide Switch Contactor	1
30	61912224	Screw	2
31	132-403	Slide Switch Plate	1
32	★	Slide Switch Base	1
33	132-408	Switch Reverse SP	1
34	132-412	Socket Terminal	1
35	132-402	Slide Switch Button	1
36	132-414	Slide Indicator	1
37	61814522	Screw	1
38	132-489	Insulation Collar	1
39	61912522	Screw	1
40	062-447	Shutter Contact Base Ass'y	1
41	61916522	Screw	1
42	062-445	Shutter Dial Base Plate Ass'y	1


1,24.	061-460	Switch Reverse Ring Ass'y
7-23,25-36.	132-A08	Slide Switch Base Ass'y
	PARTS NO	DESCRIPTION

NOTE : (Parts with marked "★" are not Available)

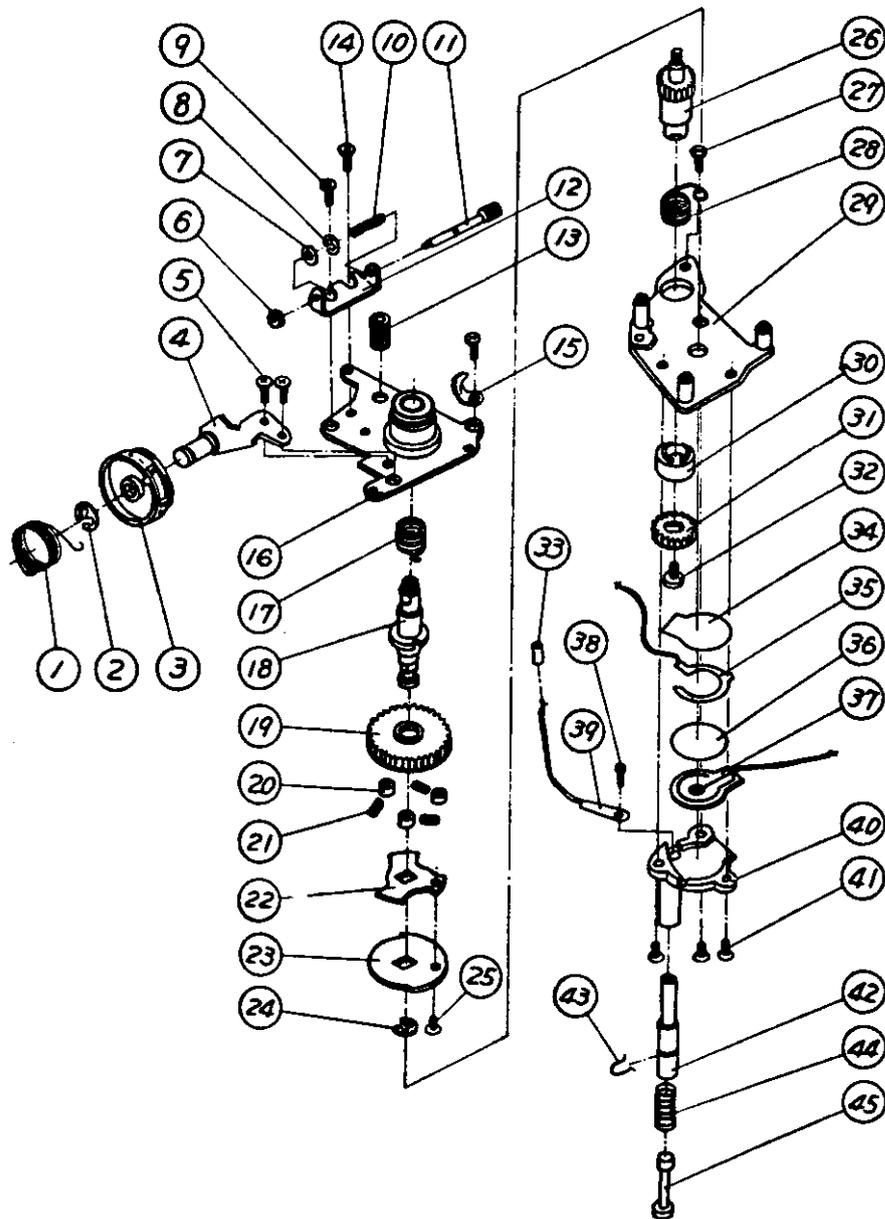

PARTS NO	DESCRIPTION	QTY	
1	132-850	C SP	1
2	66102025	E Ring(E-20)	1
3	142-821	G Gear (1)	1
4	★	C Base Plate (1)	1
5	★	Screw	1
6	★	C Gear (4)	1
7	★	C Gear Shaft Washer	1
8	★	E Ring	1
9	★	Screw	1
10	★	C Gear Shaft SP	1
11	★	C Gear Shaft Ass'y	1
12	★	C Base Plate (2)	1
13	132-854	C Gear (2)	1
14	★	Screw	3
15	★	Cord Fixer	1
16	★	W Base Plate (1) Ass'y	1
17	★	W Spring	1
18	★	W Shaft	1
19	132-610	A Gear	1
20	132-647	W Roller	3
21	131-625	Roller Holder SP	3
22	132-611	W Clutch Plate	1
23	★	Turn Control Plate	1
24	★	E Ring	1
25	★	Screw	1
26	★	B Gear	1
27	★	Kick SP Shaft	1
28	★	W Kick SP	1
29	★	W Base Plate (2)	1
30	★	B Gear Shaft Holder	1
31	★	W C Gear	1
32	★	Screw	1
33	★	Insulation Tube	1
34	132-482	R Insulation Plate	1
35	132-F03	R Switch Contact Ass'y	1
36	819-138	R Contactor	1
37	132-F02	R Base Ass'y	1
38	★	Screw	1
39	★	B Contact (4) Ass'y	1
40	★	Switch Setting Plate	1
41	★	Screw	3
42	★	B Contact (1)	1
43	★	B Contact Stopper	1
44	★	B Contact SP	1
45	★	B Contact (2)	1


33,38-40,42-45	132-F05	Switch Setting Plate Ass'y
6-8,10-12,	132-F06	C Base Plate Ass'y
1-45,	061-640	W Shaft Ass'y
	PARTS NO	DESCRIPTION

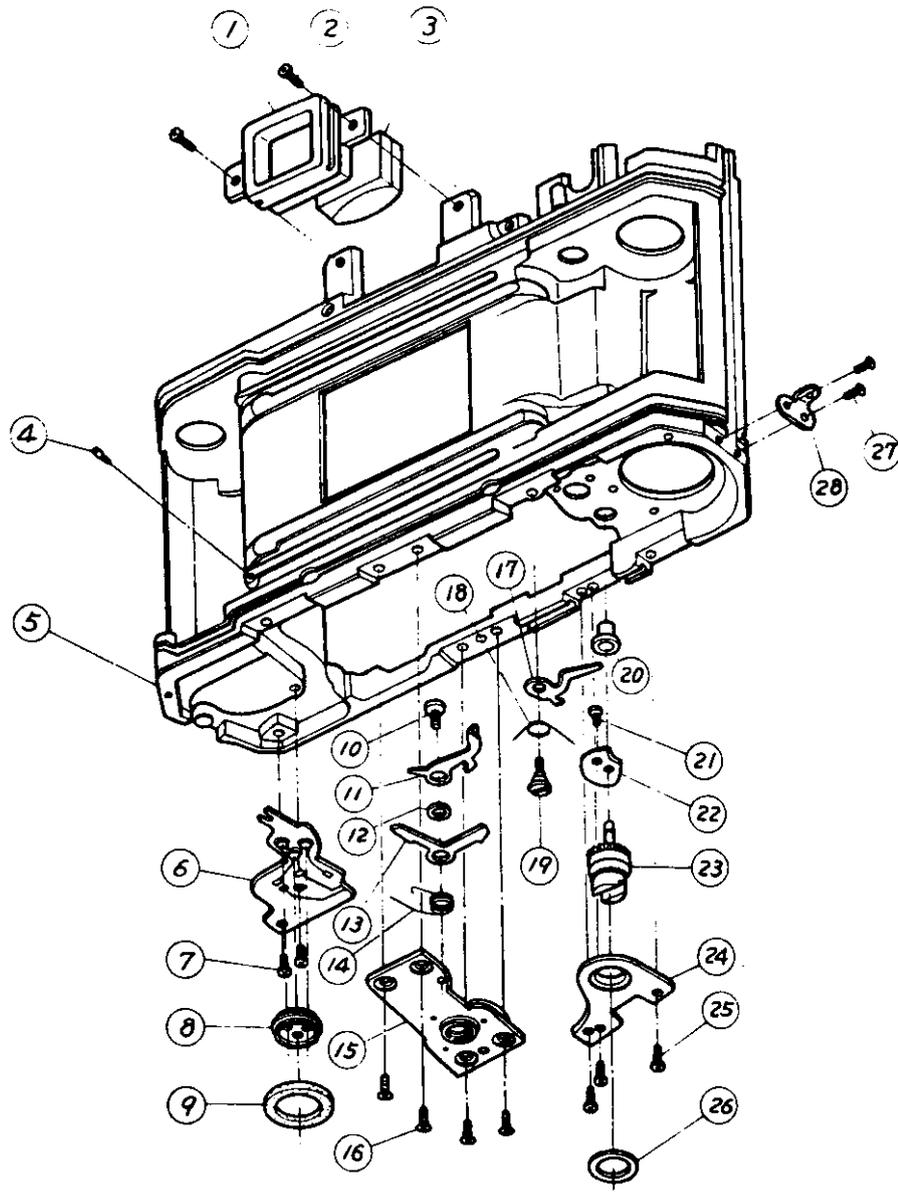

	PARTS NO	DESCRIPTION	QTY
1	★	EP Frame	1
2	61813024	Screw	2
3	★	EP Lens	1
4	131-113	Film Guide Pin	1
5	★	Body	1
6	143-B01	MDC Base Plate Ass'y	1
7	63902024	Screw	2
8	142-451	Terminal Insulator	1
9	132-654	Terminal Packing	1
10	66001023	Screw	1
11	131-366	X Contact Lever	1
12	60122610	Washer	1
13	131-348	First Curtain Stop Lever	1
14	131-351	First Curtain Stop Lever SP	1
15	★	Tripod Socket Base Ass'y	1
16	61824024	Screw	4
17	131-649	Reverse Lever	1
18	131-651	Reverse Lever SP	1
19	131-650	Reverse Lever Shaft	1
20	131-689	MD Gear Shaft Holder	1
21	63814024	Screw	1
22	131-680	M Charge Cam	1
23	053-140	MD Connecting Gear Ass'y(A131-G10)	1
24	131-691	MD Gear Shaft Holder	1
25	61913524	Screw	3
26	131-684	MD Light-proof Plate	1
27	61812524	Screw	2
28	132-104	Hinge Shaft Holder(Lower)	1


1,3.	056-817	Eye-piece Lens Ass'y(132-G07)
10-15	056-130	Tripod Socket Base Ass'y (132-J01)
21-23.	131-C06	M Charge Cam Ass'y
	PARTS NO	DESCRIPTION

NOTE : (Parts with marked "★" are not Available)

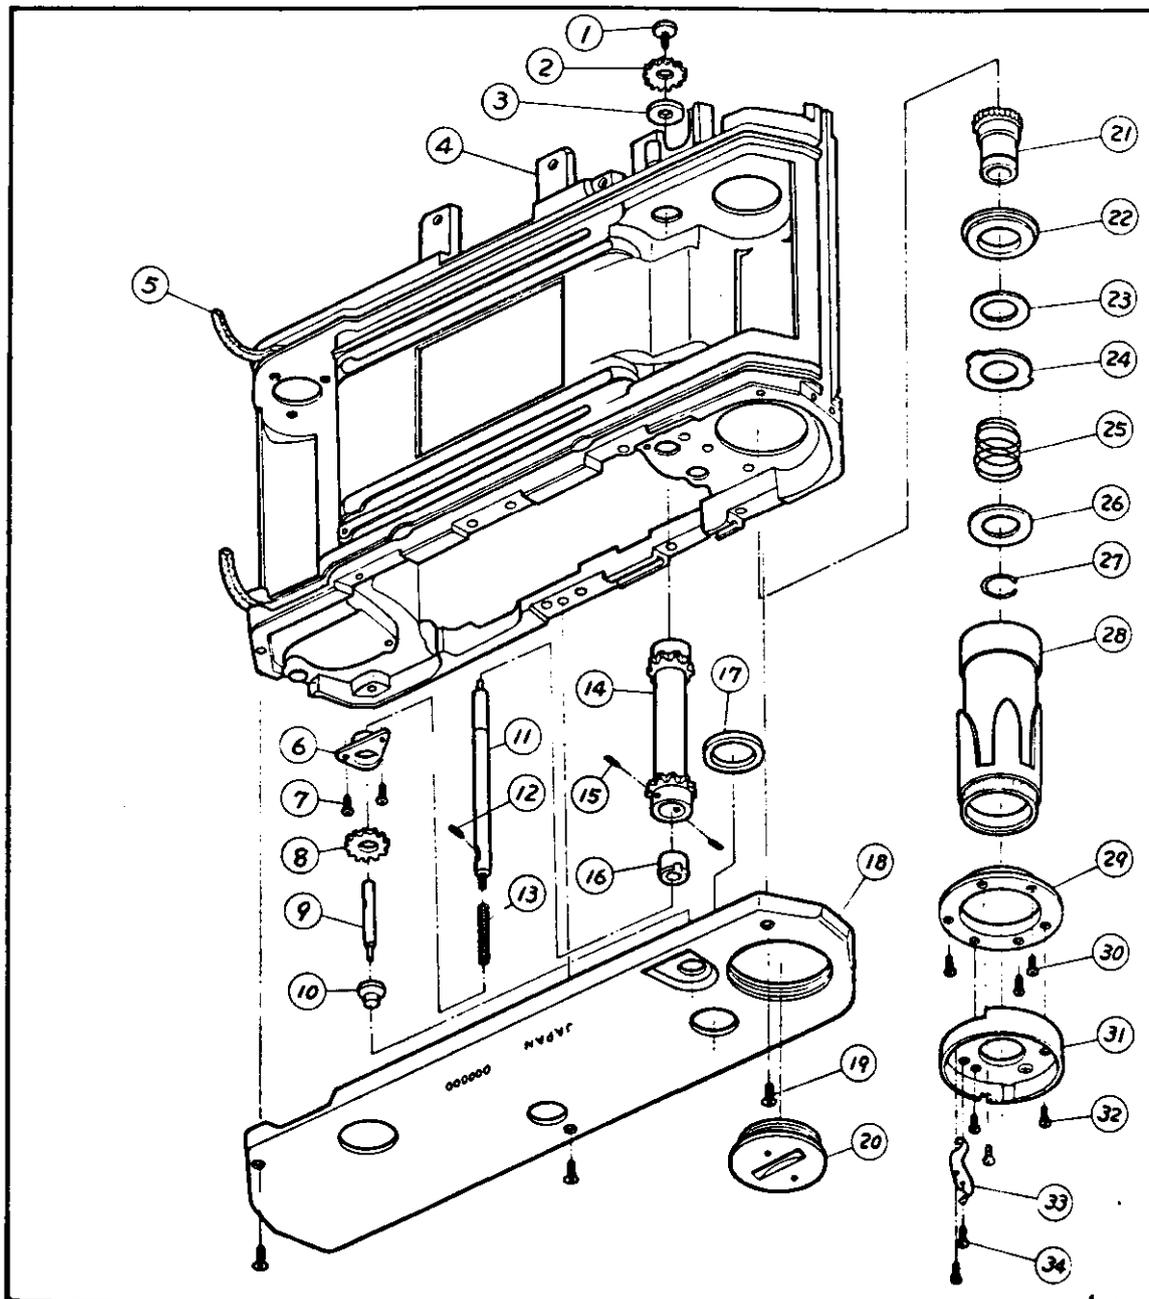

	PARTS NO	DESCRIPTION	QTY
1	66001001	Screw	1
2	131-629	D Gear	1
3	131-634	Sprocket Shaft Holder (3)	1
4	★	Body	1
5	132-139	Body Moquette	2
6	A131-C12	Sprocket Shaft Holder Ass'y	1
7	61912224	Screw	2
8	131-630	E Gear	1
9	131-635	Reverse Shaft	1
10	131-638	Sprocket Button	1
11	131-627	Sprocket Shaft	1
12	131-636	Reverse Pin	1
13	131-637	Reverse Shaft SP	1
14	132-646	Sprocket	1
15	62511824	Screw	2
16	132-643	Clutch Shaft	1
17	131-194	MD Moquette	1
18	143-N01	Bottom Cover Ass'y	1
19	61812521	Screw	3
20	056-112	B Cap Ass'y	1
21	132-602	F Gear	1
22	132-601	Spool Shaft Holder	1
23	132-656	Friction Washer	1
24	132-642	Friction Plate(Upper)	1
25	132-650	Friction SP	1
26	132-648	Friction Plate(Lower)	1
27	132-649	Spring Cover Stopper	1
28	056-651	Spool Sub Ass'y	1
29	131-642	Spool Holder	1
30	61812524	Screw	3
31	131-150	B Case	1
32	61914526	Screw	3
33	131-154	B Contact (3)	1
34	61912022	Screw	2

21-27	056-607	F Gear Ass'y
14-16	132-D03	Sprocket Ass'y
6,8-13	131-C05	Sprocket Shaft Ass'y
	PARTS NO	DESCRIPTION

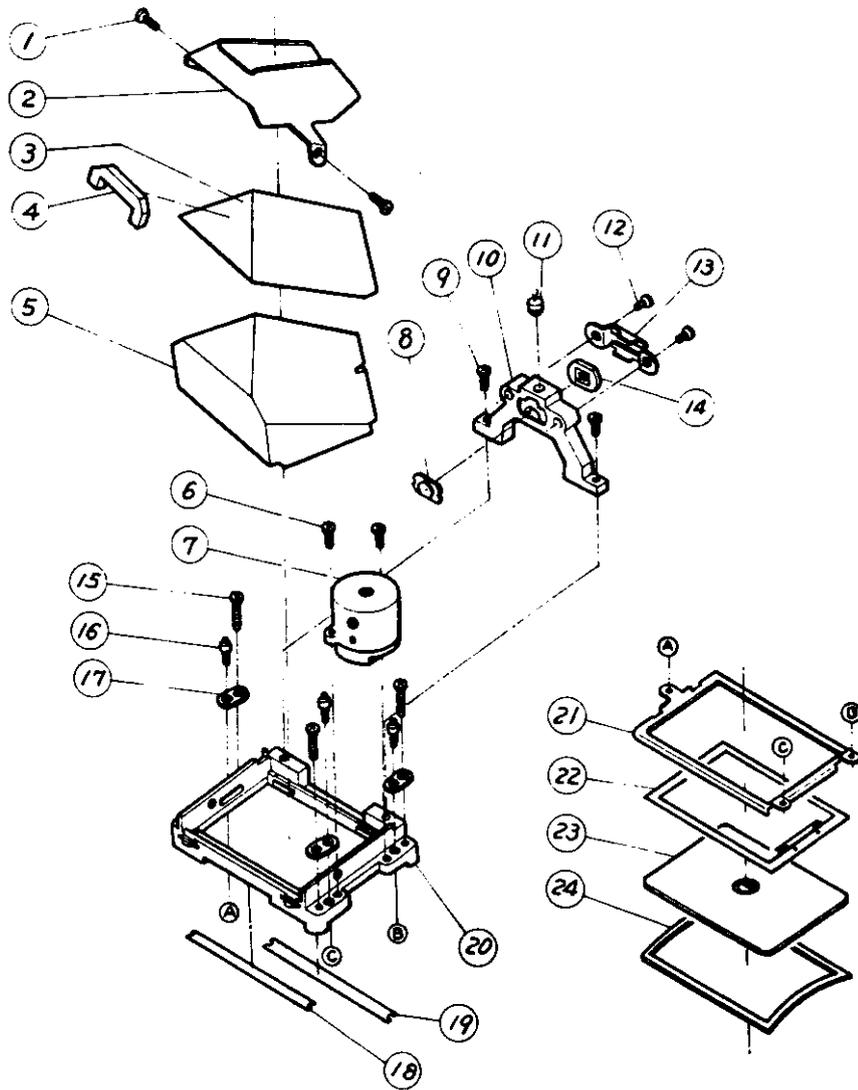


	PARTS NO	DESCRIPTION	QTY
1	63911824	Screw	2
2	142-812	PP Holder	1
3	132-881	PP Cap	1
4	142-813	PP Holder Cushion	1
5	142-843	Penta Prism	1
6	61913024	Screw	2
7	142-502	Meter	1
8	★	Light-gathering Lens	1
9	63914024	Screw	2
10	★	SPD Holder	1
11	★	LED	1
12	★	Screw	2
13	★	SPD Fixer	1
14	★	SPD	1
15	61917024	Screw	3
16	132-839	Focusing Screw	3
17	132-84C	Focusing Screw Plate	3
18	132-879	Penta Plate(Upper)	1
19	132-88C	Penta Plate(Lower)	1
20	★	PP Holder Sub Ass'y	1
21	132-838	Focus Regulating Frame	1
22	062-856	Finder Mask Frame Ass'y	1
23	142-816	Focusing Glass	1
24	132-834	Focusing Glass SP	1

16-21	062-815	PP Holder Ass'y
3,10-14	061-842	SPD Holder Ass'y
	PARTS NO	DESCRIPTION

NOTE : (Parts with marked "★" are not Available)



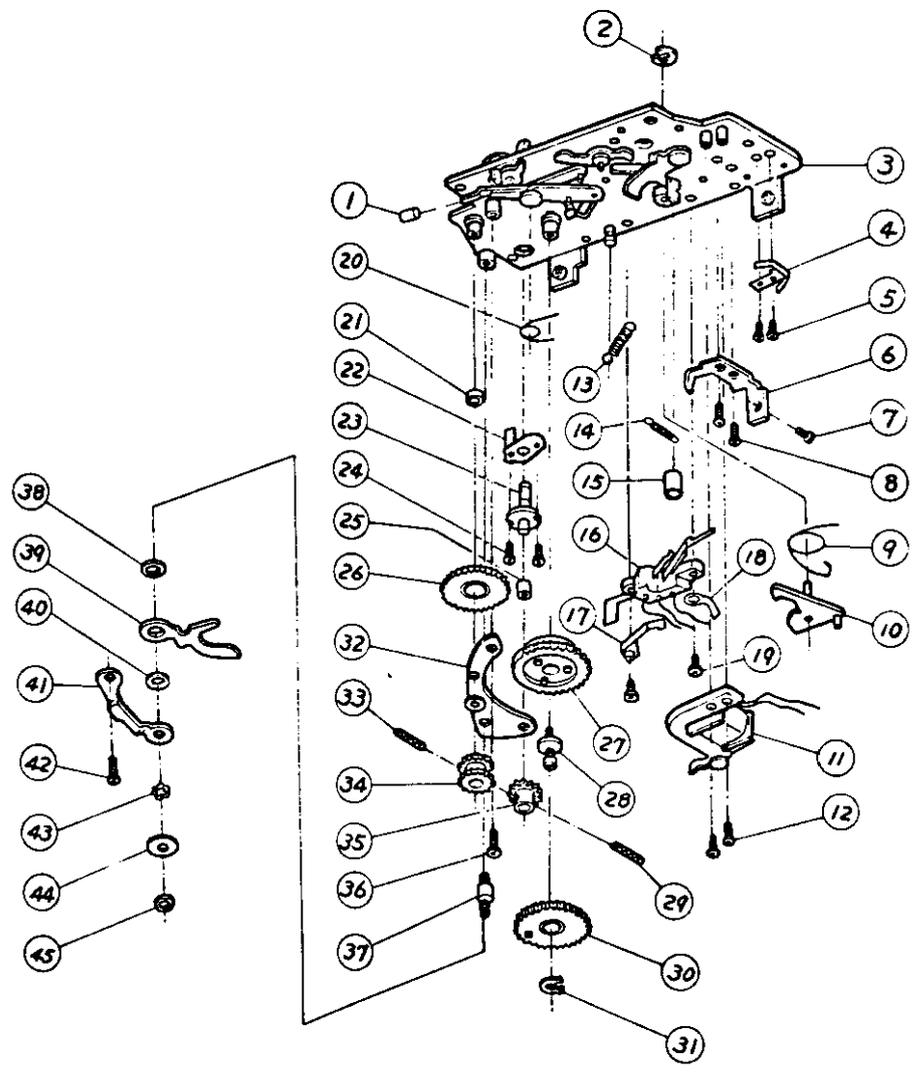


	PARTS NO	DESCRIPTION	QTY
1	131-588	Insulation Tube (3)	1
2	66101525	E Ring(E-15)	1
3	★	S Base Plate Sub Ass'y (Lower)	1
4	131-347	Ratchet Wheel SP	1
5	61901424	Screw	2
6	131-352	Adjusting Screw Holder	1
7	61902022	Screw	1
8	61911824	Screw	2
9	131-294	R Lever(1) SP	1
10	053-241	R Lever(1) Ass'y(131-241)	1
11	142-516	R Magnet Ass'y	1
12	61914024	Screw	2
13	131-305	Stop Lever SP (2)	1
14	131-289	R Lever(2) SP	1
15	66913040	Yawl Tube	1
16	061-435	Electric Source Switch	1
17	131-356	R Lever(1) SP	1
18	131-789	Electric Source Switch Vibe Fixer	1
19	63304524	Screw	2
20	131-297	Stop Lever SP (1)	1
21	131-202	S Metal	1
22	131-309	Lace Guide Plate(Lower)	1
23	131-310	Second Curtain Shaft Metal Holder (Lower)	1
24	63912024	Screw	2
25	131-202	S Metal	1
26	131-324	Idle Gear	1
27	053-316	Sector Gear Ass'y(131-316)	1
28	131-332	First Curtain Rotary Gear Shaft	1
29	66661030	Spring Pin Ø X 5	1
30	053-349	Double W Prevention Gear Ass'y (A13-349)	1
31	66172024	Snag Ring(JS-20)	1
32	131-334	S Metal Fixer	1
33	66661030	Spring Pin Ø X 5	1
34	131-336	Friction W Gear	1
35	131-337	Second Curtain W Gear	1
36	63912024	Screw	1
37	131-367	Brake Shaft	1
38	131-397	Second Curtain SP Drum Washer	1
39	131-390	Brake Lever	1
40	822-347	S Gear Washer (2)	1
41	131-393	Brake Washer	1
42	63913524	Screw	1
43	131-711	TR Switch Insulation Washer	1
44	60442112	Washer	1
45	131-494	Six Angle Nut	1

1-3,6-10,13-15,	053-244	S Base Plate Ass'y (Lower)
20-27,32-35		(131-241-04)
	PARTS NO	DESCRIPTION

NOTE : (Parts with marked "★" are not Available)




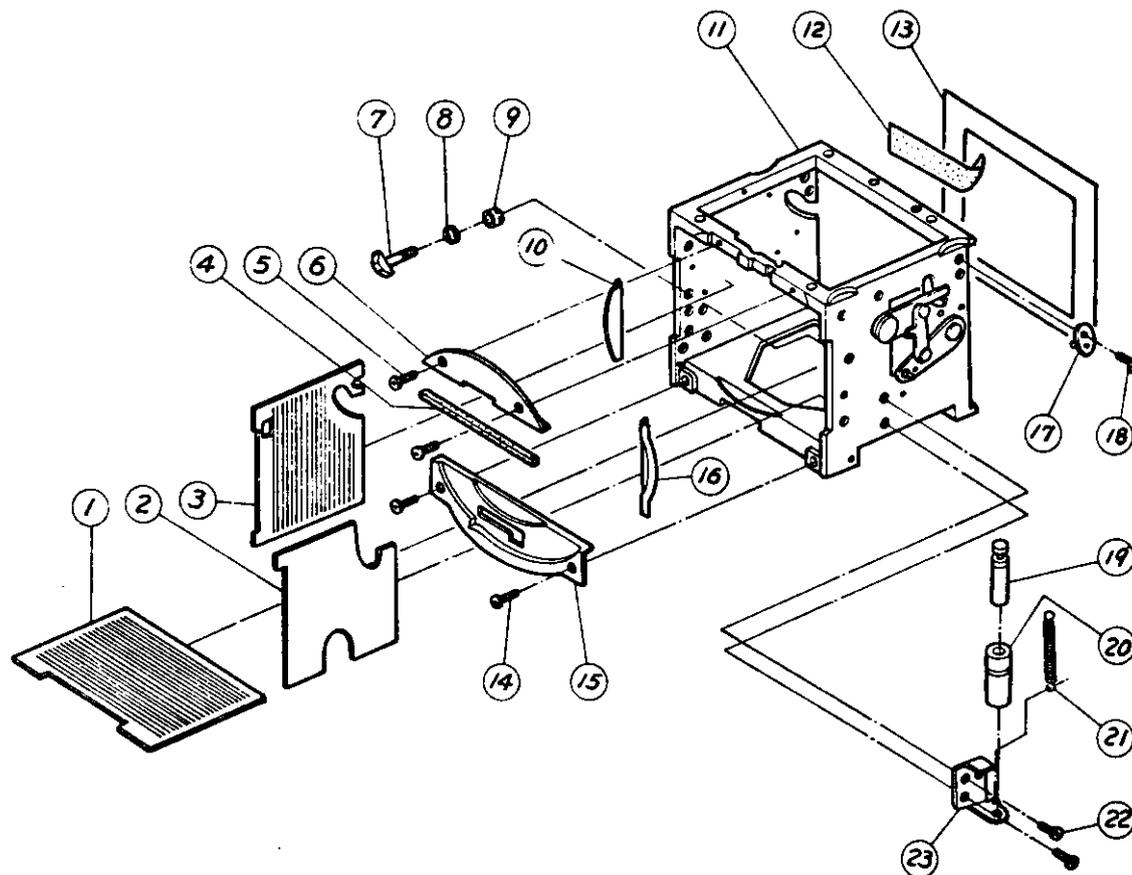

	PARTS NO	DESCRIPTION	QTY
1	131-702	MB Button Plate	1
2	131-703	MB Light-proof Plate(Right)	1
3	131-704	MB Light-proof Plate(Left)	1
4	132-864	M Moquette	1
5	61901424	Screw	2
6	143-834	MB Dress Plate(Upper)	1
7	★	Mirror Adjusting Pin	1
8	★	Mirror Adjusting SP	1
9	★	Mirror Adjusting Nut	1
10	131-708	MB Dress Plate(Left)	1
11	★	MB Sub Ass'y	1
12	131-774	M Light-proof Cloth	1
13	131-775	M Plane Frame	1
14	61902224	Screw	2
15	131-706	MB Dress Plate(Lower)	1
16	131-707	MB Dress Plate(Right)	1
17	131-912	M Turning Shaft Holder Ass'y	1
18	61912024	Screw	1
19	★	M Piston	1
20	★	M Cylinder	1
21	★	Dumper Lever SP	1
22	6191324	Screw	2
23	★	M Dumper Frame	1

20,23.	056-726	Mirror Cylinder Ass'y
1-3,7-24	056-750	Mirror Box Ass'y(132-002)
4,6.	062-745	MB Dress Plate Ass'y
	PARTS NO	DESCRIPTION

NOTE : (Parts with marked "★" are not Available)

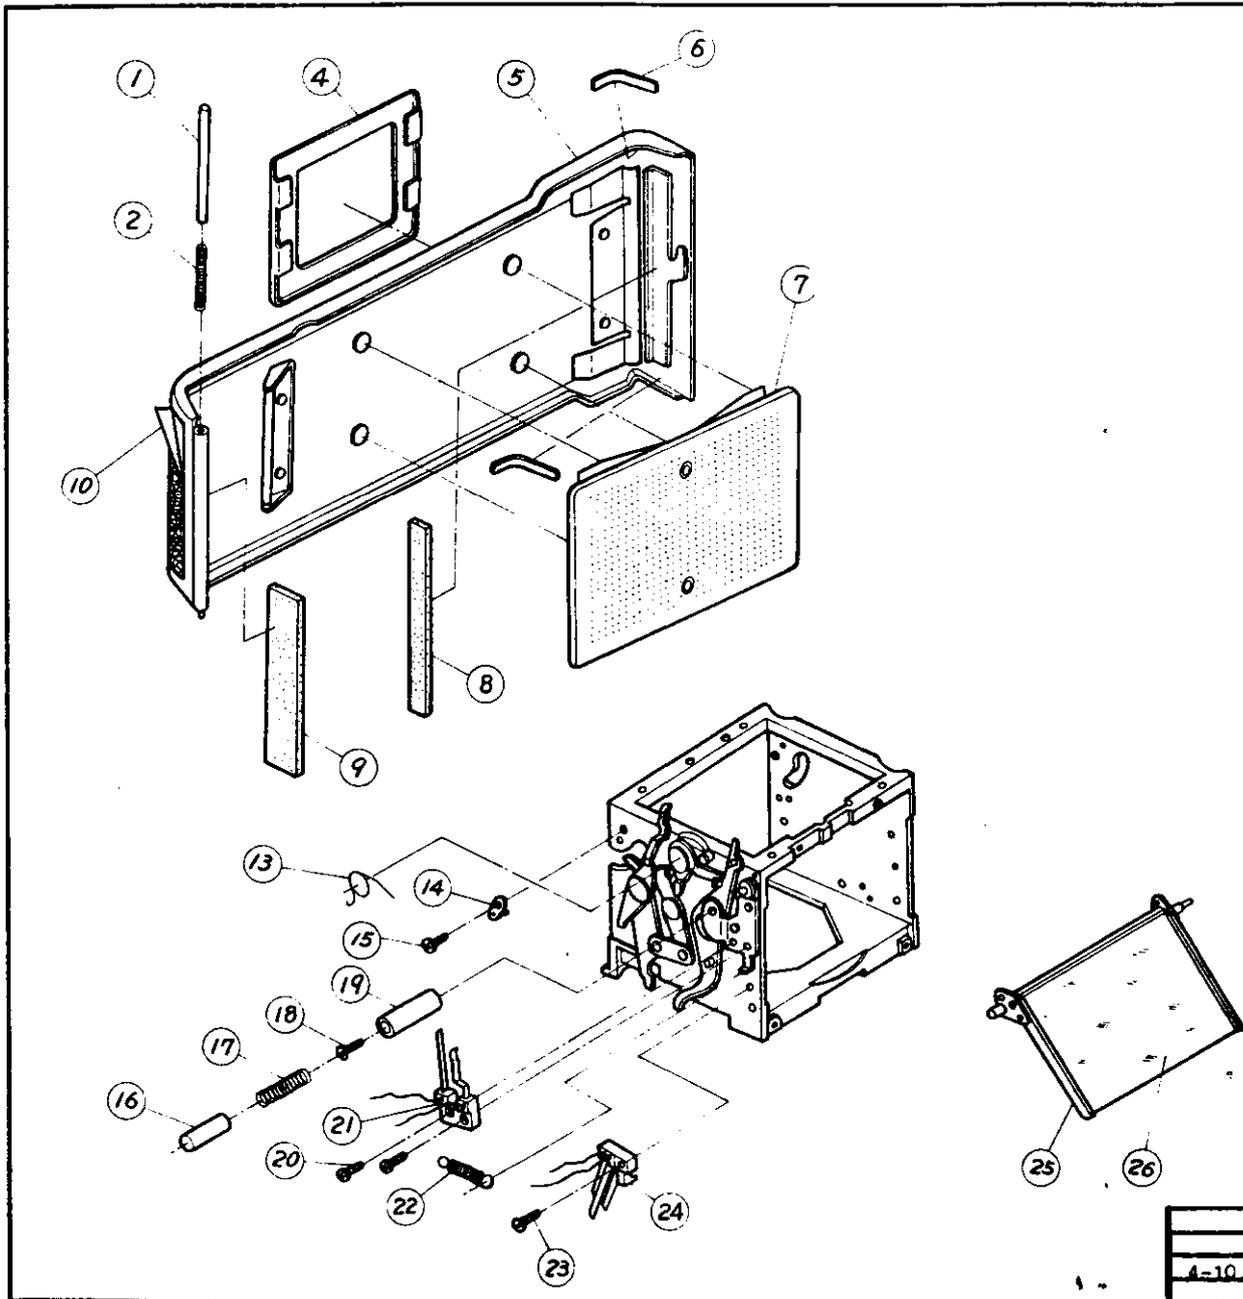

	PARTS NO	DESCRIPTION	QTY
1	143-124	Hinge Shaft(1)	1
2	131-133	Hinge Shaft SP	1
3	★		
4	142-126	Back Cover Pocket	1
5	★	Back Cover Sub Ass'y	1
6	132-117	Back Cover Light-proof Cloth	1
7	131-102	Pressure Plate Ass'y	1
8	132-108	Back Cover Lock Moquette	1
9	132-109	Hinge Moquette	1
10	142-125	Back Cover Leather	1
11	★		
12	★		
13	131-740	R Lever Hook SP	1
14	131-G12	M Turning Shaft Holder Ass'y	1
15	61912024	Screw	1
16	131-225	S Piston	1
17	131-228	S Dumper SP	1
18	61812524	Screw	1
19	053-260	S Cylinder Ass'y(131-A22)	1
20	63914022	Screw	2
21	061-430	TR Switch Ass'y	1
22	131-723	TR Lever SP	1
23	63914521	Screw	1
24	061-431	Timing Switch Ass'y	1
25	053-740	M Frame Ass'y(131-G04)	1
26	131-864	Mirror	1

4-10	062-103	Back Cover Ass'y
	PARTS NO	DESCRIPTION