



# YASHICA

## FX-1

### ASSEMBLING CHART

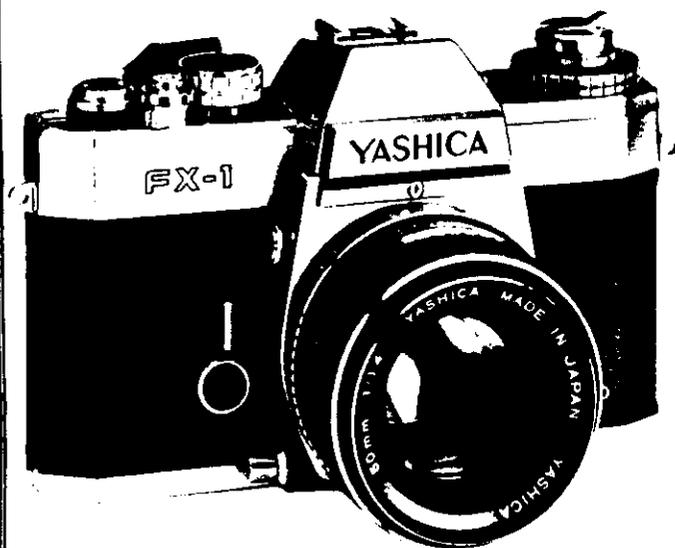

**YASHICA CO., LTD.**  
T O K Y O J A P A N

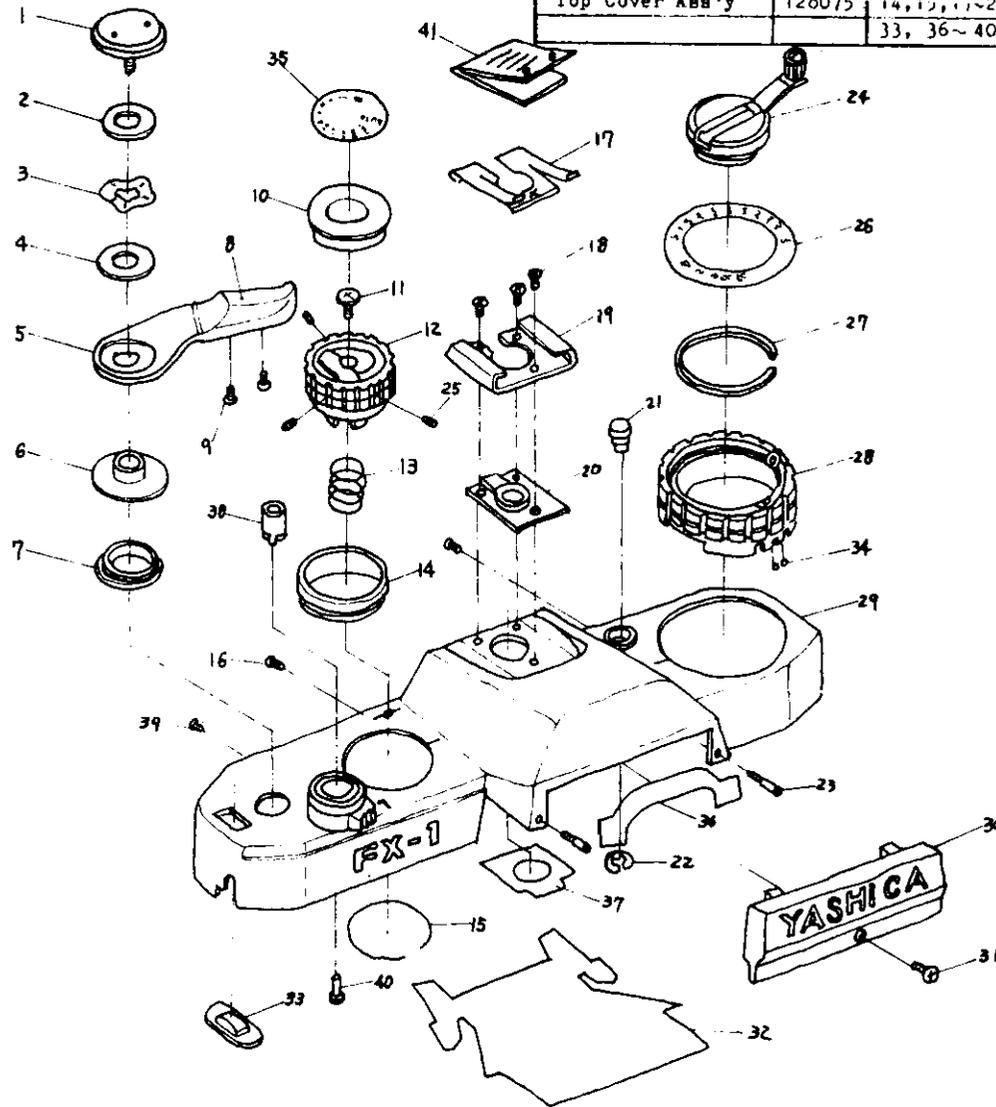


OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)	PARTS NO	DESCRIPTION	QUANTITY
Winding Lever Ass'y	128077	5, 8, 9	1 128658	Winding Lever S.S.	1
ASA Dial Ass'y	128082	28, 34,	2 101405	Winding Lever Friction Spring Washer	1
Shutter Dial Ass'y	128098	10, 12, 25,	3 101407	Winding Lever Friction Spring Washer	1
Top Cover Ass'y	128075	14, 15, 17, 22, 29, 32, 33, 36~40,	4 60327124	Accessories	1
			5 ★	Winding Lever Sub Ass'y	1
			6 128659	Winding Lever Base	1
			7 128654	Winding Lever Spacer	1
			8 ★	Winding Lever Knob	1
			9 ★	Winding Lever Knob S.S.	2
			10 12811410	Shutter Dial Name Plate Base	1
			11 128128	Shutter Dial S.S.	1
			12 ★	Shutter Dial Sub Ass'y	1
			13 128339	Shutter Dial Spring	1
			14 128341	Shutter Dial Holder	1
			15 128343	Shutter Dial Holder Spring	1
			16 170004	Top Cover S.S.	2
			17 128110	Shoe Dress Plate	1
			18 61823022	Accessory Shoe S.S.	3
			19 128109	Accessory Shoe	1
			20 128113	Contact Ass'y	1
			21 128441	Check Button	1
			22 66102525	Snap Ring E-25	1
			23 128127	Front Plate S.S.	2
			24 128078	Rewind Knob Ass'y	1
			25 62501025	Shutter Dial Name Plate Base S.S.	3
			26 128439	ASA Name Plate	1
			27 128430	ASA Dial Ring	1
			28 ★	ASA Dial Sub Ass'y	1
			29 ★	Top Cover Sub Ass'y	1
			30 128156	Front Name Plate	1
			31 63713521	Front Name Plate S.S.	1
			32 128587	Insulation Cover (A)	1
			33 128853	Counter Window	1
			34 66701520	Steel Ball	2
			35 128340	Shutter Dial Name Plate	1
			36 128588	Insulation Cover (B)	1
			37 128586	Insulation Cover (C)	1
			38 128106	Release Button	1
			39 61902521	Release Button S.S.	1
			40 104222	Release Button Guide	1
			41 128115	Back Light-proof Plate	1

NOTE : (Parts with marked "★" are not available)







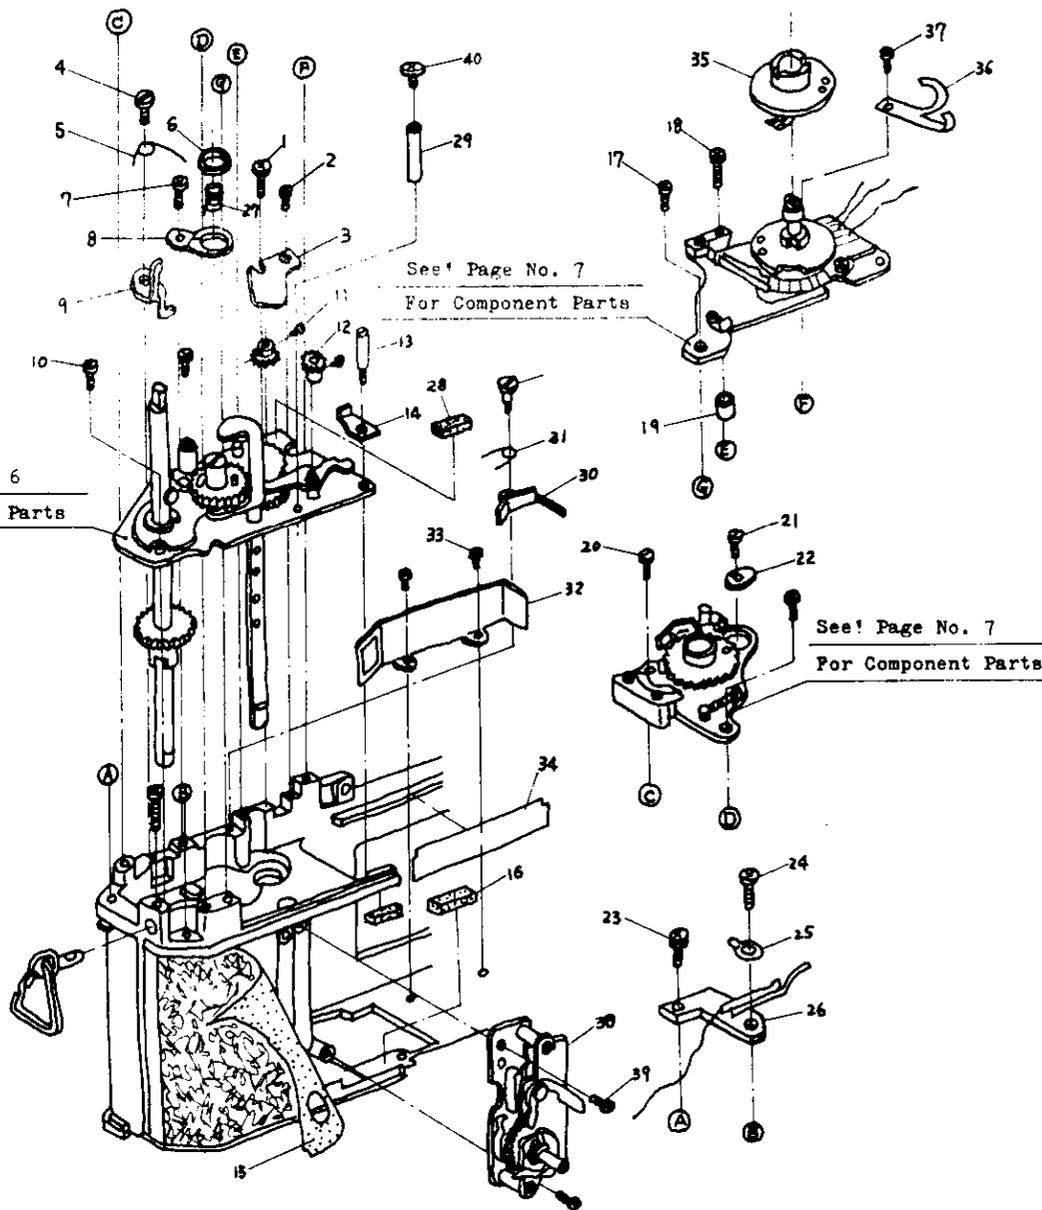

PARTS NO	DESCRIPTION	QUANTITY	
1	63924024 Turn Limit Plate S.S.	1	
2	63824024 Turn Limit Plate S.S.	1	
3	128226 Turn Limit Plate	1	
4	121865 Returning Lever Shaft	2	
5	121877 Returning Lever Spring	1	
6	170252 Anti-rewind Collar	1	
7	63913024 Anti-rewind Base Plate S.S.	1	
8	128652 Anti-rewind Base Plate	1	
9	104803 Returning Lever	1	
10	63924024 S-W Base Plate S.S.	1	
11	121233 Curtain Shaft Gear S.S.	1	
12	107191 Curtain Shaft Gear (Either Choice)	1	
13	128234 First Curtain Hook Lever Stopper	1	
14	170130 Upper Gear Fixing Hook Regulating Plate	1	
15	128190 Front Leather A	1	
16	110039 Body Front Light-proof Moquette	2	
17	63813522 Change Dial Base Plate S.S.	1	
18	63918524 Change Dial Base Plate S.S.	1	
19	128318 Auto-manual Change Base Plate Collar	1	
20	63913024 Counter Base Plate S.S.	2	
21	121866 Counter Cam S.S.	1	
22	170510 Counter Cam	1	
23	121433 Synchro Contact S.S.	1	
24	63914022 Synchro Contact S.S.	1	
25	170446 Lug Plate	1	
26	★ Synchro Contact Sub Ass'y	1	
27	128653 Winding Kick Spring	1	
28	170270 S-W Base Plate Light-proof moquette	1	
29	128229 S-W Base Plate Holder	1	
30	128664 Winding Regulating Lever	1	
31	128665 Winding Regulating Lever Spring	1	
32	121035 Light-proof Plate Ass'y	1	
33	61912024 Light-proof Plate S.S.	2	
34	128387 Shutter Light-proof Curtain	1	
35	128021 Slide Plate Ass'y	1	
36	128589 Lead Wire Holder	1	
37	63914022 Lead Wire Holder S.S.	1	
38	121038 Self-timer Ass'y	1	
39	61913024 Self-timer S.S.	2	
40	66001013 Lamp Holder S.S.	1	
OTHER ASSEMBLY PARTS		ORDER NO.	DESCRIPTION (FIG. NO.)
Synchro Contact Ass'y		128022	25, 26,

NOTE : (Parts with marked "★" are not available)
























ORIGINAL

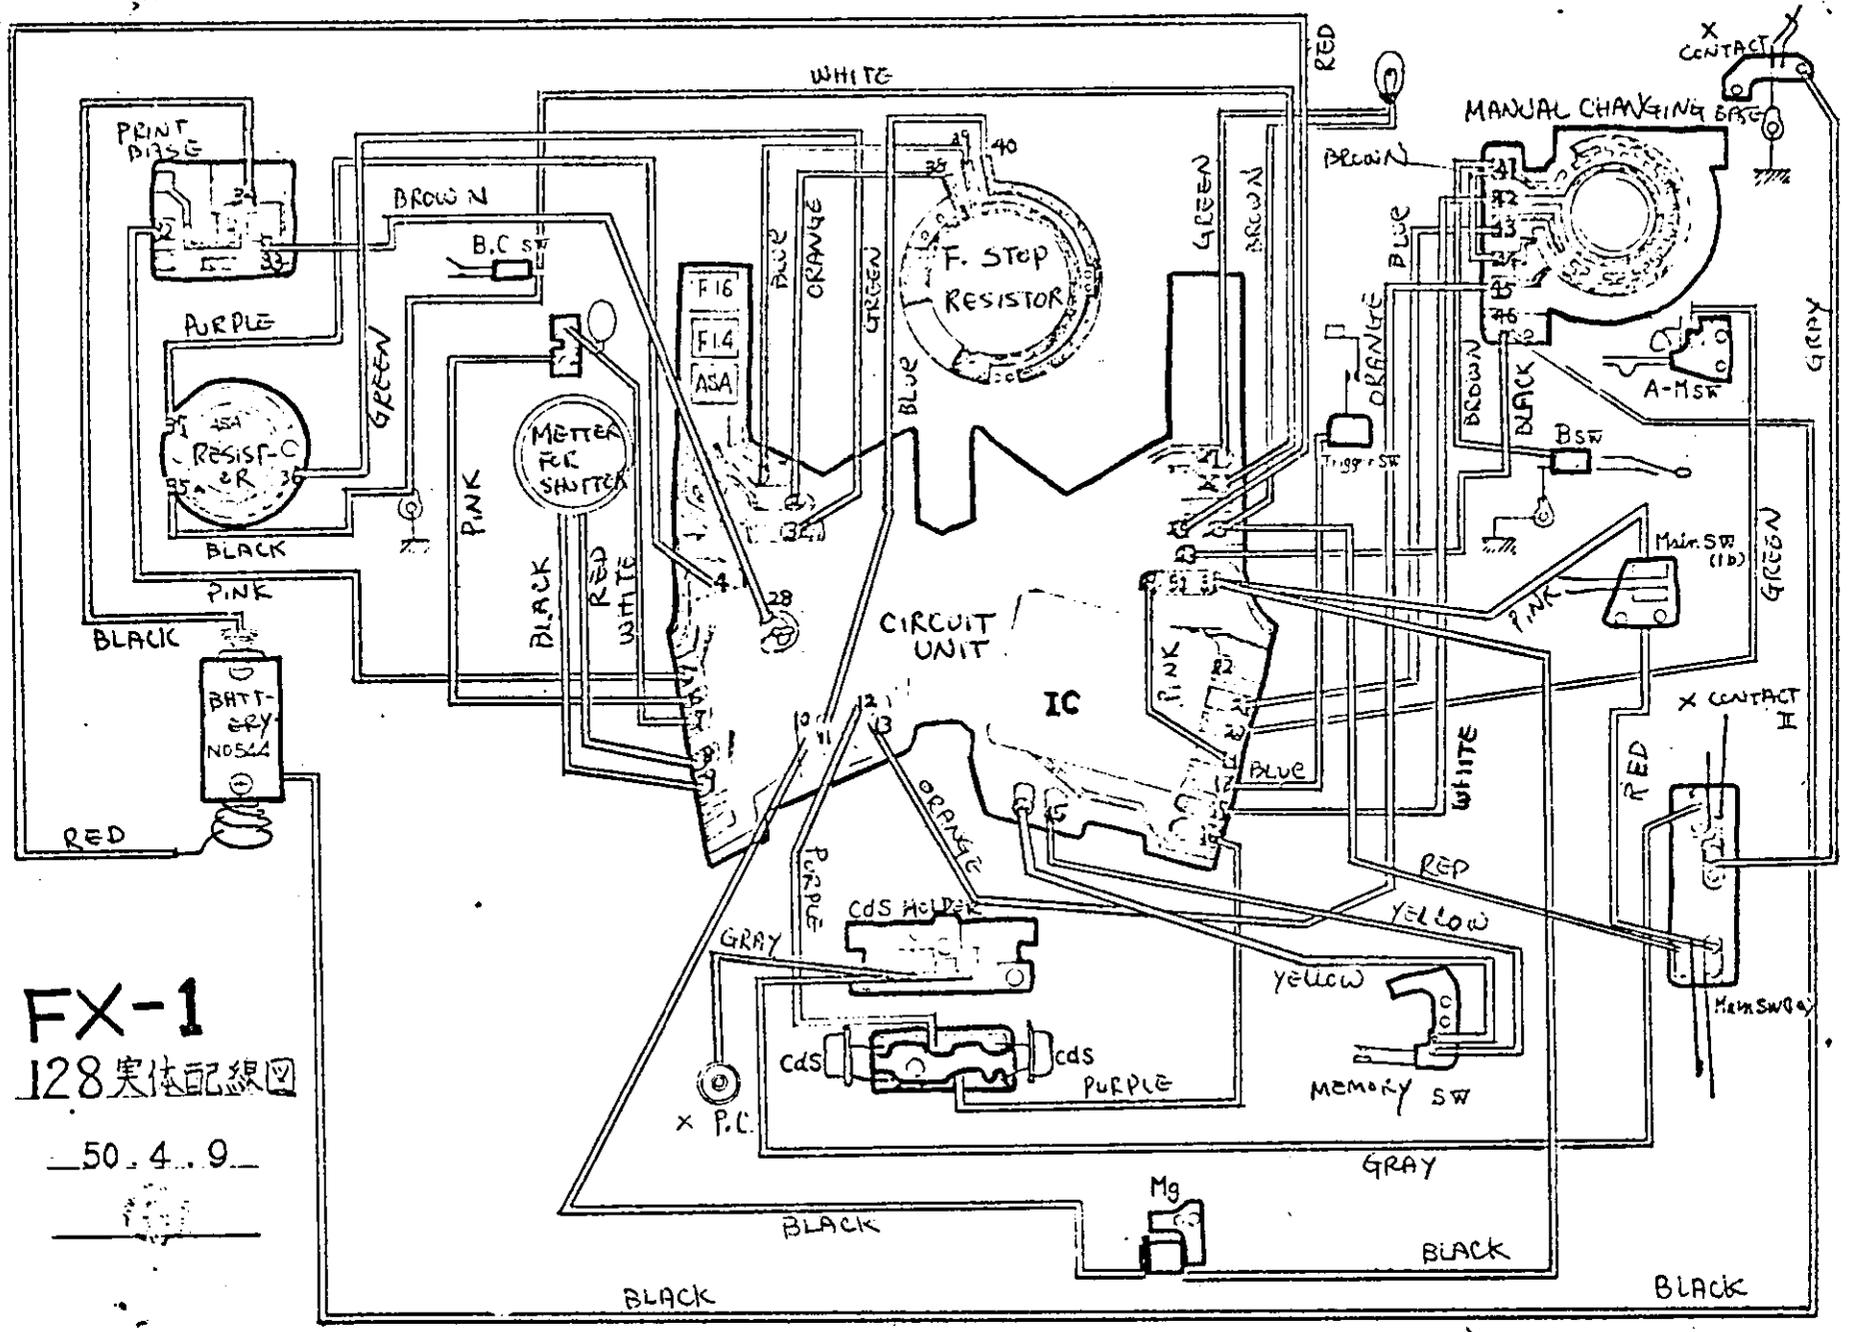

FX-1  
128実体配線図

50.4.9

1