


# YASHICA

## FX-2

### ASSEMBLING CHART




**YASHICA CO., LTD.**  
T O K Y O J A P A N

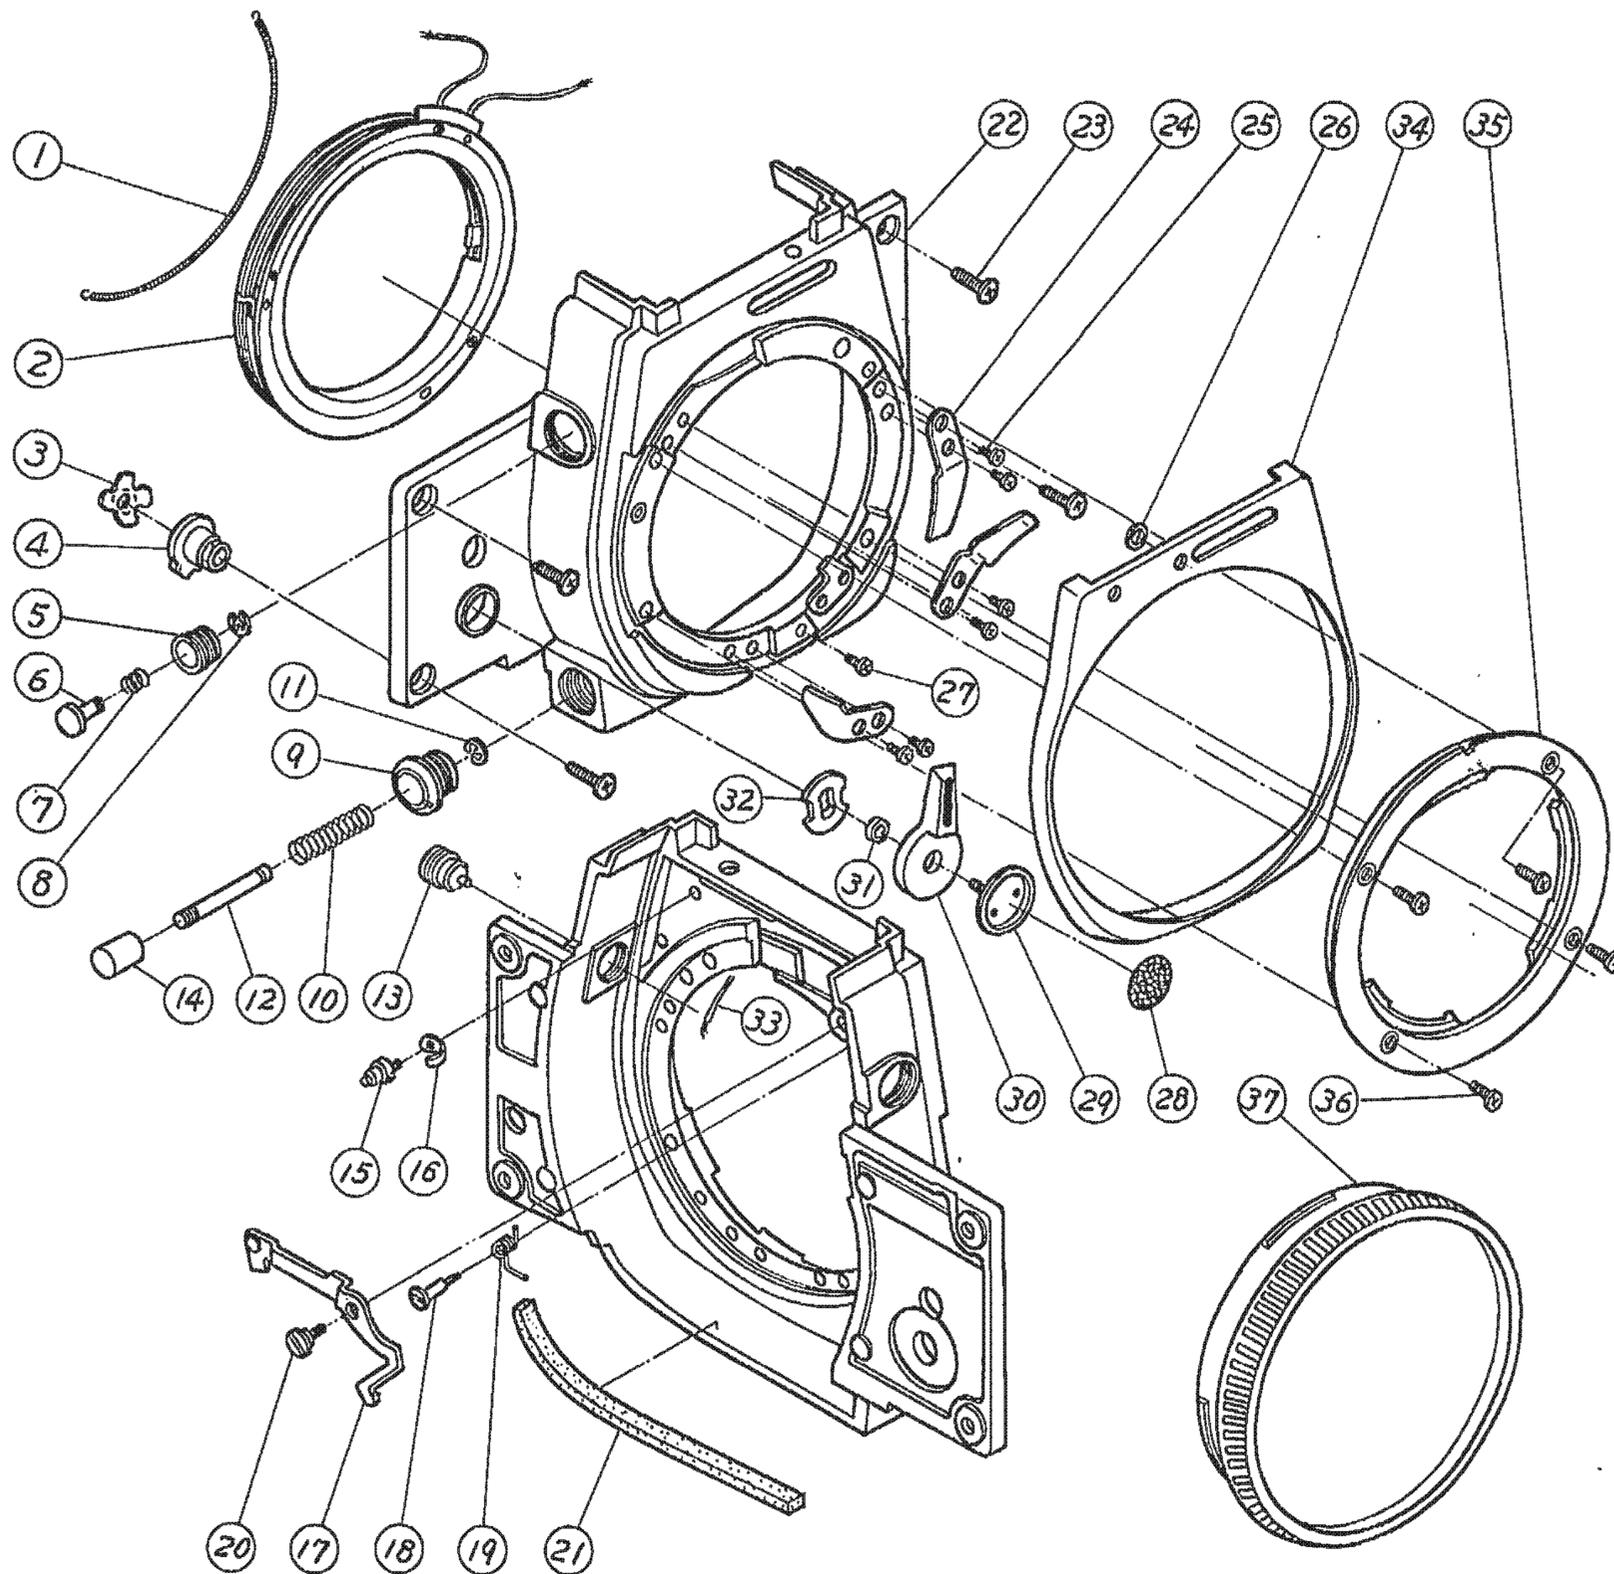

PARTS NO	DESCRIPTION	QTY
1	133161 Aperture Resistor Ring Spring	1
2	133021 Aperture Resistor Ass'y	1
3	170634 Plate Spring	1
4	121037 Self-timer Driving Plate Ass'y	1
5	128153 Lens Lock Button Holder	1
6	128154 Lens Lock Button	1
7	128155 Lens Lock Button Spring	1
8	66101225 Snap Ring (E-12)	1
9	128146 Diaphragm Button Holder	1
10	131809 Diaphragm Button Spring	1
11	66101524 Snap Ring (E-15)	1
12	128145 Diaphragm Button Shaft	1
13	650083 Synchro Terminal Ass'y	1
14	128147 Diaphragm Button	1
15	133162 Aperture Ring Spring Post (A)	1
16	110928 Lead Wire Holder	1
17	128088 Lock Lever Ass'y	1
18	128198 Lock Lever Spring Shaft	1
19	128160 Lock Lever Spring	1
20	128159 Lock Lever Shaft	1
21	170070 Light-proof Moquette	1
22	★ Mount Base Sub Ass'y	1
23	128128 Mount Base S.S.	4
24	128149 Mount Spring	3
25	61911824 Mount Spring S.S.	6
26	60132610 Adjusting Washer	
27	61912524 Setting Screw	3
28	128182 Self Lever Leather	1
29	128181 Self-timer Lever S.S.	1
30	128180 Self-timer Lever	1
31	121142 Self Lever Collar	1
32	121141 Self Lever Base	1
33	133525 Synchro Lead Wire (C)	1
34	128144 Mount Cover	1
35	128150 Lens Mount	1
36	61923521 Setting Screw	4
37	128118 Body Cap	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (KIT NO.)
Mount Base Ass'y	133068	1~36.

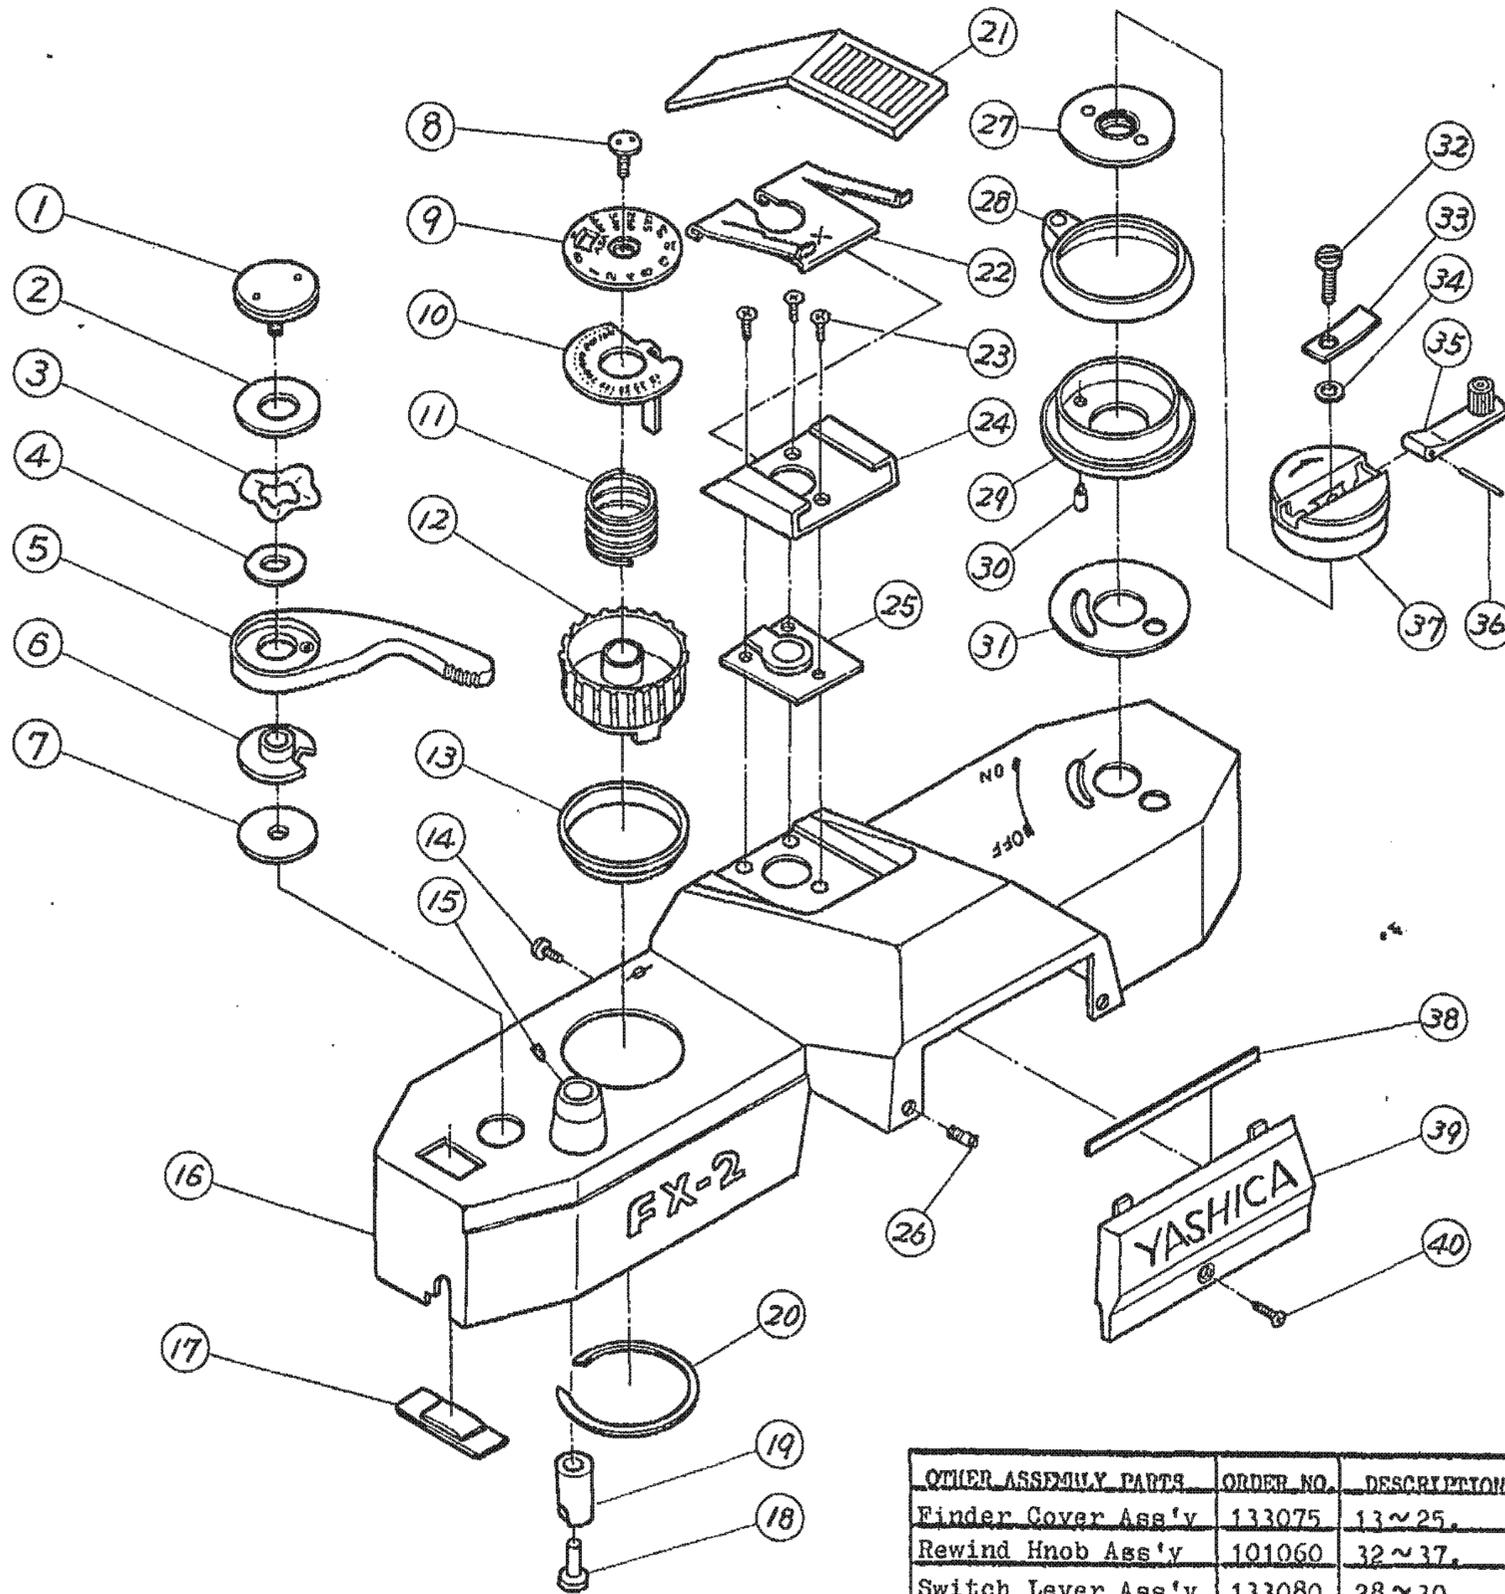


PARTS NO	DESCRIPTION	QTY
1	<del>128658</del> Winding Lever S.S.	1
2	<del>170230</del> Winding Lever Friction SP Washer	1
3	<del>121559</del> Winding Lever Friction Spring	1
4	60327124 Adjusting Washer	
5	<del>421077</del> Winding Lever Ass'y	1
6	<del>170225</del> Winding Lever Base	1
7	121640 Winding Lever Spacer (I)	1
	121641 Winding Lever Spacer (II)	
	121642 Winding Lever Spacer (III)	
8	133298 Name Plate S.S.	1
9	133297 Shutter Dial Plate	1
10	133295 ASA Name Plate	1
11	133294 ASA Changing Spring	1
12	133296 Shutter Dial	1
13	133193 Shutter Dial Holder	1
14	170004 Finder Cover S.S.	1
15	61902022 Setting Screw	1
16	★ Finder Cover Sub Ass'y	1
17	128853 Counter Window	1
18	104222 Release Button Guide	1
19	104207 Release Button	1
20	133194 Shutter Dial Holder Setting Shaft	1
21	128115 Back Light-proof Plate	1
22	128110 Shoe Dress Plate	1
23	61823022 Setting Screw	3
24	128109 Accessory Shoe	1
25	128113 Contact Ass'y	1
26	128127 Front Plate S.S.	1
27	133493 Switch Lever Ring Stopper	1
28	★ Switch Lever	1
29	★ Switch Lever Ring	1
30	★ Switch Click Pin	1
31	133494 Switch Lever Washer	1
32	121686 Rewind Shaft Plate SP S.S.	1
33	170705 Rewind Shaft Plate Spring	1
34	60113110 Adjusting Washer	
	60123110 Adjusting Washer	
35	★ Rewind Crank Arm Ass'y	1
36	170710 Rewind Crank Arm Shaft	1
37	170701 Rewind Knob	1
38	128806 Aperture Scale Plate Fixer	
39	128156 Front Name Plate	1
40	63713521 Setting Screw	1

101405  
101407

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION
Finder Cover Ass'y	133075	13~25.
Rewind Knob Ass'y	101060	32~37.
Switch Lever Ass'y	133080	28~30.

NOTE: (Parts with marked "★" are not available.)

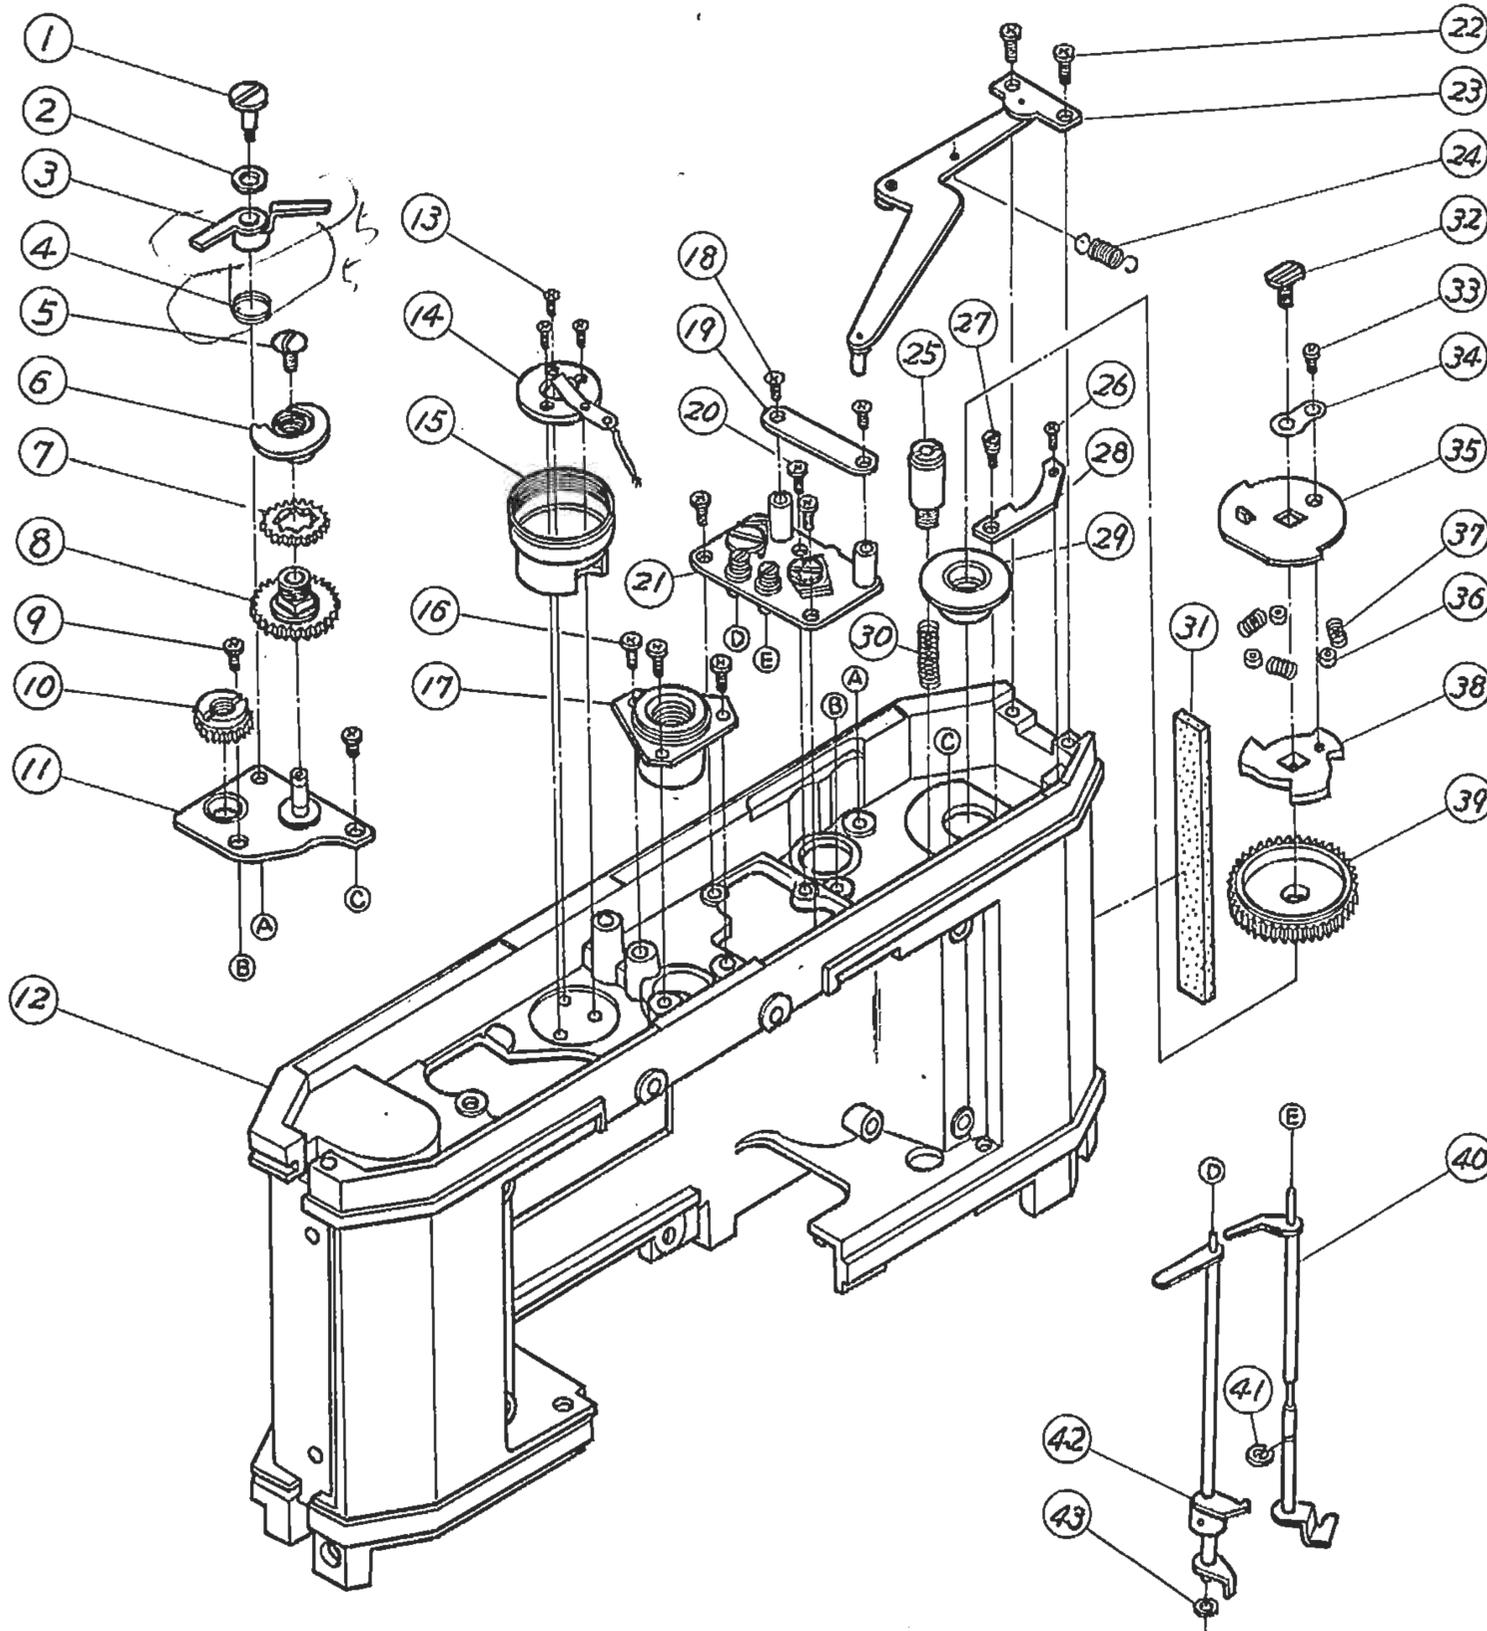


PARTS NO	DESCRIPTION	QTY
1	121629 Rewind Release Lever Shaft	1
2	60653110 Adjusting Washer	1
	60113110 Adjusting Washer	
3	121004 Rewind Release Lever Ass'y	1
4	121628 Rewind Release Lever Spring	1
5	121663 Intermediate Gear S.S.	1
6	128679 Mirror Cocking Cam	1
7	170220 Intermediate Gear (Upper)	1
8	170221 Intermediate Gear (Lower)	1
9	63922824 Setting Screw	2
10	170247 Sprocket Gear (Lower)	1
11	121003 Winding Base Plate Ass'y	1
12	★ Body	1
13	61813028 Setting Screw	3
14	126073 Battery Box Contact Ass'y	1
15	170081 Battery Box	1
16	61924024 Setting Screw	3
17	170006 Tripod Socket	1
18	61813024 Setting Screw	2
19	128672 Mirror Set Slide Plate (B)	1
20	63913024 Setting Screw	3
21	133033 Switch Shaft Holder Base Ass'y	1
22	61813024 Setting Screw	2
23	133034 Mirror Winding Lever Ass'y	1
24	133676 Mirror Winding Lever Spring	1
25	128210 Shift Shaft Metal	1
26	61813524 Setting Screw	1
27	133616 Winding Control Plate S.S.	1
28	104607 Winding Limit Plate	1
29	121187 Spool Lower Bearing	1
30	121438 Shift Shaft Spring	1
31	121146 Body Light-proof Moltopren (B)	1
32	121633 Winding Shaft Set S.S.	1
33	61912024 Setting Screw	1
34	170232 Winding Shaft S.S. Washer	1
35	128629 Winding Cam Plate	1
36	170214 Winding Roller	3
37	121618 Roller Holding Spring	3
38	170213 Winding Clutch Plate	1
39	170212 Winding Gear	1
40	121039 Governor Change Shaft Ass'y	1
41	121336 Snap Ring	1
42	121040 Connecting Rod Ass'y	1
43	60111510 Adjusting Washer	(1)
	60121510 Adjusting Washer	(1)

NOTE: (Parts with marked "★" are not available.)


#3 13308310 New Type

PARTS NO	DESCRIPTION	QTY
1	133072 Switch Click Plate Ass'y	1
2	61913024 Setting Screw	2
3	133083 Print Circuit Ass'y	1
4	121683 Rewind Shaft Spring	1
5	63912224 Setting Screw	3
6	★ Rewind Shaft Holder	1
7	★ Rewind Shaft	1
8	66701520 Steel Ball	1
9	133496 Switch Click Spring	1
10	61901424 Setting Screw	1
11	★ Back Cover Hinge Shaft	1
12	121431 Winding Stud	1
13	★ Back Cover Hinge	1
14	61813024 Setting Screw	3
15	133529 Print Circuit Setting Pole	2
16	63928024 Setting Screw	2
17	650051 Strap Holder	2
18	65006100 Strap Holder Ring	2
19	104605 Lock Plate	1
20	170010 Lock Plate Collar	2
21	133190 Front Leather (A)	1
22	110039 Body Front Light-proof Moltopran	6
23	110928 Cord Holder	1
24	61911524 Setting Screw	1
25	121122 Lock Plate Spring	1
26	★ Back Cover Ass'y	1
27	101184 Back Cover Light-proof Stuff (II)	2
28	128142 Back Cover Leather	1
29	61813524 Setting Screw	2
30	104606 Lock Plate Cover	1
31	170032 Back Cover Light-proof Stuff	1
32	101013 Film Pressure Plate Ass'y	1
13308310 Print Circuit Ass'y (New)		


OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
Back Cover Ass'y	133069	11.13~14.26~28.31.
Rewind Shaft Ass'y	133036	4.6~7.

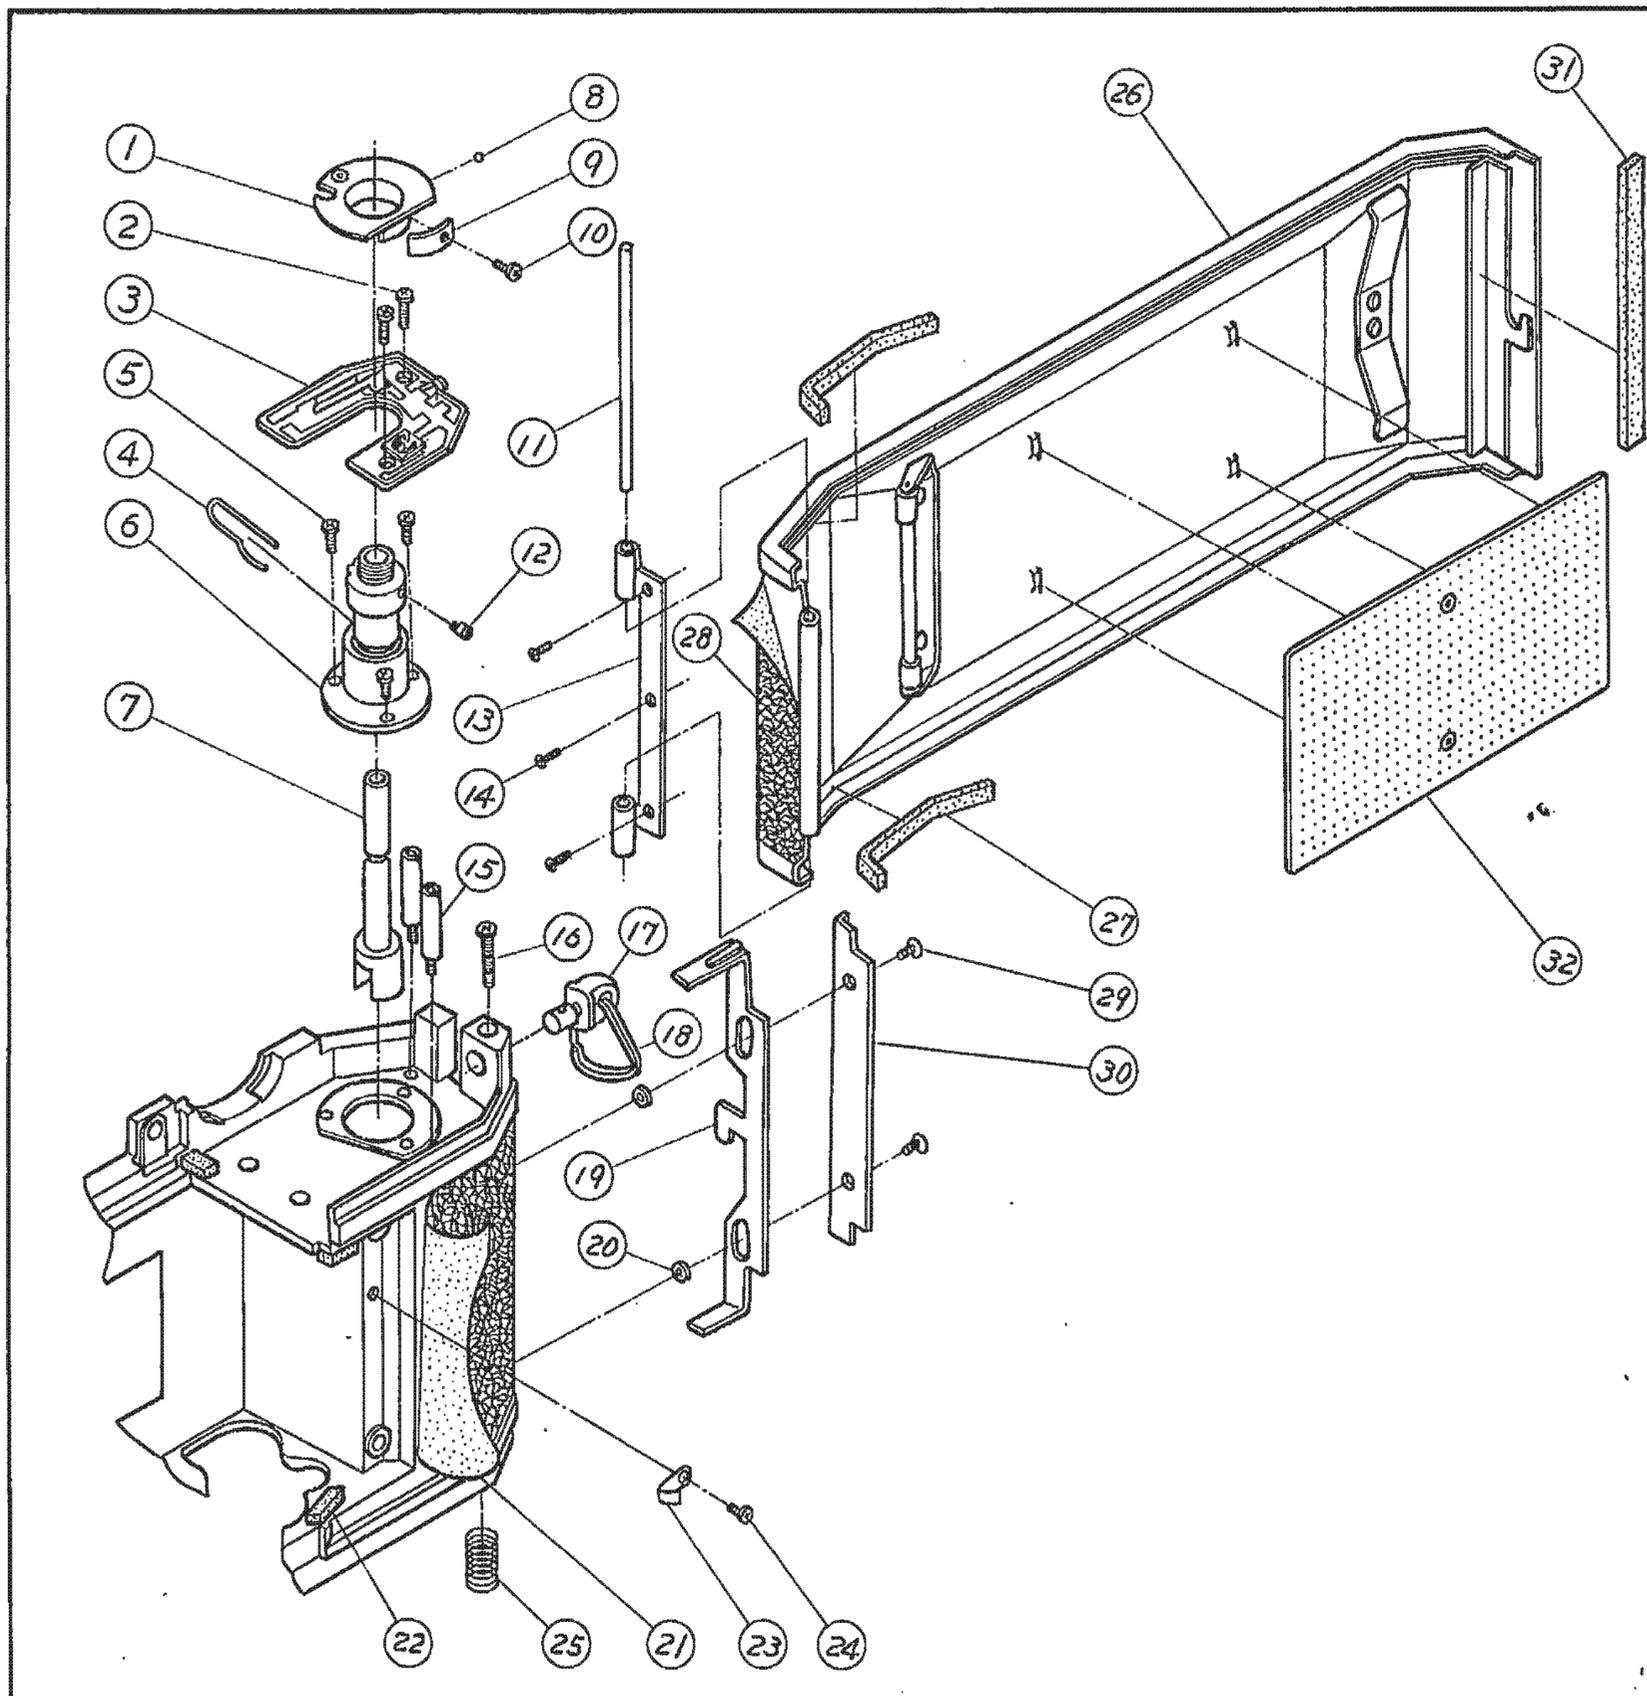

NOTE: (Parts with marked "★" are not available.)

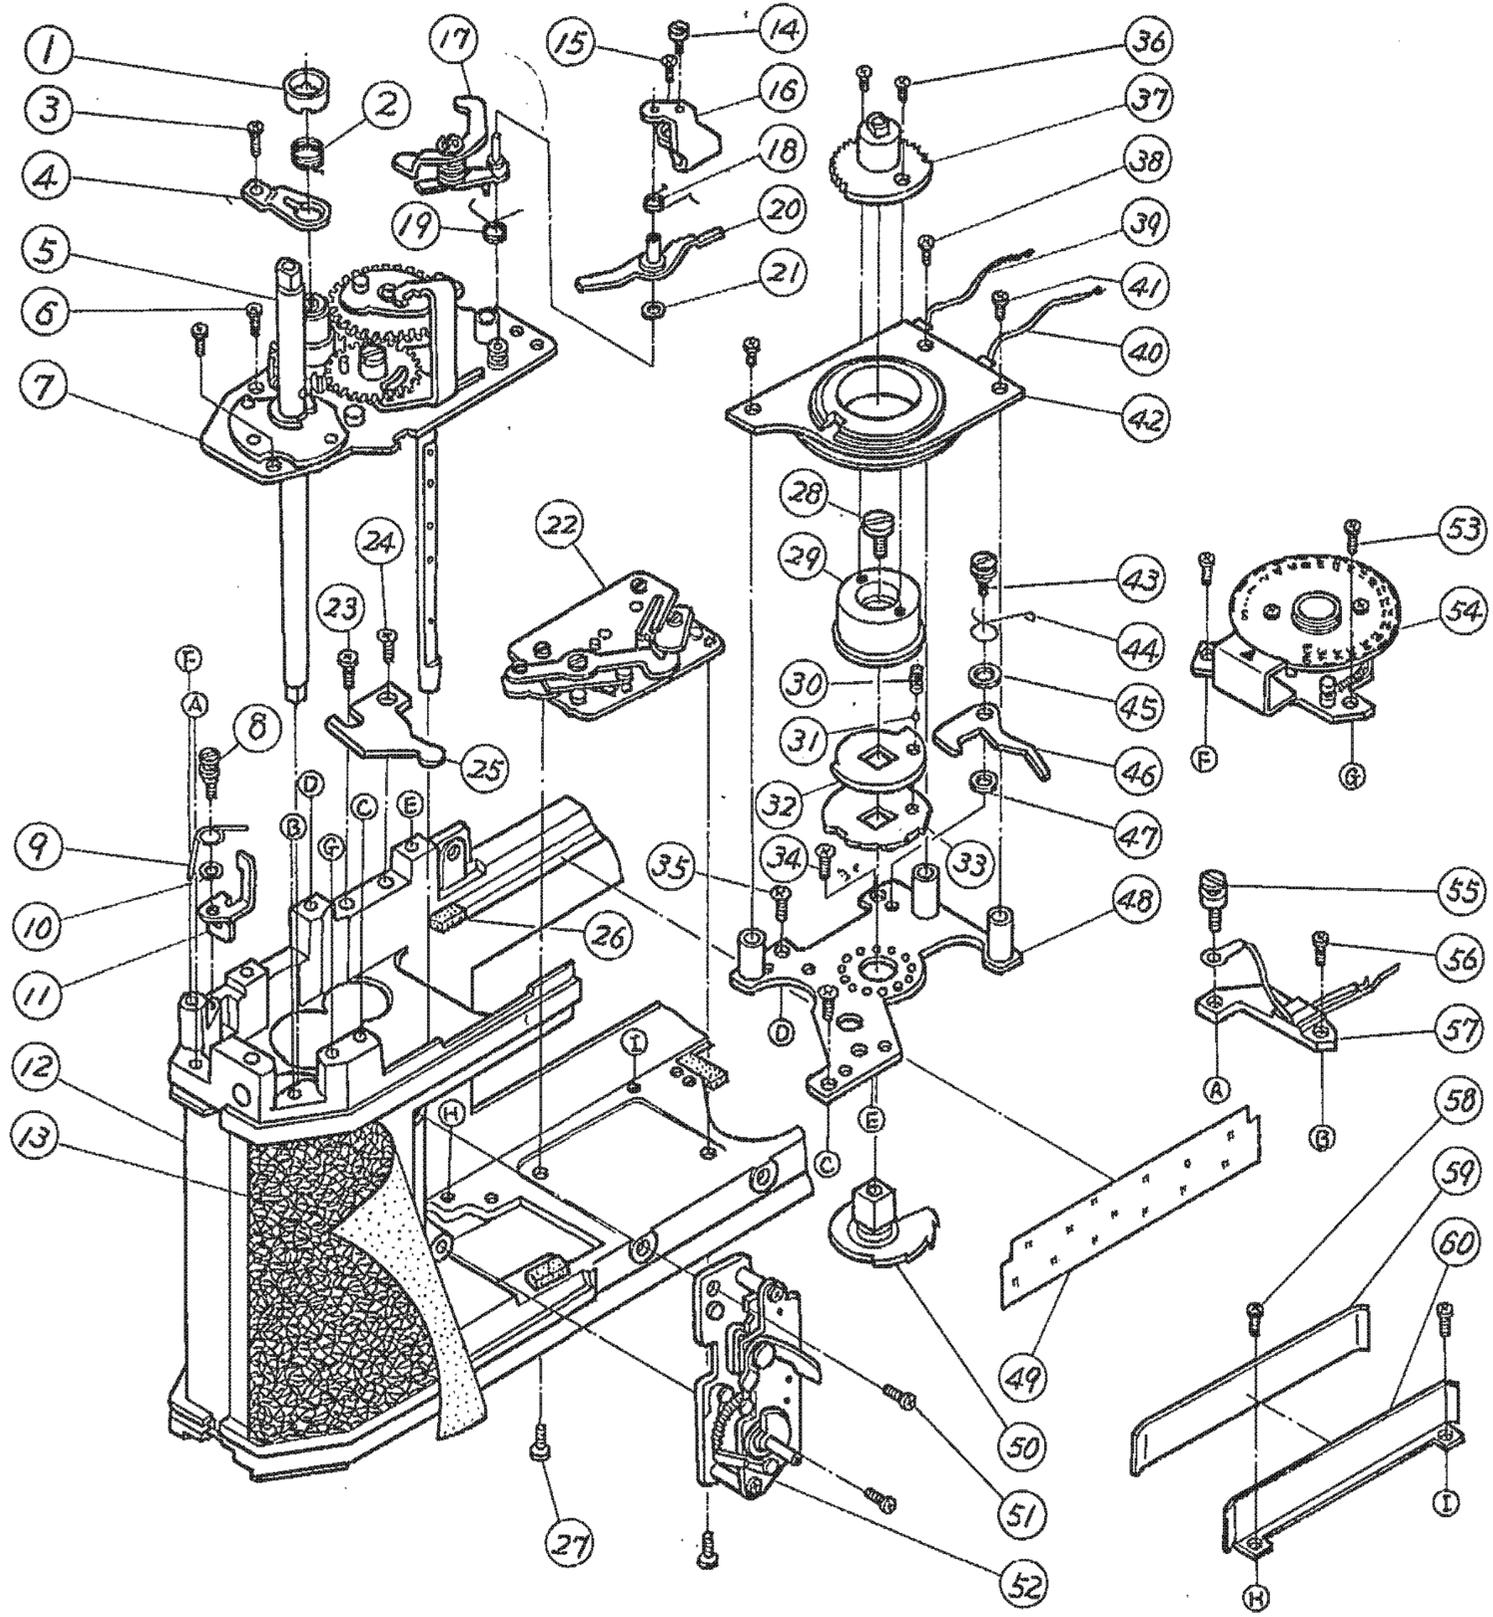



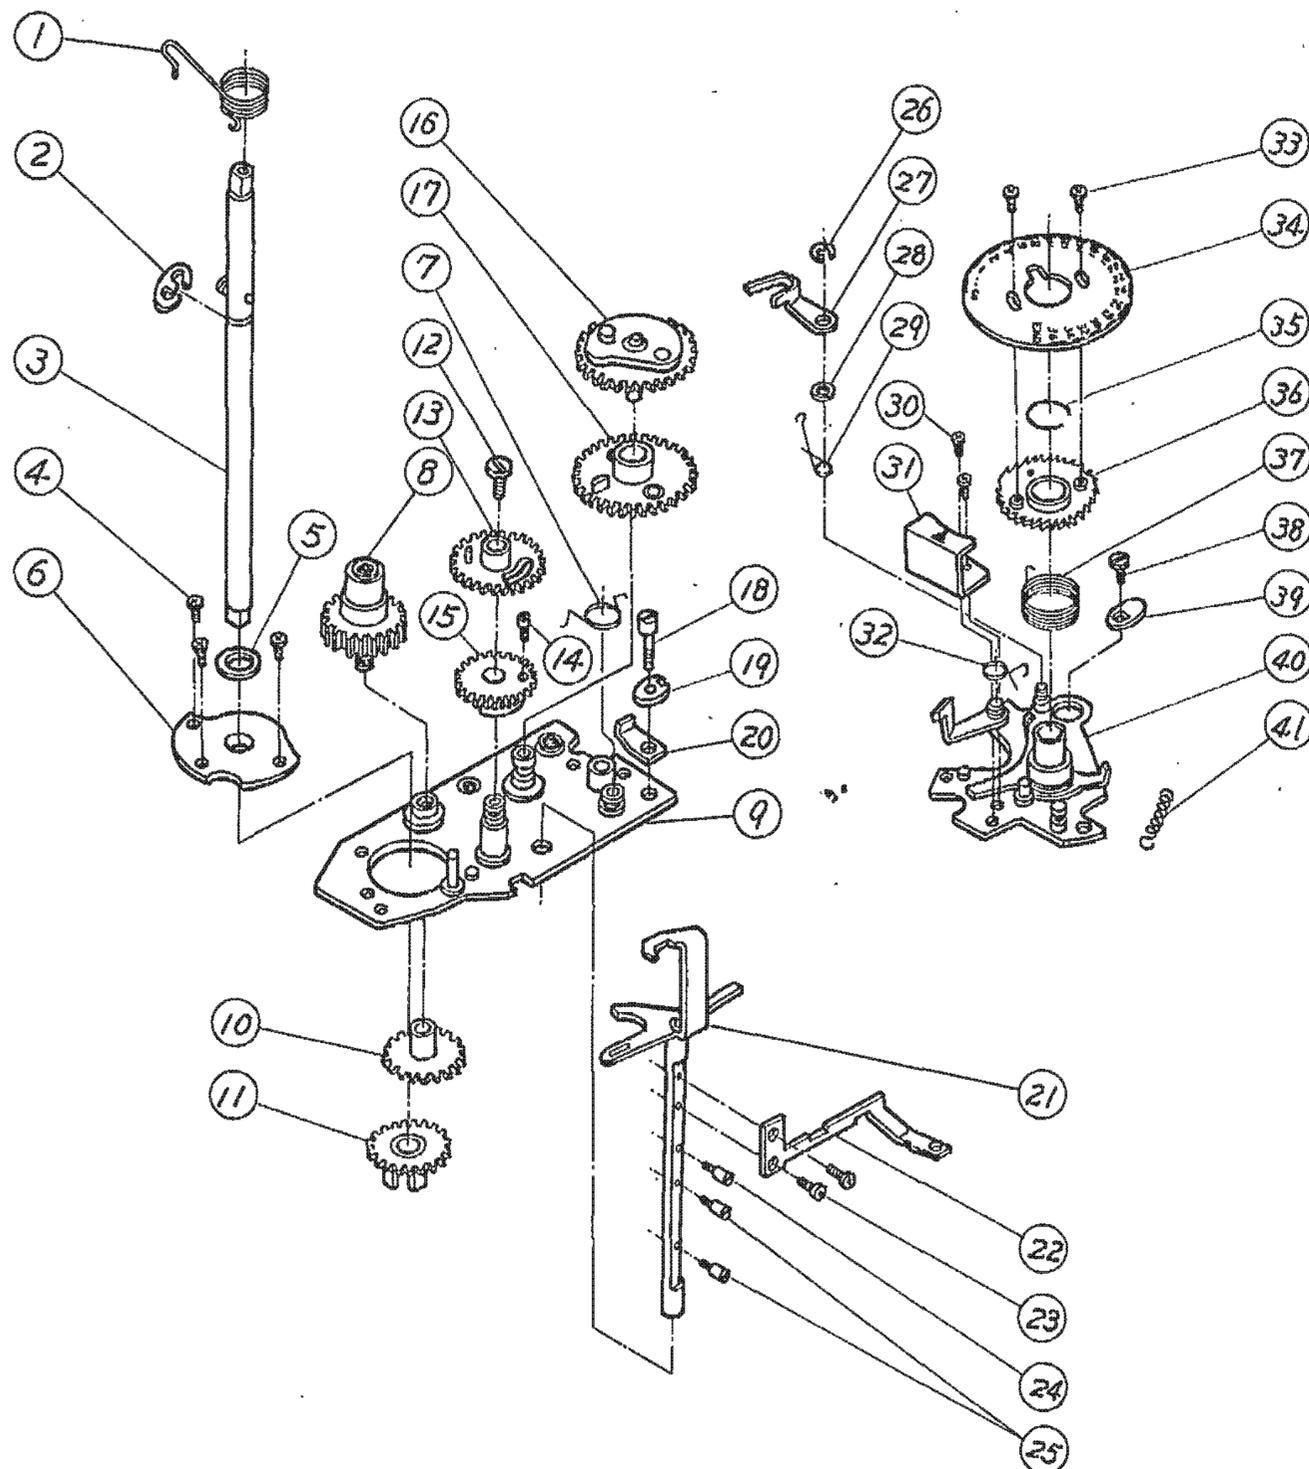


OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
SW Base Plate Ass'y	133015	6, 8~10, 13~15, 21.
F Counter Base Plate Ass'y	133025	26~32, 35~41.

PARTS NO	DESCRIPTION	QTY	
41	121876	F Counter Lever Spring	1


PARTS NO	DESCRIPTION	QTY	
1	121605	Winding Spring	1
2	121658	Winding Shaft Washer	1
3	121017	Winding Shaft Ass'y	1
4	61912224	Setting Screw	3
5	60254110	Adjusting Washer	1
	60214110	Adjusting Washer	調
	60224110	Adjusting Washer	調
6	128602	Winding Shaft Metal	1
7	121316	Governor Change Shaft Holder Spring	1
8	170251	Idle Gear (Upper)	1
9	133014	Switch Base Plate Sub Ass'y	1
10	170250	Idle Gear (Lower)	1
11	121188	Spool Gear	1
12	121429	Clutch Shaft S.S.	1
13	128009	Clutch Upper Gear Ass'y	1
14	121434	Winding Stud	1
	121435	Winding Stud	調
	121436	Winding Stud	調
15	170402	Clutch Lower Gear	1
16	133013	Upper Gear Ass'y	1
17	133012	Lower Gear Ass'y	1
18	133238	Fixing Hook Stopper	1
19	133239	Sickle Shaped Base Adjusting Collar	1
20	170130	Upper Gear Fixing Hook Regulating Plate	1
21	133091	Shifter Shaft	1
22	133414	Shifter Lever	1
23	63903024	Setting Screw	2
24	121432	Shift Shaft Pin	1
25	121431	Shift Shaft Pin	2
26	121869	Shift Shaft Snap Ring	1
27	170501	Transport Claw	1
28	60112110	Adjusting Washer	1
	60122110	Adjusting Washer	調
29	121874	Transport Claw Spring	1
30	61901424	Setting Screw	2
31	104802	F Counter Indicator	1
32	121875	Stopper Claw Spring	1
33	63901824	Setting Screw	2
34	104801	F Counter Dial	1
35	121878	Counter Stopper Ring	1
36	★	F Counter Gear	1
37	121873	F Counter Returning Spring	1
38	121866	F Counter Cam S.S.	1
39	170510	F Counter Cam	1
40	★	F Counter Base Plate Sub Ass'y	1

NOTE: (Parts with marked "★" are not available.)

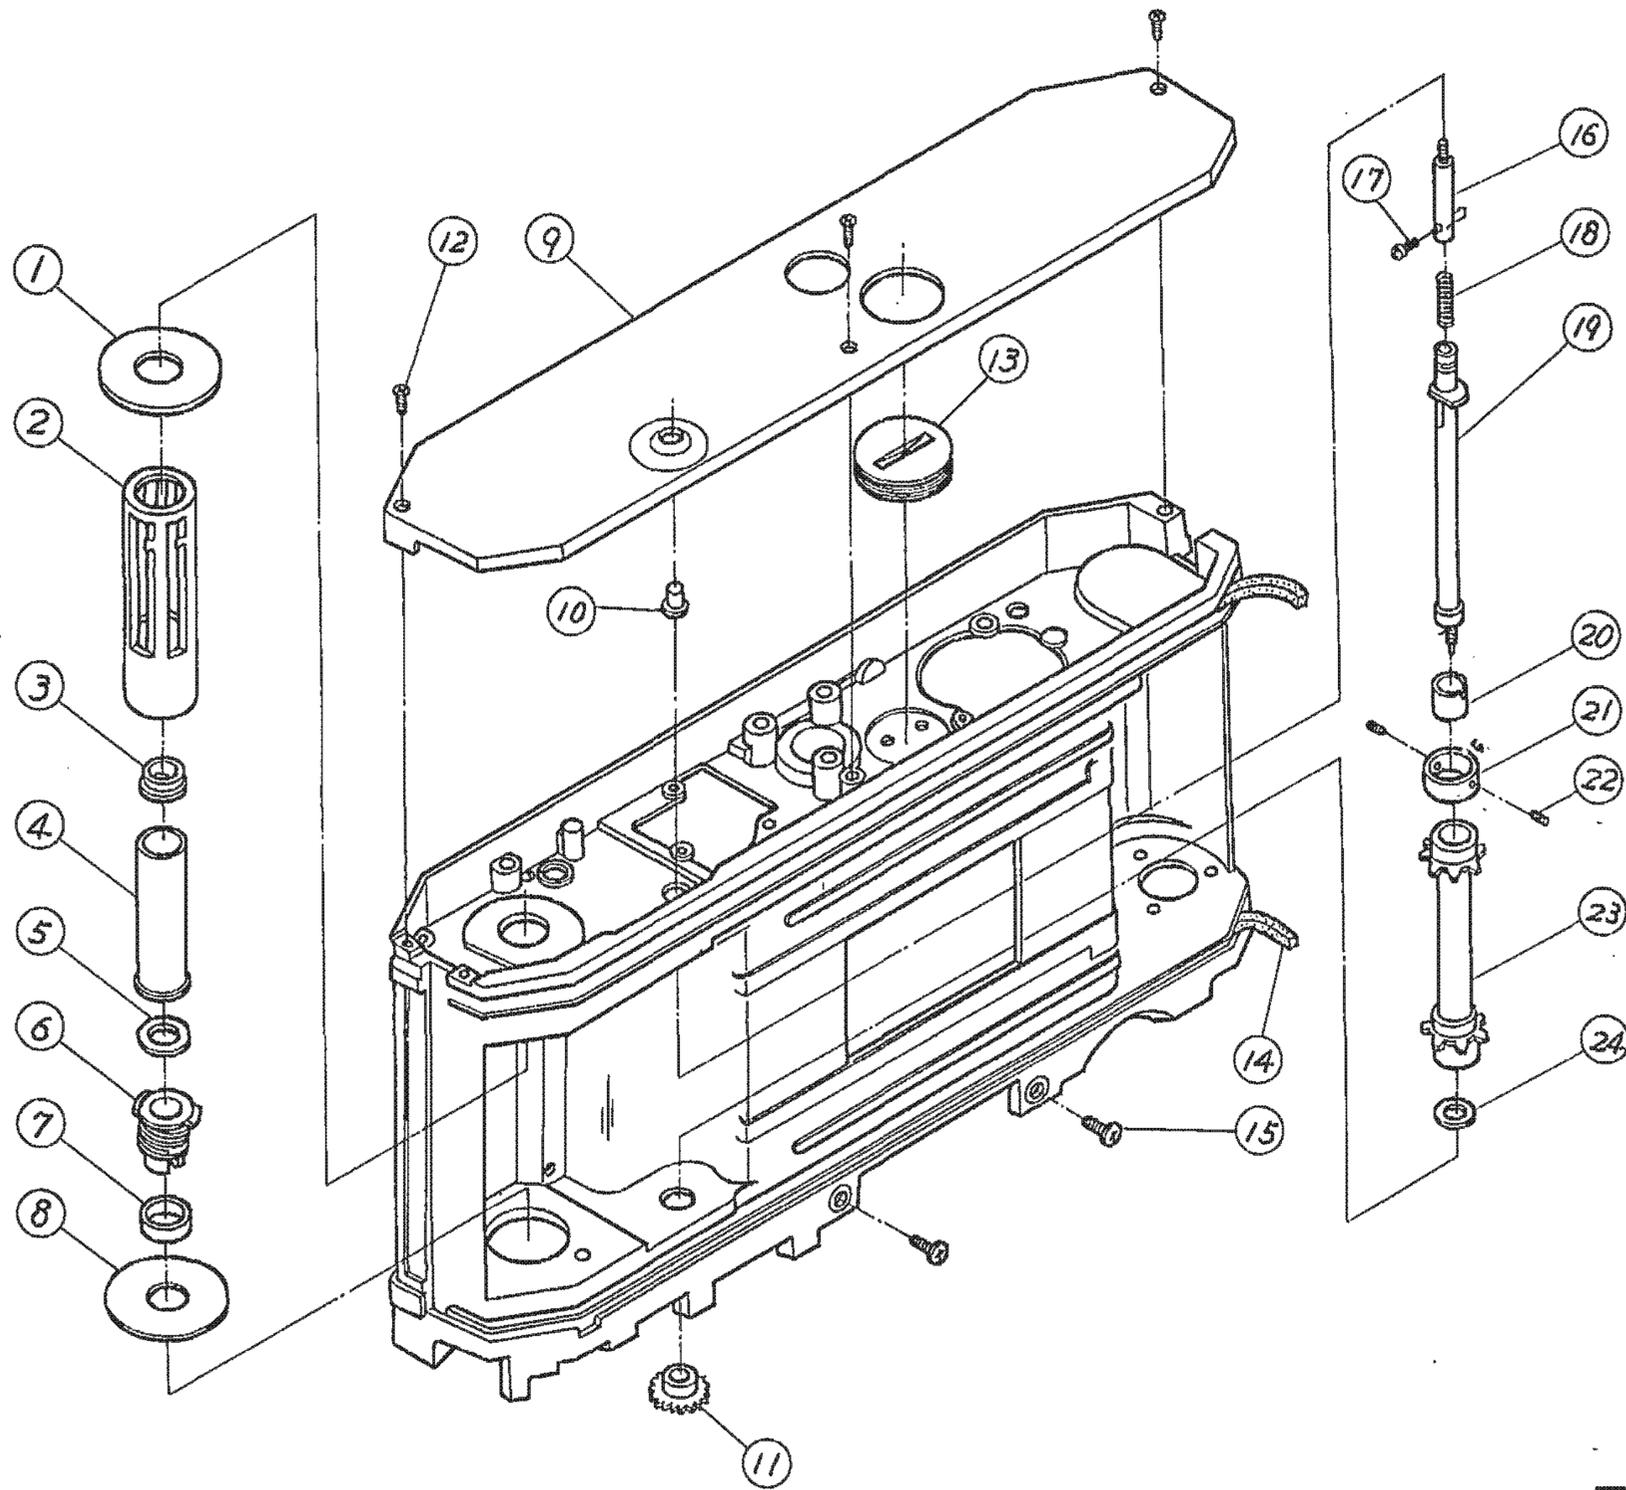

PARTS NO	DESCRIPTION	QTY
1	121186 Spool Collar	1
2	316668 Outside Spool	1
3	121185 Spool Holder	1
4	305658 Inside Spool	1
5	121189 Inside Spool Bushing	1
6	029601 Friction Shaft Ass'y	1
7	305664 "F" Gear Collar	1
8	170216 Spool Washer	1
9	133120 Bottom Cover	1
10	170248 Rewind Button	1
11	128645 Sprocket Gear (Upper)	1
12	61813028 Setting Screw	3
13	170080 Battery Cap	1
14	132139 Body Moquette	2
15	61925024 Setting Screw	2
16	170240 Rewind Button Shaft	1
17	121656 Rewind Button S.S.	1
18	121657 Rewind Button Spring	1
19	170241 Sprocket Shaft	1
20	170244 Clutch	1
21	170271 Sprocket Collar	1
22	121655 Clutch S.S.	2
23	170243 Sprocket	1
24	170242 Sprocket Adjusting Washer	1
	128630 Sprocket Adjusting Washer	2


OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
Sprocket Ass'y.	121002	16~23.

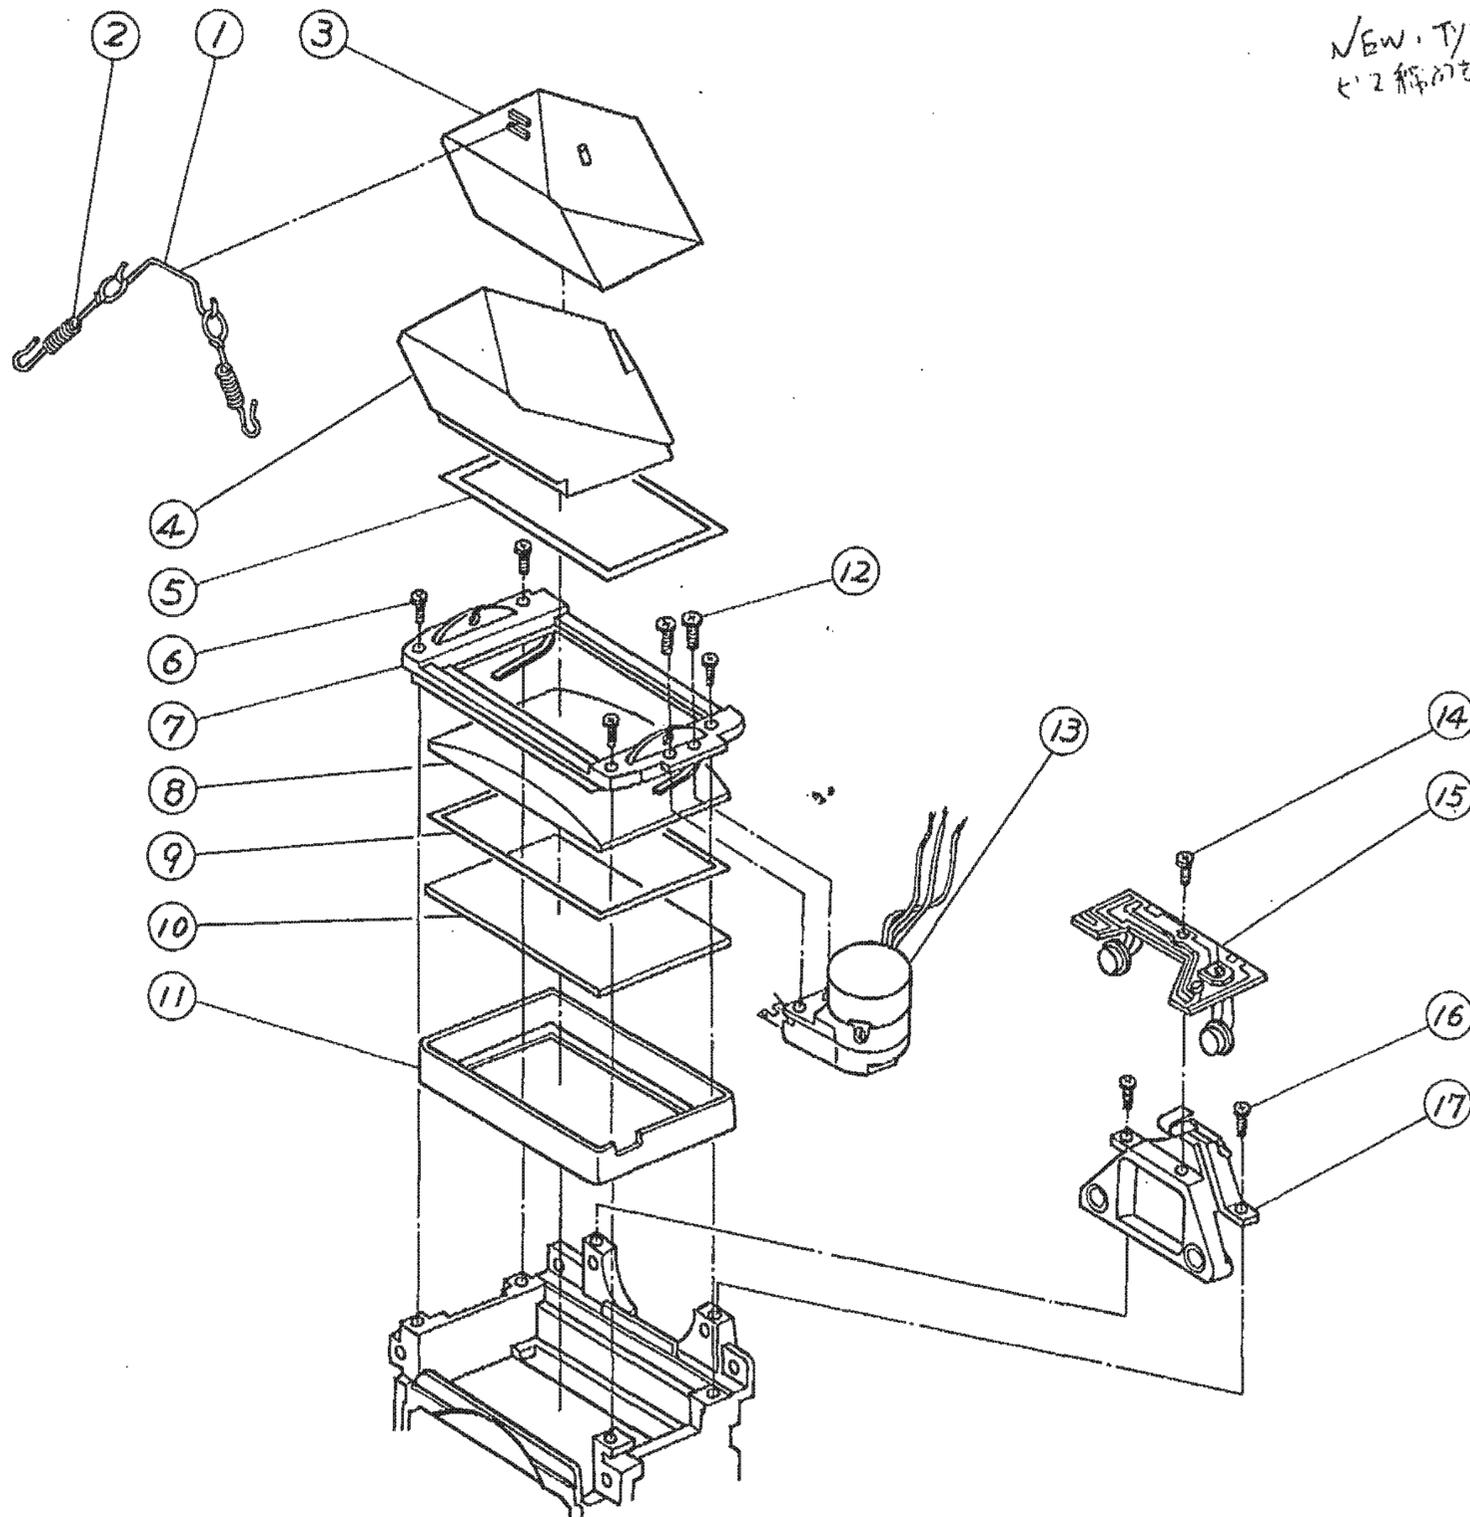

New Type  
12 13 14 15 16 17


	PARTS NO	DESCRIPTION	QTY
1	121791	Penta Pressure Spring Post	1
2	104758	Penta Pressure Spring	2
3	170863	Penta Prism Roof Cap	1
4	121811	Penta Prism	1
5	133806	Penta Prism Supporter	1
6	61914024	Setting Screw	4
7	133801	Penta Prism Holder	1
8	121812	Condenser Lens	1
9	121855	Condenser Washer	1
10	121813	Fresnel Lens	1
11	128802	Condenser Lens Holder	1
12	63913024	Setting Screw	2
13	133501	Indicating Meter	1
14	61912224	Setting Screw	1
15	133081	CDS Ass'y	1
16	61914024	Setting Screw	2
17	128840	CDS Holder	1
	1335010	Penta Prism Holder (new)	

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
Penta Prism Holder	133071	2.5.7.
CDS Holder Ass'y	133082	14~17.

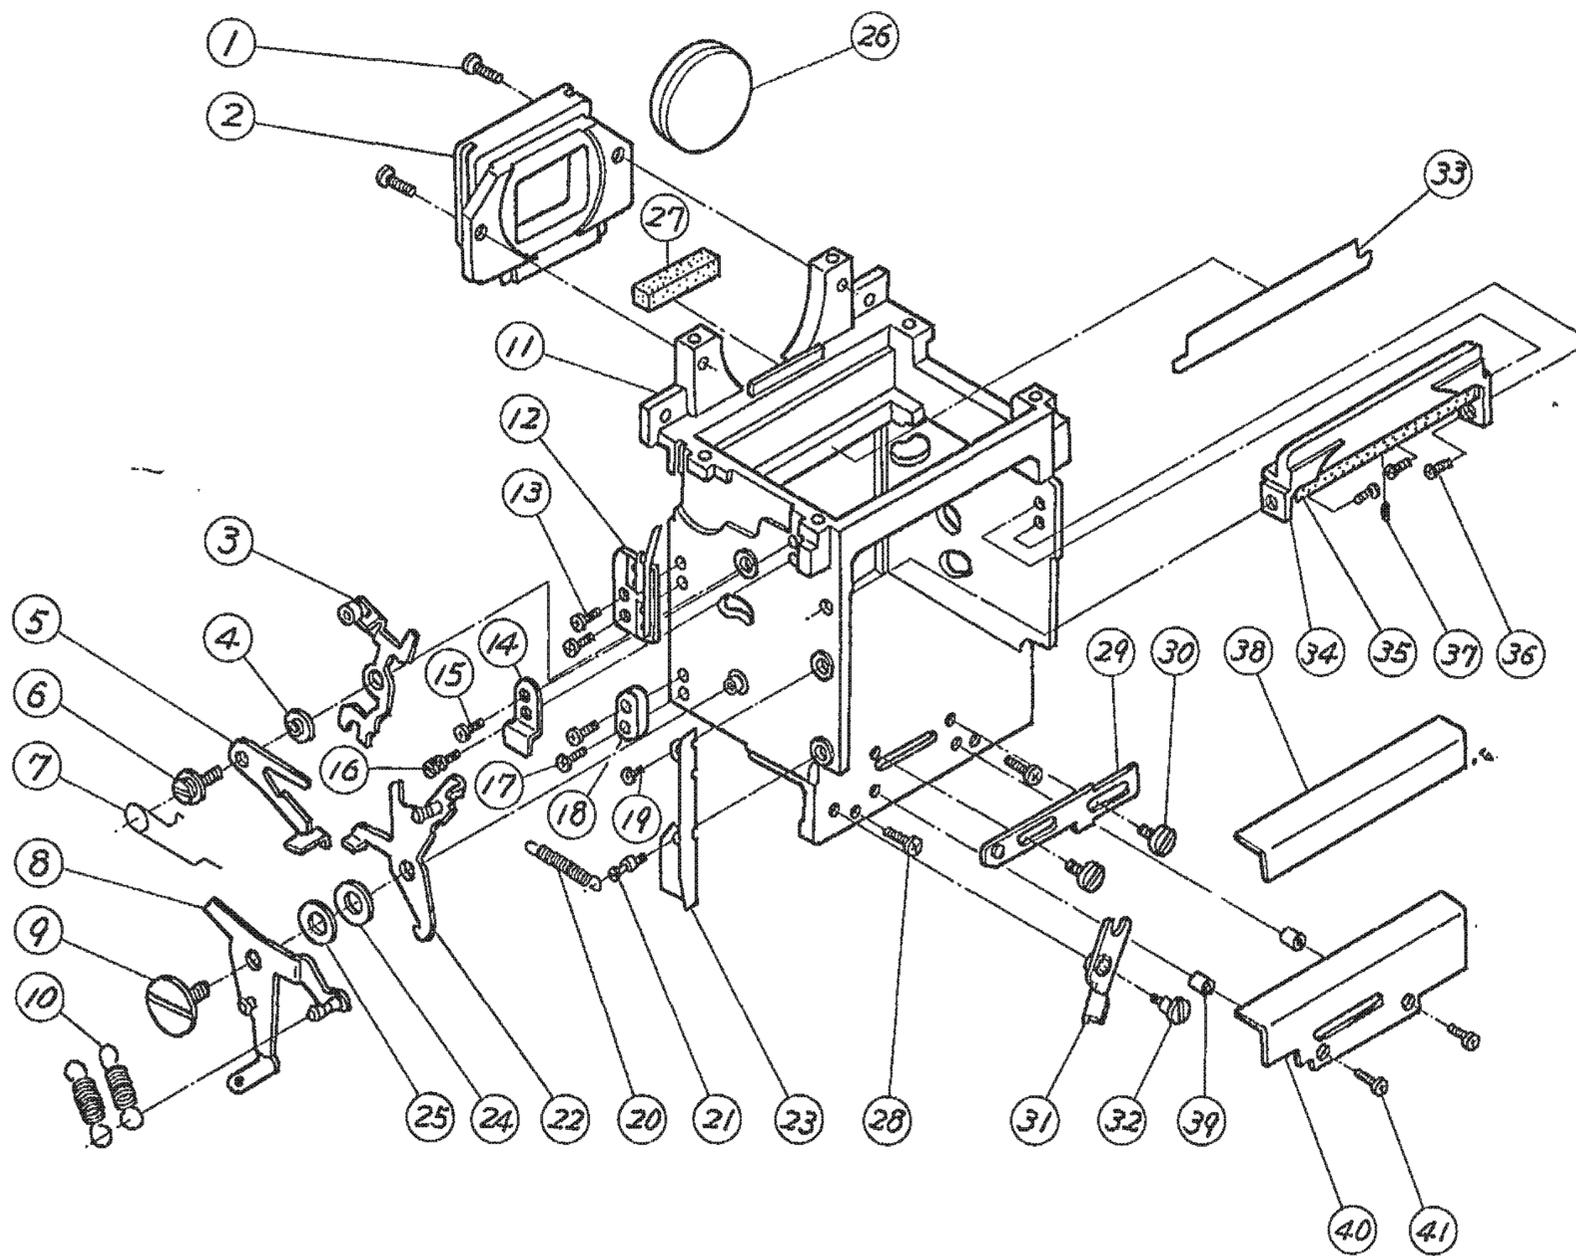

	PARTS NO	DESCRIPTION	QTY
1	61813524	Setting Screw	2
2	104765	Eye-piece Frame	1
3	133054	Returning Second Lever Ass'y	1
4	133715	Start Lever Shaft	1
5	133714	Start Lever	1
6	133719	Start Lever S.S.	1
7	133720	Start Lever Spring	1
8	133056	Mirror Set Lever Ass'y	1
9	104705	Mirror Setting Lever Shaft	1
10	133710	Mirror Operating Spring	2
11	★	Mirror Box Sub Ass'y	1
12	133057	Synchro Switch Ass'y	1
13	61912524	Setting Screw	2
14	133721	Start Lever Fixing Plate	1
15	61912524	Setting Screw	1
16	133722	Start Lever Spring Post	1
17	61913524	Setting Screw	2
18	128711	Set Lever Stopper	1
19	61911824	Setting Screw	1
20	133712	Set Lever Restore Spring	1
21	121825	Mirror Regulating Lever Shaft Holder	1
22	133055	Mirror Operating Lever Ass'y	1
23	133723	Mirror Box Side Cover (B)	1
24	60223310	Adjusting Washer	1
25	60213310	Adjusting Washer	1
	60723310	Adjusting Washer	1
	60753310	Adjusting Washer	1
26	12181493	Eye-piece Lens Ass'y	1
27	170894	Eye-piece Lens Light-Proof Moquette	1
28	61923024	Setting Screw	2
29	128059	Diaphragm Lever Ass'y	1
30	128766	Diaphragm Lever Shaft	2
31	128060	Diaphragm Connecting Lever Ass'y	1
32	128770	Diaphragm Connecting Lever Shaft	1
33	128760	Mirror Plate Light-proof Curtain	1
34	128049	Condenser Frame Fixing Ass'y	1
35	128777	Mirror Cushion	1
36	61912524	Setting Screw	3
37	121821	Focus Adjusting S.S. (A)	1
38	128776	Inside Light-proof Paner (D)	1
39	128772	Mirror Box Front Cover Collar	2
40	128771	Mirror Box Front Cover	1
41	61914024	M Box Front Cover Screw	2


OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
Mirror Box Ass'y	133065	1~41.

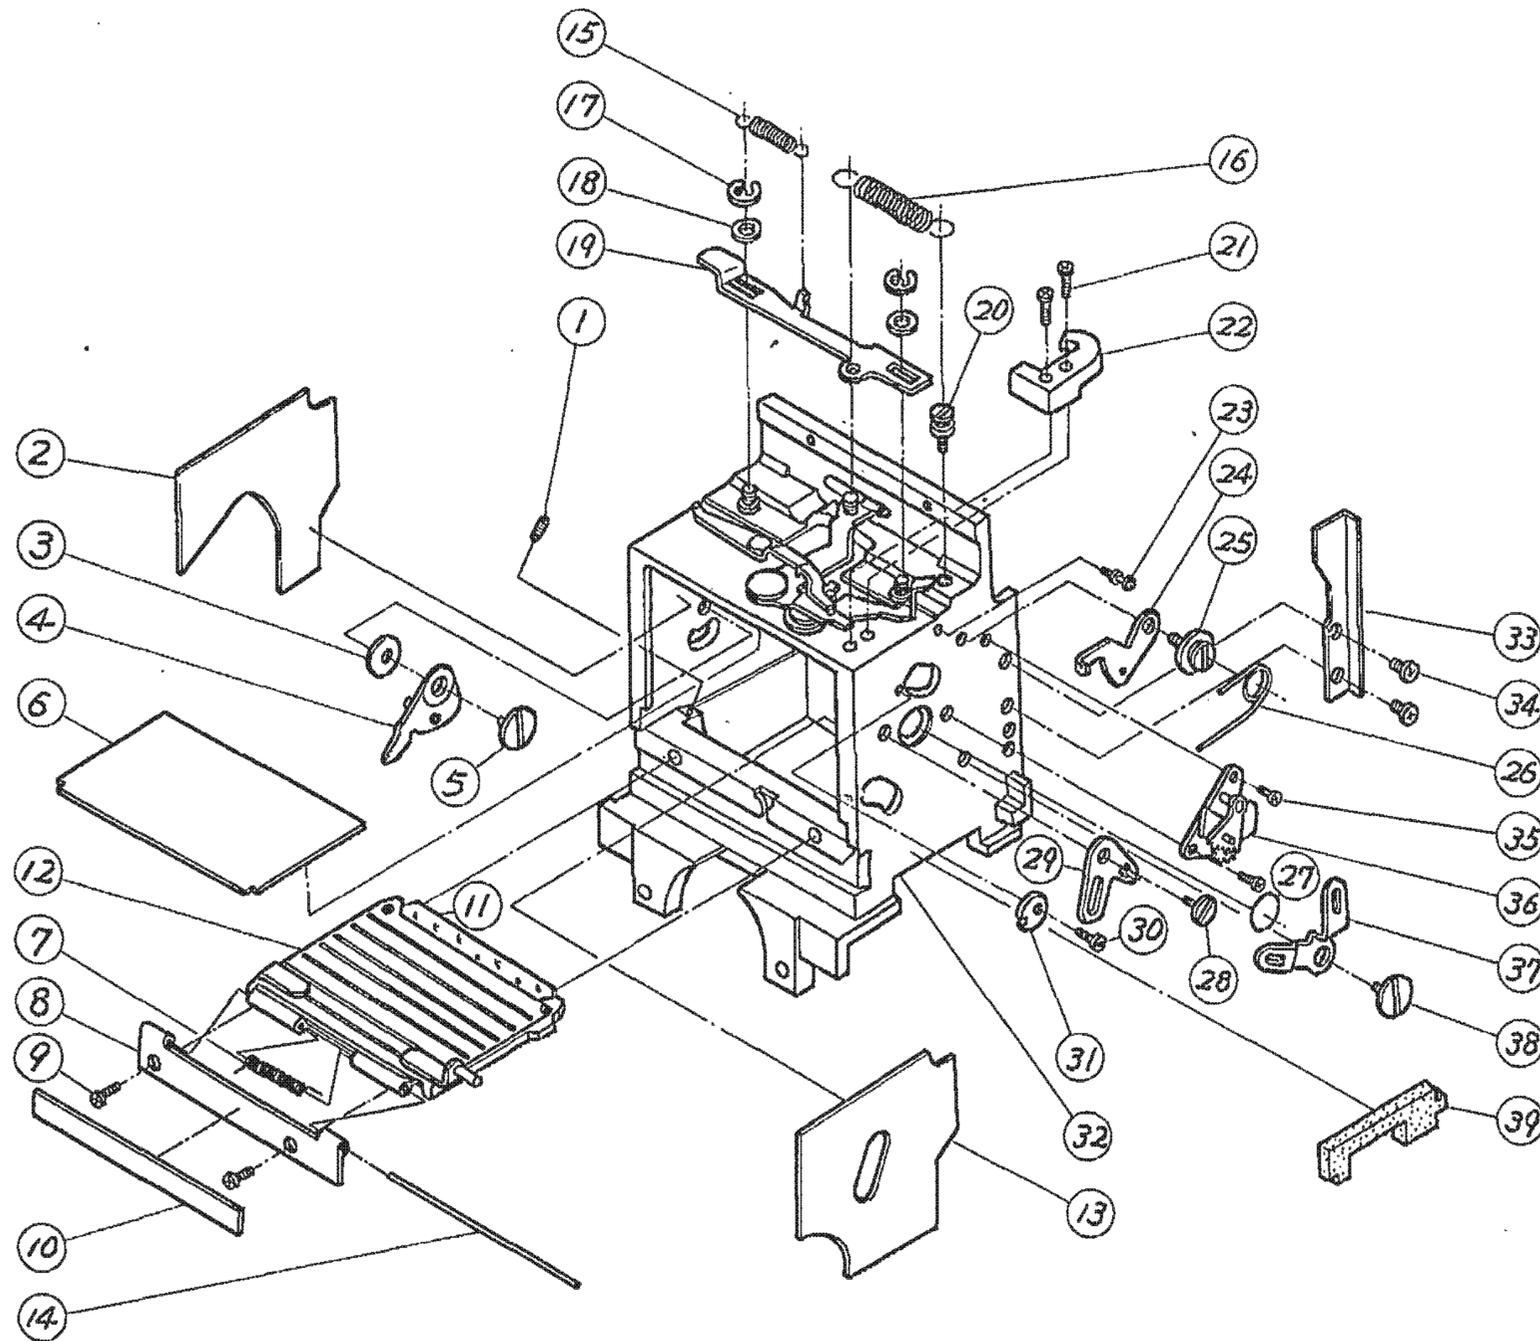

PARTS NO	DESCRIPTION	QTY
1	121822 Focus Adjusting S.S. (B)	2
2	128775 Inside Light-proof Paper (C)	1
3	121753 Winding Lever Adjusting Washer	1
4	104029 Mirror Activating NO. 1 Lever Ass'y	1
5	121820 Mirror Activating NO. 1 Lever Shaft	1
6	128773 Inside Light-proof Paper (A)	1
7	★ Mirror Restore Spring	1
8	★ Mirror Plate Hinge	1
9	61914024 Setting Screw	2
10	170867 Mirror Box Light-proof Paper	1
11	★ <del>R.F. Mirror</del> T.E. I.C. order	1
12	★ Mirror Plate Sub Ass'y	1
13	128774 Inside Light-proof Paper (B)	1
14	★ Mirror Plate Hinge Shaft	1
15	128754 Restore Lever Returing Spring	1
16	133733 Aperture Lever Spring	1
17	66101525 Snap Ring (E-15)	2
18	60112110 Adjusting Washer	
19	133051 Restore Lever Ass'y	1
20	133736 Aperture Lever Spring Post (B)	1
21	61915024 Setting Screw	2
22	133737 Aperture Lever Stopper	1
23	121825 Mirror Regulating Lever Spring Holder	1
24	128096 Mirror Regulating Lever Ass'y	1
25	121824 Mirror Regulating Lever Shaft	1
26	121831 Mirror Regulating Lever Spring	1
27	121808 Tripod Socket Washer	1
28	128884 Governor Driving Lever Shaft	1
29	128023 Governor Driving Lever A Ass'y	1
30	61112510 Setting Screw	1
31	170841 Mirror Regulating Lever Stopper	1
32	★ Mirror Box Sub Ass'y	1
33	128815 Mirror Box Side Plate	1
34	61911524 Setting Screw	2
35	61902224 Setting Screw	2
36	131299 Lug Governor	1
37	128883 Governor Driving Lever (B)	1
38	128884 Governor Driving Lever Shaft	1
39	133810 M.B. Dust-proof Moltopren	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
Mirror Box Ass'y	133065	1~39.
Mirror Box Plate(A)	128053	7~8, 11~12, 14.

NOTE: (Parts with marked "★" are not available.)

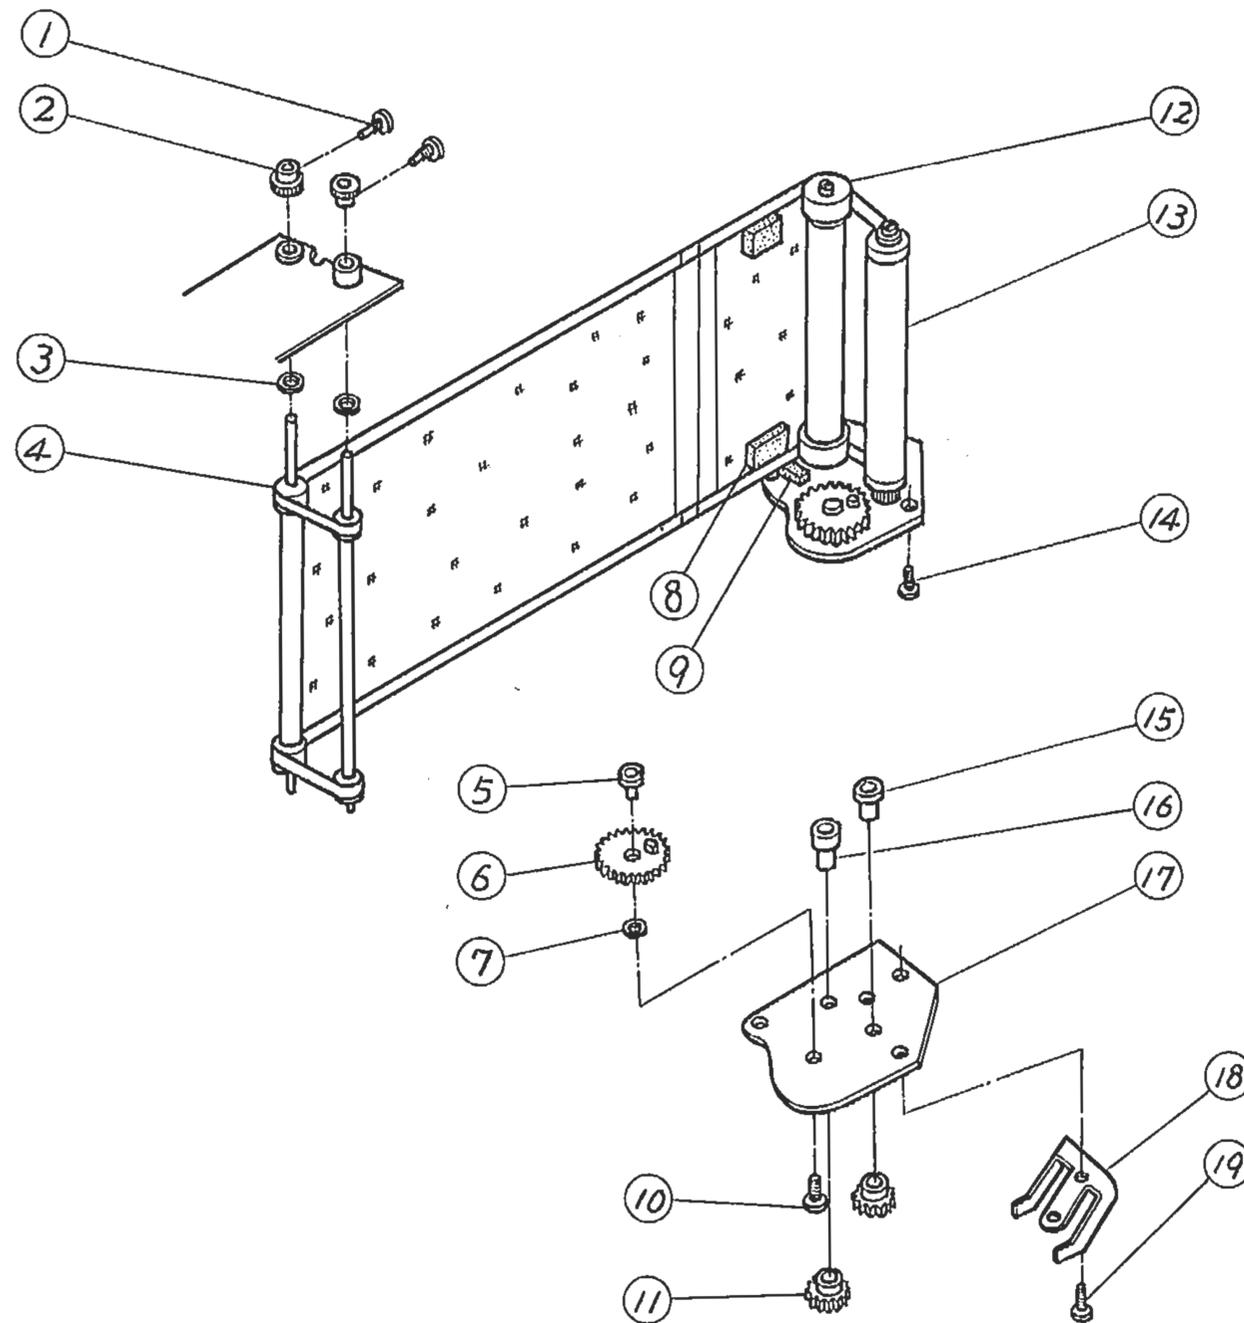

	PARTS NO	DESCRIPTION	QTY
1	121233	Curtain Shaft Gear S.S.	2
2	107156	Curtain Shaft Gear A	
	107166	Curtain Shaft Gear B	
3	60122110	Adjusting Washer	2
4	170156	Second Curtain Shaft Roller	2
5	107186	Restore Gear Shaft	1
6	121184	Mirror Restore Gear	1
7	60252610	Adjusting Washer	1
8	107873	Light-proof Moquette	2
9	110031	Light-proof Moquette	1
10	121323	Gear Shaft S.S.	1
11	170181	Ratchet Wheel	2
12	★	Upper Roller	1
13	★	Shutter Curtain Ass'y	1
14	63913024	Setting Screw	3
15	107179	Spring Shaft Holder	1
16	170179	First Curtain SP Shaft Holder	1
17	★	Ratchet Wheel Base Plate	1
18	170182	Pawl Spring	1
19	61911524	Setting Screw	1

OTHER ASSEMBLY PARTS	ORDER NO.	DESCRIPTION (FIG. NO.)
Shutter Curtain(A)	133031	4.8~19.