

YASHICA


FX-3

FX-7

ASSEMBLING CHART

YASHICA CO., LTD.

TOKYO JAPAN

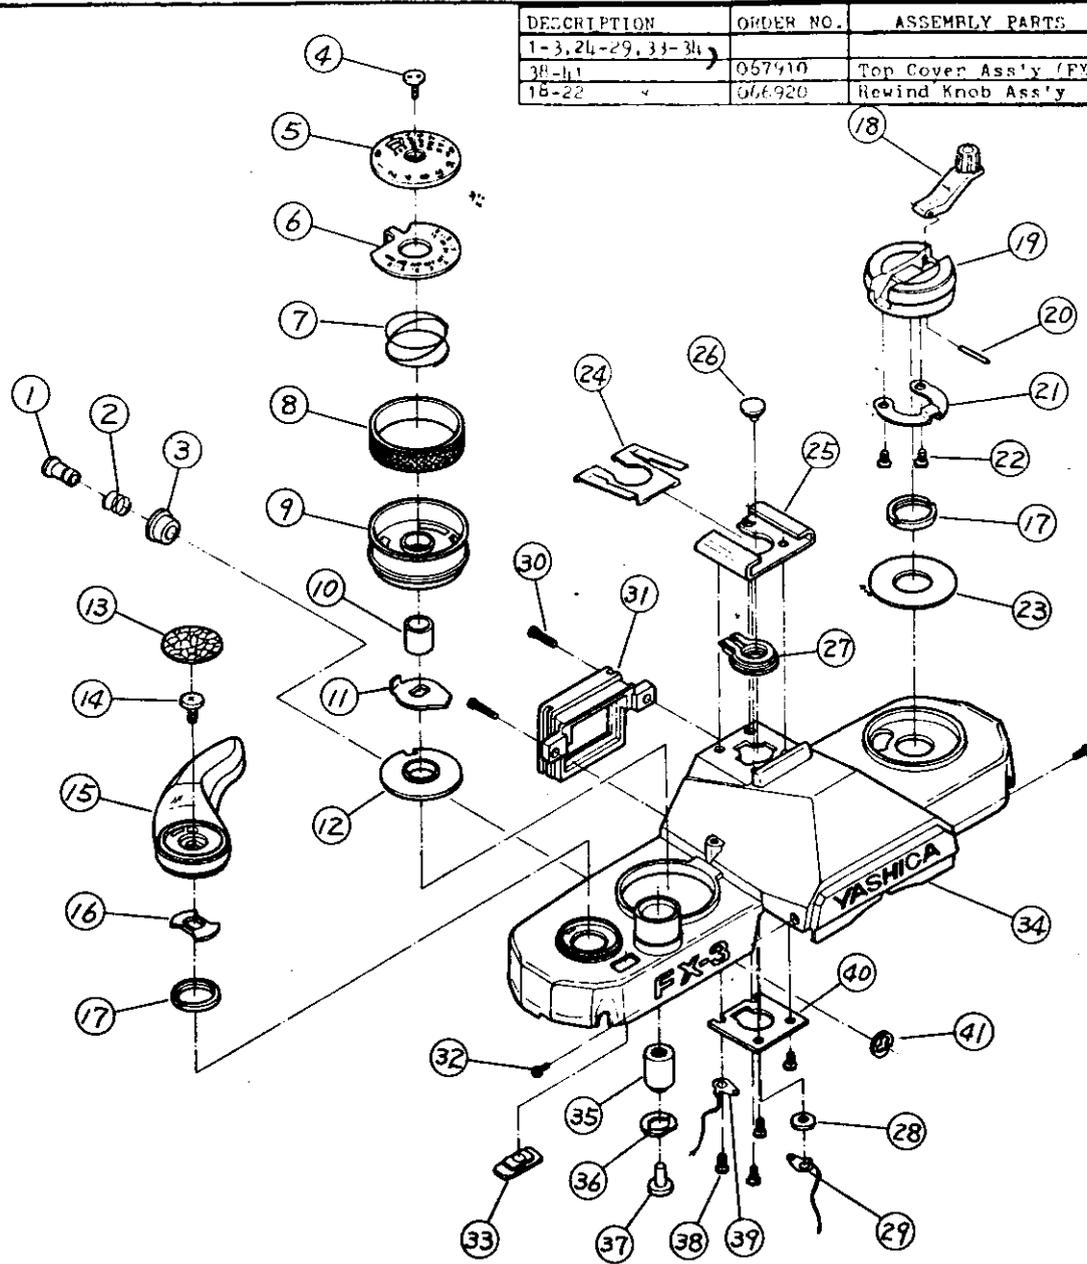


DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1-3, 24-29, 33-34		
38-41	067910	Top Cover Ass'y (FX-7)
18-22	066920	Rewind Knob Ass'y

	PARTS NO.	DESCRIPTION	Q'TY
1	147446	EC Button	1
2	318416	Checker Button Spring	1
3	147441	EC Button Holder	1
4	133298	Name Plate S.S.	1
5	147415	Shutter Dial Name Plate	1
6	133295	ASA Name Plate	1
7	147416	ASA Spring	1
8	147442	S. Dial Cover	1
9	147418	S. Dial	1
10	147409	ASA Color	1
11	147417	ASA Stopper	1
12	066309	S. Contact Plate Ass'y	1
13	147660	Winding Lever Leather	1
14	66031037	Winding Lever S.S.	1
15	147651	Winding Lever	1
16	147652	Winding Lever Base	1
17	147659	Top Cover Nut	2
18	147643	Crank Arm Ass'y	1
19	139368	Rewinding Knob	1
20	66670830	Crank Arm Pin	1
21	139373	Crank Arm Spring	1
22	69112554	Crank Arm Spring S.S.	1
23	147681	Rewind Shaft Cover	1
24	131128	Shoe Plate Spring (FX-3)	1
24	13212800	Shoe Plate Spring (FX-7)	1
25	132136	Accessory Shoe	1
26	★	Shoe Point	1
27	★	Shoe Contact	1
28	★	Shoe Point Washer	1
29	★	Lug Plate	1
30	61915529	Top Cover S.S. (2) (FX-3)	2
30	61915521	Top Cover S.S. (FX-7)	2
31	147851	Eye-Piece Frame	1
32	61903020	Top Cover S.S. (1) (FX-3)	2
32	61903021	Top Cover S.S. (FX-7)	2
33	147136	Film Counter Window	1
34	★	Top Cover (FX-3)	1
34	★	Top Cover (FX-7)	1
35	147419	Shutter Button (FX-3)	1
35	148444	Shutter Button (FX-7)	1
36	147420	Shutter Button Stopper	1
37	147421	Shutter Button Shaft	1
38	61913022	Shoe Reinforcement Plate S.S.	1
39	143112	Shoe Lug Plate	1
40	147151	Shoe Reinforcement Plate	1
41	66102525	E. Ring	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
26 - 29	066461	Shoe Contact Ass'y
35 - 36	066165	Shutter Button Ass'y(FX-3)
35 - 36	067165	Shutter Button Ass'y(FX-7)
1 - 3, 41	066587	EC Button Holder Ass'y
1-3, 24-29, 33-34		
38-41	066910	Top Cover Ass'y(FX-3)

NOTE : (Parts with marked "★" are not Available)

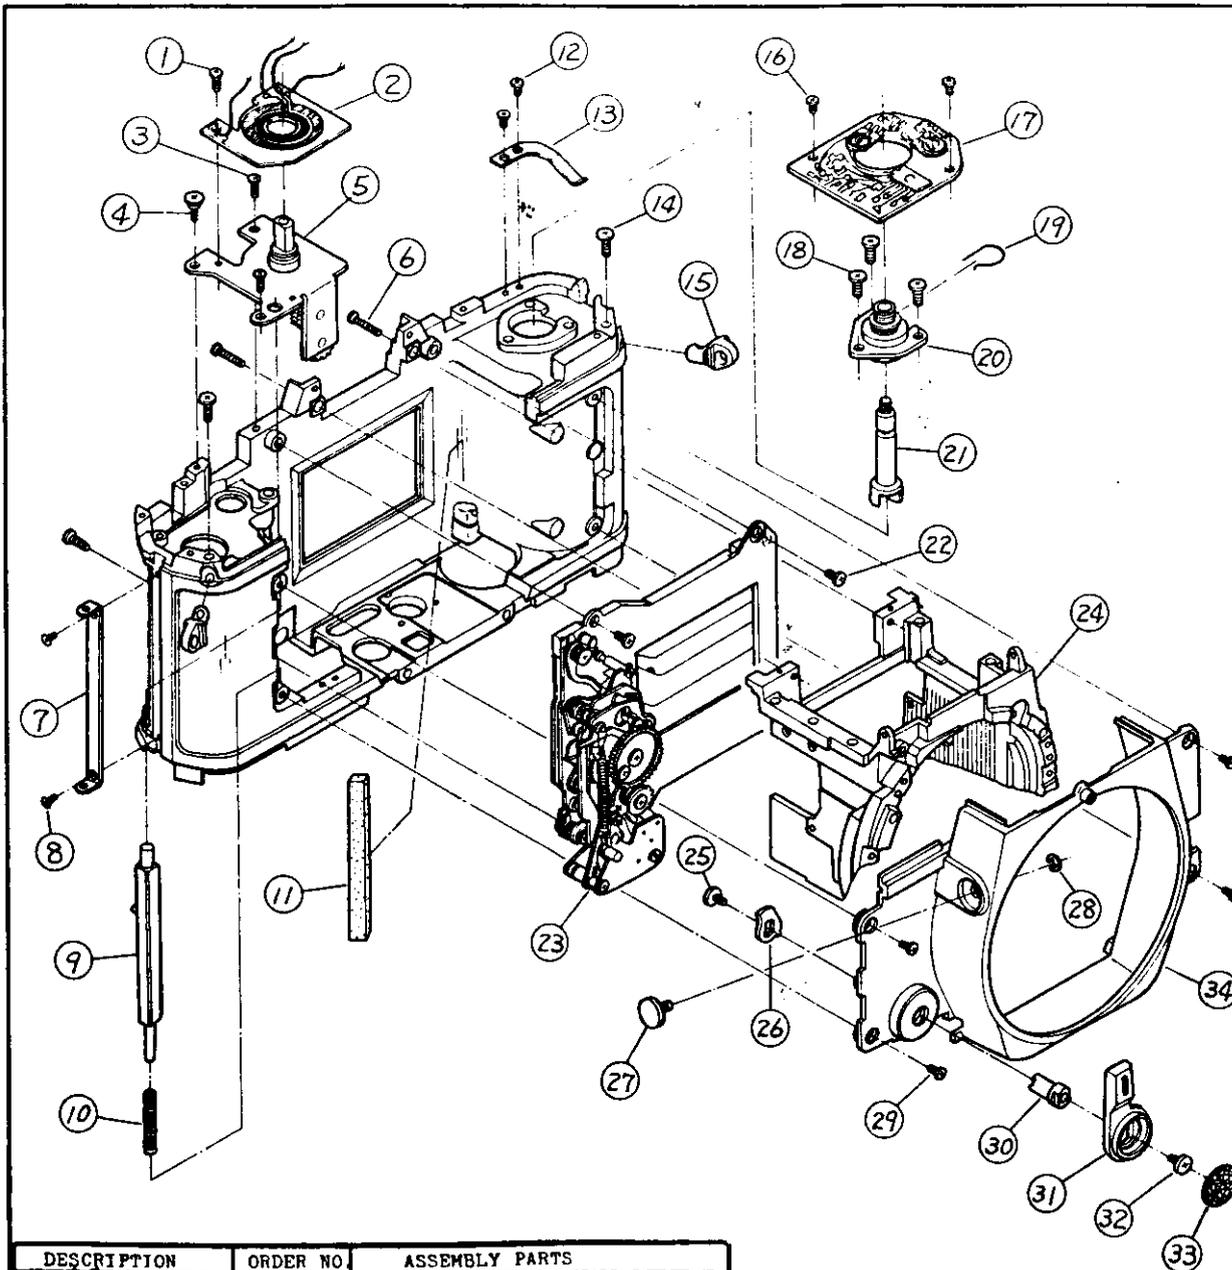

	PARTS NO.	DESCRIPTION	QTY
1	61914022	S. Base Plate S.S.	1
2	066593	S. Base Plate Ass'y	1
3	61914022	S. Base Plate S.S.	2
4	147816	Lock Lever Shaft	1
5	066595	S. Base Plate Ass'y	1
6	61927024	Mirror Box S.S.	2
7	139148	Hinge Shaft Holder	1
8	61812524	Hinge Shaft Holder S.S.	2
9	147422	Shutter Shaft	1
10	147423	Shutter Shaft Spring	1
11	147206	Shutter Moquette	1
12	61912224	Lock Plate Spring S.S.	2
13	147142	Lock Plate Spring	1
14	69226054	Strap Holder S.S.	2
15	65005112	Strap Holder	2
16	61912524	Amplifier S.S.	2
17	066503	Amplifier Ass'y	1
18	6392524	Rewind Shaft Holder S.S.	3
19	147680	Rewind Shaft Spring	1
20	147677	Rewind Shaft Holder	1
21	147678	Rewind Shaft	1
22	61924022	Shutter S.S.	3
23	147201	Complete Shutter	1
24		Mirror Box	1
25	66001023	Self Charge Plate S.S.	1
26	147833	Self Charge Plate	1
27	147803	Set Off Button	1
28	66101225	E. Ring	1
29	63913024	Mount Cover S.S.	1
30	132819	Self Lever Shaft	1
31	132823	Self Lever	1
32	66001027	Self Lever S.S.	1
33	147834	Self Lever Leather	1
34	147801	Mount Cover	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
19 - 21	066610	Rewind Shaft Holder Ass'y


147 148

NOTE : (Parts with marked "★" are not Available)

No.2

147 148


No.3

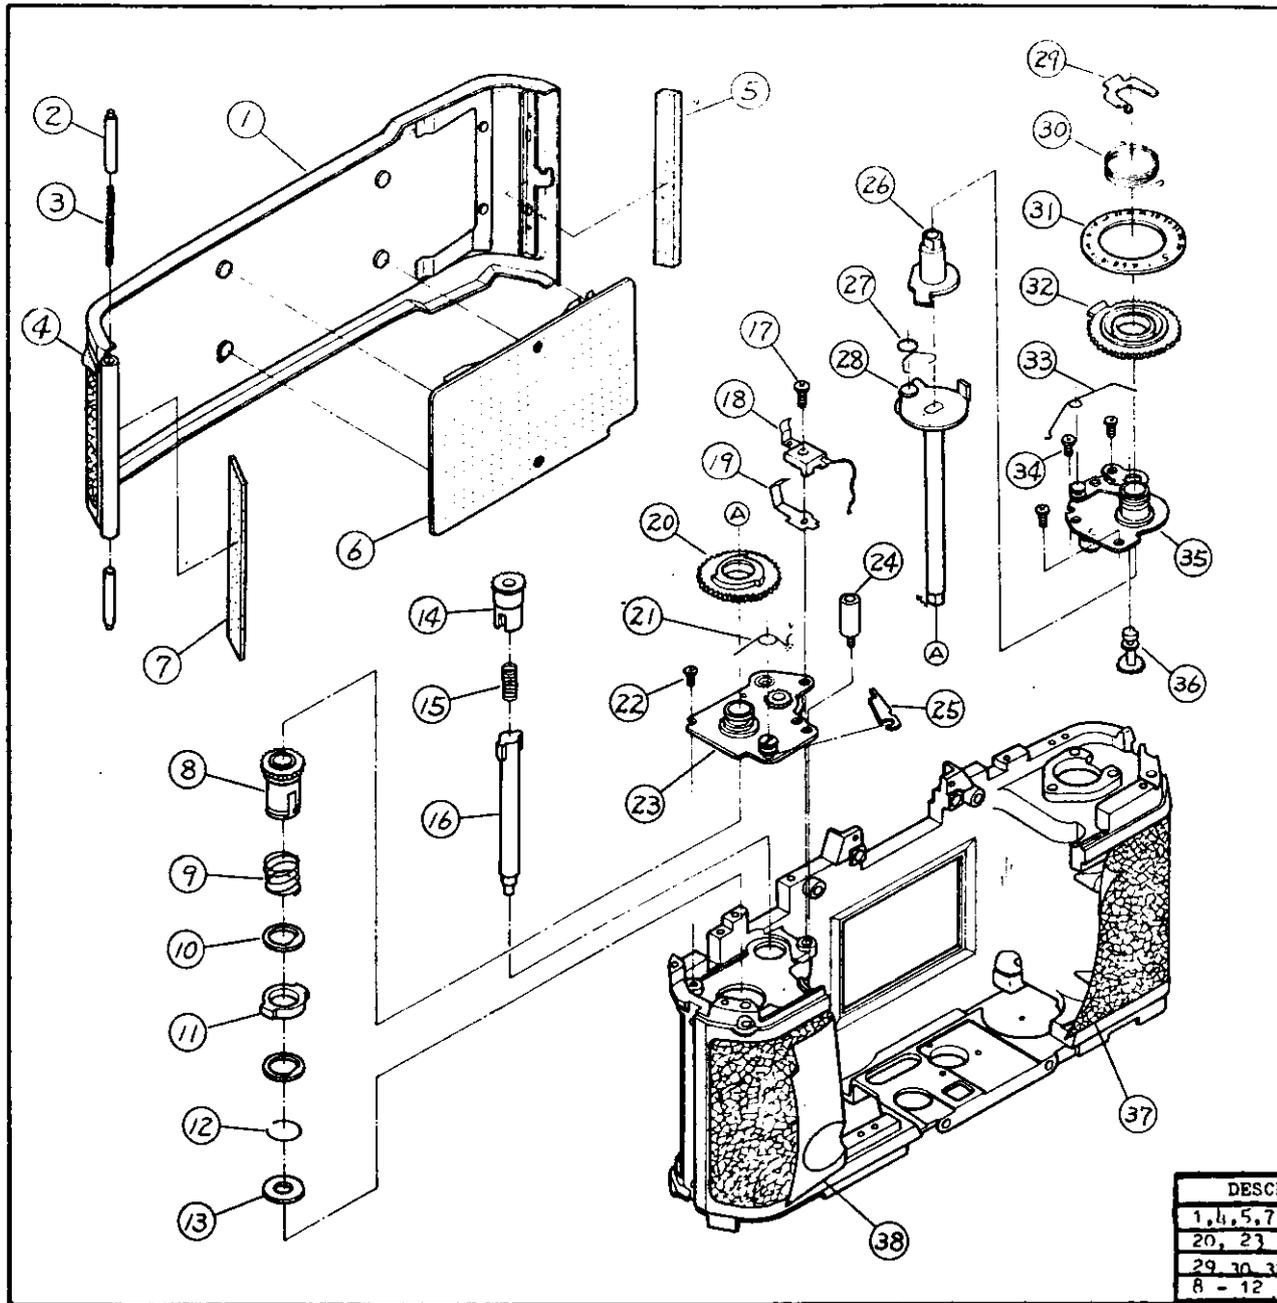

PARTS NO.	DESCRIPTION	Q'TY	
1	066286	Back Cover Ass'y	1
2	147108	Hinge Shaft	2
3	131133	Hinge Shaft Spring	1
4	147110	Rack Cover Leather	1
5	132108	Back Cover Lock Moquette	1
6	066287	Pressure Plate Ass'y	1
7	147156	Hinge Moquette	1
8	147616	Spool Gear	1
9	147640	Friction Spring	1
10	137640	Friction Washer	2
11	139639	Friction Plate	1
12	147642	Spring Cover Stopper	1
13	60284110	Inside Spool Washer	1
14	139644	Sprocket Gear	1
15	139650	Sprocket Spring	1
16	139647	Sprocket Shaft	1
17	63915524	EC Switch S.S.	1
18	066675	EC Switch Ass'y	1
19	147425	EC Contactor (2)	1
20	147603	A Gear	1
21	147619	A Gear Stopper Spring	1
22	61913024	W. Base Plate S.S.	1
23	066200	W. Base Plate Ass'y	1
24	147620	S. Base Plate Post	1
25	147611	A Gear Stopper	1
26	066645	Lever Feeding Plate Ass'y	1
27	147625	Ratchet Claw Spring	1
28	066615	Winding Stopper Ass'y	1
29	147866	Counter Spring Post	1
30	147867	Counter Spring	1
31	147864	Counter Name Plate	1
32	147865	Counter Gear	1
33	147870	Counter Reverse Lever Spring	1
34	61913024	Counter Base Plate S.S.	1
35	066830	Counter Base Plate Ass'y	1
36	139887	Counter Gear (1)	1
37	147115	Front Leather (Right)	1
38	147116	Front Leather (Left)	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1,4,5,7.	066286	Back Cover Ass'y
20, 23	066200	W. Base Plate Ass'y
29, 30, 32, 35	066830	Counter Base Plate Ass'y
8 - 12	066601	Spool Gear Ass'y

NOTE : (Parts with marked "★" are not Available)

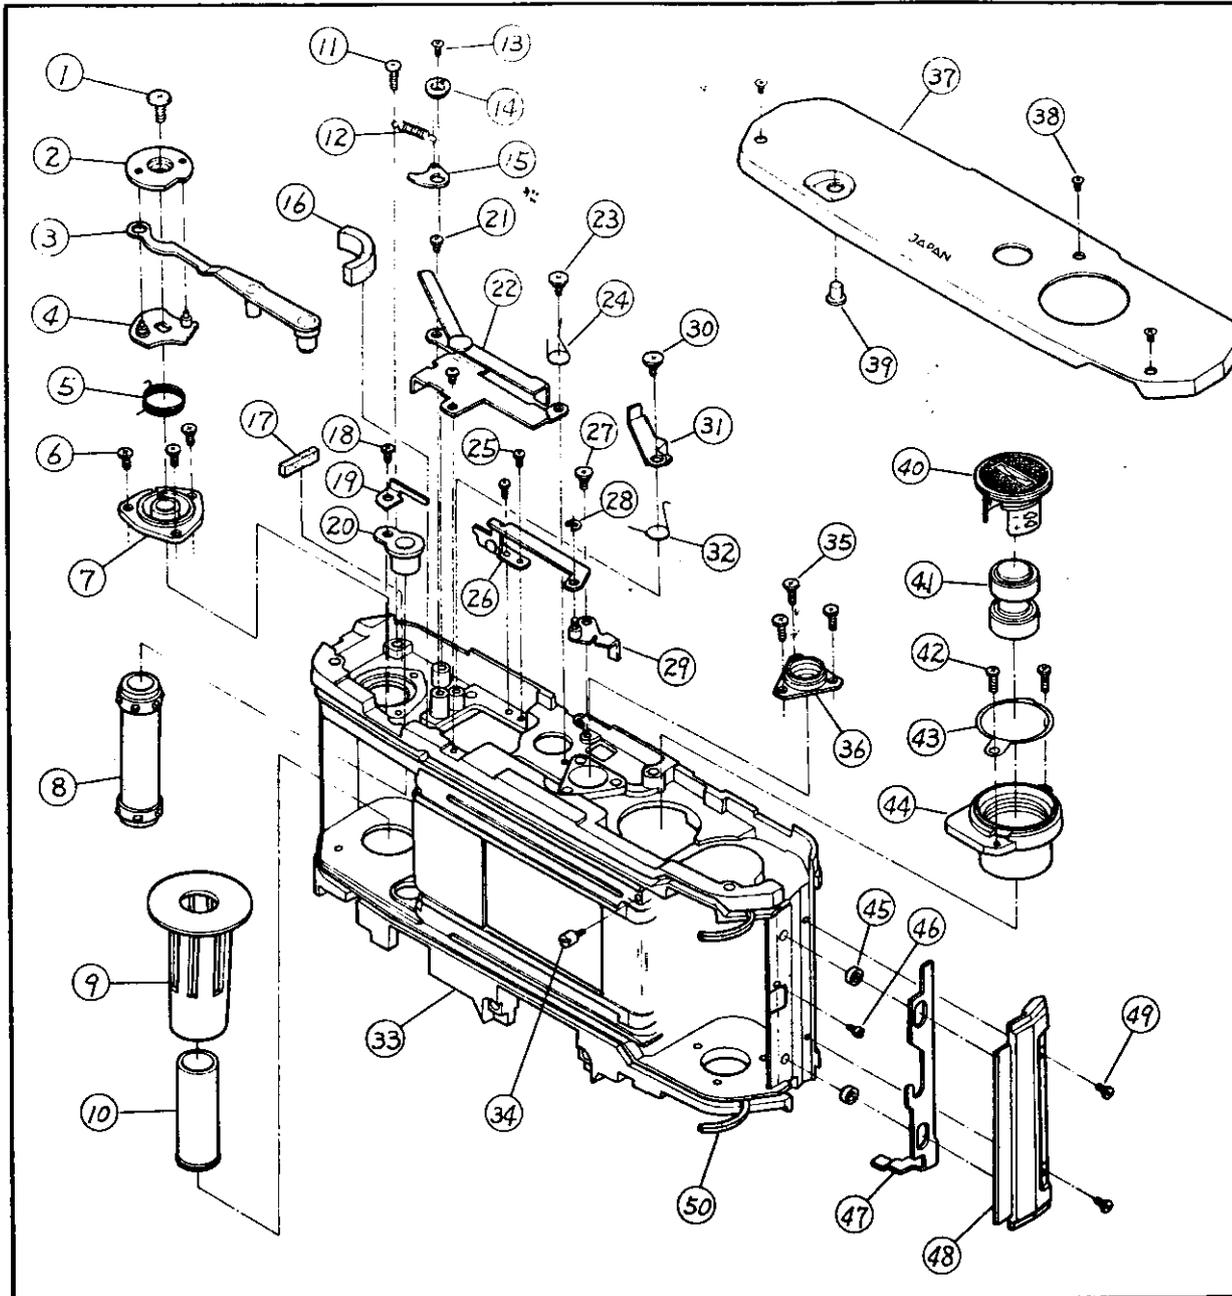

PARTS NO.	DESCRIPTION	Q'TY	
1	66001037	Set Cam Fixer S.S.	1
2	147610	Set Cam Fixer	1
3	065711	SM Set Lever Ass'y	1
4	066617	Set Cam Plate Ass'y	1
5	147632	Winding Spring	1
6	63913024	Winding Shaft Holder S.S.	3
7	147631	Winding Shaft Holder	1
8	139648	Sprocket	1
9	139641	Outside Spool	1
10	305658	Inside Spool	1
11	61915524	Anti-Rewind Spring Post	1
12	147636	Anti-Rewind Claw Spring	1
13	61814024	Anti-Rewind Claw Collar S.S.	1
14	147637	Anti-Rewind Claw Collar	1
15	147638	Anti-Rewind Claw	1
16	147203	Shutter Moquette (1)	1
17	147205	Shutter Moquette (2)	1
18	63912524	Sprocket Reverse Spring S.S.	1
19	147630	Sprocket Reverse Spring	1
20	139646	Sprocket Metal	1
21	61913024	Cocking Arm Fixer S.S.	2
22	066616	Cocking Arm Fixer Ass'y	1
23	147437	SR Lever (3)	1
24	147614	Winding Stopper Lever Spring	1
25	61912224	SR Lever (1) Support S.S.	2
26	066306	SR Lever (1) Support Ass'y	1
27	147437	SR Lever (3) Shaft	1
28	66101225	E. Ring	1
29	066307	SR Lever (3) Ass'y	1
30	147437	SR Lever (3) Shaft	1
31	147439	SR Lock Lever	1
32	147440	SR Lock Spring	1
33		Body	1
34	147105	Film Guide Pin	1
35	61924022	Tripod Socket S.S.	1
36	139144	Tripod Socket	1
37	147120	Bottom Cover (FX-3)	1
37	148121	Bottom Cover (FX-7)	1
38	131391	Bottom Cover S.S.(FX-3)	3
38	61812521	Bottom Cover S.S.(FX-7)	3
39	139651	Sprocket Button	1
40	065930	Battery Cap Ass'y	1
41		Battery (G - 13)	2
42	61914522	Battery Case S.S.	2
43	139154	Battery Case Contact Plate(B)	1
44	066110	Battery Case Ass'y	1
45	147107	Lock Plate Collar	2
46	131119	Back Cover Lock Claw Guide	1
47	139120	Back Cover Lock Plate	1
48	147106	Lock Plate Cover	1
49	61912524	Lock Plate Cover S.S.	2
50	147153	Body Light-Proof Moquette	2


147 148

NOTE : (Parts with marked "★" are not Available)

No.4

147 148


No.5

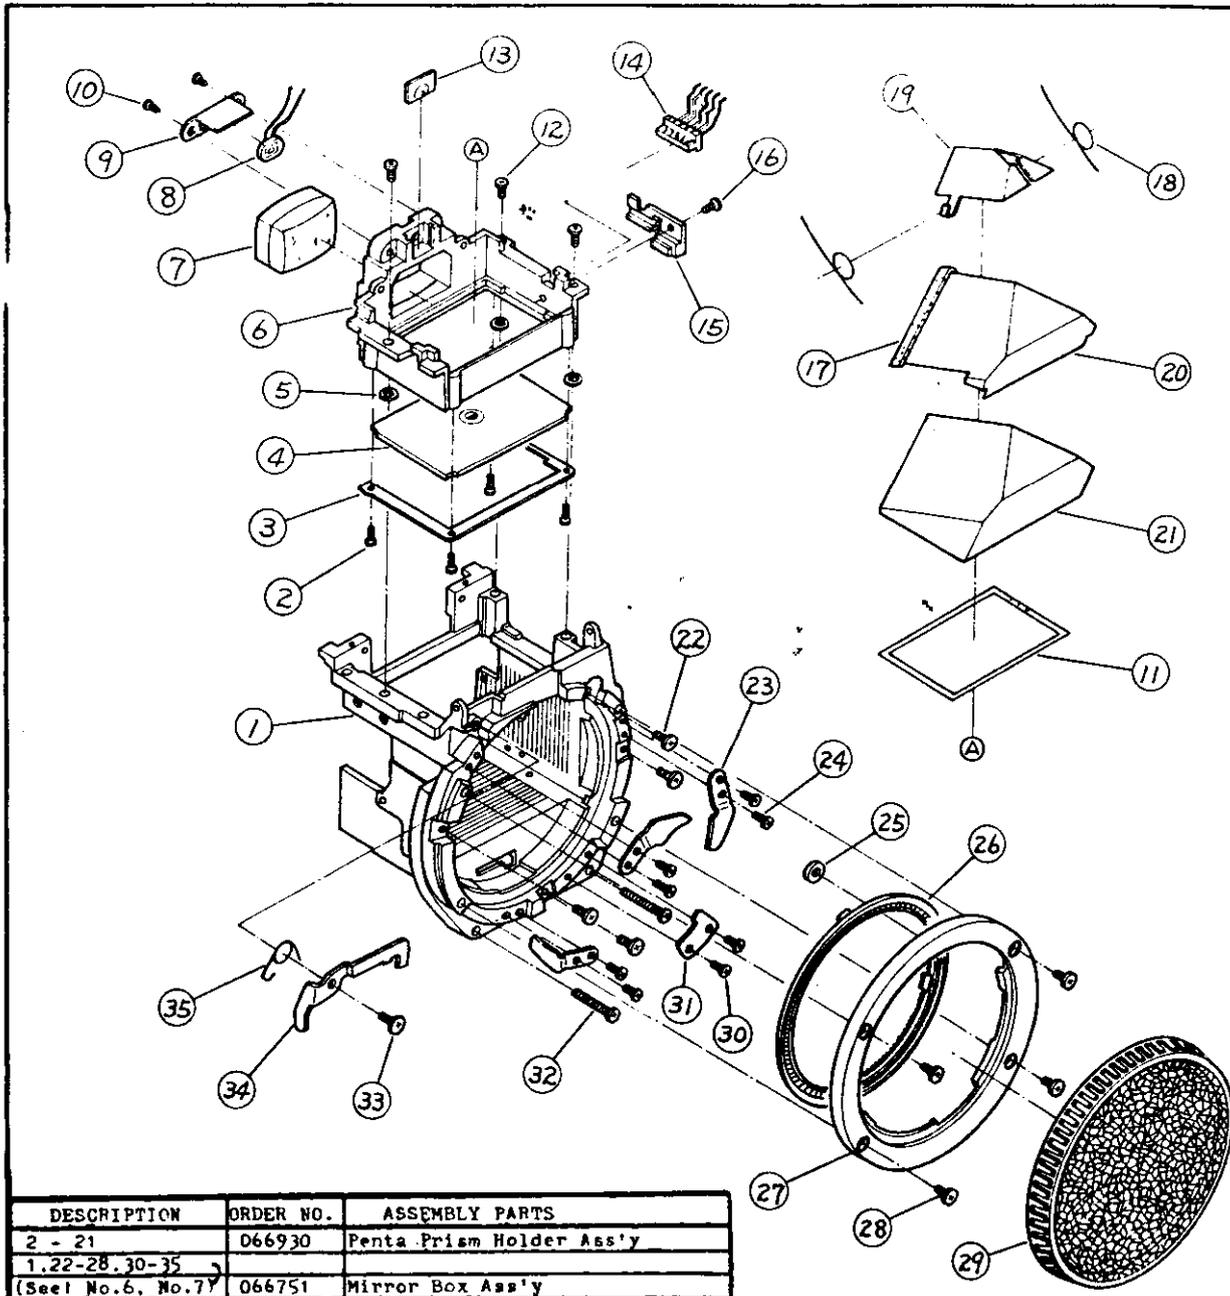

	PARTS NO.	DESCRIPTION	Q'TY
	1	★ Mirror Box	1
	2	69103564 Focusing Glass Fixer S.S.	4
	3	147840 Focusing Glass Fixer	1
	4	147839 Focusing Glass	1
	5	60111810 60121810, 60131810 (Select)	-
	6	147835 Penta Prism Holder	1
	7	147848 Eye-Piece Lens	1
	8	147503 S.P.D.	1
	9	147847 S.P.D. Fixer	1
	10	69102564 S.P.D. Fixer S.S.	2
	11	147841 Finder Mask Frame	1
	12	61914024 Penta Prism Holder S.S.	3
	13	142819 Light-Gathering Lens	1
	14	147504 L E D	1
	15	147842 LED Fixer	1
	16	69103564 LED Fixer S.S.	1
	17	147881 Penta Dust-Proof Moquette	1
	18	147838 Penta Prism Fixer Spring	2
	19	139862 Penta Prism Fixer	1
	20	147837 Penta Cap	1
	21	147836 Penta Prism	1
	22	66001041 F. Stop Connecting Ring S.S.	4
	23	139812 Mount Spring	3
	24	61913024 Mount Spring S.S.	6
	25	132489 Insulation Collar	1
	26	139823 F. Stop Connecting Ring	1
	27	147821 Body Mount	1
	28	131177 Body Mount S.S.	4
	29	128118 Body Cap	1
	30	61913024 Mount Stopper S.S.	2
	31	139813 Mount Stopper	1
	32	132143 Strap Holder S.S.	2
	33	147816 Lock Lever Shaft	1
	34	139815 Lock Lever	1
	35	147817 Lock Lever Spring	1


DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
2 - 21	066930	Penta Prism Holder Ass'y
1, 22-28, 30-35		
(See No.6, No.7)	066751	Mirror Box Ass'y

NOTE : (Parts with marked "★" are not Available)

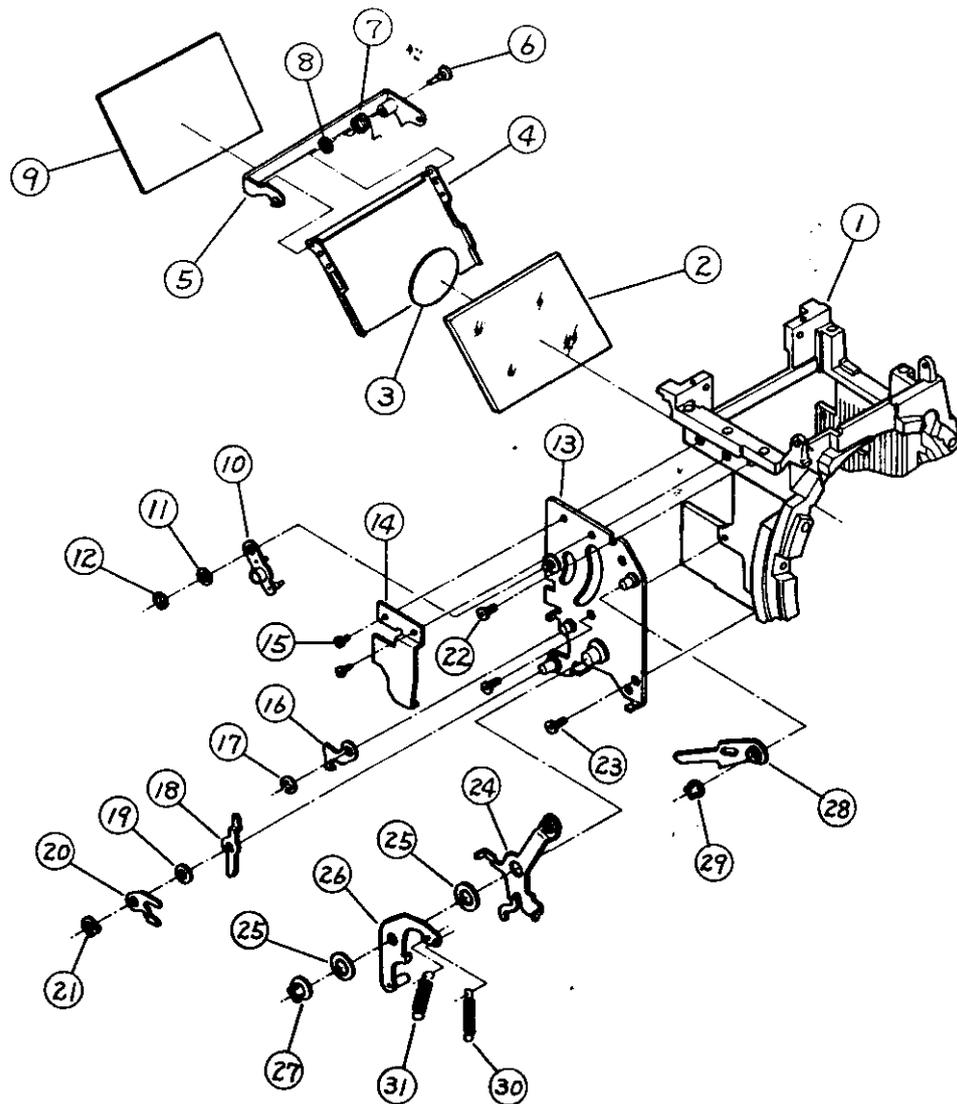

PARTS NO.	DESCRIPTION	Q'TY
1	★ Mirror Box	1
2	147791 Mirror	1
3	139774 Mirror Tape	1
4	065741 M Frame Ass'y	1
5	065253 ML-3 Ass'y	1
6	139796 M. Pin (2)	1
7	139798 M. Spring	1
8	60111513 60121513, 60131513 (Select)	-
9	139799 M. Frame Light-Proof Sheat	1
10	065214 MCL-4 Ass'y	1
11	60311510 MCL-4 Washer	-
12	66101225 E. Ring	1
13	066195 MC Base Plate Ass'v	1
14	147773 MC Light-Proof Plate	1
15	61901424 MC Light-Proof Plate S.S.	2
16	139770 MCL-5	1
17	66101525 E. Ring	1
18	139771 MCL-6	1
19	147766 MCL-6,7 Spacer	1
20	147772 MCL-7	1
21	66172024 E. Ring	1
22	61912024 MC Base Plate Ass'y S.S.	2
23	61812524 " "	1
24	065212 MCL-2 Ass'y	1
25	60223125 MCL-1,2. Fixer Washer	2
26	065297 MCL-1 Ass'y	1
27	66172024 E. Ring	1
28	065213 MCL-3 Ass'y	1
29	66172024 E. Ring	1
30	139761 MC Restore Spring	1
31	139760 MC Driving Spring	1

DESCRIPTION	ORDER NO	ASSEMBLY PARTS
2 - 9	066741	M. Frame Ass'y
13,16-21,24-31	066195	MC Base Plate Ass'y
1 - 31 (See No. 5, No. 7)	066751	Mirror Box Ass'y (See No. 42)

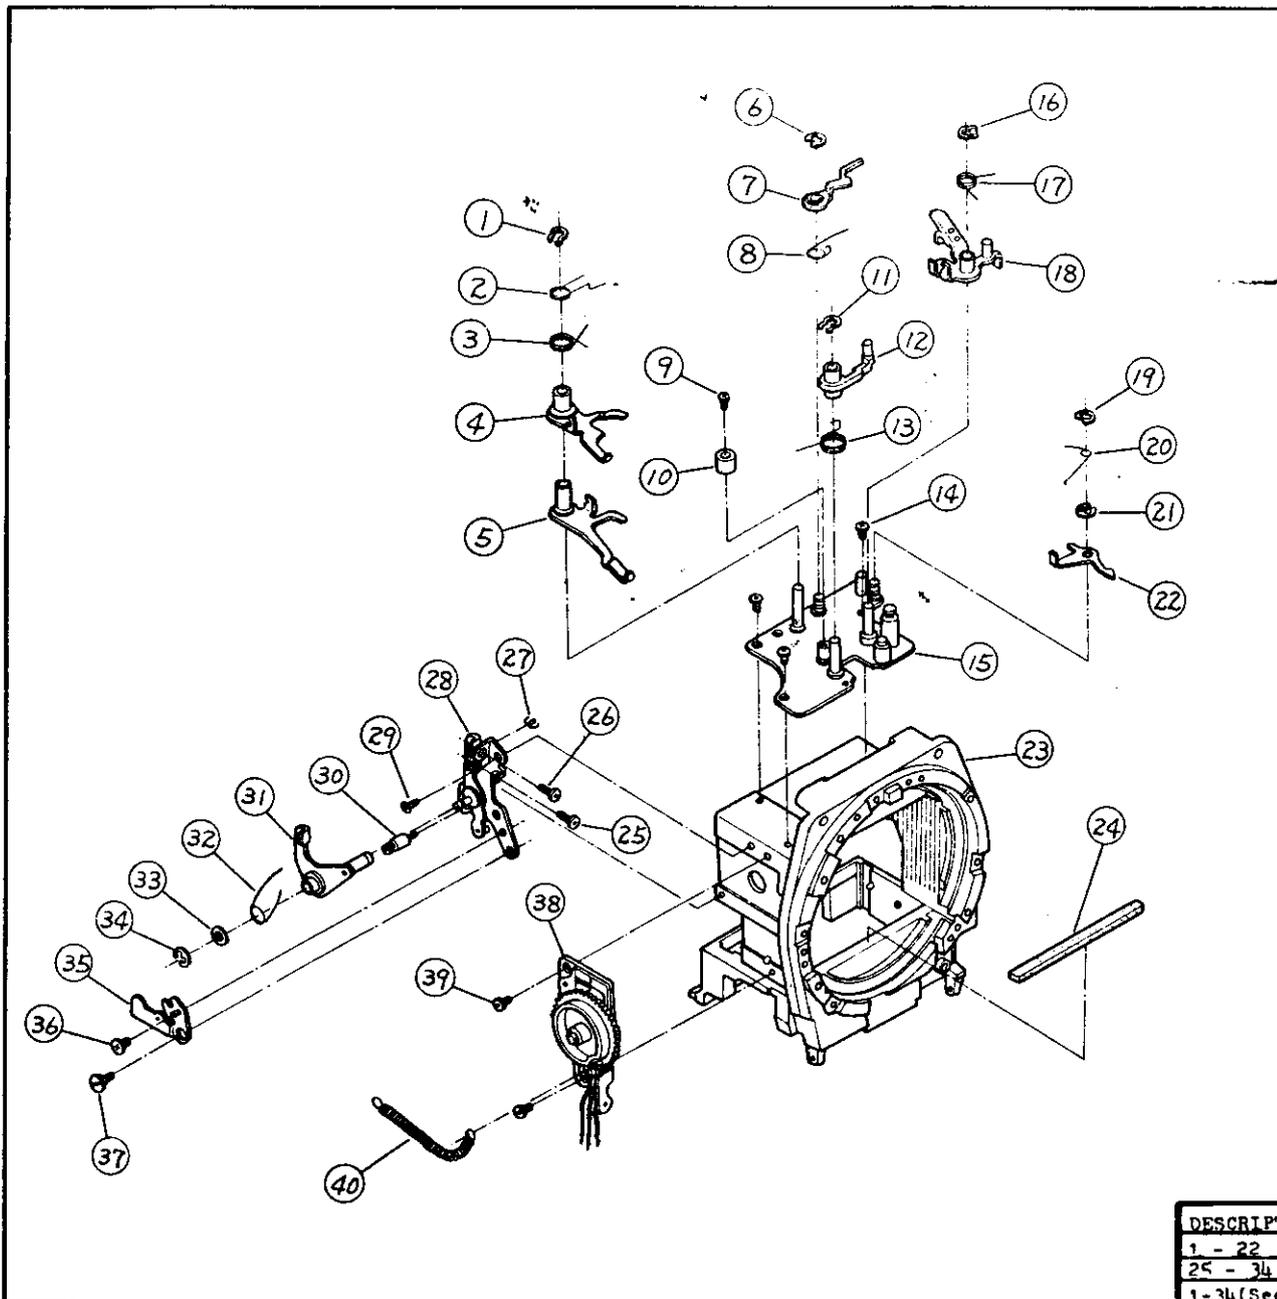

PARTS NO.	DESCRIPTION	Q'T
1 66172024	E. Ring	1
2 139721	QRL-2 Spring	1
3 139724	QRL-3 Spring	1
4 065202	QRL-2 Ass'y	1
5 065203	QRL-3 Ass'y	1
6 66101525	E. Ring	1
7 065205	QRL-5 Ass'y	1
8 139730	QRL-5 Spring	1
9 63902024	QR Stoppen S.S.	1
10 147710	QR Stopper	1
11 66172024	E. Ring	1
12 147725	QRL-4	1
13 147727	QRL-4 Spring	1
14 61912024	QR Base Plate Ass'y S.S.	3
15 066197	QR Base Plate Ass'y	1
16 66172024	E. Ring	1
17 139716	QRL-1 Spring	1
18 065201	QRL-1 Ass'y	1
19 66101525	E. Ring	1
20 139732	QRL-6 Spring	1
21 66101525	E. Ring	1
22 139731	QRL-6	1
23	Mirror Box	1
24 147787	Mirror Cushion	1
25 63913024	ML-4 S.S.	1
26 63914022	ML Base Plate S.S.	1
27 139833	ML Base Plate Spring	1
28 065250	ML Base Plate Ass'y	1
29 61812524	ML Base Plate Ass'y S.S.	1
30 147831	Aperture Resistor Spring Post	1
31 065255	ML-5 Ass'y	1
32 139808	ML-4,5 Spring	1
33 60112110	128666, 128667 (Select)	-
34 66101525	E. Ring	1
35 139809	ML-6	1
36 63911524	S.S.	1
37 139834	ML-6 S.S.	1
38 147006	AVR Ass'y	1
39 61912224	AVR Ass'y S.S.	2
40 147830	Aperture Resistor Spring	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 22	066197	QR Base Plate Ass'y
25 - 34	065250	ML Base Plate Ass'y
1-34 (See No. 5, No. 6)	066751	Mirror Box Ass'y

NOTE : (Parts with marked "★" are not Available)