

Mamiya

PARTS CATALOG CLARIFICATION CHART

for
Mamiya C330 Professional *f*
and
Mamiya C330 Professional

Revised Edition

MMC330F


Mamiya
CAMERA CO., LTD.
TOKYO, JAPAN

P.C.78-5-C330F

P.C.78-5-C330

C.C.78-5-C330F

C.C.78-5-C330


EXPLODED VIEWS


Mamiya C330 Professional ***f***

NOTE : The parts with its parts number in square
are exclusively used for the C330f.


Mamiya



Mamiya C330f Professional

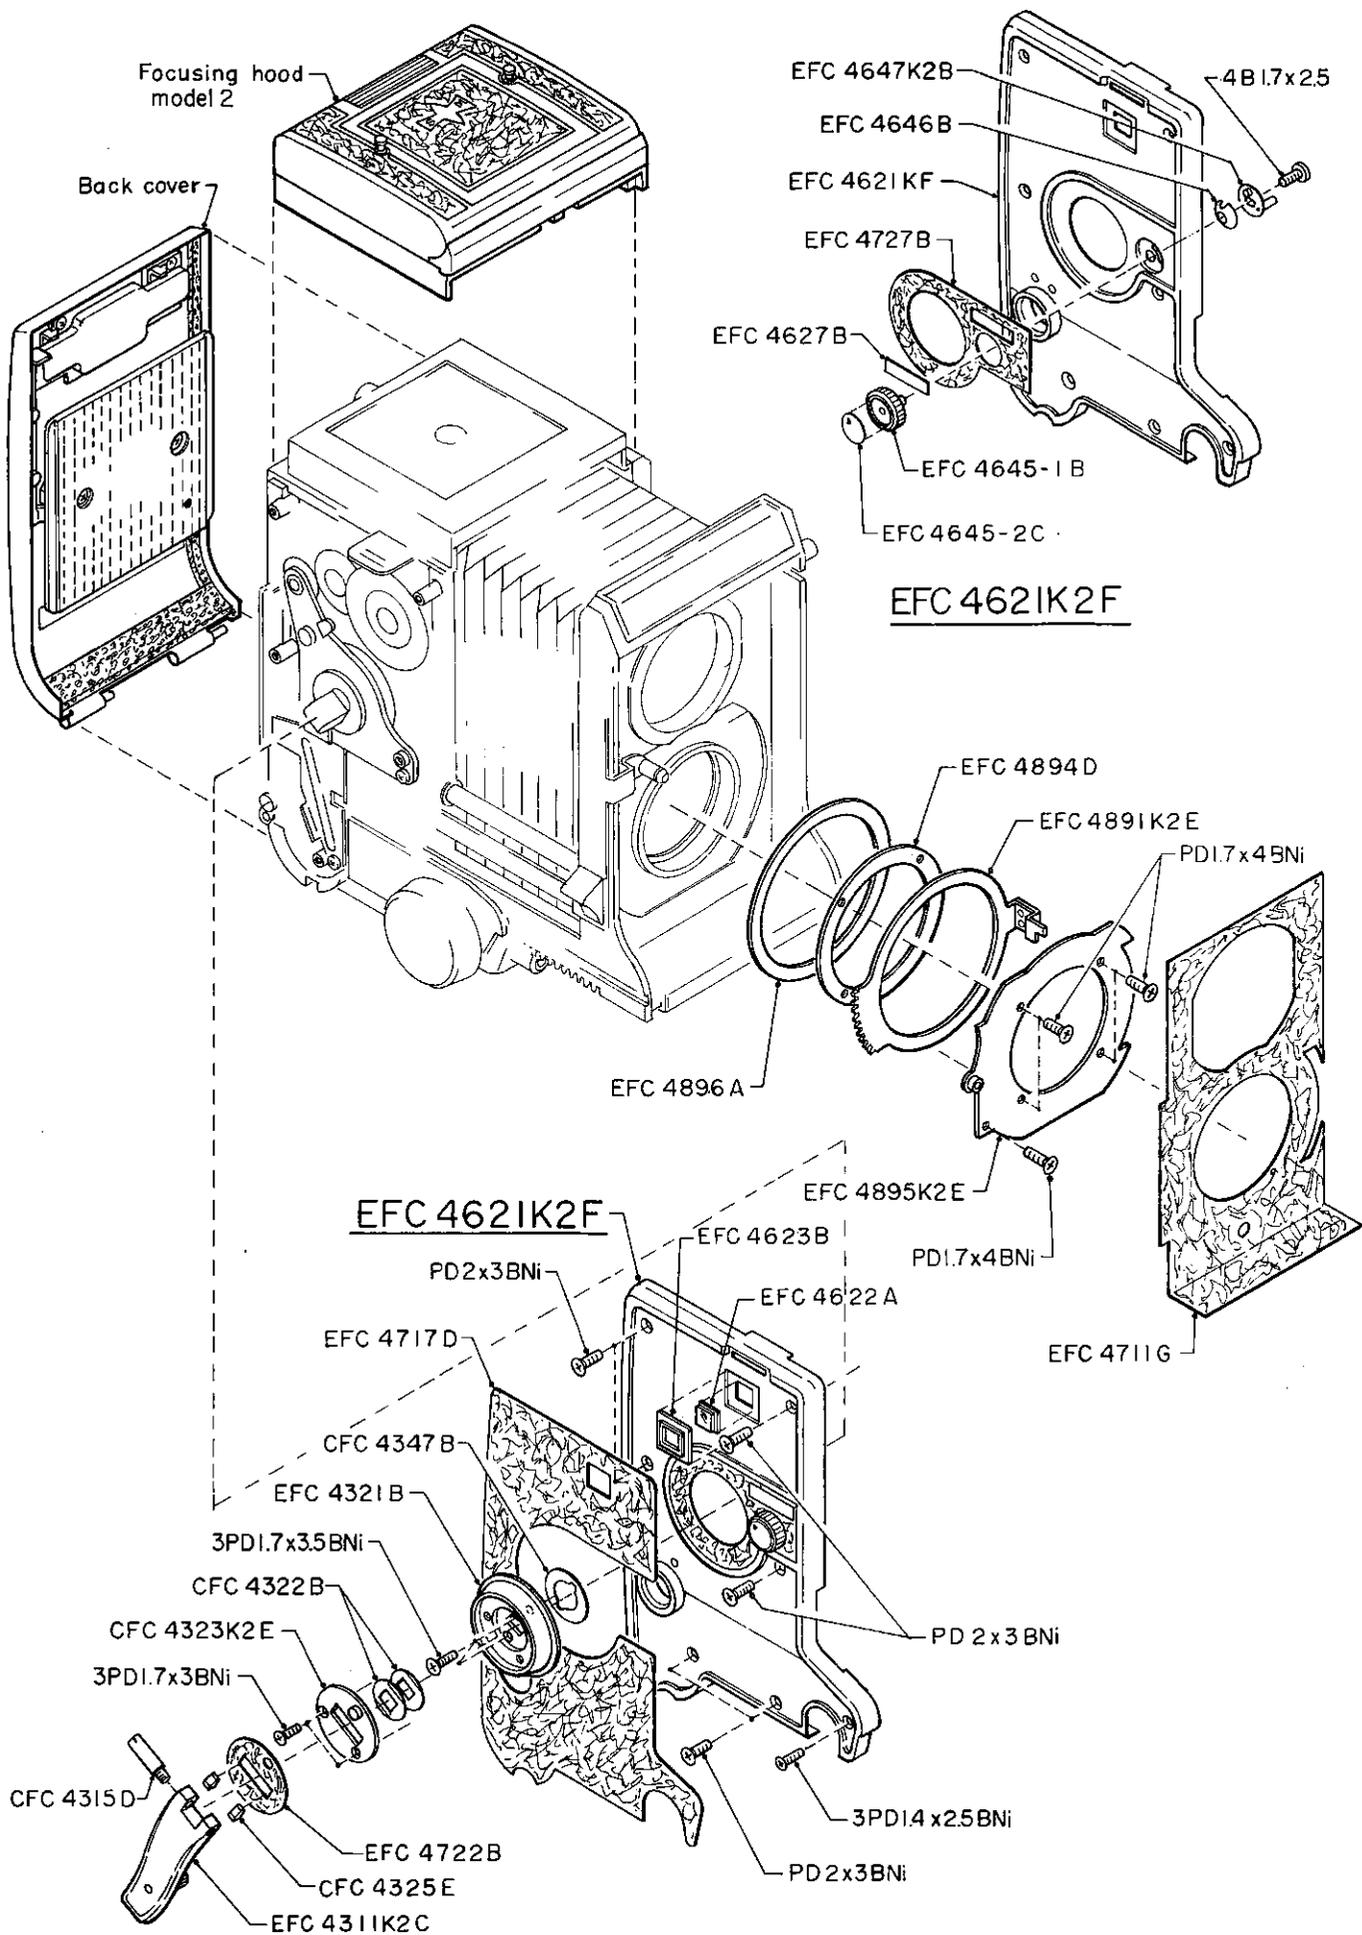

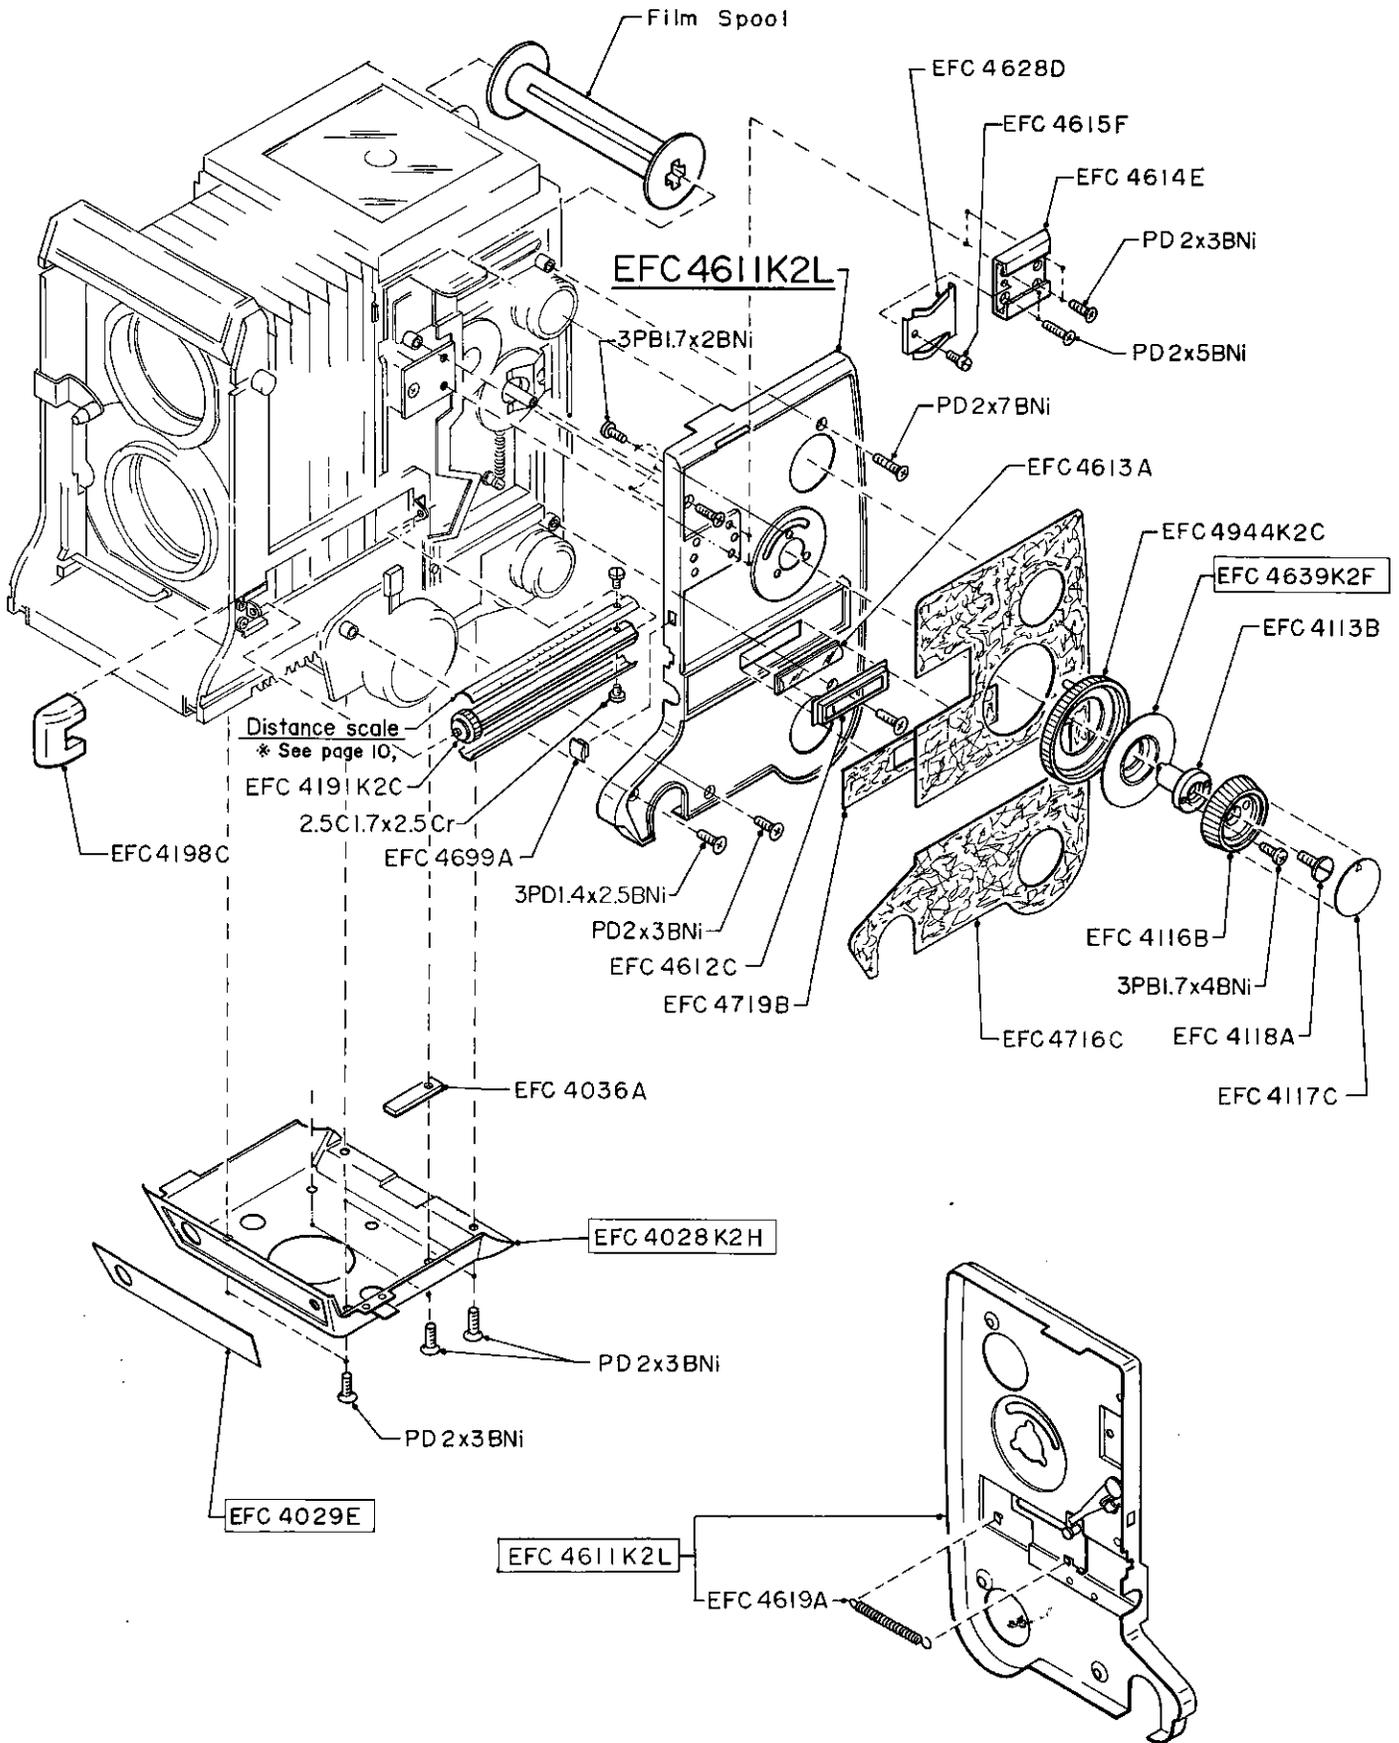


EFC4611K2L

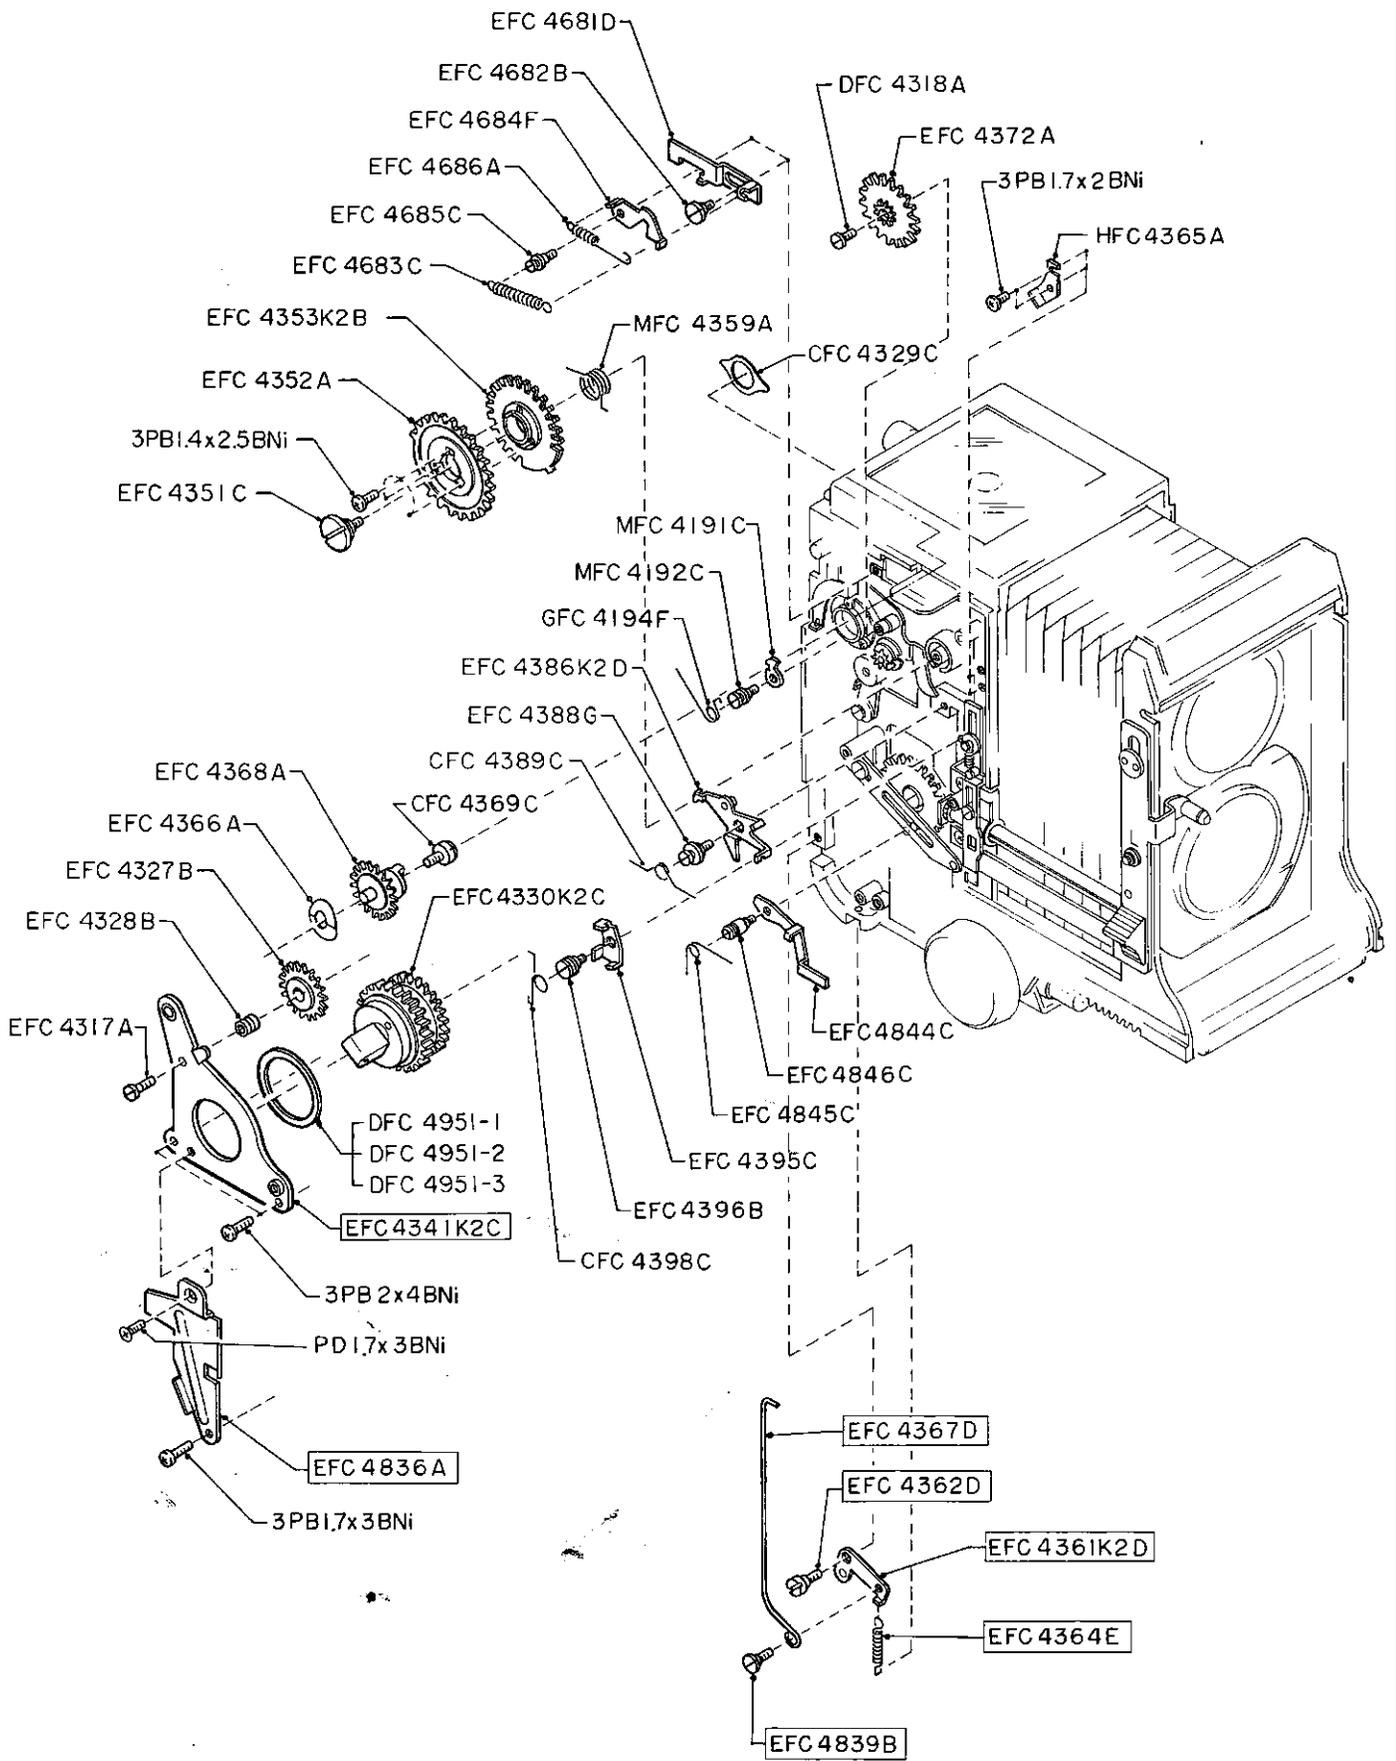


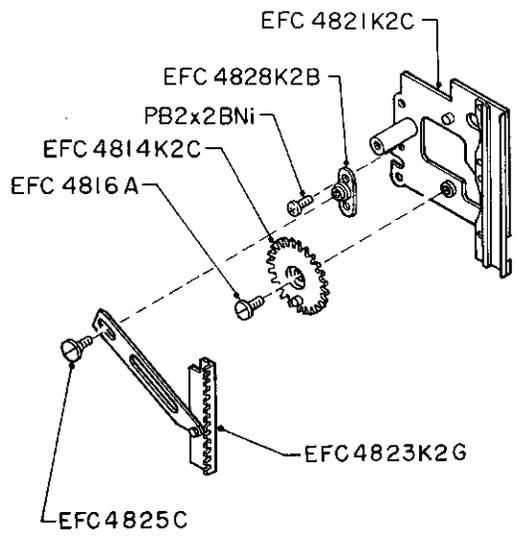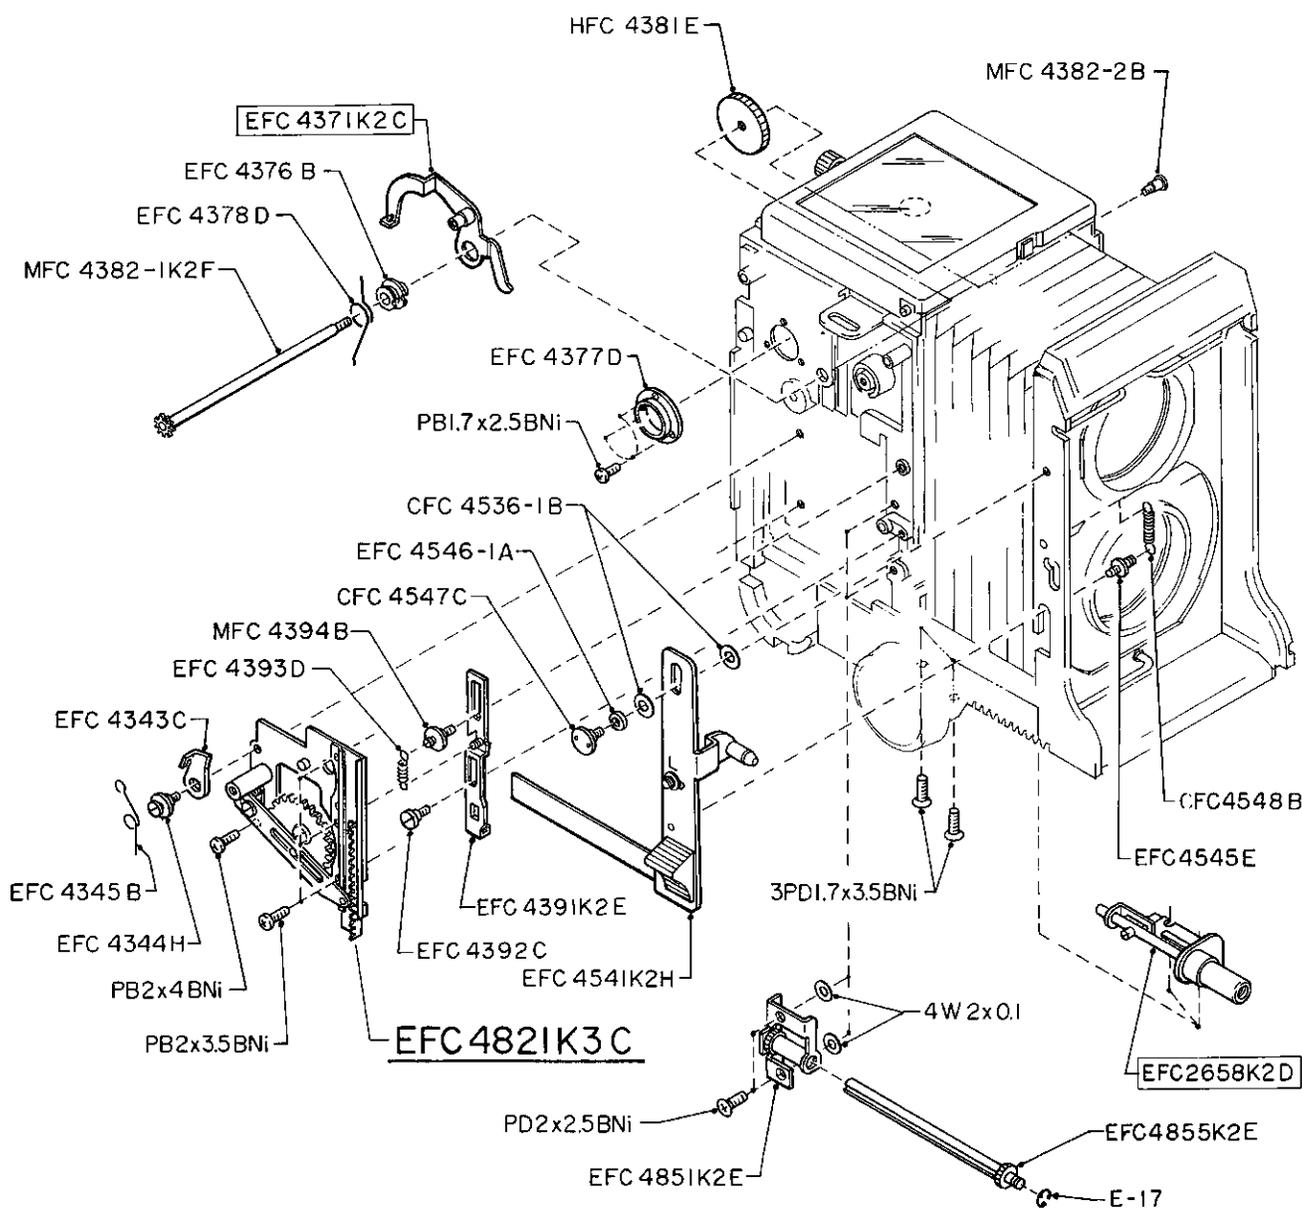



EFC 4821K3 C

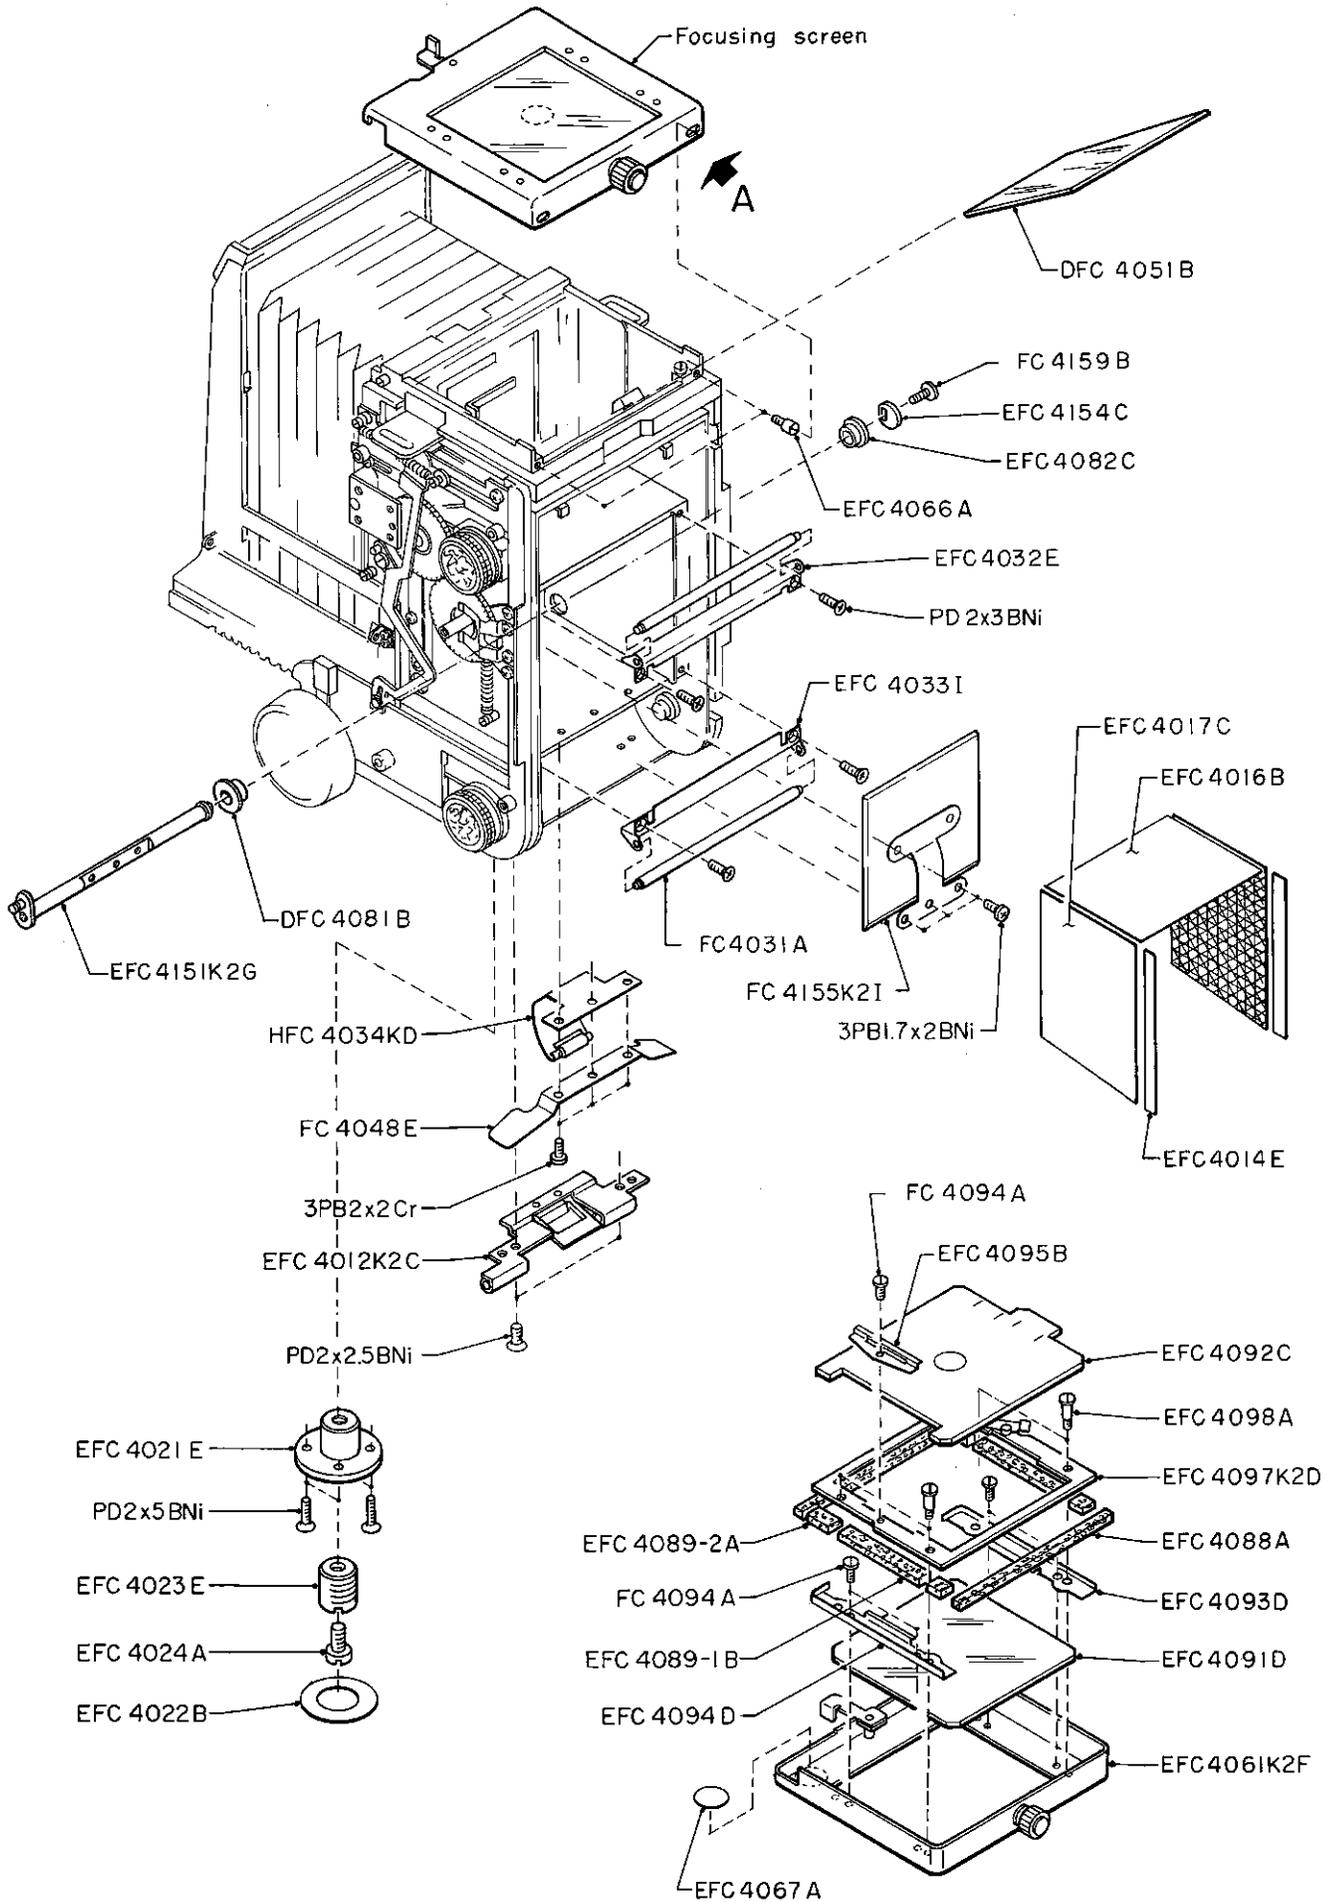


DETAIL "A"

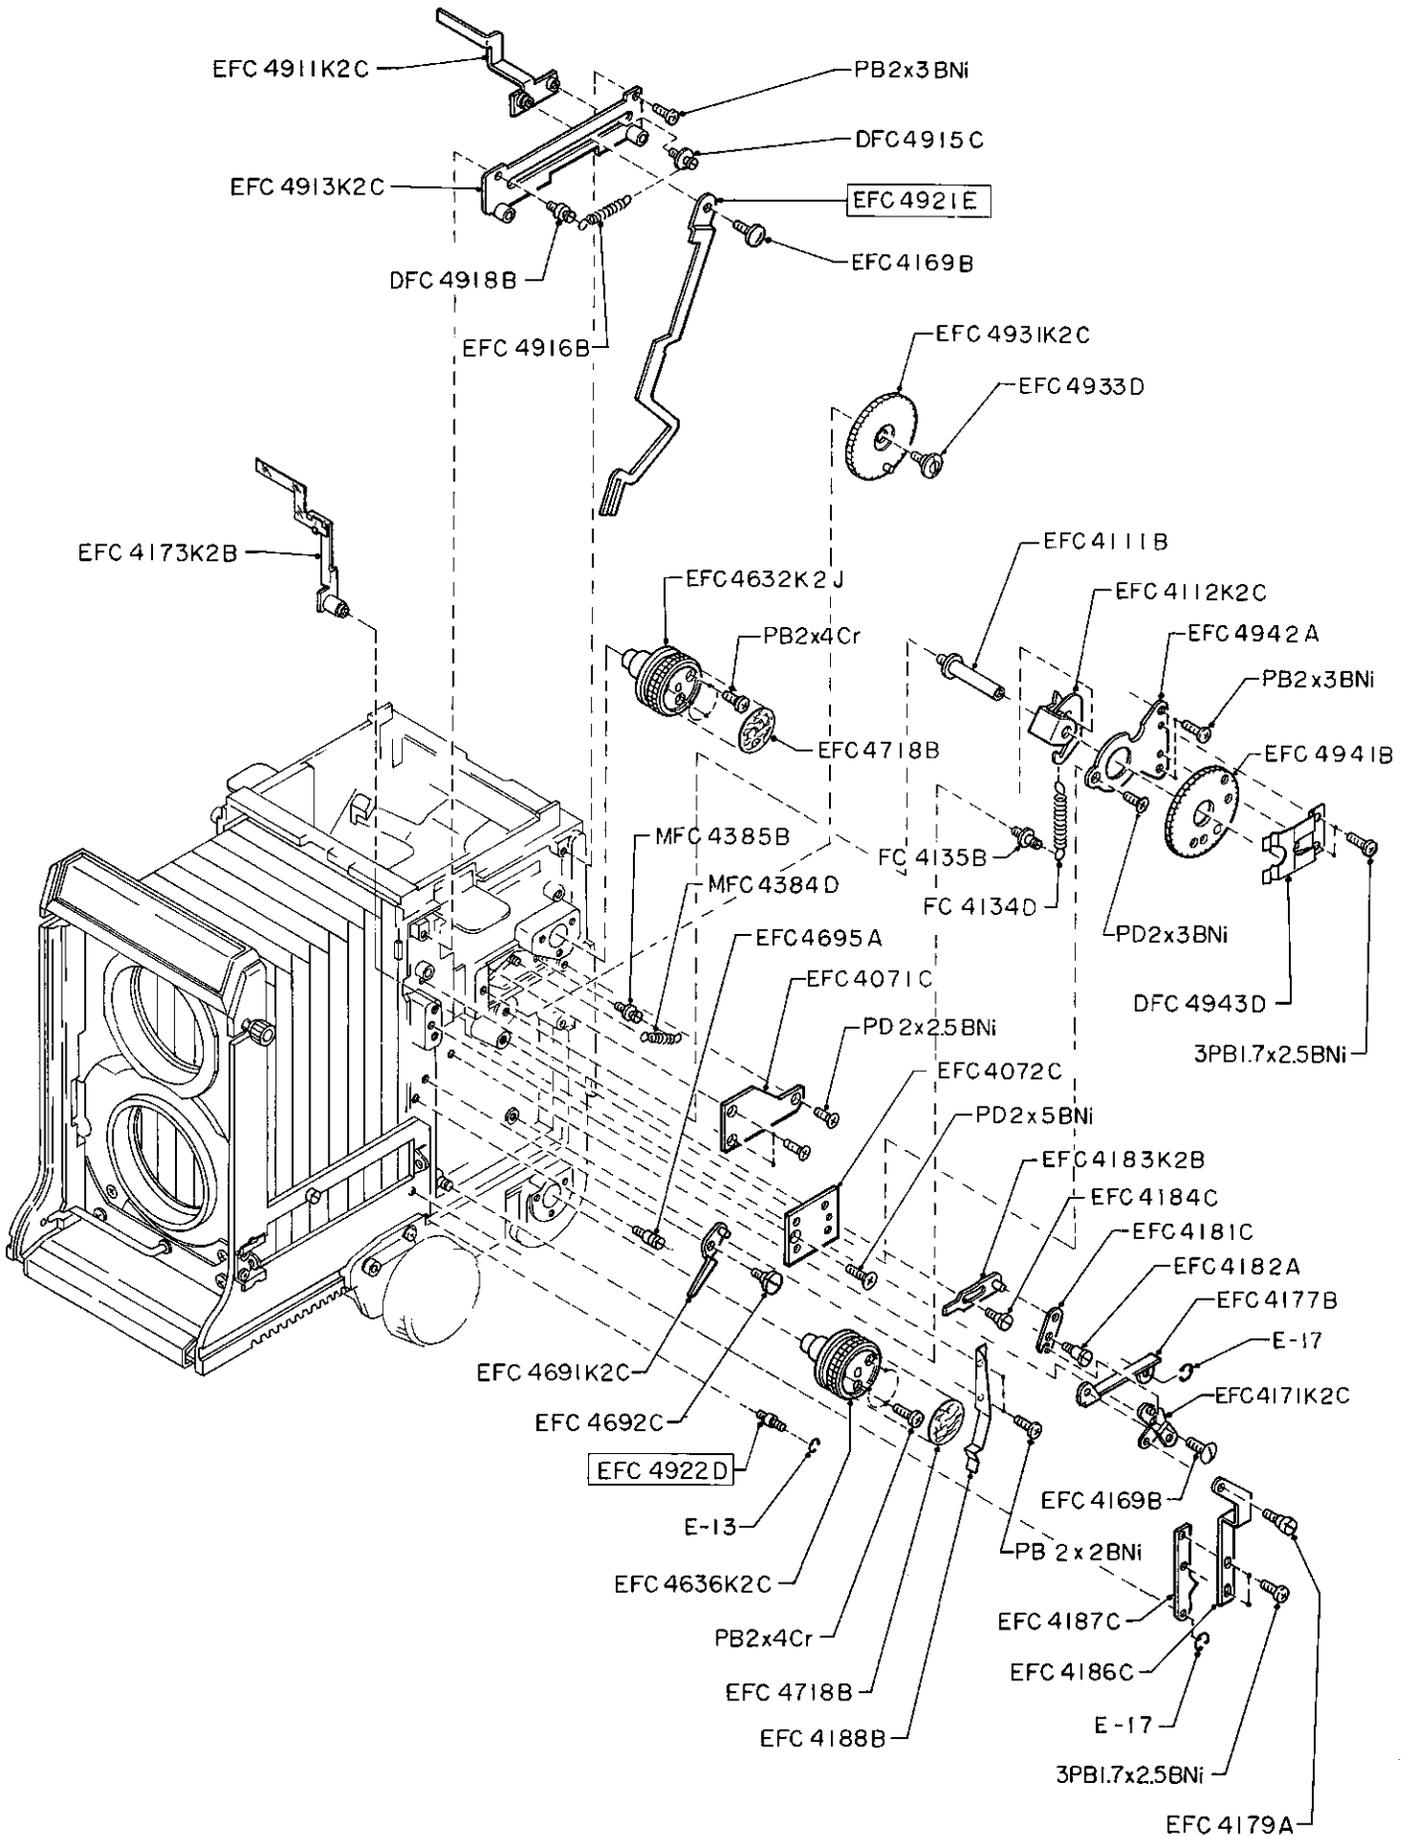

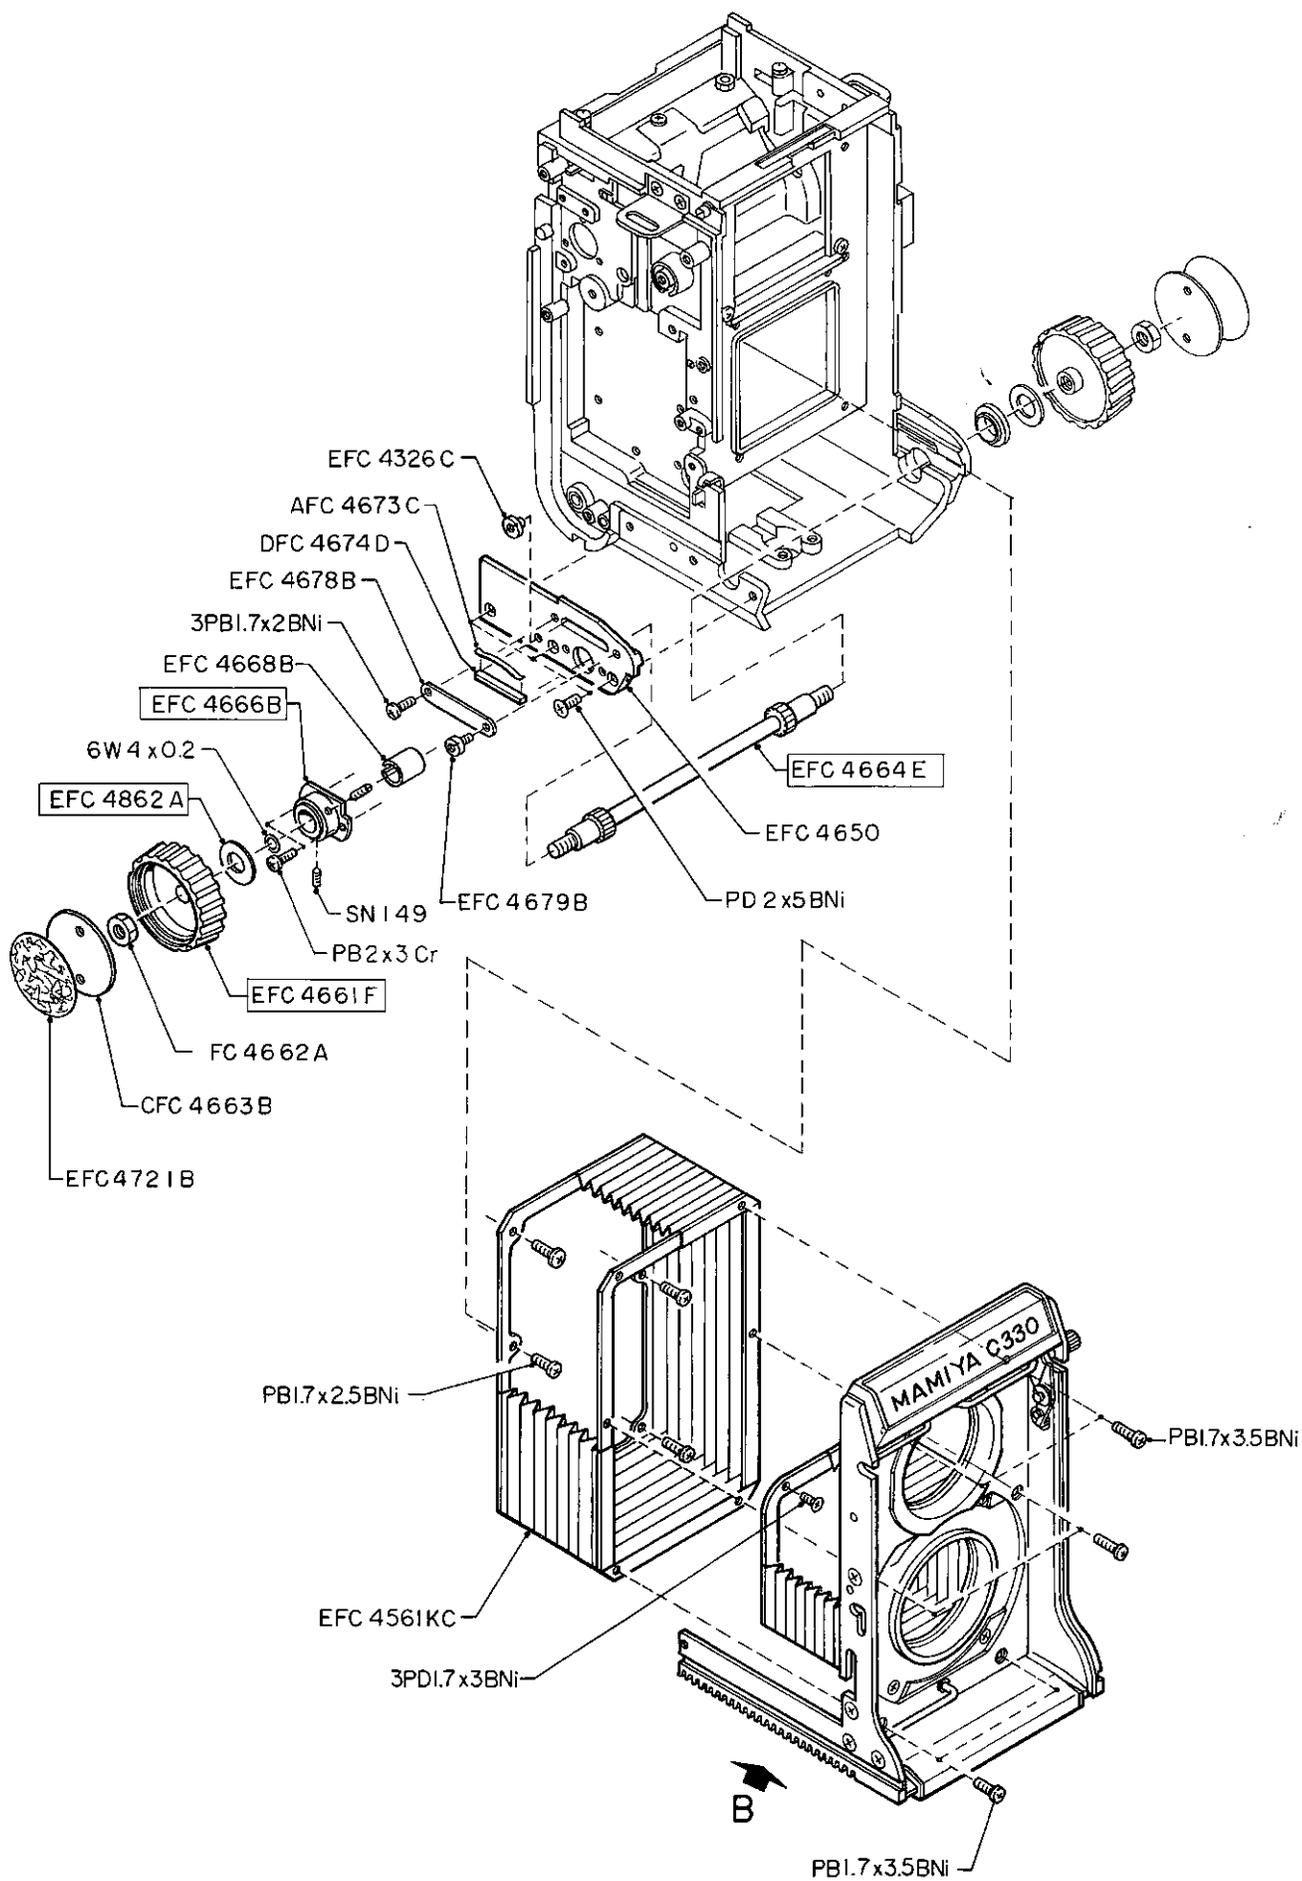


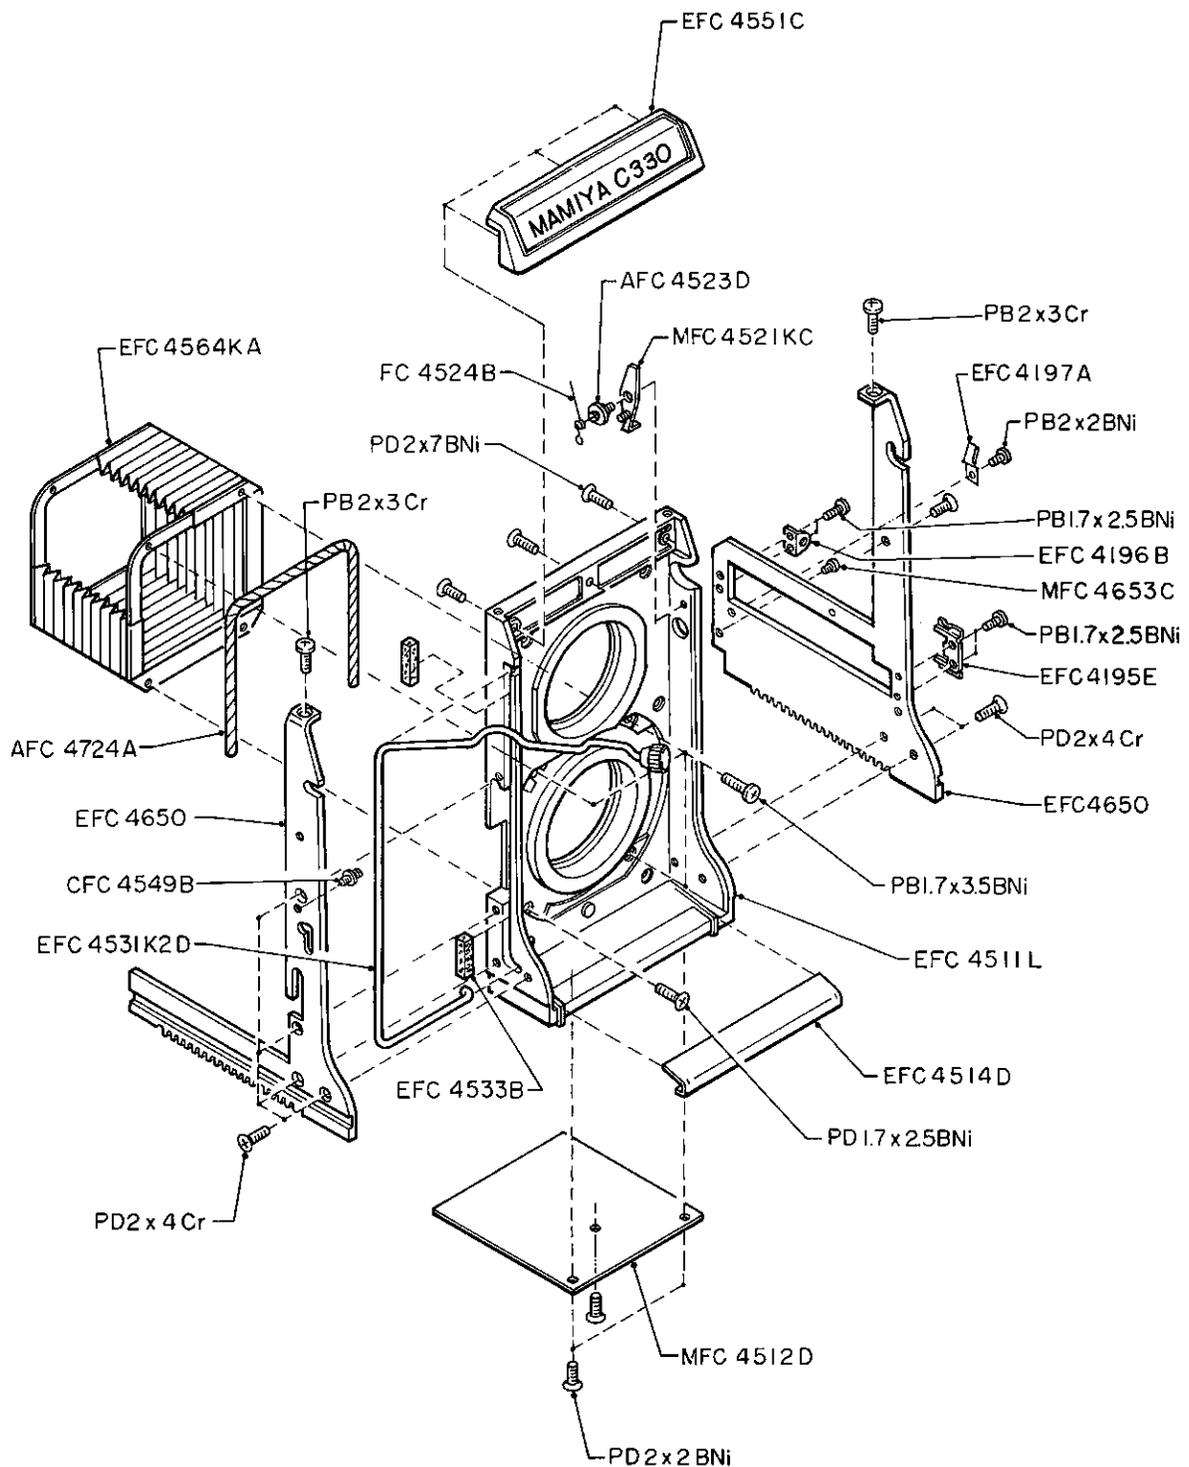


DETAIL "B"

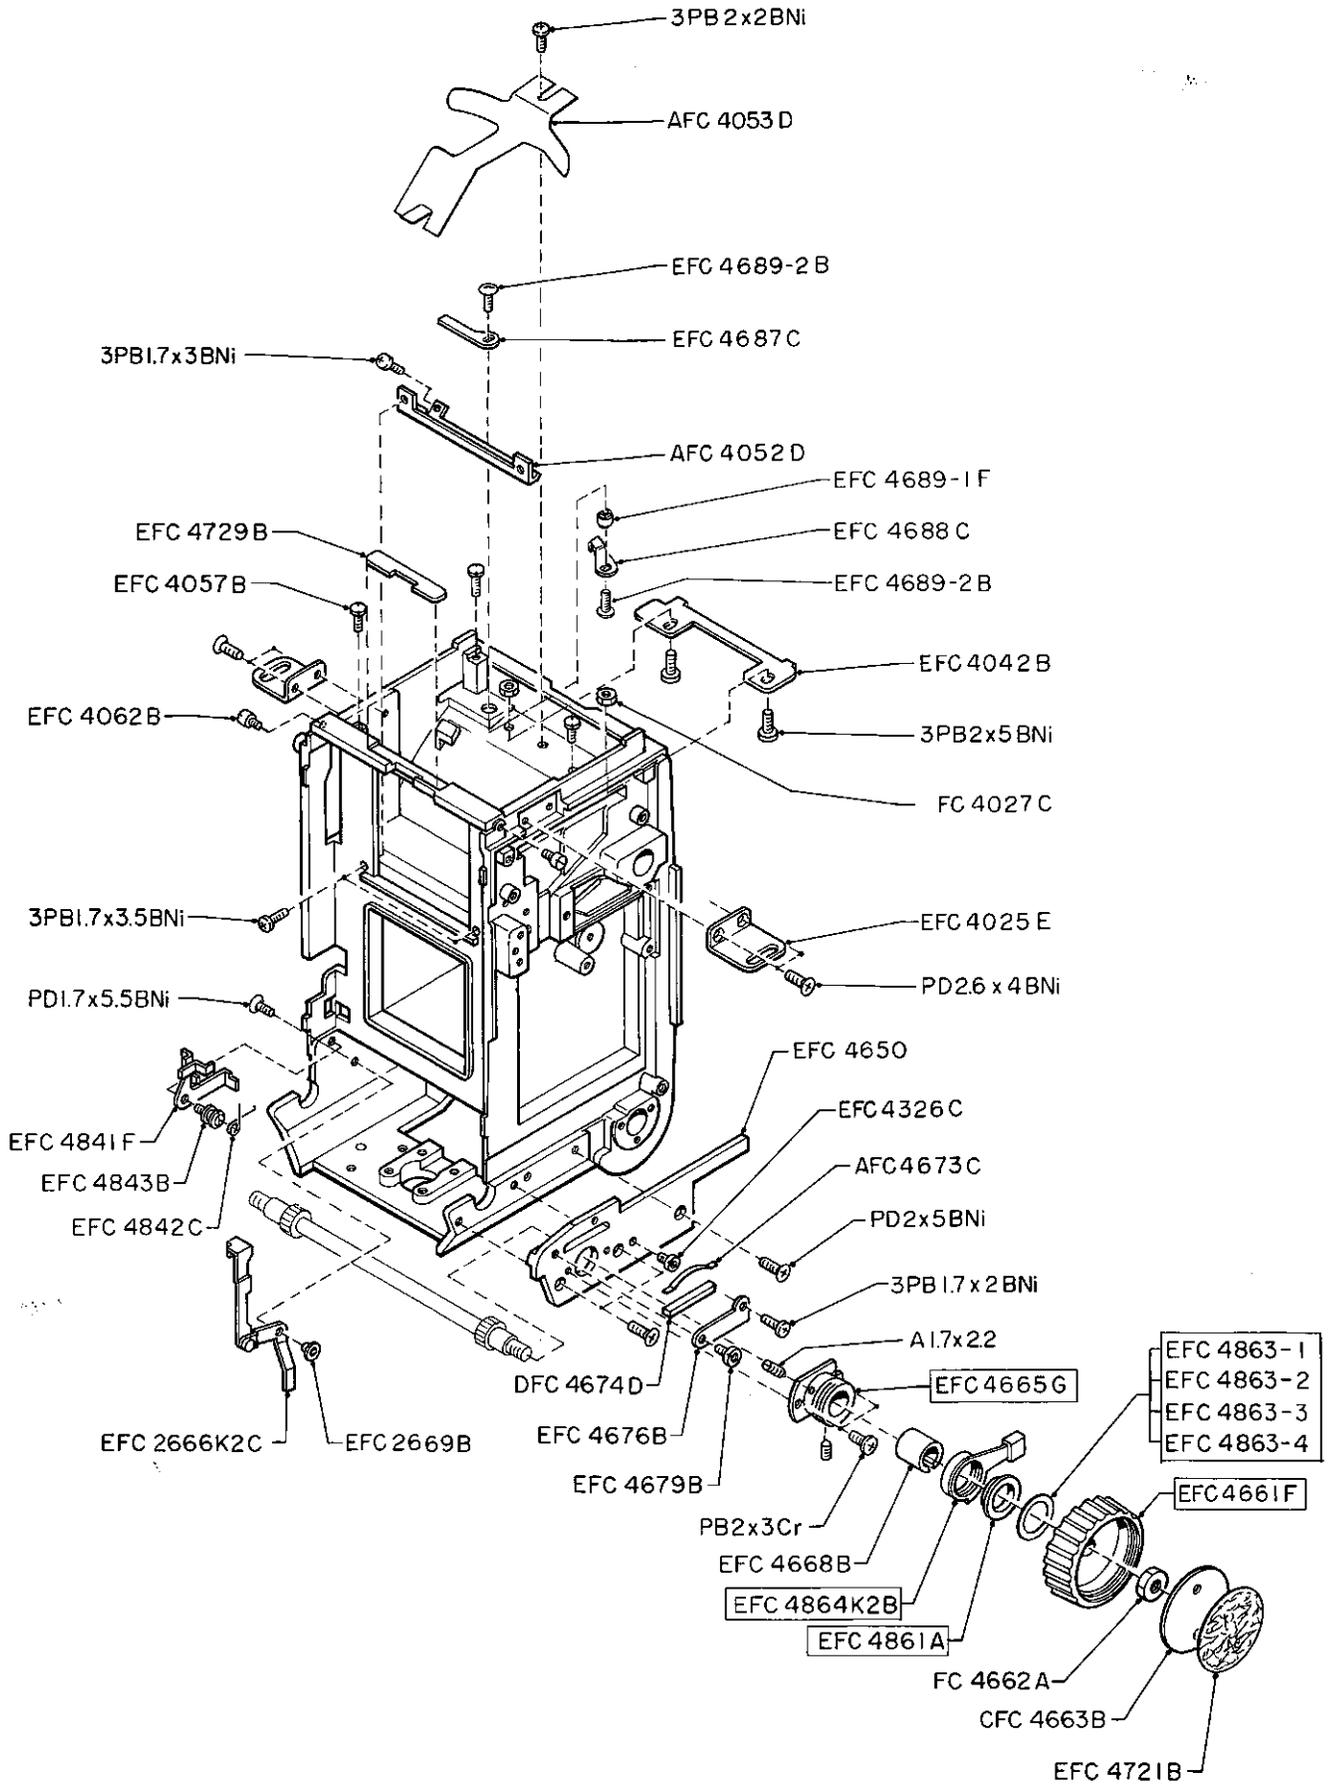

Back cover standard

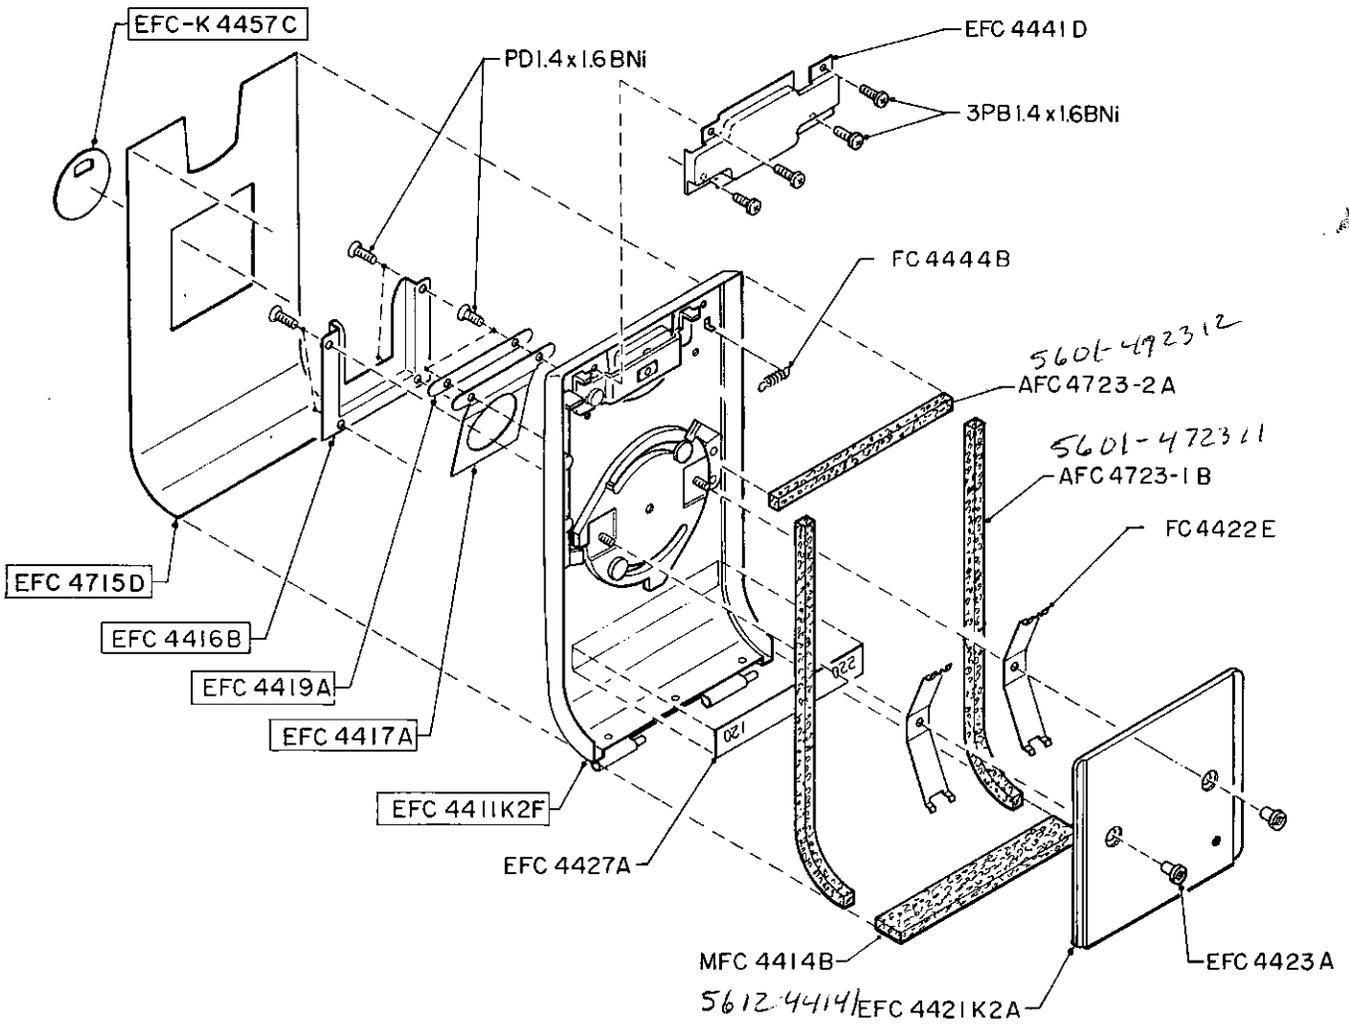

Distance scale Meter



EFC 5311 B

180 mm
65 mm
80 mm


EFC 5312 C

105 mm
135 mm
250 mm

EFC 5313 A

105 mm
135 mm
250 mm

Distance scale Feet



EFC 5321 C

180 mm feet
65 mm feet
80 mm feet


EFC 5323 A

105 mm feet
135 mm feet
250 mm feet

EFC 5324 A

105 mm feet
135 mm feet
250 mm feet

Focusing hood model 2

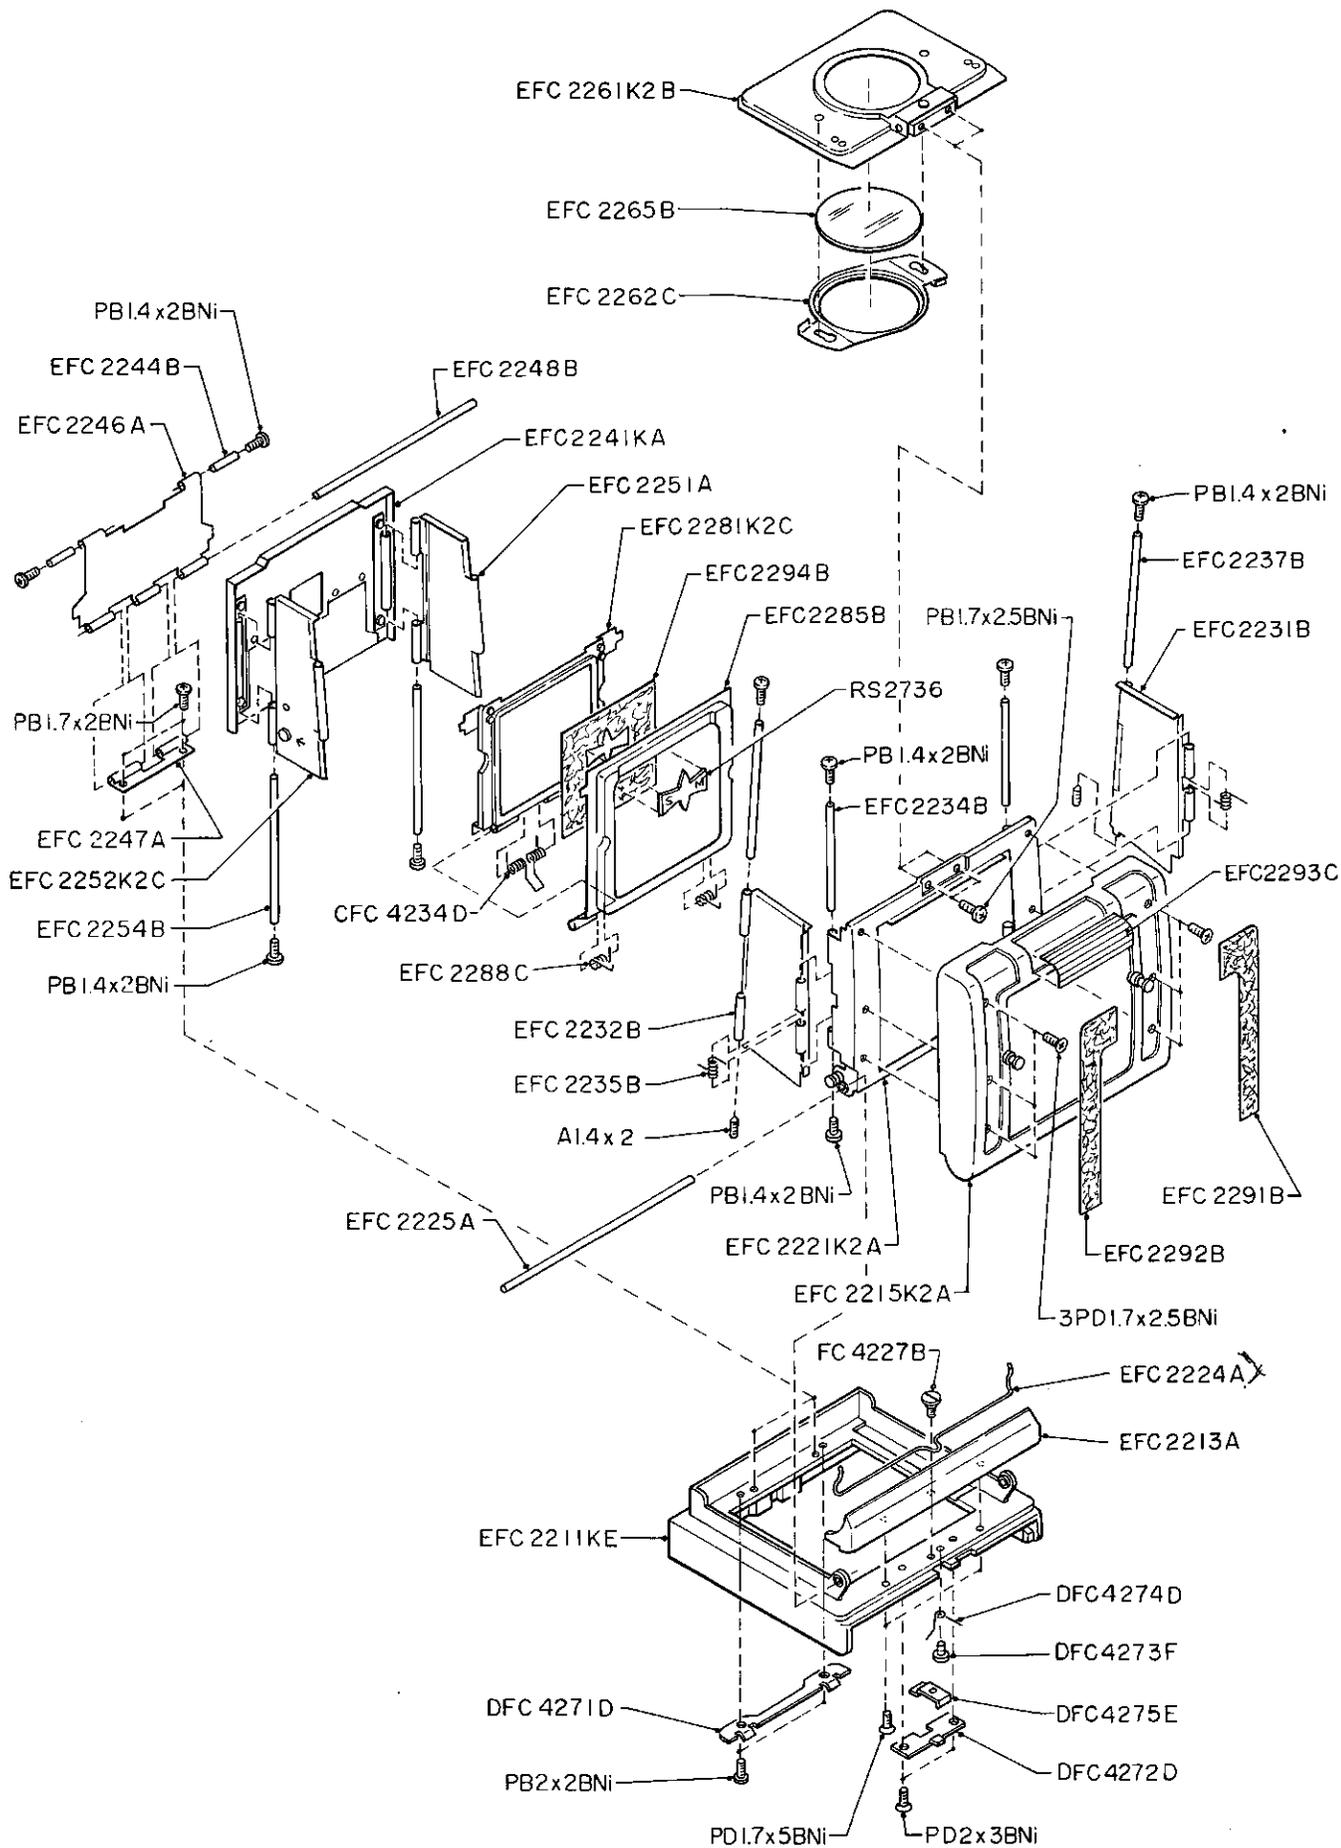

PARTS LIST

Mamiya C330 Professional *f*

Mamiya

NOTE : The parts with its parts number in square
are exclusively used for the C330f.

MAMIYA C330 professional f (Body only)

Parts No.	Description	Pcs.	Ref. Page
EFC2658K2D	Shutter button bracket assy.	1	4
EFC2666K2C	Joint	1	9
EFC2669B	Hub	1	9
EFC4012K2C	Hinge assy.	1	5
EFC4014E	Plate	2	5
EFC4016B	Reflection absorber paper	1	5
EFC4017C	Reflection absorber paper	2	5
EFC4021E	Tripod socket	1	5
EFC4022B	Leatherette	1	5
EFC4023E	Tripod socket adapter 1/4"	1	5
EFC4024A	Screw	1	5
EFC4025E	Strap loop	2	9
EFC4028K2H	Bottom cover	1	2
EFC4029E	Name plate	1	2
EFC4032E	Bracket	1	5
EFC4033I	Bracket	1	5
EFC4036A	Plate	1	2
EFC4042B	Catch plate	1	9
EFC4057B	Adjusting screw	3	9
EFC4061K2F	Frame focusing screen	1	5
EFC4062B	Screw	2	9
EFC4066A	Guide screw	2	5
EFC4067A	Level	1	5
EFC4071C	Cover	1	6
EFC4072C	Base	1	6
EFC4082C	Sleeve bush	1	5
EFC4088A	Cushion	2	5
EFC4089-1B	Cushion	2	5
EFC4089-2A	Cushion	4	5
EFC4091D	Dustproof glass	1	5
EFC4092C	Fresnel lens	1	5
EFC4093D	Glass holder	1	5
EFC4094D	Glass holder	1	5
EFC4095B	Fresnel holder	1	5
EFC4097K2D	Frame for fresnel lens	1	5

Parts No.	Description	Pcs.	Ref. Page
EFC4098A	Shoulder screw	4	5
EFC4111B	Lock crank shaft	1	6
EFC4112K2C	Lock crank assy.	1	6
EFC4113B	Shaft	1	2
EFC4116B	Knob	1	2
EFC4117C	Knob cover	1	2
EFC4118A	Screw	1	2
EFC4151K2G	Light-tight flap shaft	1	5
EFC4154C	Safety base	1	5
EFC4169B	Screw	2	6
EFC4171K2C	Base plate	1	6
EFC4173K2B	Red warning signal	1	6
EFC4177B	Lock plate	1	6
EFC4179A	Shoulder screw	1	6
EFC4181C	Lever	1	6
EFC4182A	Shoulder screw	1	6
EFC4183K2B	Slide plate	1	6
EFC4184C	Shoulder screw	1	6
EFC4186C	Linking bar	1	6
EFC4187C	Linking bar	1	6
EFC4188B	Spring	1	6
EFC4191K2C	Scale bar assy.	1	2
EFC4195E	Scale holder	1	8
EFC4196B	Scale holder	1	8
EFC4197A	Spring	1	8
EFC4198C	Scale cover	1	2
EFC4311K2C	Winding crank	1	1
EFC4317A	Screw	1	3
EFC4321B	Coupling base	1	1
EFC4326C	Boss	2	7.9
EFC4327B	Idle gear	1	3
EFC4328B	Hub	1	3
EFC4330K2C	Winding gear assy.	1	3
EFC4341K2C	Winding base plate	1	3
EFC4343C	Pawl	1	4

Parts No.	Description	Pcs.	Ref. Page
EFC4344H	Anchor	1	4
EFC4345B	Spring	1	4
EFC4351C	Shoulder screw	1	3
EFC4352A	Counter	1	3
EFC4353K2B	Counter dividing device	1	3
EFC4361K2D	Counter rist	1	3
EFC4362D	Shoulder screw	1	3
EFC4364E	Spring	1	3
EFC4366A	Friction washer	1	3
EFC4367D	Linking rod	1	3
EFC4368A	Take-up gear	1	3
EFC4371K2C	Release lever	1	4
EFC4372A	Gear	1	3
EFC4376B	Flanged screw	1	4
EFC4377D	Gear shaft hub	1	4
EFC4378D	Spring	1	4
EFC4386K2D	Winding stop lever	1	3
EFC4388G	Guide screw	1	3
EFC4391K2E	Winding stop rest lever	1	4
EFC4392C	Guide screw	1	4
EFC4393D	Spring	1	4
EFC4395C	Stopper	1	3
EFC4396B	Shoulder screw	1	3
EFC4511L	Front panel	1	8
EFC4514D	Front cover	1	8
EFC4531K2D	Wire spring	1	8
EFC4533B	Packing strip	2	8
EFC4541K2H	L shape slider assy.	1	4
EFC4545E	Shoulder screw	1	4
EFC4546-1A	Collar	1	4
EFC4551C	Name plate	1	8
EFC4561KC	Large bellows	1	7
EFC4564KA	Small bellows	1	8
EFC4611K2L	Right panel assy.	1	2
EFC4612C	Frame	1	2

Parts No.	Description	Pcs.	Ref. Page
EFC4613A	Distanec scale window	1	2
EFC4614E	Accessory shoe	1	2
EFC4615F	Stopper	1	2
EFC4619A	Spring	1	2
EFC4621K2F	Left panel assy.	1	1
EFC4621KF	Left panel	1	1
EFC4622A	Window	1	1
EFC4623B	Frame	1	1
EFC4627B	Plate	1	1
EFC4628D	Shoe cover	1	2
EFC4632K2J	S P knob assy. Upper	1	6
EFC4636K2C	S P knob assy. Lower	1	6
EFC4639K2F	Lock unlock disc	1	2
EFC4645-1B	Knob	1	1
EFC4645-2C	Cover	1	1
EFC4646B	Spring	1	1
EFC4647K2B	Change-over lever	1	1
EFC4650	Rack plate unit	4	7,8,9
EFC4661F	Focusing knob	2	7,9
EFC4664E	Pinion shaft	1	7
EFC4665G	Pinion shaft hub	1	9
EFC4666B	Pinion shaft hub	1	7
EFC4668B	Pipe	2	7,9
EFC4676B	Cover plate	1	9
EFC4678B	Cover plate left	1	7
EFC4679B	Stud	2	7,9
EFC4681D	Change plate "120,220"	1	3
EFC4682B	Screw	1	3
EFC4683C	Spring	1	3
EFC4684F	Lever	1	3
EFC4685C	Shaft	1	3
EFC4686A	Spring	1	3
EFC4687C	Change Lever	1	9
EFC4688C	Click Lever	1	9
EFC4689-1F	Hub	1	9

Parts No.	Description	Pcs.	Ref. Page
EFC4689-2B	Screw	2	9
EFC4691K2C	Moving plate	1	6
EFC4692C	Shoulder screw	1	6
EFC4695A	Stopper	1	6
EFC4699A	Cover	1	2
EFC4711G	Leatherette	1	1
EFC4716C	Leatherette	1	2
EFC4717D	Leatherette	1	1
EFC4718B	Leatherette	2	6
EFC4719B	Leatherette	1	2
EFC4721B	Leatherette	2	7,9
EFC4722B	Leatherette	1	1
EFC4727B	Leatherette	1	1
EFC4729B	Plate	1	9
EFC4814K2C	Gear	1	4
EFC4816A	Screw	1	4
EFC4821K3C	Shutter cocking gear train	1	4
EFC4821K2C	Base plate	1	4
EFC4823K2G	Rack plate	1	4
EFC4825C	Screw	1	4
EFC4828K2B	Adjusting hub	1	4
EFC4836A	Protect plate	1	3
EFC4839B	Shoulder screw	1	3
EFC4841F	Safety lever	1	9
EFC4842C	Spring	1	9
EFC4843B	Screw	1	9
EFC4844C	Release lever	1	3
EFC4845C	Spring	1	3
EFC4846C	Screw	1	3
EFC4851K2E	Cocking link gear	1	4
EFC4855K2E	Cocking shaft	1	4
EFC4861A	Setting ring	1	9
EFC4862A	Washer	1	7
EFC4863-1	Adjusting washer t=0.1	1to2	9
EFC4863-2	Adjusting Washer t=0.2	1to2	9

Parts No.	Description	Pcs.	Ref. Page
EFC4863B-3	Adjusting washer t=0.5	1to2	9
EFC4863-4	Adjusting washer t=0.8	1to2	9
EFC4864K2B	Focusing fixing lever	1	9
EFC4891K2E	Cocking ring	1	1
EFC4894D	Ring	1	1
EFC4895K2E	Rim plate	1	1
EFC4896A	Washer	1	1
EFC4911K2C	Parallax indicator	1	6
EFC4913K2C	Guide rail	1	6
EFC4916B	Spring	1	6
EFC4921E	Linking bar	1	6
EFC4922D	Stopper	1	6
EFC4931K2C	Parallax gear No.2	1	6
EFC4933D	Shoulder screw	1	6
EFC4941B	Parallax gear No.1	1	6
EFC4942A	Base plate	1	6
EFC4944K2C	Change-over ring	1	2
EFC5311B	Scale meter (55,65,80,180)	1	10
EFC5312C	Scale meter (105D,DS,135,250)	1	10
EFC5313A	Scal meter (105,135,250)	1	10
EFC5321C	Scale feet (55,65,80,180)	1	10
EFC5323A	Scale feet (105,135,250)	1	10
EFC5324A	Scale feet (105D,DS,135,250)	1	10
AFC4052D	Bracket for mirrer	1	9
AFC4053D	Spring for mirrer	1	9
AFC4523D	Shoulder screw	1	8
AFC4673C	Brake spring	2	7,9
AFC4724A	Woolen yarn	1	8
CFC4315D	Pin	1	1
CFC4322B	Friction spring	2	1
CFC4323K2E	Lid	1	1
CFC4325E	Friction piece	2	1
CFC4329C	Pointer	1	3
CFC4347B	Washer	1to3	1
CFC4369C	Screw	1	3

Parts No.	Description	Pcs.	Ref. Page
CFC4389C	Spring	1	3
CFC4398C	Spring	1	3
CFC4536-1B	Plastic washer	2	4
CFC4547C	Screw	1	4
CFC4548B	Spring	1	4
CFC4549B	Anchor	1	8
CFC4663B	Disk	2	7,9
DFC4051B	Mirror	1	5
DFC4081B	Sleeve bush	1	5
DFC4318A	Screw	1	3
DFC4674D	Brake bar	2	7,9
DFC4915C	Anchor	1	6
DFC4918B	Anchor	1	6
DFC4943D	Leaf spring	1	6
DFC4951-1	Washer t=0.1	1to3	3
DFC4951-2	Washer t=0.05	1to3	3
DFC4951-3	Washer t=0.2	1to3	3
FC4027C	Nut	2	9
FC4031A	Film roller	2	5
FC4048E	Leaf spring	1	5
FC4094A	Screw	5	5
FC4134D	Spring	1	6
FC4135B	Ancher	1	6
FC4155K2I	Light-tight flap assy.	1	5
FC4159B	Screw	1	5
FC4524B	Spring	1	8
FC4662A	Nut	2	7,9
GFC4194F	Spring	1	3
HFC4034KD	T-spring	1	5
HFC4365A	Stopper	1	3
HFC4381E	Friction milled wheel	1	4
MFC4191C	Pawl	1	3
MFC4192C	Shoulder screw	1	3
MFC4359A	Spring	1	3
MFC4382-1K2F	Friction wheel shaft	1	4

Parts No.	Description	Pcs.	Ref. Page
MEC4382-2B	Screw	1	4
MFC4384D	Spring	1	6
MFC4385B	Ancher	1	6
MFC4394B	Ancher	1	4
MFC4512D	Bottom cover	1	8
MFC4521KC	Safety lever	1	8
MFC4653C	Stopper	1	8
SN149	Set screw	2	7
A1.7x2.2	Set screw	2	9
PB1.7x2.5BNi	Screw for EFC4195E	2	8
	for EFC4196B	2	8
	for EFC4377D	3	4
	for EFC4561KC	6	7
PB1.7x3.5BNi	Screw for EFC4511L	3	8
PB2x2BNi	Screw for EFC4188B	2	6
	for EFC4197A	1	8
	for EFC4828K2B	1	4
PB2x3BNi	Screw for EFC4913K2	1	6
	for EFC4942A	2	6
PB2x3Cr	Screw for EFC4650(Right)	1	8
	for EFC4650(Left)	1	8
	for EFC4665G	2	9
	for EFC4666B	2	7
PB2x3.5BNi	Screw for EFC4821K3C	3	4
PB2x4BNi	Screw for EFC4821K3C	1	4
PB2x4Cr	Screw for EFC4632K2J	3	6
	for EFC4636K2C	3	6
PD1.7x2.5BNi	Screw for EFC4511L	1	8
PD1.7x3BNi	Screw for EFC4836A	1	3
PD1.7x4BNi	Screw for EFC4895K2E	5	1
PD1.7x5.5BNi	Screw for EFC2666K2C	1	9
PD2x2BNi	Screw for MFC4512D	3	8
PD2x2.5BNi	Screw for EFC4012K2C	2	5
	for EFC4071C	3	6
	for EFC4851K2E	2	4

Parts No.	Description	Pcs.	Ref. Page
PD2x3BNi	Screw for EFC4028K2H	6	2
	for EFC4032E	2	5
	for EFC4033I	2	5
	for EFC4614E	2	2
	for EFC4611K2L	2	2
	for EFC 4621K2F	6	1
	for EFC4942A	1	6
PD2x4Cr	Screw for EFC4650(Right)	3	8
	for EFC4650(Left)	4	8
PD2x5BNi	Screw for EFC4021E	4	5
	for EFC4072C	1	6
	for EFC4614E	2	2
	for EFC4650	3	7
PD2x5BNi	Screw for EFC4650	3	9
PD2x7BNi	Screw for EFC4511L	3	8
	for EFC4611K2L	2	2
PD2.6x4BNi	Screw for EFC4025E	4	9
3PB1.4x2.5BNi	Screw for EFC4352A	3	3
3PB1.7x2BNi	Screw for FC4155K2I	3	5
	for HFC4365A	2	3
	for EFC4676B	1	9
	for EFC4678B	1	7
	for EFC4611K2L	3	2
3PB1.7x2.5BNi	Screw for EFC4186C	2	6
	for DFC4943D	2	6
3PB1.7x3BNi	Screw for AFC4052D	1	9
	for EFC4836A	1	3
3PB1.7x3.5BNi	Screw for AFC4052D	2	9
	for EFC4511L	6	7
3PB1.7x4BNi	Screw for EFC4116B	2	2
3PB2x2BNi	Screw for AFC4053D	1	9
3PB2x2Cr	Screw for FC4048E	3	5
3PB2x4BNi	Screw for EFC4341K2C	2	3
3PB2x5BNi	Screw for EFC4042B	2	9
3PD1.4x2.5BNi	Screw for EFC4611K2L	1	2

Parts No.	Description	Pcs.	Ref. Page
3PD1.4x2.5BNi	Screw for EFC4621K2F	1	1
3PD1.7x3BNi	Screw for CFC4323K2F	2	1
	for EFC4564KA	4	7
3PD1.7x3.5BNi	Screw for EFC2658K2D	2	4
	for EFC4321B	2	1
4B1.7x2.5	Screw for EFC4647K2B	1	1
2.5C1.7x2.5Cr	Screw for EFC4191K2C	2	2
E-13	E-ring	1	6
E-17	E-ring	1	4
	E-ring	2	6
4W2x0.1	Washer	2	4
6W4x0.2	Washer	1	7

Back cover (EFC 4400)

Parts No.	Description	Pcs.	Ref. Page
EFC4411K2F	Back cover assy.	1	10
EFC4411K2F	Back cover	1	10
EFC4416B	Memo holder	1	10
EFC4417A	Spring	1	10
EFC4419A	Plate	1	10
EFC4421K2A	Pressure plate	1	10
EFC4423A	Nut	2	10
EFC4427A	Label	1	10
EFC4441D	Lath cover	1	10
EFC4715D	Leatherette	1	10
EFC-K4457C	Disk Window	1	10
AFC4723-1B	Sealing sponge	2	10
AFC4723-2A	Sealing sponge	1	10
FC4422E	Peessusre plate spring	2	10
FC4444B	Spring	1	10
MFC4414B	Light baffle	1	10
PD1.4x1.6BNi	Screw for EFC4416B	4	10
	for EFC4419A	2	10
3PB1.4x1.6BNi	Screw for EFC4441D	4	10

Focusing Hood (EFC 22000)

Parts No.	Description	Pcs.	Ref. Page
EFC2211KE	F H base frame	1	11
EFC2213A	Front cover	1	11
EFC2215K2A	Hood cover	1	11
EFC2221K2A	Front frame	1	11
EFC2224A	Spring	1	11
EFC2225A	Shaft	1	11
EFC2231B	Side pamel	1	11
EFC2232B	Side pamel	1	11
EFC2234B	Shaft	2	11
EFC2235B	Spring	2	11
EFC2237B	Shaft	2	11
EFC2241KA	Rear pamel	1	11
EFC2244B	Shaft	2	11
EFC2246A	Flap plate	1	11
EFC2247A	Hinge plate	1	11
EFC2248B	Shaft	1	11
EFC2251A	Hood panel	1	11
EFC2252K2C	Hood panel	1	11
EFC2254B	Shaft	2	11
EFC2261K2B	Magnifying frame	1	11
EFC2262C	Magnifying lens frame	1	11
EFC2265B	Magnifying lens	1	11
EFC2281K2C	Sports finder frame	1	11
EFC2285B	Sports finder frame	1	11
EFC2288C	Spring	2	11
EFC2291B	Leatherette	1	11
EFC2292B	Leatherette	1	11
EFC2293C	Leatherette	1	11
EFC2294B	Leatherette	1	11
CFC4234D	Spring	1	11
DFC4271D	Plate holder	1	11
DFC4272D	Cover	1	11
DFC4273F	Shoulder screw	1	11
DFC4274D	Spring	1	11
DFC4275E	Holder	1	11


Parts No.	Description	Pcs.	Ref. Page
FC4227B	Shoulder screw	1	11
RS2736	Mamiya mark	1	11
A1.4x2	Screw	2	11
PB1.4x2BNi	Screw for EFC2221K2	4	11
	for EFC2231B	1	11
	for EFC2232B	1	11
PB1.4x2BNi	Screw for EFC2246A	2	11
	for EFC2251A	1	11
	for EFC2252K2C	1	11
PB1.7x2BNi	Screw for EFC2247A	2	11
PB1.7x2.5BNi	Screw for EFC2221K2A	2	11
PB2x2BNi	Screw for DFC4271D	2	11
PD1.7x5BNi	Screw for EFC2211KE	2	11
PD2x3BNi	Screw for DFC4272C	2	11
3PD1.7x2.5BNi	Screw for EFC2215K2A	6	11


EXPLODED VIEWS

Mamiya C330 Professional


Mamiya



Mamiya C330 Professional

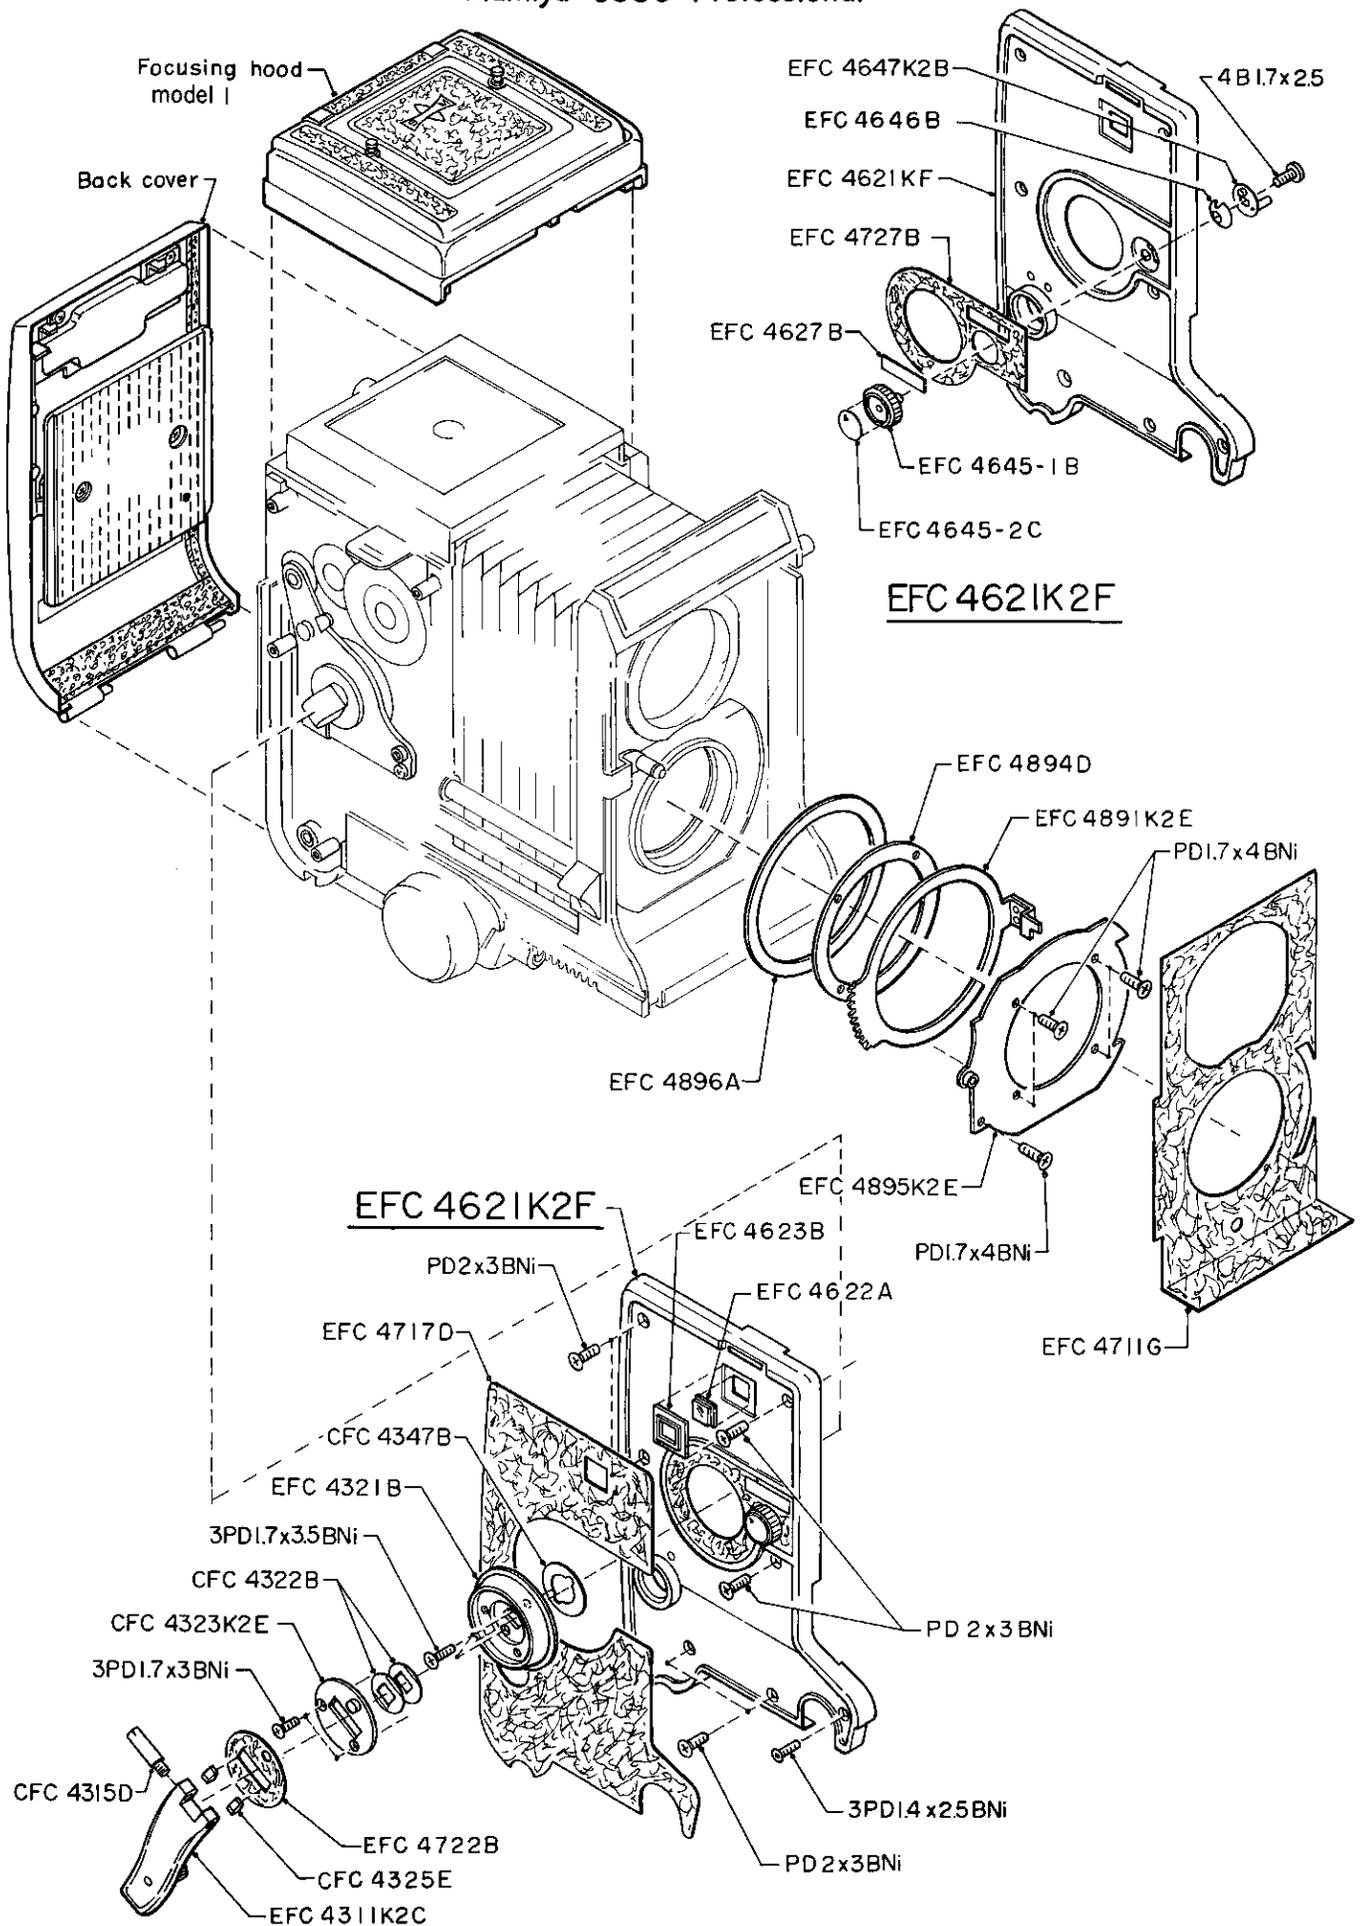

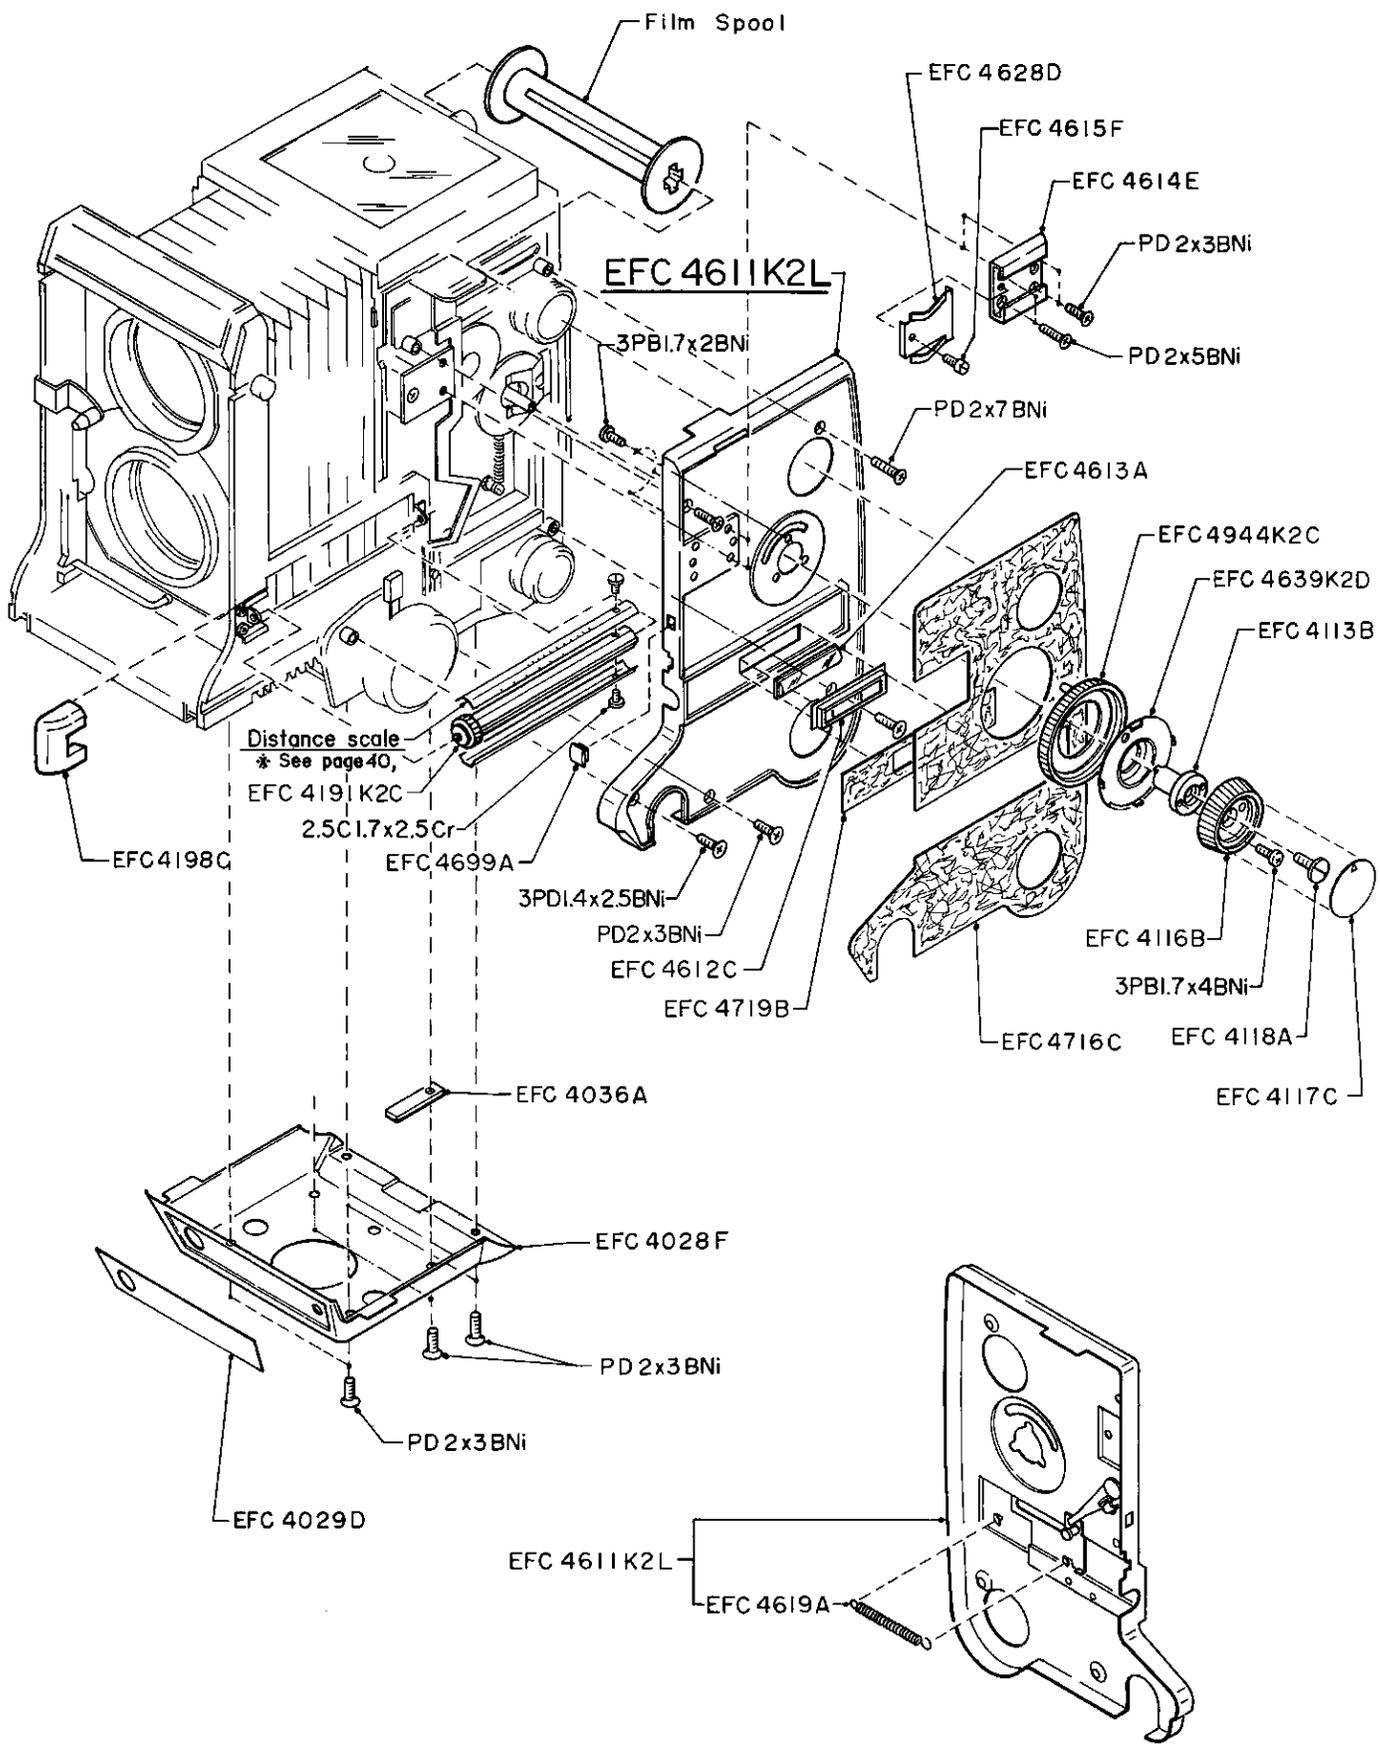


EFC4611K2L

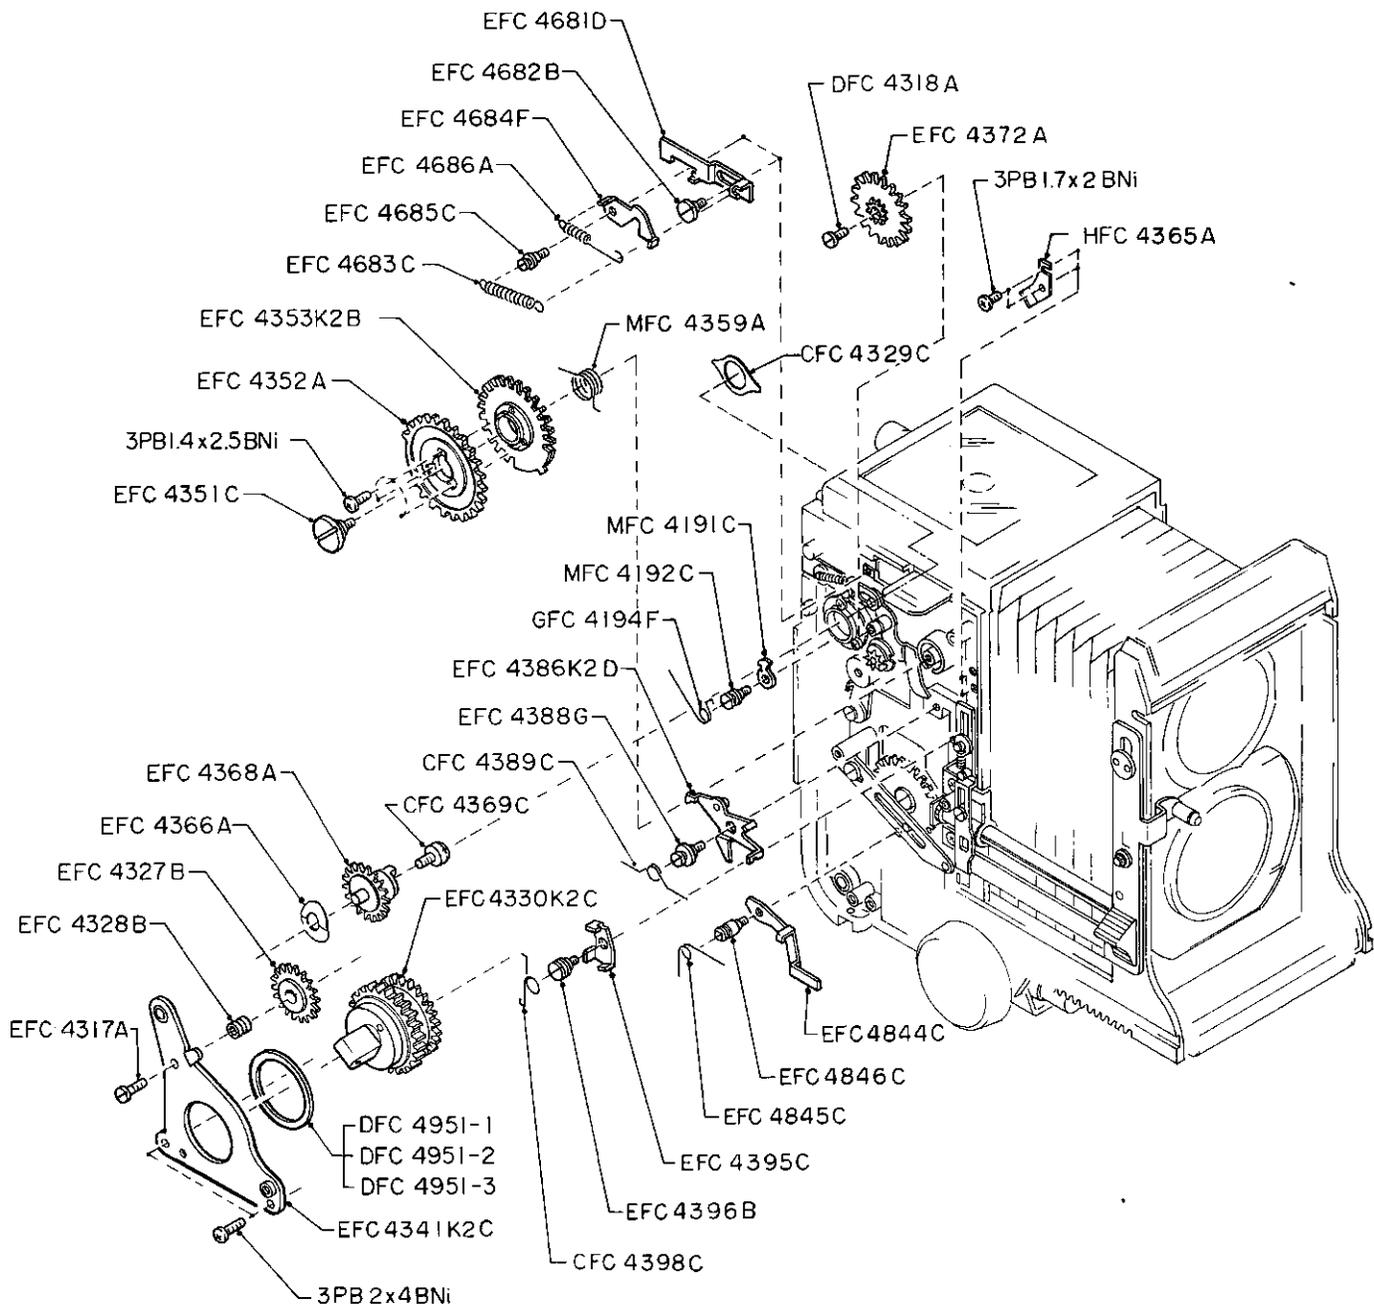


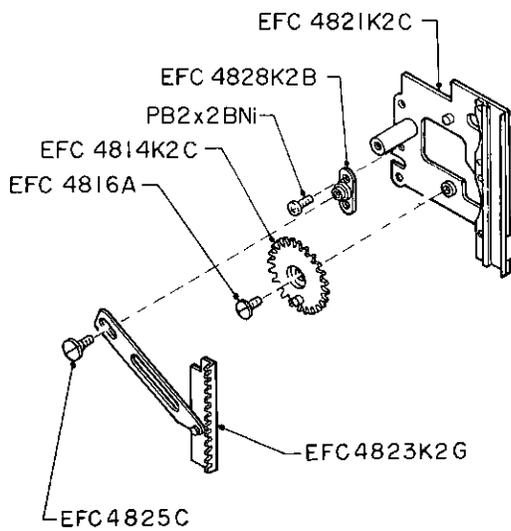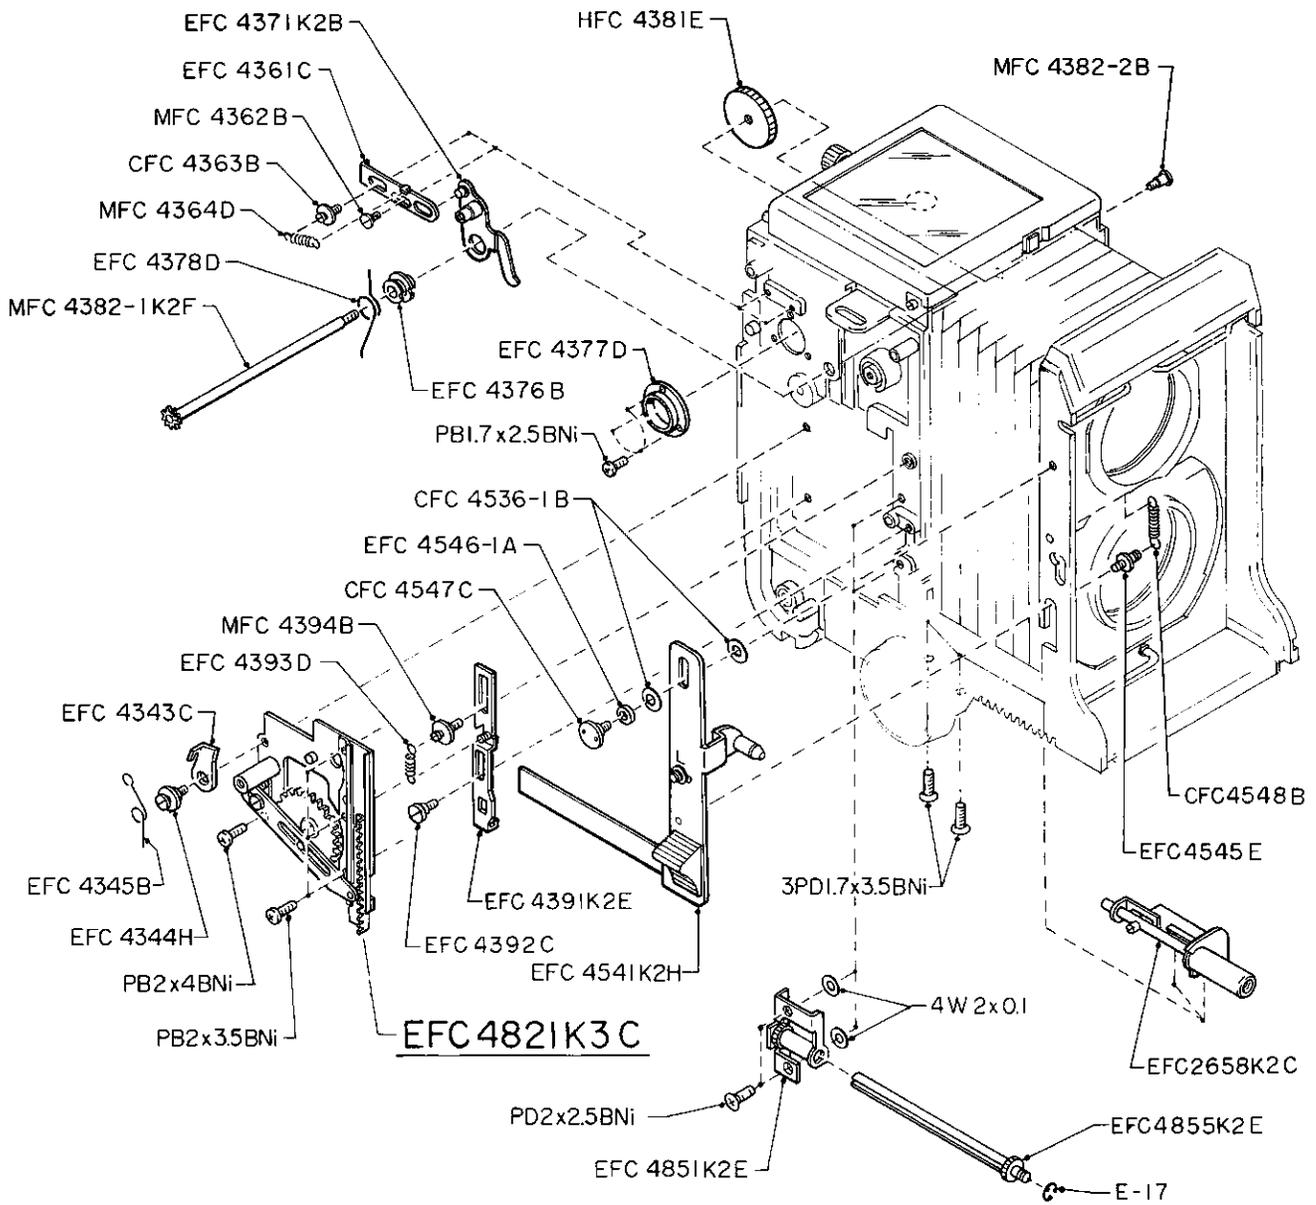



EFC 4821K3C

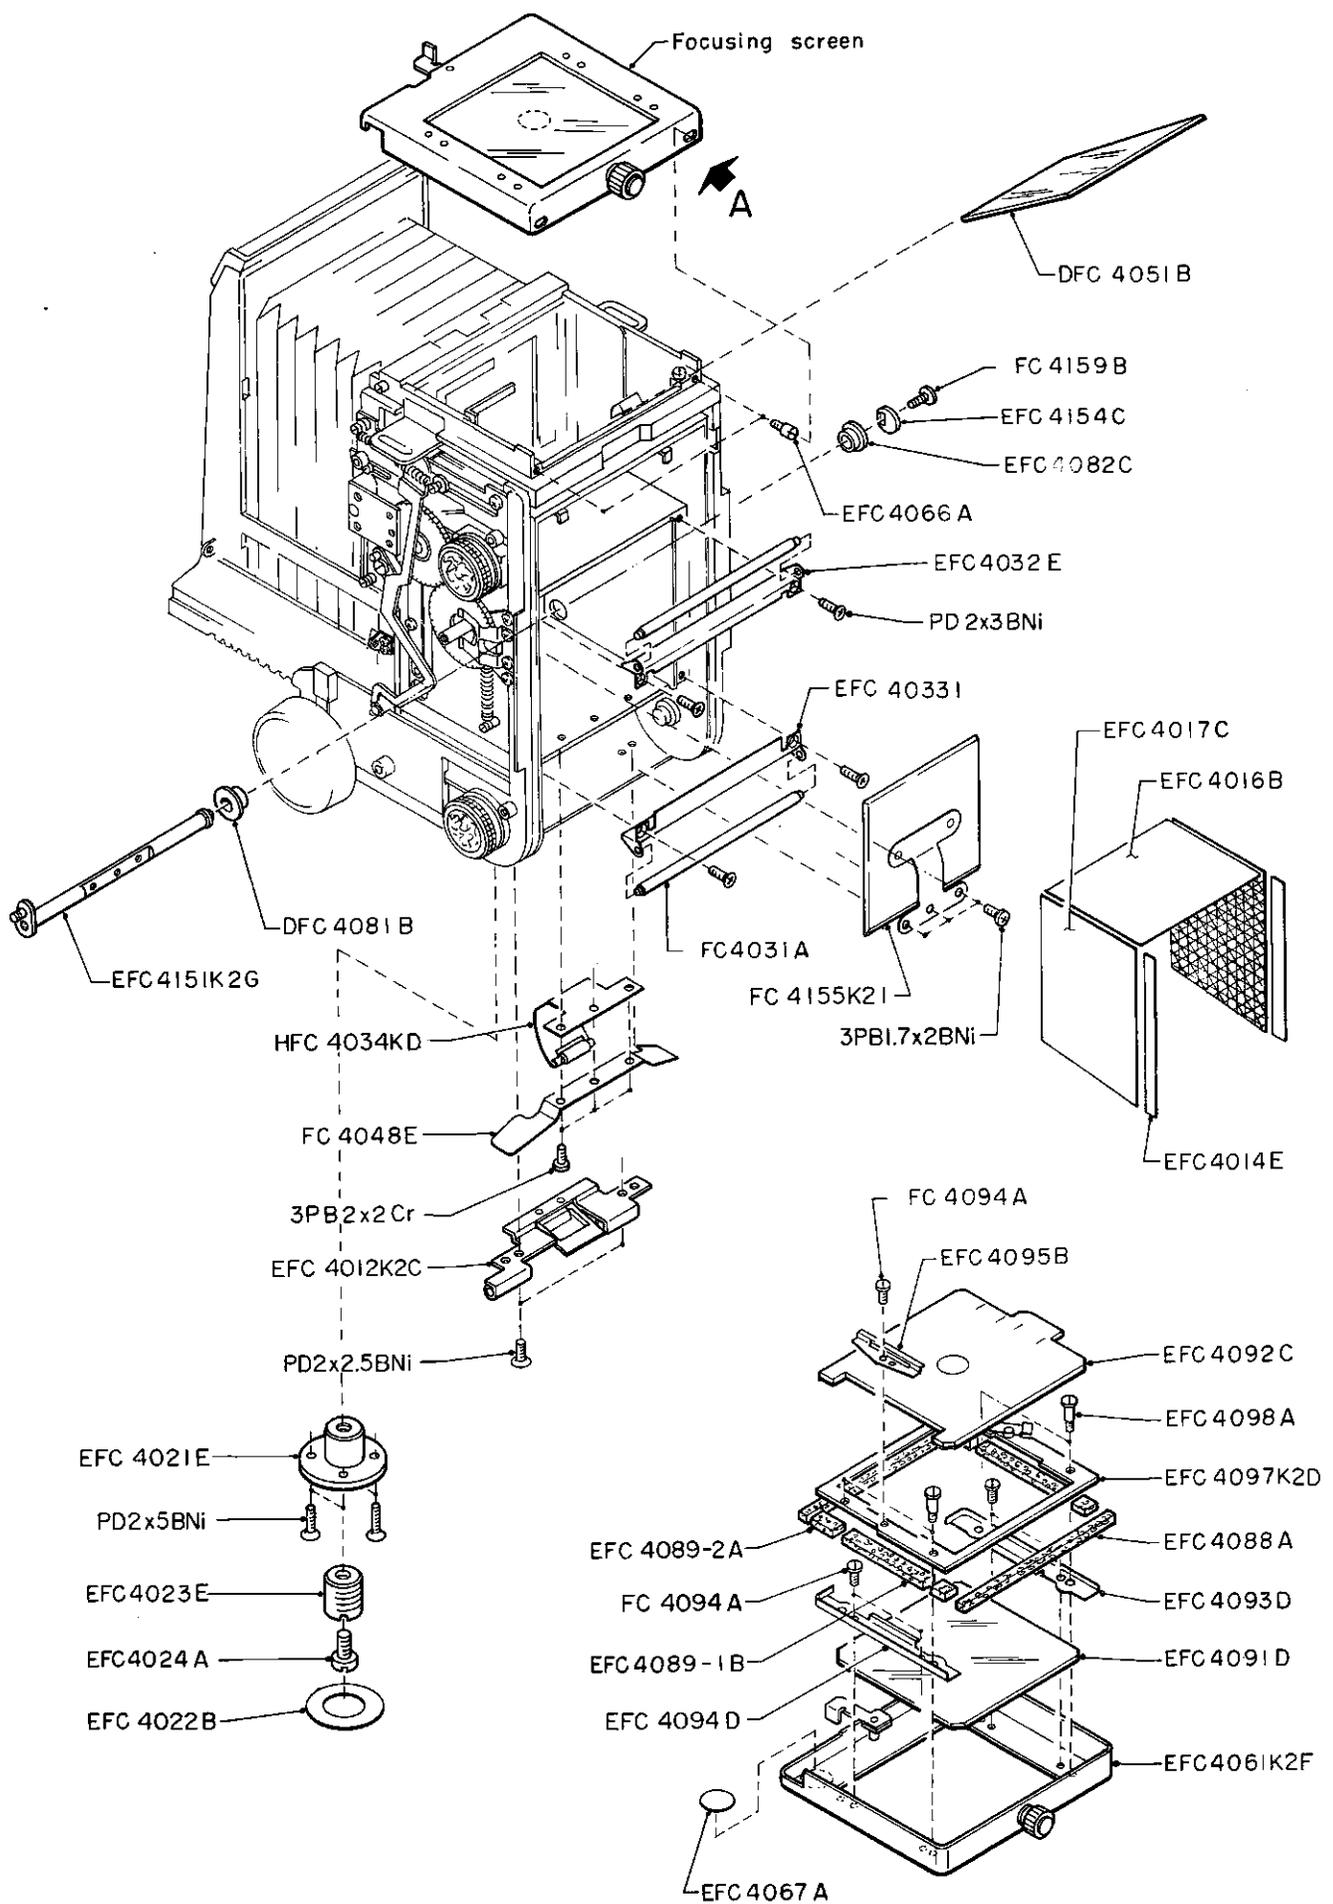


DETAIL "A"

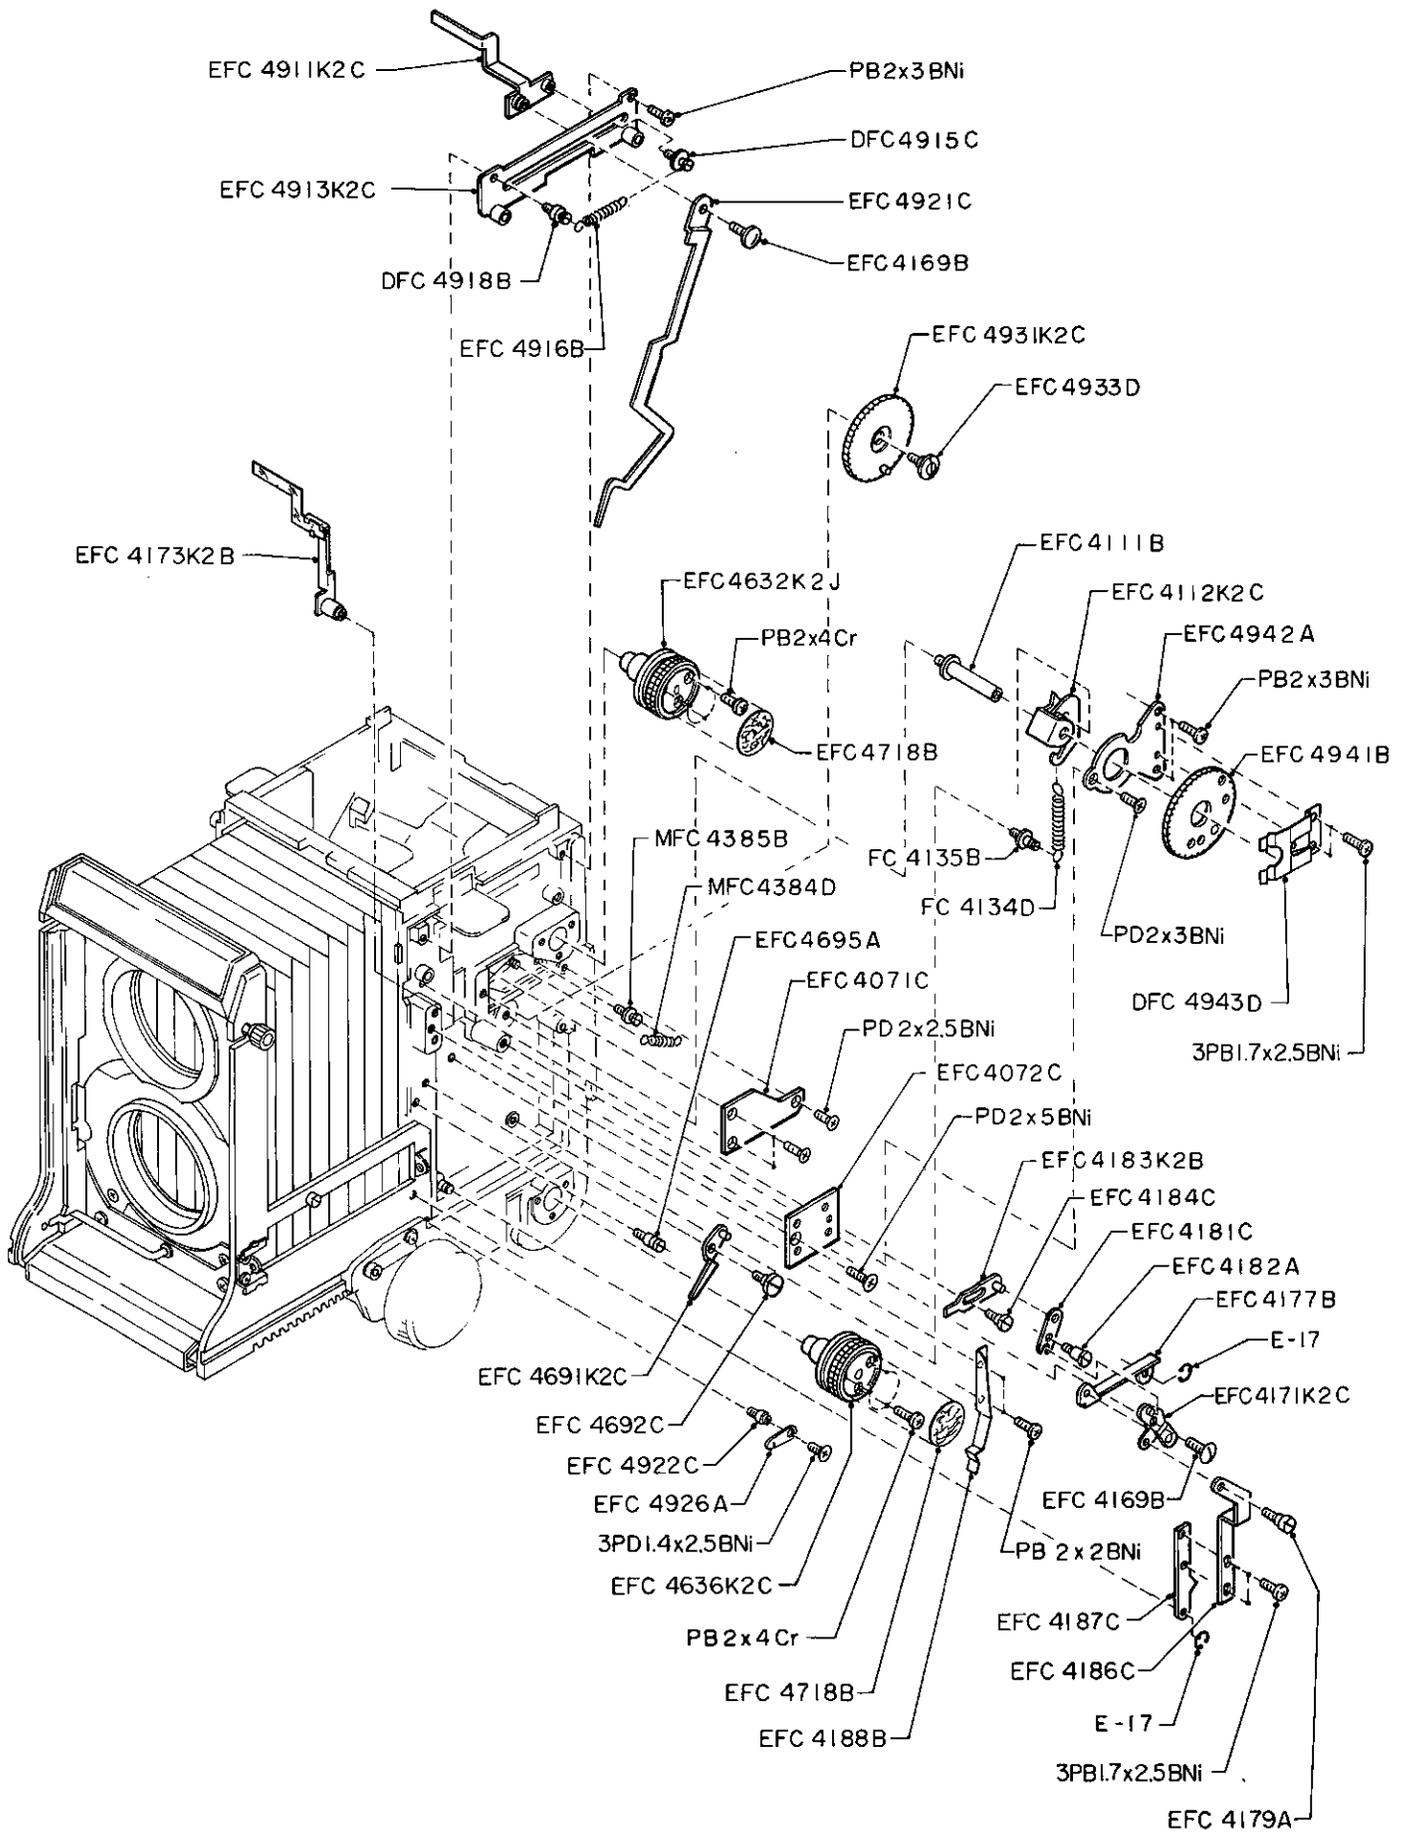

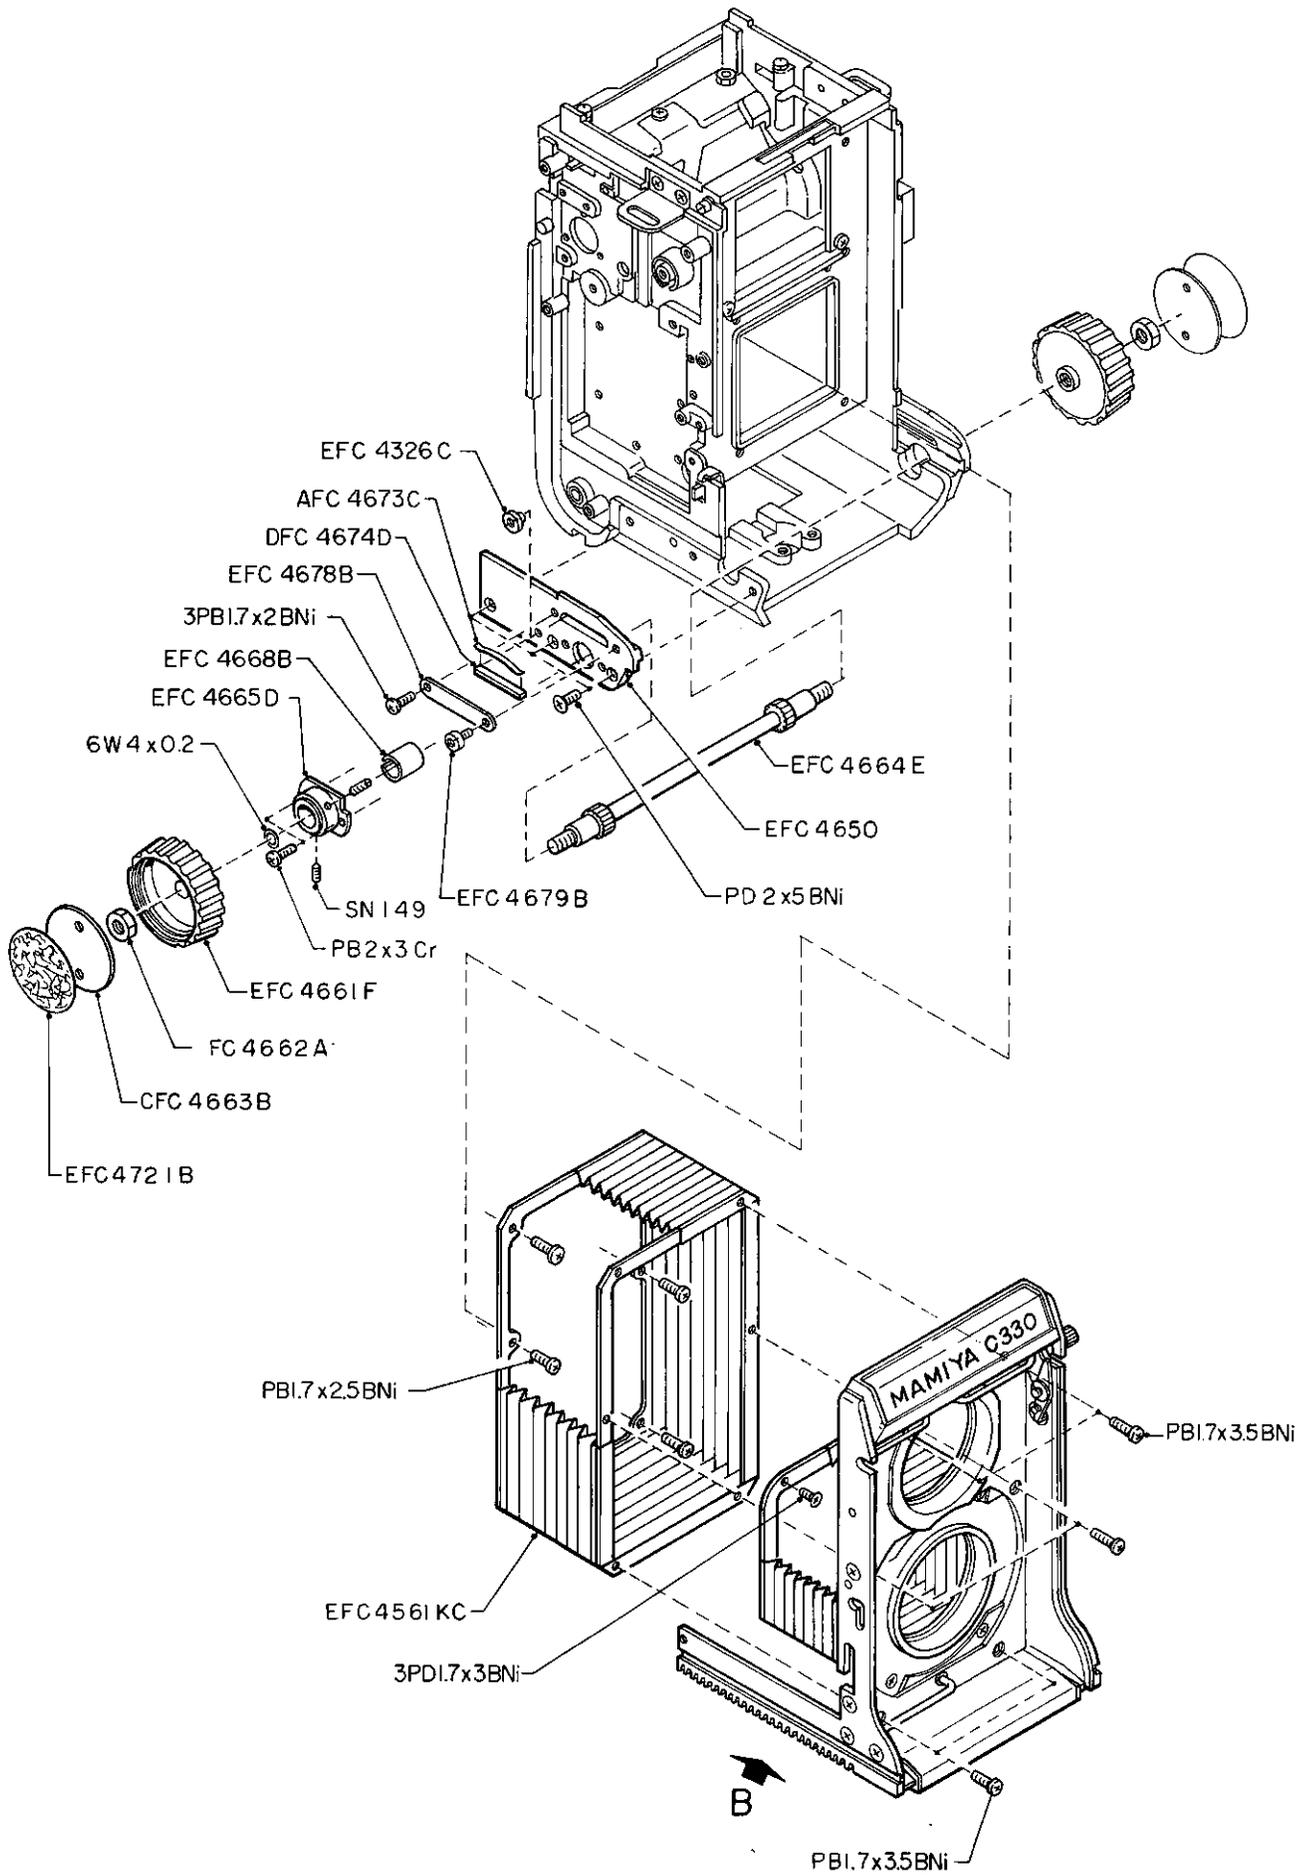


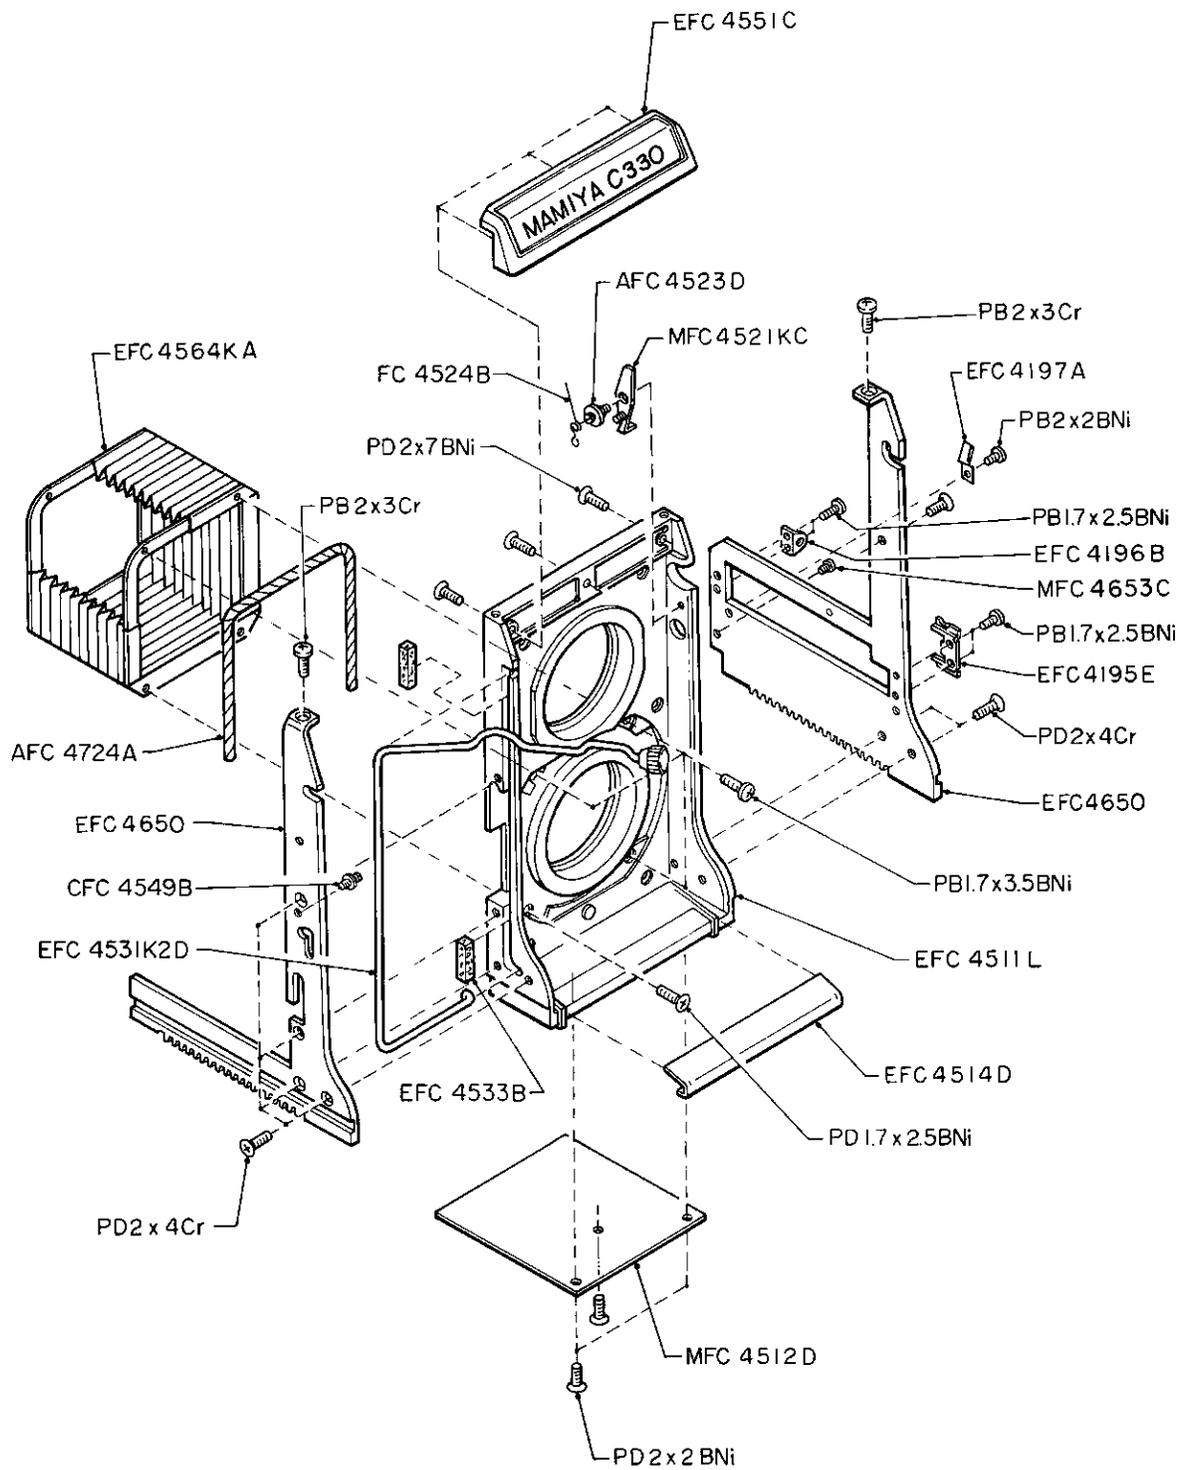


DETAIL "B"

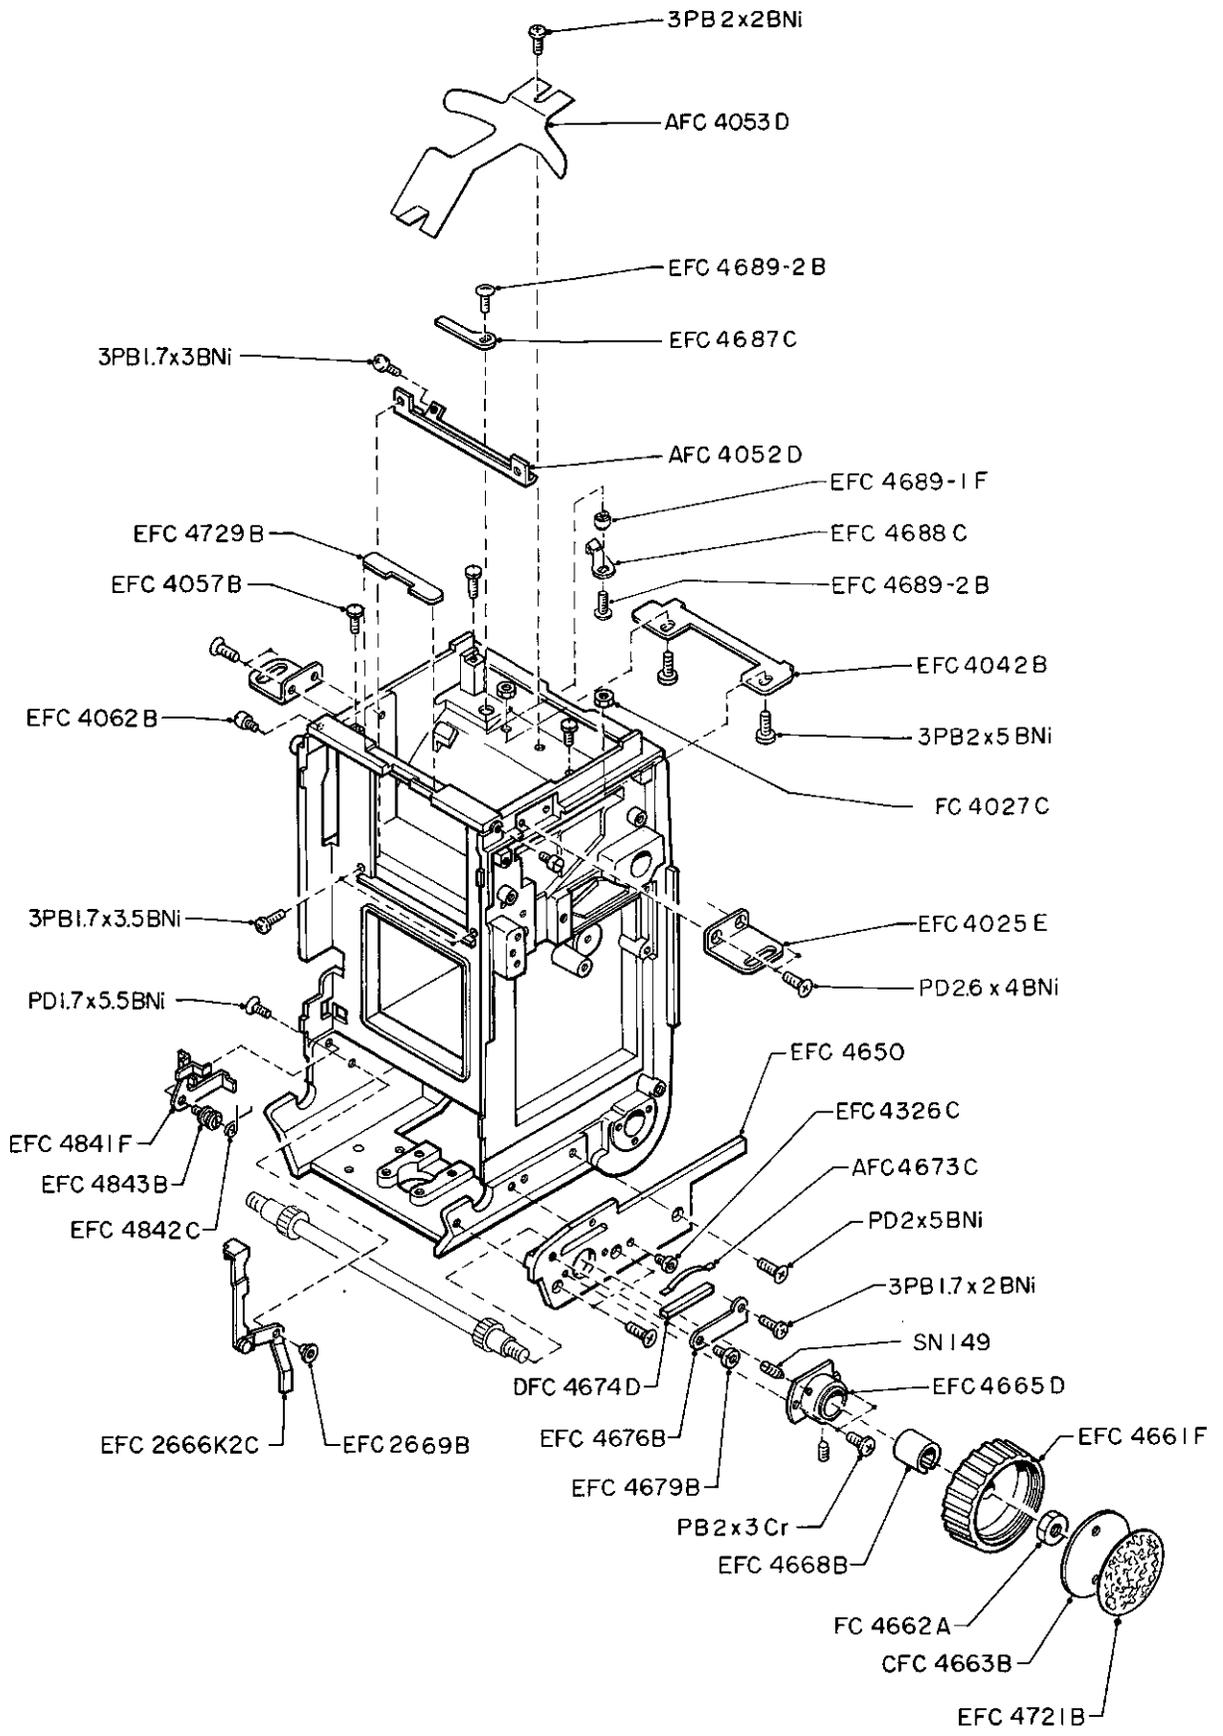

Back cover standard

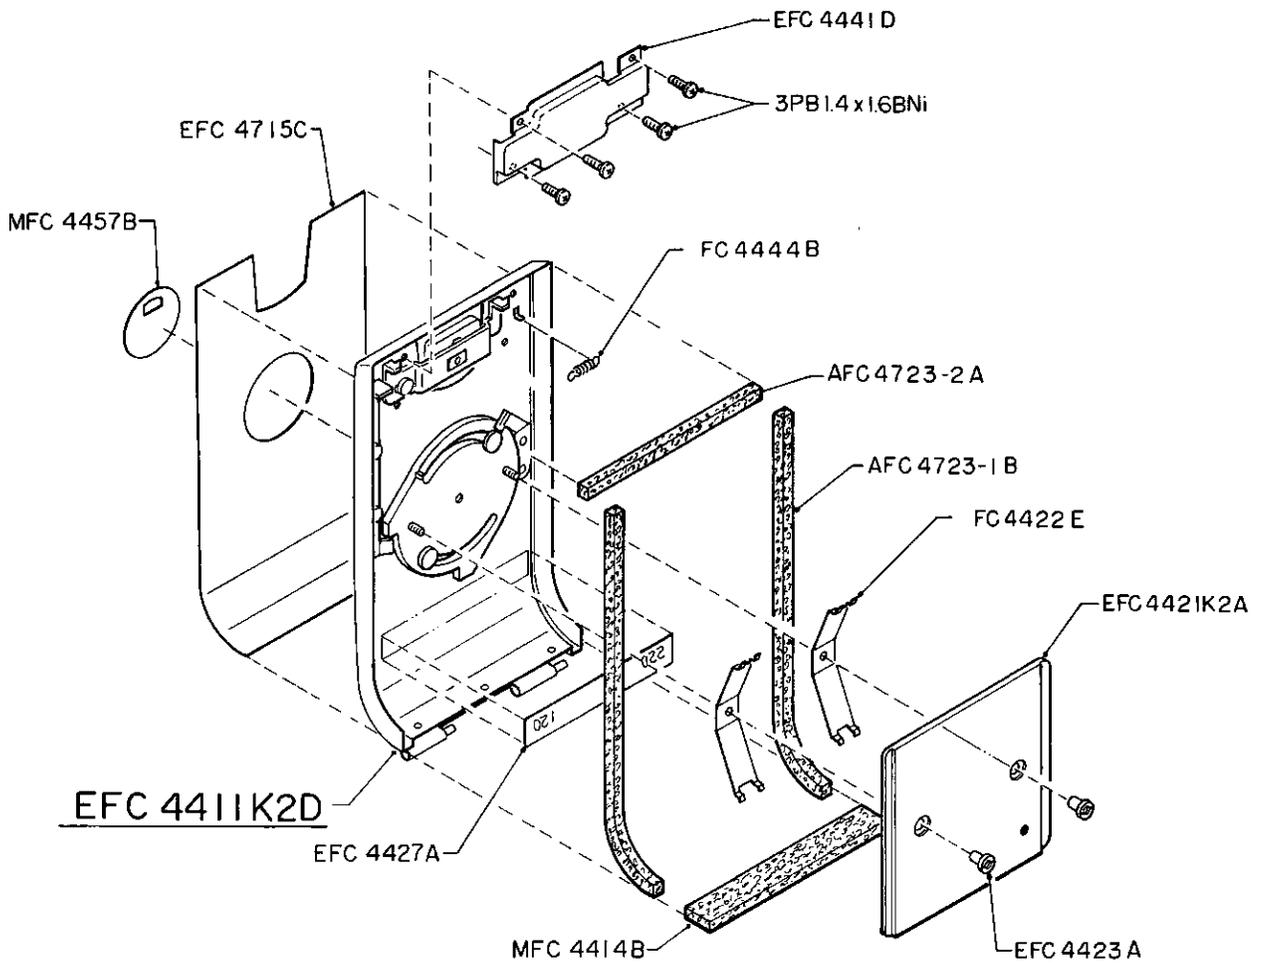

Distance scale Meter



EFC 5311 B

180mm
95mm
65mm
80mm


EFC 5312 C

m105.00
m135
m250

EFC 5313A

m105
m135
m250

Distance scale Feet



EFC 5321 C

180mm feet
65mm feet
80mm feet


EFC 5323A

105mm feet
135mm feet
250mm feet

EFC 5324A

105.00 feet
135mm feet
250mm feet

Focusing hood model I

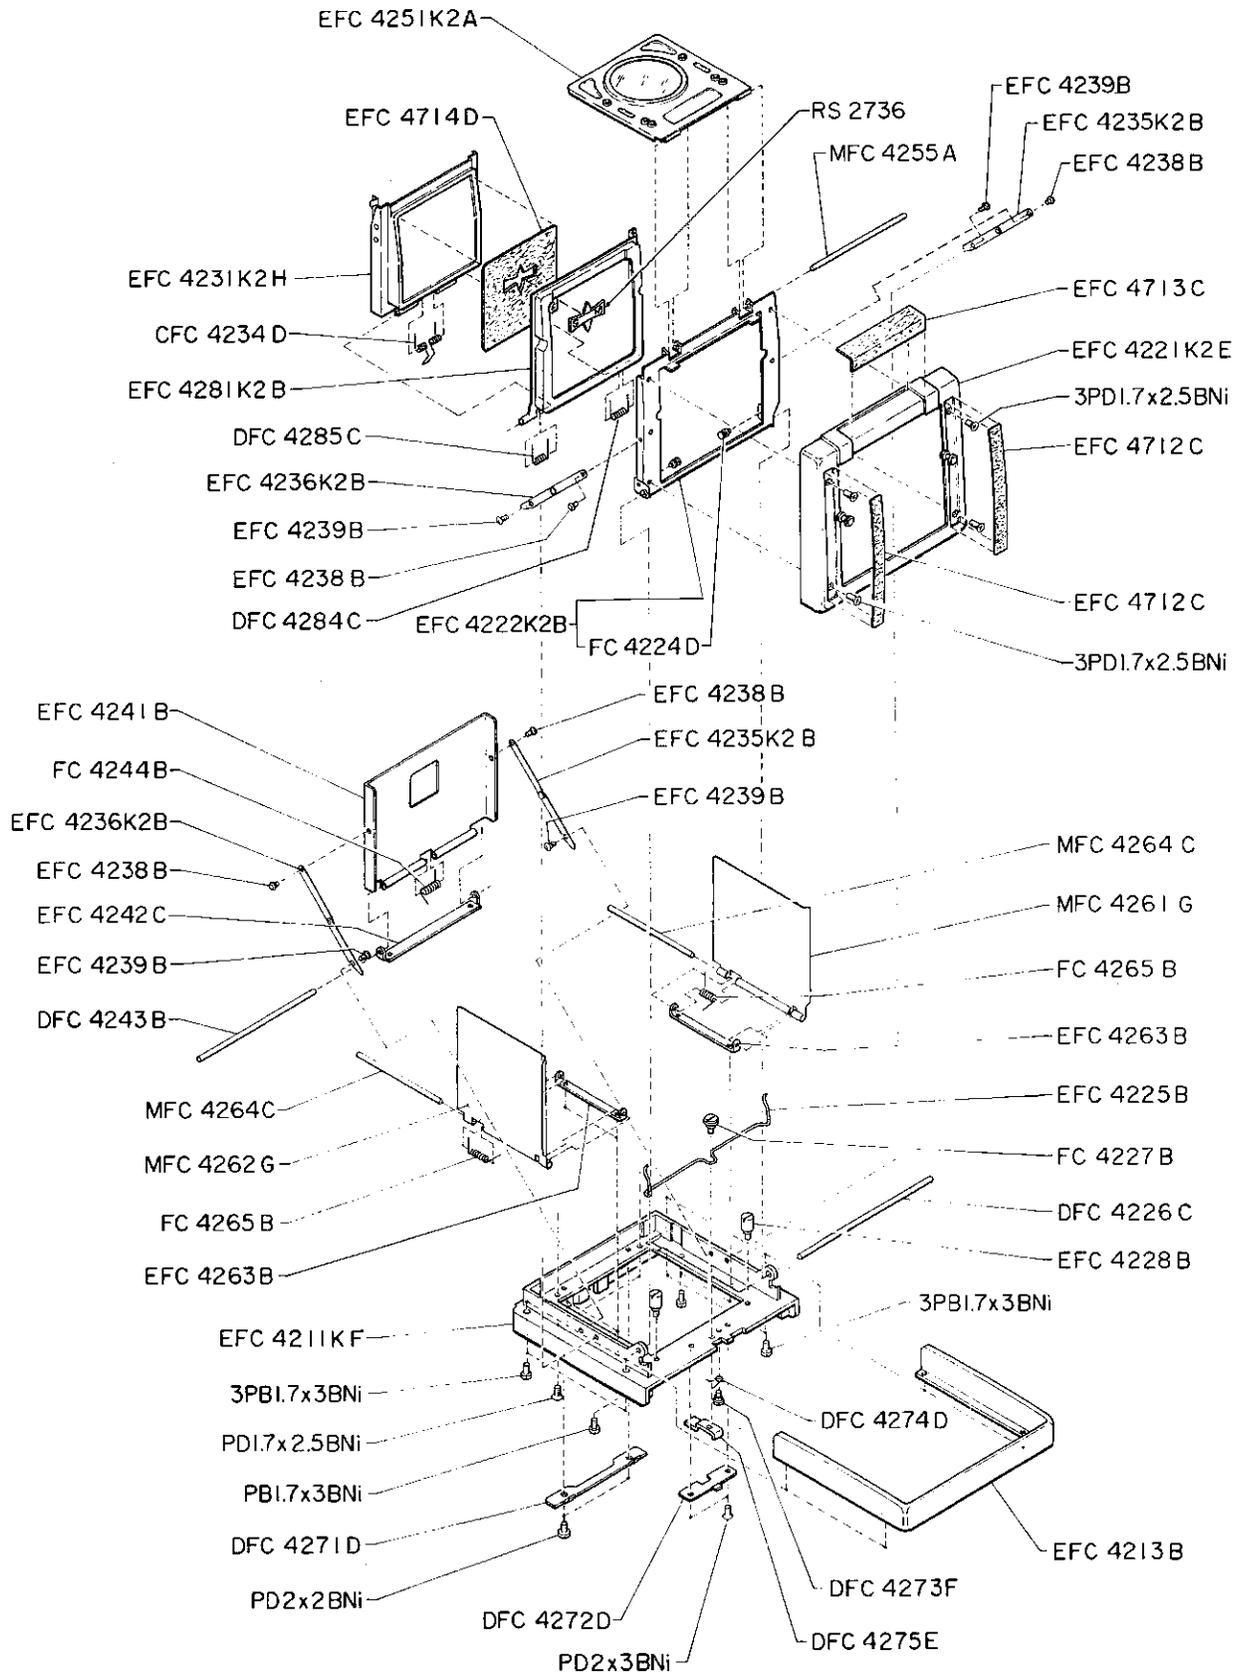

PARTS LIST

Mamiya C330 Professional

Mamiya

MAMIYA C330 professional (Body only)

Parts No.	Description	Pcs.	Ref. Page
EFC2658K2C	Shutter button bracket assy.	1	20
EFC2666K2C	Joint	1	25
EFC2669B	Hob	1	25
EFC4012K2C	Hinge assy.	1	21
EFC4014E	Plate	2	21
EFC4016B	Reflection absorber paper	1	21
EFC4017C	Reflection absorber paper	2	21
EFC4021E	Tripod socket	1	21
EFC4022B	Leatherette	1	21
EFC4023E	Tripod socket adapter	1	21
EFC4024A	Screw	1	21
EFC4025E	Strap loop	2	25
EFC4028F	Botton cover	1	18
EFC4029D	Name plate	1	18
EFC4032E	Bracket	1	21
EFC4033I	Bracket	1	18
EFC4036A	Plate	1	18
EFC4042B	Catch plate	1	25
EFC4057B	Adjusting screw	3	25
EFC4061K2F	Frame focusing screw	1	21
EFC4062B	Screw	2	25
EFC4066A	Guide screw	2	21
EFC4067A	Level	1	21
EFC4071C	Cover	1	22
EFC4072C	Base	1	22
EFC4082C	Sleeve bush	1	21
EFC4088A	Cushion	2	21
EFC4089-1B	Cushion	2	21
EFC4089-2A	Cushion	4	21
EFC4091D	Dustproof glass	1	21
EFC4092C	Fresnel lens	1	21
EFC4093D	Glass holder	1	21
EFC4094D	Glass holder	1	21
EFC4095B	Fresnel holder	1	21
EFC4097K2D	Frame for fresnel lens	1	21

Parts No.	Description	Pcs.	Ref. Page
EFC4098A	Shoulder screw	4	21
EFC4111B	Lock crank shaft	1	22
EFC4112K2C	Lock crank assy.	1	22
EFC4113B	Shaft	1	18
EFC4116B	Knob	1	18
EFC4117C	Knob cover	1	18
EFC4118A	Screw	1	18
EFC4151K2G	Light-tight flap shaft	1	21
EFC4154C	Safety base	1	21
EFC4169B	Screw	2	22
EFC4171K2C	Base plate	1	22
EFC4173K2B	Red warning signal	1	22
EFC4177B	Lock plate	1	22
EFC4179A	Shoulder screw	1	22
EFC4181C	Lever	1	22
EFC4182A	Shoulder screw	1	22
EFC4183K2B	Slide plate	1	22
EFC4184C	Shoulder screw	1	22
EFC4186C	Linking bar	1	22
EFC4187C	Linking bar	1	22
EFC4188B	Spring	1	22
EFC4191K2C	Scale bar assy.	1	18
EFC4195E	Scale holder	1	24
EFC4196B	Scale holder	1	24
EFC4197A	Spring	1	24
EFC4198C	Scale cover	1	18
EFC4311K2C	Winding crank	1	17
EFC4317A	Screw	1	19
EFC4321B	Coupling base	1	17
EFC4326C	Boss	2	23, 25
EFC4327B	Idle gear	1	19
EFC4328B	Hub	1	19
EFC4330K2C	Winding gear assy.	1	19
EFC4341K2C	Winding base plate	1	19
EFC4343C	Pawl	1	20

Parts No.	Description	Pcs.	Ref. Page
EFC4344H	Anchor	1	20
EFC4445B	Spring	1	20
EFC4351C	Shoulder screw	1	19
EFC4352A	Counter	1	19
EFC4353K2B	Counter dividing device	1	19
EFC4361C	Counter rest	1	20
EFC4366A	Friction washer	1	19
EFC4368A	Take-up gear	1	19
EFC4371K2B	Release lever	1	20
EFC4372A	Gear	1	19
EFC4376B	Flanged screw	1	20
EFC4377D	Gear shaft hub	1	20
EFC4378D	Spring	1	20
EFC4386K2D	Winding stop lever	1	19
EFC4388G	Guide screw	1	19
EFC4391K2E	Winding stop rest lever	1	20
EFC4392C	Guide screw	1	20
EFC4393D	Spring	1	20
EFC4395C	Stopper	1	19
EFC4396B	Shoulder screw	1	19
EFC4511L	Front panel	1	24
EFC4514D	Front cover	1	24
EFC4531K2D	Wire spring	1	24
EFC4533B	Packing strip	2	24
EFC4541K2H	L Shape slider assy.	1	20
EFC4545E	Shoulder screw	1	20
EFC4546-1A	Collar	1	20
EFC4551C	Name plate	1	24
EFC4561KC	Lagre bellows	1	23
EFC4564KA	Small bellows	1	24
EFC4611K2L	Right panel assy.	1	18
EFC4612C	Frame	1	18
EFC4613A	Distance scale window	1	18
EFC4614E	Accessory shoe	1	18
EFC4615F	Stopper	1	18

Parts No.	Description	Pcs.	Ref. Page
EFC4619A	Spring	1	18
EFC4621K2F	Left panel assy.	1	17
EFC4621KF	Left panel	1	17
EFC4622A	Window	1	17
EFC4623B	Frame	1	17
EFC4627B	Plate	1	17
EFC4628D	Shoe cover	1	18
EFC4632K2J	S P Knob assy. upper	1	22
EFC4636K2C	S P Knob assy. Lower	1	22
EFC4639K2D	Lock unlock disc	1	18
EFC4645-1B	Knob	1	17
EFC4645-2C	Cover	1	17
EFC4646B	Spring	1	17
EFC4647K2B	Change-over lever	1	17
EFC4650	Rack plate unit	4	23,24,25
EFC4661F	Focusing knob	2	23,25
EFC4664E	Pinion shaft	1	23
EFC4665D	Pinion shaft hub	2	23,25
EFC4668B	Pipe	2	23,25
EFC4676B	Cover plate Right	1	25
EFC4678B	Cover plate Left	1	23
EFC4679B	Stud	2	23,25
EFC4681D	Change plate "120,220"	1	19
EFC4682B	Screw	1	19
EFC4683C	Spring	1	19
EFC4684F	Lever	1	19
EFC4685C	Shaft	1	19
EFC4686A	Spring	1	19
EFC4687C	Change lever	1	25
EFC4688C	Click lever	1	25
EFC4689-1F	Hub	1	25
EFC4689-2B	Screw	2	25
EFC4691K2C	Moving plate	1	22
EFC4692C	Shoulder screw	1	22
EFC4695A	Stopper	1	22

Parts No.	Description	Pcs.	Ref. Page
EFC4699A	Cover	1	18
EFC4711G	Leatheretter	1	17
EFC4716C	Leatheretter	1	18
EFC4717D	Leatheretter	1	17
EFC4718B	Leatheretter	2	22
EFC4719B	Leatheretter	1	18
EFC4721B	Leatheretter	2	23, 25
EFC4722B	Leatheretter	1	17
EFC4727B	Leatheretter	1	17
EFC4729B	Plate	1	25
EFC4814K2C	Gear	1	20
EFC4816A	Screw	1	20
EFC4821K3C	Shutter cocking gear train	1	20
EFC4821K2C	Base plate	1	20
EFC4823K2G	Rack plate	1	20
EFC4825C	Screw	1	20
EFC4828K2B	Adjusting hub	1	20
EFC4841F	Safety lever	1	25
EFC4842C	Spring	1	25
EFC4843B	Screw	1	25
EFC4344C	Release lever	1	19
EFC4845C	Spring	1	19
EFC4846C	Screw	1	19
EFC4851K2E	Cocking link gear	1	20
EFC4855K2E	Cocking shaft	1	20
EFC4891K2E	Cocking ring	1	17
EFC4894D	Ring	1	17
EFC4895K2E	Rim plate	1	17
EFC4896A	Washer	1	17
EFC4911K2C	Parallax indicator	1	22
EFC4913K2C	Guide rail	1	22
EFC4916B	Spring	1	22
EFC4921C	Linking bar	1	22
EFC4922C	Stopper	1	22
EFC4926A	Linking bar guide	1	22

Parts No.	Description	Pcs.	Ref. Page
EFC4931K2C	Parallax gear No.2	1	22
EFC4933D	Shoulder screw	1	22
EFC4941B	Parallax gear No.1	1	22
EFC4942A	Base plate	1	22
EFC4944K2C	Change-over ring	1	18
EFC5311B	Scale meter(55,65,80,180)	1	26
EFC5312C	Scale meter(105D,DS,135,250)	1	26
EFC5313A	Scale meter(105,135,250)	1	26
EFC5321C	Scale feet(55,65,80,180)	1	26
EFC5323A	Scale feet(105,135,250)	1	26
EFC5324A	Scale feet(105D,DS,135,250)	1	26
AFC4052D	Bracket for mirrer	1	25
AFC4053D	Spring for mirrer	1	25
AFC4523D	Shoulder screw	1	24
AFC4673C	Brake spring	2	23,25
AFC4724A	Woolen yarn	1	24
CFC4315D	pin	1	17
CFC4322B	Friction spring	2	17
CFC4323K2E	Lid	1	17
CFC4325E	Friction piece	2	17
CFC4329C	Pointer	1	19
CFC4347B	Washer	1to3	17
CFC4363B	Screw	1	19
CFC4369C	Screw	1	19
CFC4389C	Spring	1	19
CFC4398C	Spring	1	19
CFC4536-1B	Plastic washer	2	20
CFC4547C	Screw	1	20
CFC4548B	Spring	1	20
CFC4549B	Anchor	1	24
CFC4663B	Disk	2	23,25
DFC4051B	Mirror	1	21
DFC4081B	Sleeve bush	1	21
DFC4318A	Screw	1	19
DFC4674D	Brake bar	2	23,25

Parts No.	Description	Pcs.	Ref. Page
DFC4915C	Anchor	1	22
DFC4918B	Anchor	1	22
DFC4943D	Leaf spring	1	22
DFC4951-1	Washer t=0.1	1to3	19
DFC4951-2	Washer t=0.05	1to3	19
DFC4951-3	Washer t=0.2	1to3	19
FC4027C	Nut	2	25
FC4031A	Film roller	2	21
FC4048E	Leaf spring	1	21
FC4094A	Screw	5	21
FC4134D	Spring	1	22
FC4135B	Anchor	1	22
FC4155K2I	Light-tight flap assy.	1	21
FC4159B	Screw	1	21
FC4524B	Spring	1	24
FC4662A	Nut	2	23, 25
GFC4194F	Spring	1	19
HFC4034KD	T-Spring	1	21
HFC4365A	Stopper	1	19
HFC4381E	Friction milled wheel	1	20
MFC4191C	Pawl	1	19
MFC4192C	Shoulder screw	1	19
MFC4359A	Spring	1	19
MFC4362B	Screw	1	20
MFC4364D	Spring	1	20
MFC4382-1K2F	Friction wheel shaft	1	20
MFC4382-2B	Screw	1	20
MFC4384D	Spring	1	22
MFC4385B	Ancher	1	22
MFC4394B	Ancher	1	20
MFC4512D	Bottom cover	1	24
MFC4521KC	Safety lever	1	24
MFC4653C	Stopper	1	24
SN149	Set screw	4	23, 25
PB1.7x2.5BNi	Screw for EFC4195E	2	24

Parts No.	Description	Pcs.	Ref. Page
PB1.7x2.5BNi	Screw for EFC4196B	2	24
	for EFC4377D	3	20
	for EFC4561KC	6	23
PB1.7x3.5BNi	Screw for EFC4511L	3	24
PB2x2BNi	Screw for EFC4188B	2	22
	for EFC4197A	1	24
	for EFC4828K2B	1	20
PB2x3BNi	Screw for EFC4913K2	1	22
	for EFC4942A	2	22
PB2x3Cr	Screw for EFC4650	2	24
	for EFC4665D(Right)	2	25
	for EFC4665D(Left)	2	23
PB2x3.5BNi	Screw for EFC4821K3C	3	20
PB2x4BNi	Screw for EFC4821K3C	1	20
PB2x4CR	Screw for EFC4632K2J	3	22
	for EFC4636K2C	3	22
PD1.7x2.5BNi	Screw for EFC4511L	1	24
PD1.7x4BNi	Screw for EFC4895K2E	5	17
PD1.7x5.5BNi	Screw for EFC2666K2C	1	25
PD2x2BNi	Screw for MFC4512D	3	24
PD2x2.5BNi	Screw for EFC4012K2C	2	21
	for EFC4071C	3	22
	for EFC4851K2E	2	20
PD2x3BNi	Screw for EFC4028F	6	18
	for EFC4032E	2	21
	for EFC4033I	2	21
	for EFC4614E	2	18
	for EFC4611K2L	2	18
	for EFC4612K2F	6	17
	for EFC4942A	1	22
PD2x4Cr	Screw for EFC4650(Right)	3	24
	for EFC4650(Left)	4	24
PD2x5BNi	Screw for EFC4021E	4	21
	for EFC4072C	1	22
	for EFC4614E	2	18

Parts No.	Description	Pcs.	Ref. Page
PD2x5BNi	Screw for EFC4650 (Left)	3	23
	for EFC4650 (Right)	3	25
PD2x7BNi	Screw for EFC4511L	3	24
	for EFC4611K2L	2	18
PD2.6x4BNi	Screw for EFC4025E	4	25
3PB1.4x2.5BNi	Screw for EFC4352A	3	19
3PB1.7x2BNi	Screw for FC4155K2I	3	21
	for HFC4365A	2	19
	for EFC4676B	1	25
	for EFC4678B	1	23
	for EFC4611K2L	3	18
3PB1.7x2.5BNi	Screw for EFC4186C	2	22
	for EFC4943D	2	22
3PB1.7x3BNi	Screw for AFC4052D	1	25
3PB1.7x3.5BNi	Screw for AFC4052D	2	25
	for EFC4511L	6	23
3PB1.7x4BNi	Screw for EFC4116B	2	18
3PB2x2BNi	Screw for AFC4053D	1	25
3PB2x2Cr	Screw for FC4048E	3	21
3PB2x4BNi	Screw for EFC4341K2C	2	19
3PB2x5BNi	Screw for EFC4042B	2	25
3PD1.4x2.5BNi	Screw for EFC4611K2L	1	18
	for EFC4612K2F	1	17
	for EFC4926A	1	22
3PD1.7x3BNi	Screw for CFC4323K2E	2	17
	for EFC4564KA	4	23
3PD1.7x3.5BNi	Screw for EFC2658K2C	2	20
	for EFC4321B	2	17
4B1.7x2.5	Screw for EFC4647K2B	1	17
2.5C1.7x2.5Cr	Screw for EFC4191K2C	2	18
E-17	E-ring	1	20
	E-ring	2	22
4W2x0.1	Washer	2	20
6W4x0.2	Washer	1	23

Back cover (EFC4400)

Parts No.	Description	Pcs.	Ref. Page
EFC4411K2D	Back cover assy.	1	26
EFC4421K2A	Pressure plate	1	26
EFC4423A	Nut	2	26
EFC4427A	Label	1	26
EFC4441D	Lath cover	1	26
EFC4715C	Leatherette	1	26
AFC4723-1B	Sealing sponge	2	26
AFC4723-2A	Sealing sponge	1	26
FC4422E	Peessure plate spring	2	26
FC4444B	Spring	1	26
MFC4414B	Light baffle	1	26
MFC4457B	Disk window	1	26
3PB1.4x1.6BNi	Screw for EFC4441D	4	26

Focusing Hood (EFC 4200)

Parts No.	Description	Pcs.	Ref. Page
EFC4211KF	F H base frame	1	27
EFC4213	Front cover	1	27
EFC4221K2E	Hood cover	1	27
EFC4222K2B	Front frame	1	27
EFC4225B	Spring	1	27
EFC4228B	Screw	2	27
EFC4231K2H	Sports finder frame	1	27
EFC4235K2B	Folding bar	2	27
EFC4236K2B	Folding bar	2	27
EFC4238B	Joint pin	4	27
EFC4239B	Screw	4	27
EFC4241B	Rear panel	1	27
EFC4242C	Bracket	1	27
EFC4251K2A	Magnifier	1	27
EFC4263B	Bracket	2	27
EFC4281K2B	Finder frame	1	27
EFC4712C	Leatherette	2	27
EFC4713C	Leatherette	1	27
EFC4714D	Leatherette	1	27
CFC4234D	Spring	1	27
DFC4226C	Shaft	1	27
DFC4243C	Shaft	1	27
DFC4271D	Plate holder	1	27
DFC4272D	Cover	1	27
DFC4273F	Shoulder screw	1	27
DFC4274D	Spring	1	27
DFC4275E	Holder	1	27
DFC4284C	Spring	1	27
DFC4285C	Spring	1	27
FC4224D	Spring anchor	2	27
FC4227B	Shoulder screw	1	27
FC4244B	Spring	1	27
FC4265B	Spring	2	27
MFC4255A	Shaft	1	27
MFC4261G	Hood plate right	1	27

Parts No.	Description	Pcs.	Ref. Page
MFC4262G	Hood plate left	1	27
MFC4264C	Shaft	2	27
RS2736	Mamiya mark	1	27
PB1.7x3BNi	Screw for EFC4263B	4	27
PB2x2BNi	Screw for DFC4271D	2	27
PD1.7x2.5BNi	Screw for EFC4242C	2	27
PD2x3BNi	Screw for DFC4272C	2	27
3PB1.7x3BNi	Screw for EFC4213B	4	27
3PB1.7x2.5BNi	Screw for EFC4221K2E	4	27

CLARIFICATION CHART

for
Mamiya C330 Professional *f*
and
Mamiya C330 Professional


Mamiya

Modification of Winding gear assy.


Type "A"

Type "B"

Type "C"

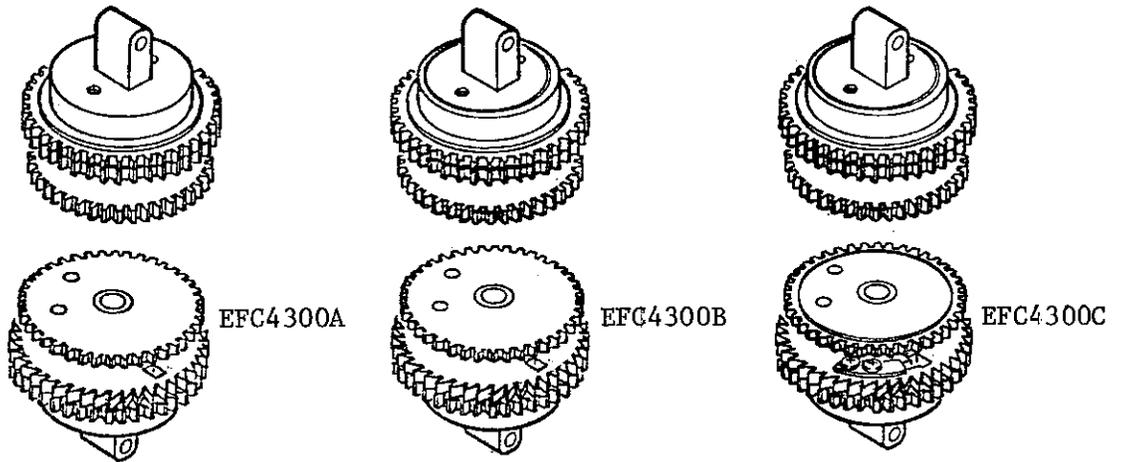

Type "C" is the latest one which has been strengthened by mixing cooper in its material.

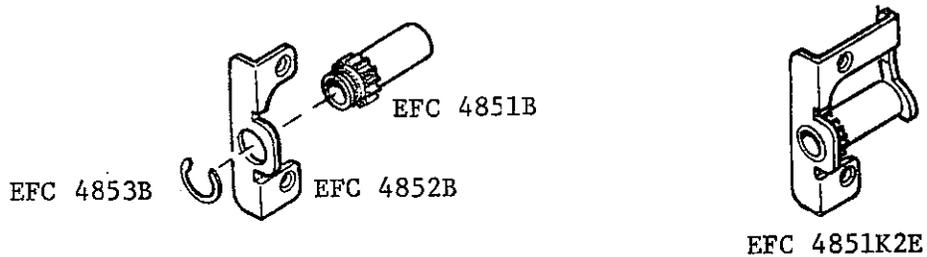

Replacement in pair..... Possible


Modification of Pinion shaft hub

Exclusive use for C330


Exclusive use for C330f




Modification of Click lever

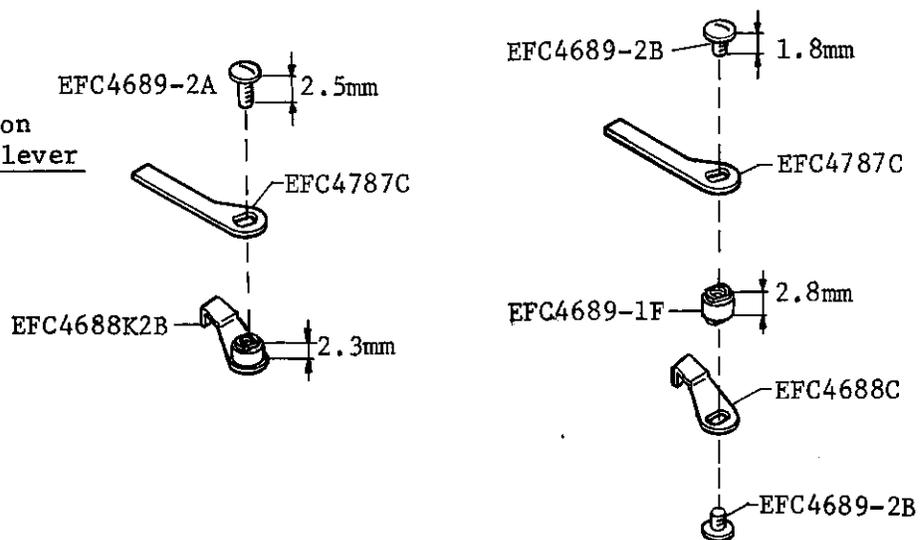

Modification of Focusing screen grass

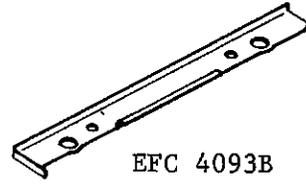


EFC 4093B

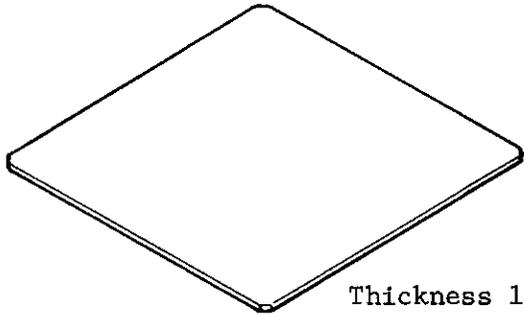

Thickness 1.5mm


EFC 4091C

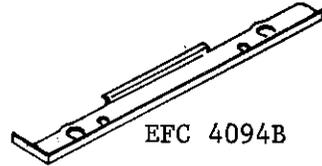

EFC 4094B




EFC 4095A

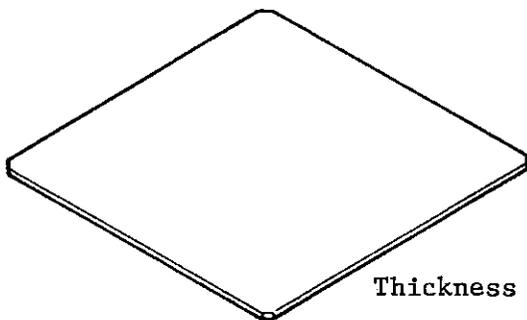


Thickness 1.3mm

EFC 4091D

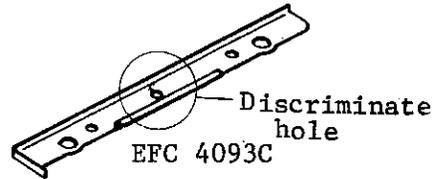

EFC 4093C






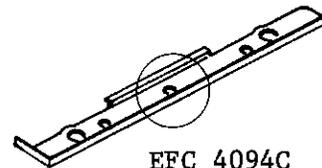


EFC 4094C



EFC 4095B


Modification of Right panel assy.

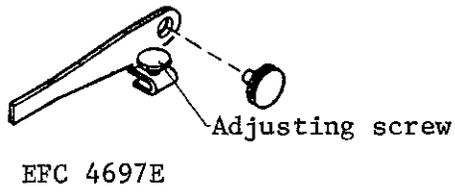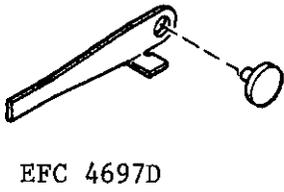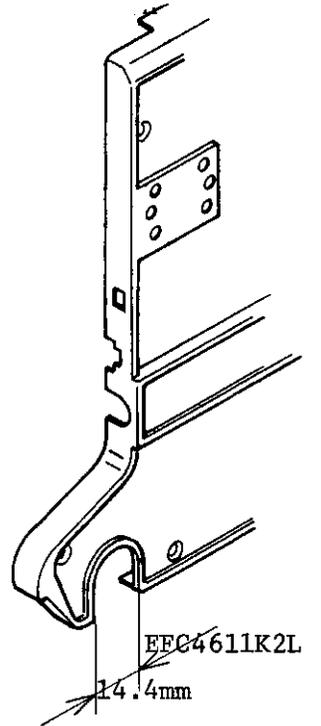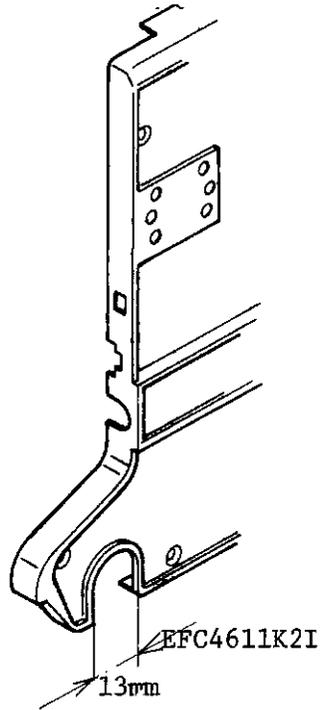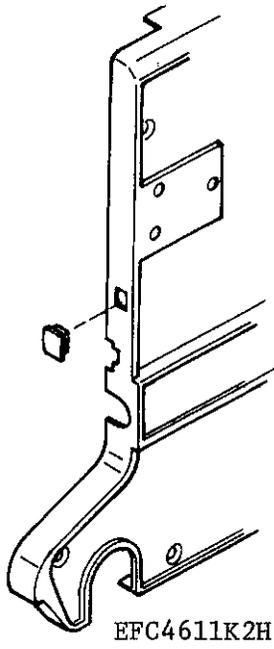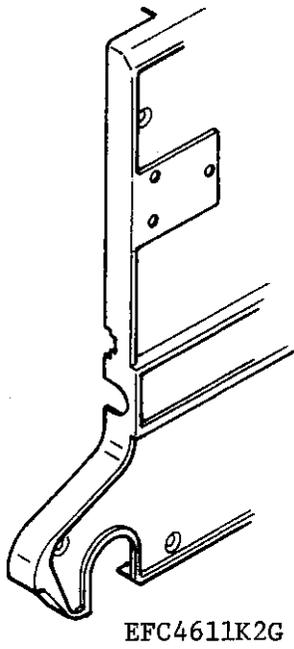


EFC 4194A



EFC 4694C



EFC 4691A



EFC 4691C





EFC 4692B






EFC 4692C

Modification of Accessory shoe

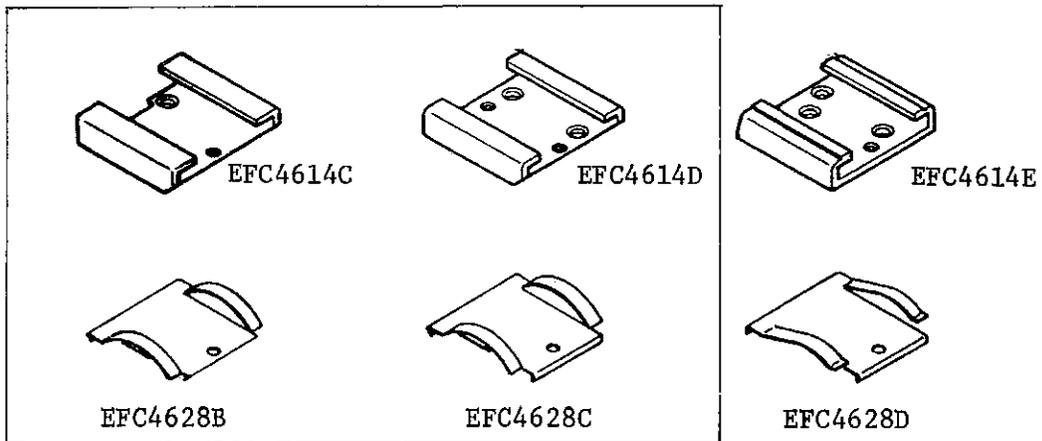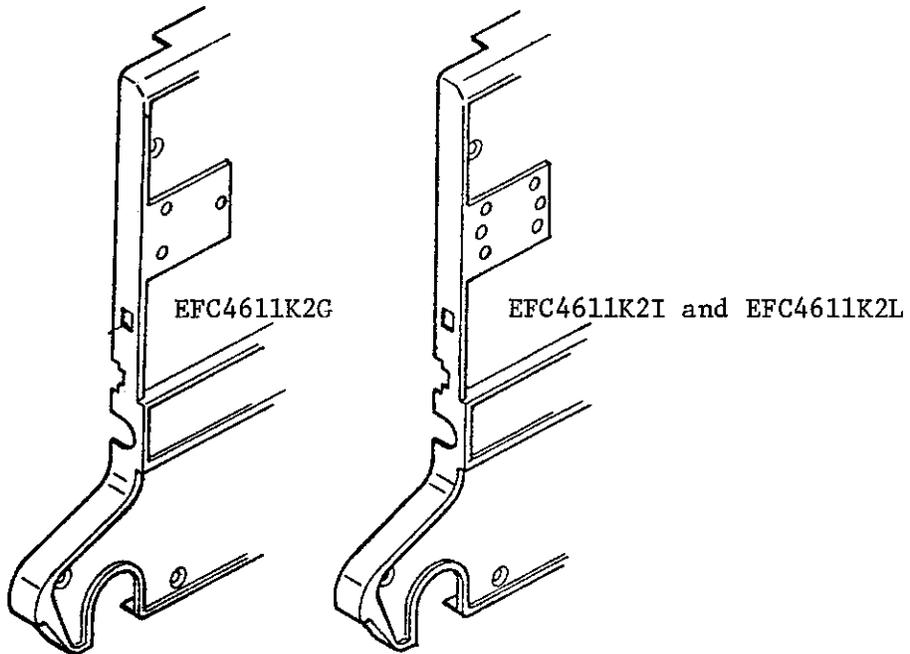





Two old shoes and covers in square are no more available the latest shoe EFC4614E with EFC4628D can be installed on old body.

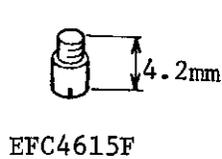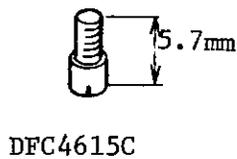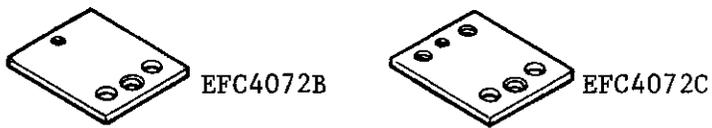


New film counter linking mech.

Use for C330

Exclusive Use for C330 f

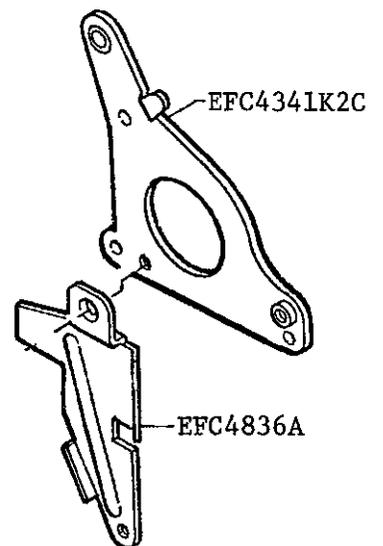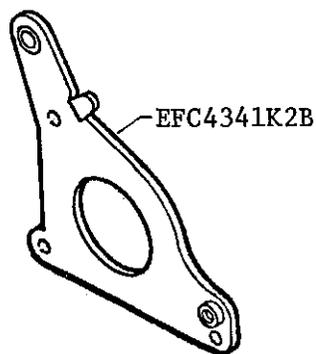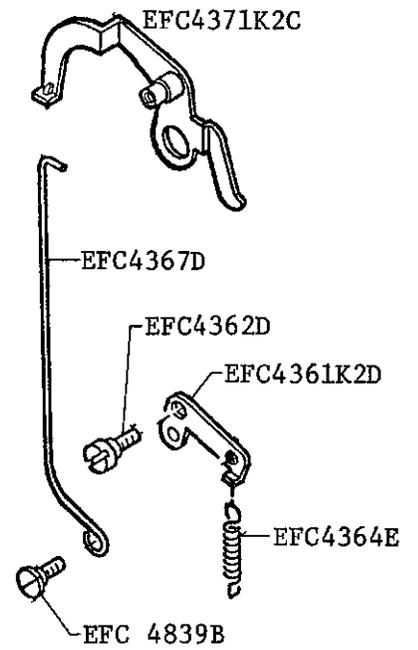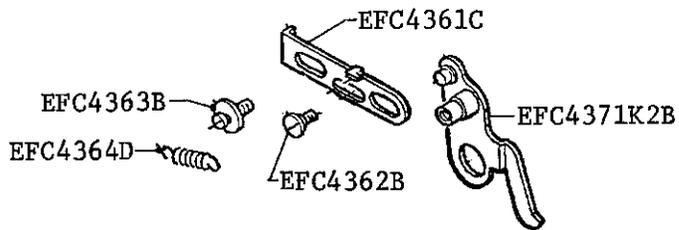


Exclusive use for C330

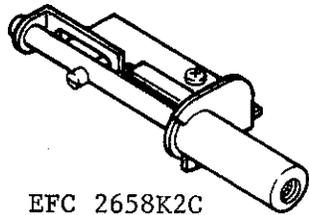


EFC 2658K2C

Exclusive use for C330f

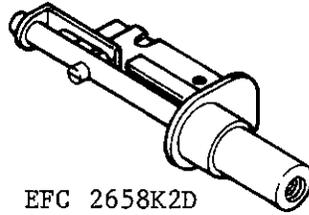

EFC 2658K2D

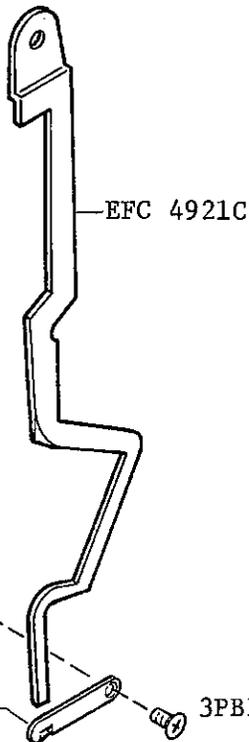


EFC 4921C

EFC 4922C

EFC 4926A

3PB1.4X2.5BN1

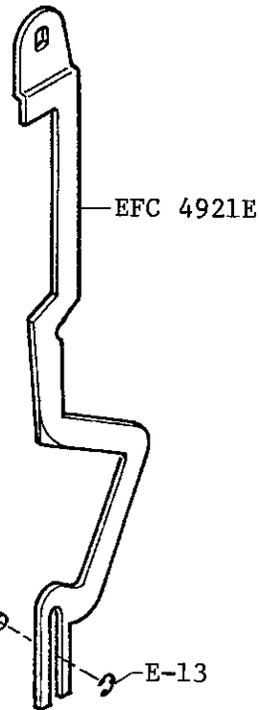

EFC 4921E

EFC 4922D


E-13




EFC 4029D



EFC 4029E

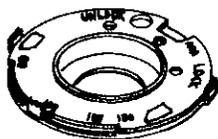


EFC 4639K2D

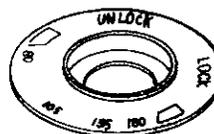

EFC 4639K2E


Use for C330

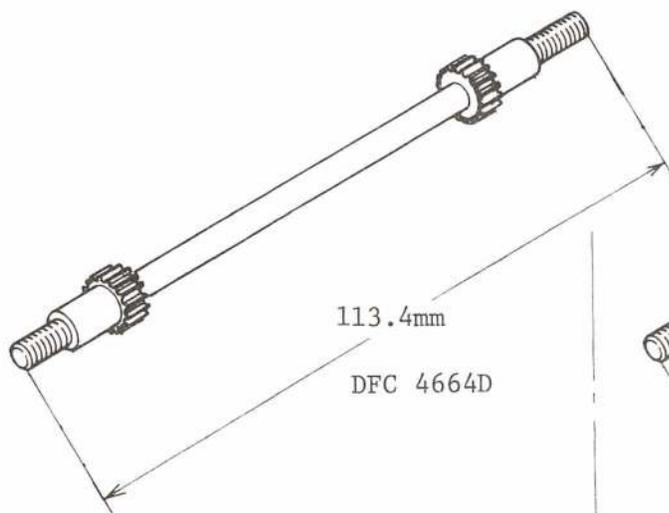

113.4mm


DFC 4664D

Use for C330f

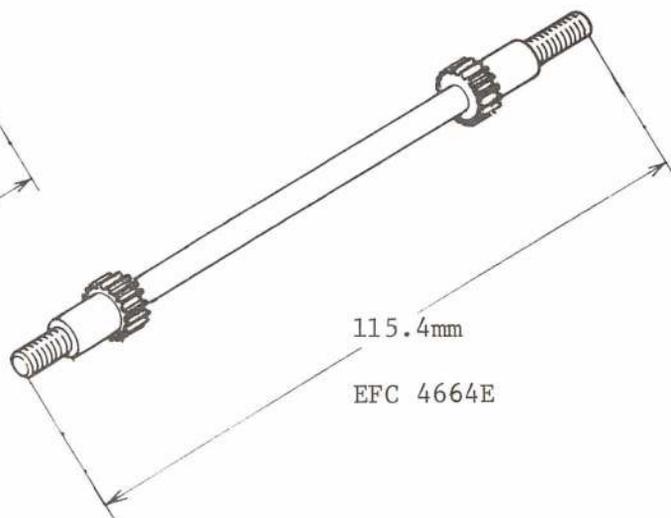


115.4mm


EFC 4664E

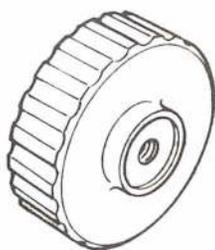


EFC 4661E

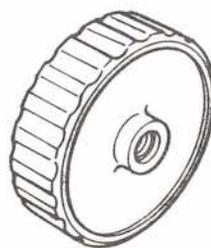

EFC 4661F

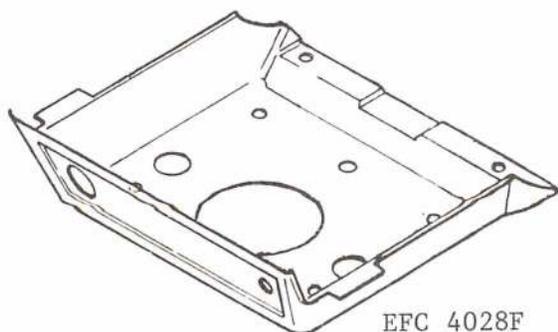

EFC 4028F

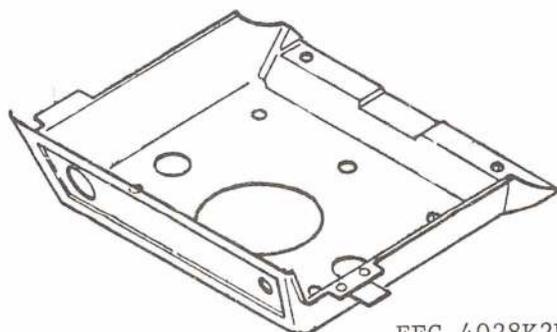

EFC 4028K2H

Three parts for C330 are no more available, therefore it is possible to replace them with parts for C330f as shown in right hand side drawings.

Printed in Japan
May-1978 ,P450