

Mamiya

PARTS CATALOG

M645₁₀₀₀S

M645





MAMIYA AMERICA CORPORATION

8 Westchester Plaza, Elmsford, NY 10523 • 914-347-3300

645 PRO / M645 SUPER / 645

Detail "A" Left Panel Ass'y

2	8	
---	---	--

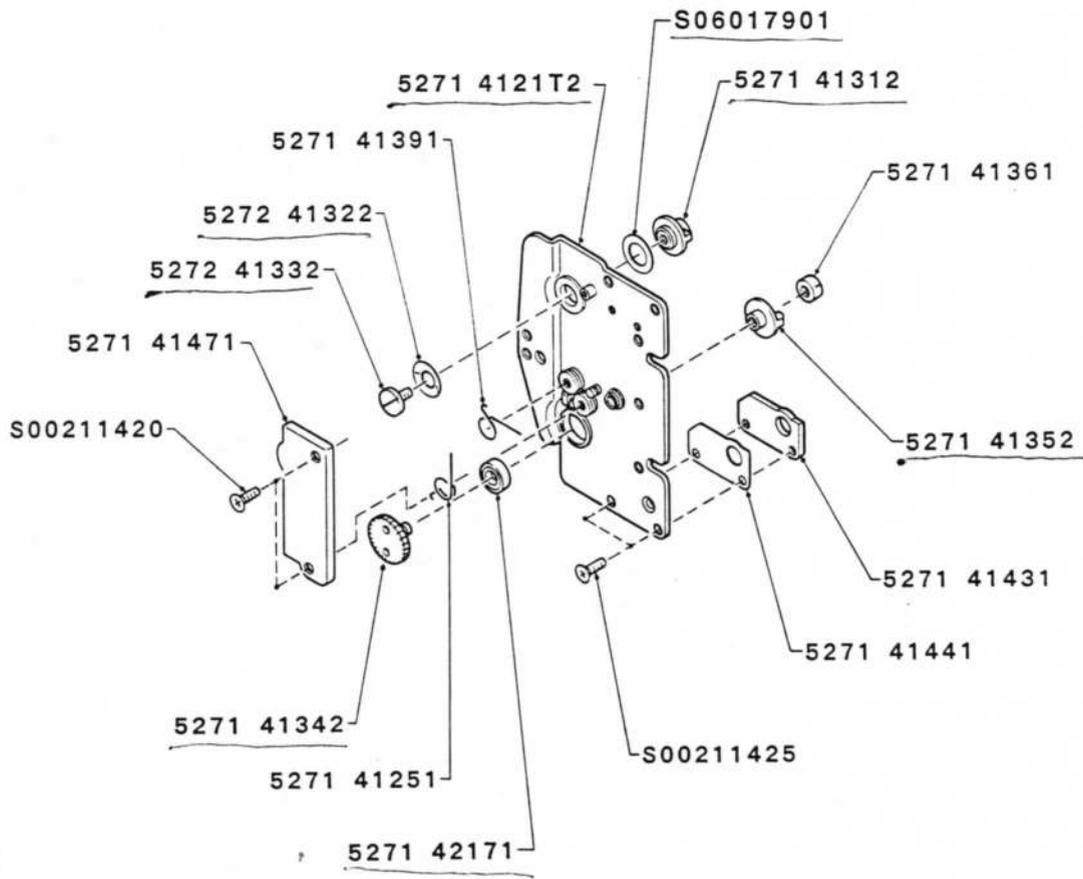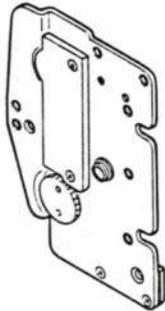

DETAIL A


OUR REF.No SUPER 91-006

- (A): Disengagement prevention of film insert knob
Material and shape of the knob have been changed.
New P/No.5271 41932. 5171 41922. 5171 41972. 5171 41982.
- (B): To realize smooth film advancing, wind up torque is reduced.
P/No.5271 42171 : Bearing for gear shaft is adopted, and other relative parts are also changed.

(A), (B) and (D): Interchangeability between new and old parts as independent ones
Not interchangeable.

addition


- (C): To prevent abnormal over exposure, 220 type film is used.
P/No.5272 42161 : Sealing strip is added.
NOTE : Applied only to film insert for 220 type.

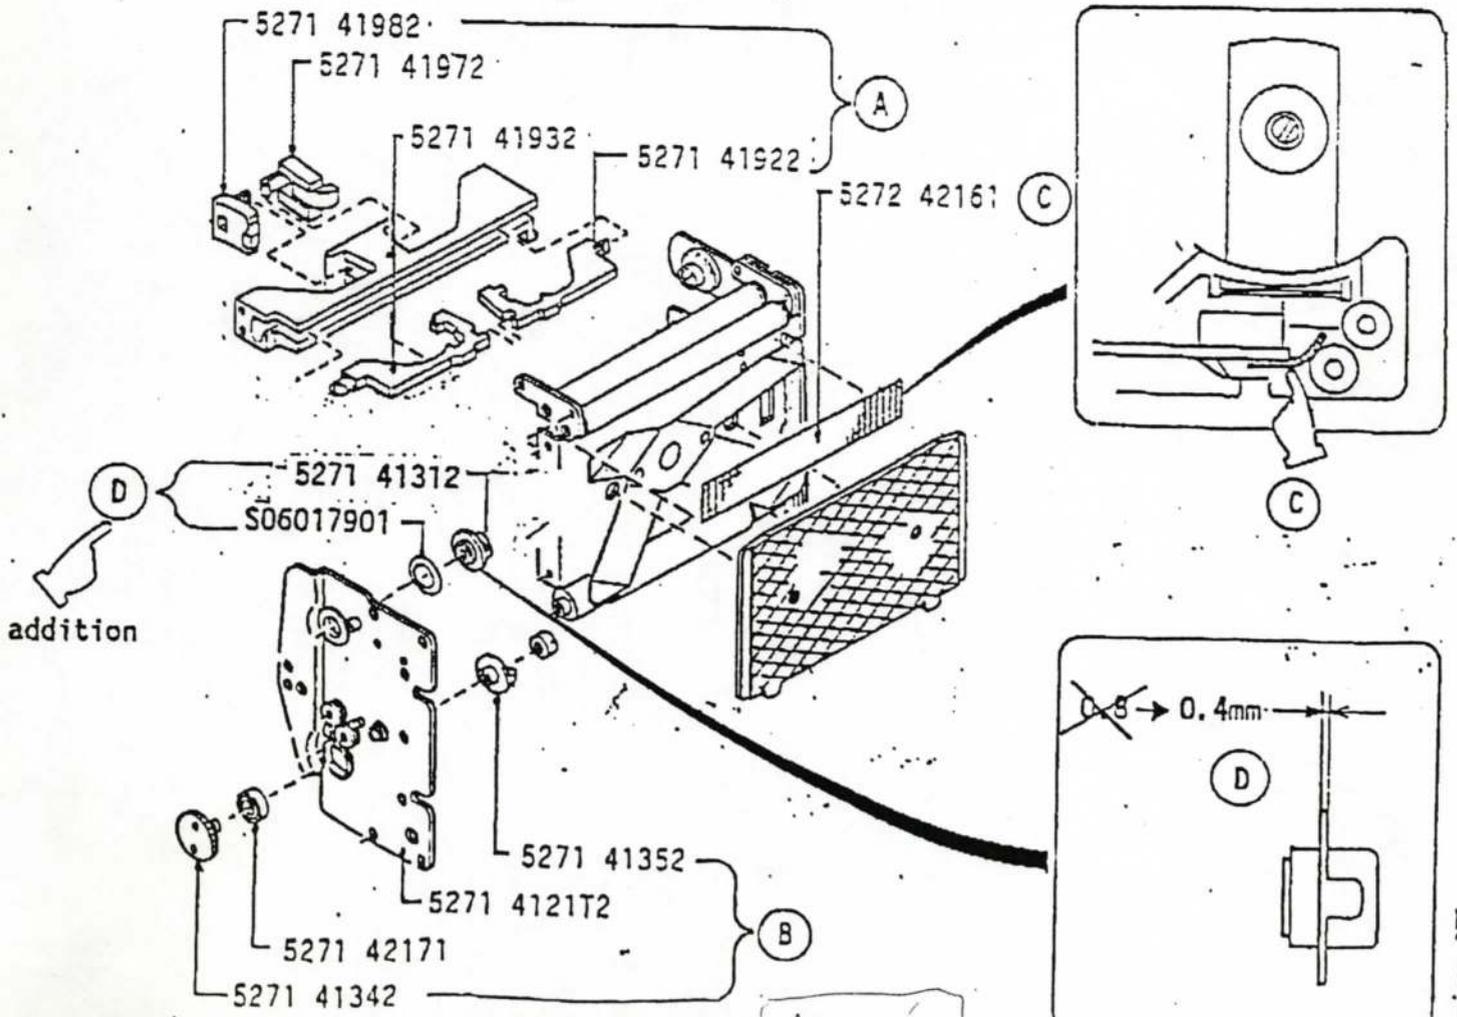

FROM: MR. Y. SAITOH.


When light leak owing to one - sided film advancing happens, replace the spring (B) with ϕ 0.35mm spring.

P/NO. 5271 41852 : Spring

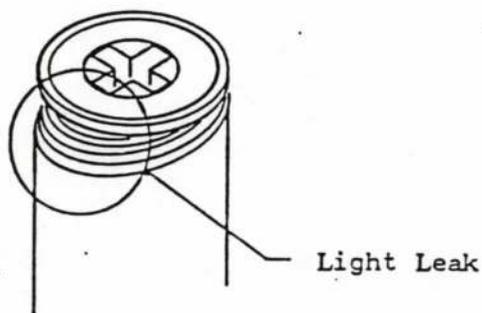

1. Repair step :

- 1) Screw (A) is lock-tightened and it is rather hard to remove. So, have the tip of soldering iron (C) touch the friction wheel shaft (D) to heat up and remove the screw (A). Then, take out the spring (B).
- 2) After replacement of the spring, be sure to apply lock-tight when tightening the screw (A).

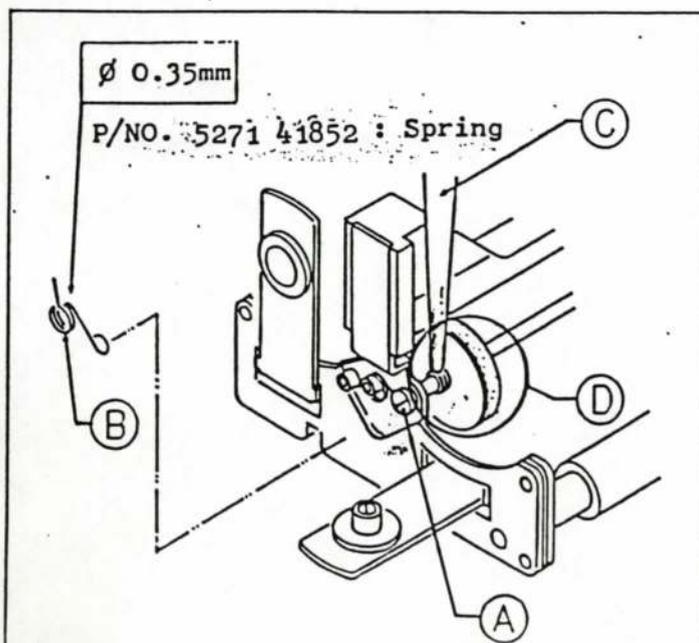

MODIFICATION DATE :

Since 1989 SEP Production.

7 TECHNICAL BULLETIN

NEW GEAR

1/1

87



12

OUR REF.NO.SUPER 89-009

To secure proper engagement with the body or the holder, the shap of the gear is modified.

MODIFICATION DATE : Since 1989 SEP Production.

INTERCHANGEABILITY OF OLD PART VS. NEW PART YES . NO

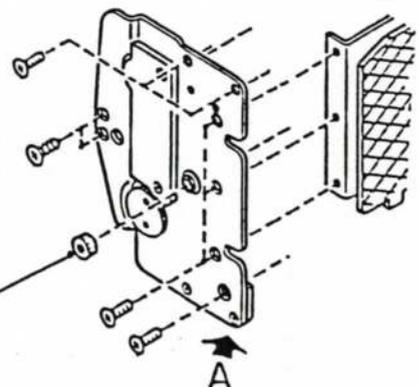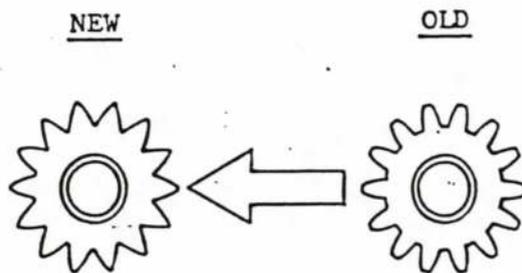

P/NO. 5271 41832 : Gear

USE OF PARTS CHANGE NOTICE (AUTO EXTENSION RING NO.3)

1/1

1


OUR REF.NO. 027

1. Purpose of improvement : Please improve Auto extension ring No.3-S for Auto extension ring No.3 because of shortage of our service stock.

2. Improving procedure : Out of stocks Common use

SLS 5172S1	-----	SLS 5172S2
SLS 51911	-----	SLS 51912
SLS 5182T1	-----	SLS 5182T2
SLS 51711	-----	SLS 51712
SLS 51771	-----	SLS 51771
	-----	SLS 51792
	-----	PD1.4x2.5

: Replacing with all seven parts is recommendable.

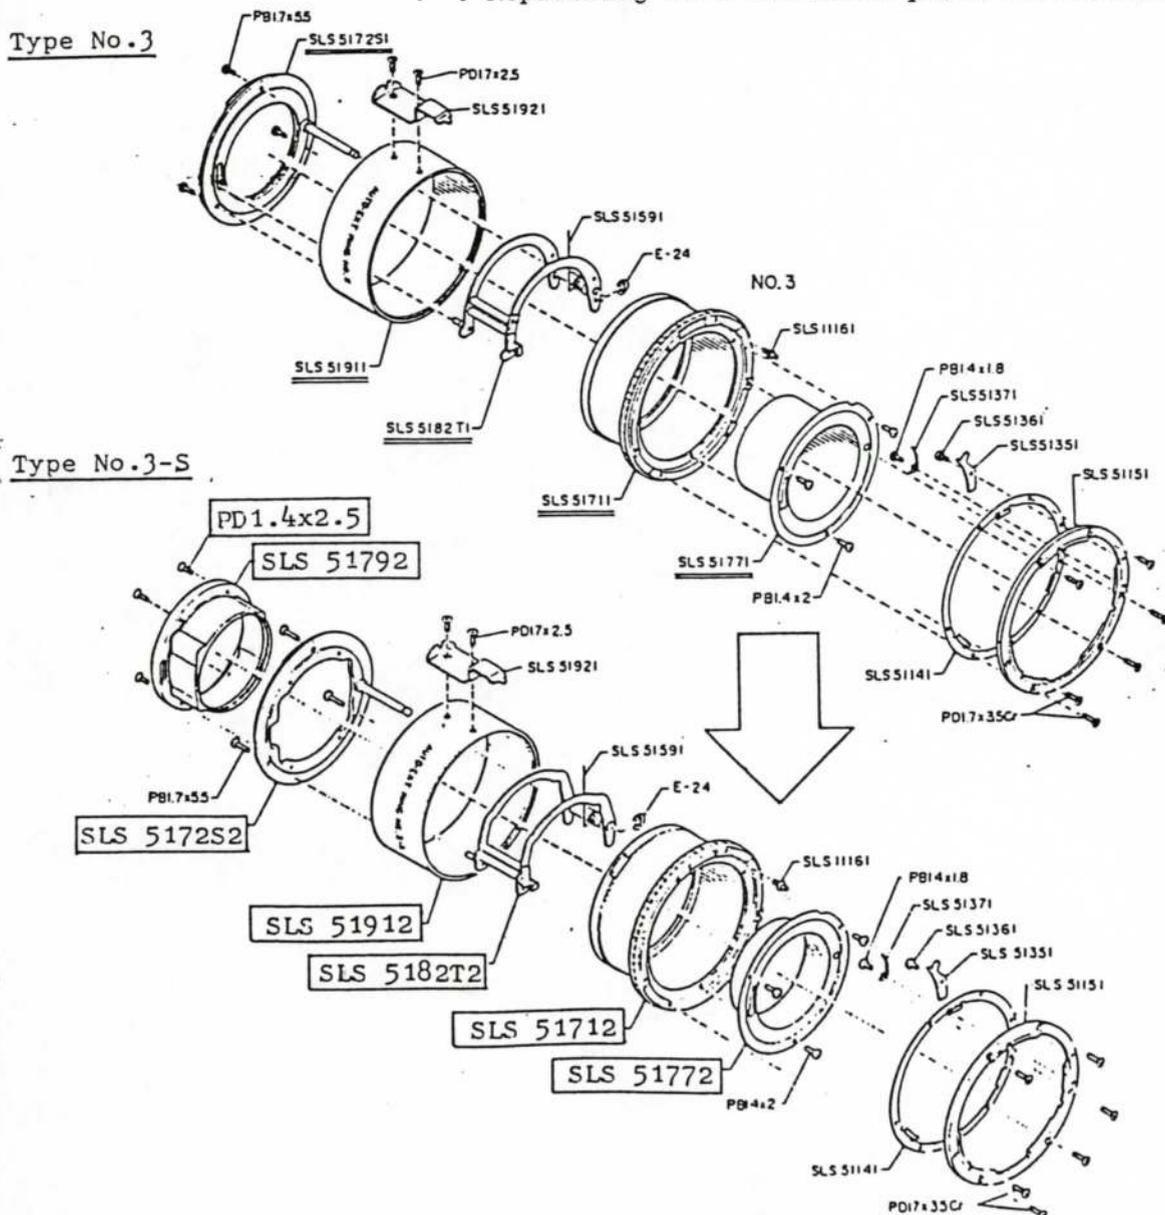


ITEM: M645

OUR REF. NO. 080-M645-8 December 8 1980

New Dividing device

1. New SLS 1541T1 dividing device with two marks on each tooth has been adopted since December 1979.
2. Replacement of old dividing device with new one :
Possible, but the adjustment is required in referring next page.

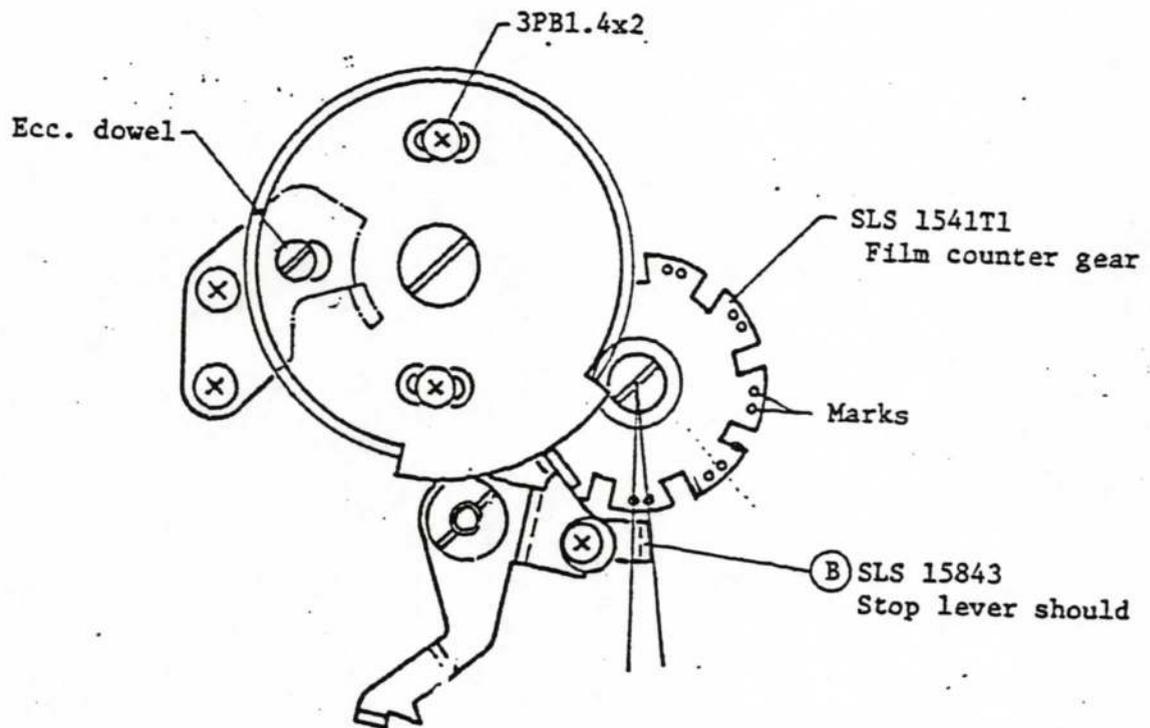

ITEM: M645

OUR REF. NO. 080-M645-6 8 September 1980

B. On the film surface

- 1) Set shutter speed dial to Bulb and the multiple exposure lever to the white dot and not with the word " Multi ".
- 2) Place the roll-film insert with a loaded film in the camera body and close the camera back cover.
- 3) Wind the film advance knob or crank until it stops.
- 4) While the mirror raising up by depressing the shutter release button, mark the actual picture frame by a ball-point pen through front of the camera body.
- 5) Repeat the above step 4 unit fifteen exposures are marked.

Note : You can see the film space problem on surface of the film which you marked on.

3. Check point and adjustment or repair

- A. When releasing the shutter, the clearance between the SLS 1584T3 stop lever and the dividing device should be over 0.3mm as shown in Fig. 4.

If not, it will happen in both phenomenons Fig. 1 and Fig. 2.

- * Readjust it by turning the SLS 15861 Ecc.collar.

- B. Does the pawl of SLS 1584T3 stop lever get into the dividing device certainly with the film advance crank fully wound ?
(Fig. 5 and Fig. 6)

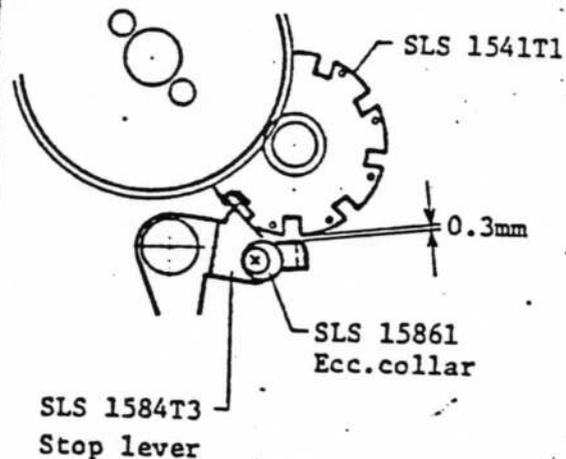


Fig. 4

ITEM: M645

OUR REF. NO. 080-M645-6 8 September 1980

If not, it will happen in the uneven wider space(Fig.1) sometimes ?

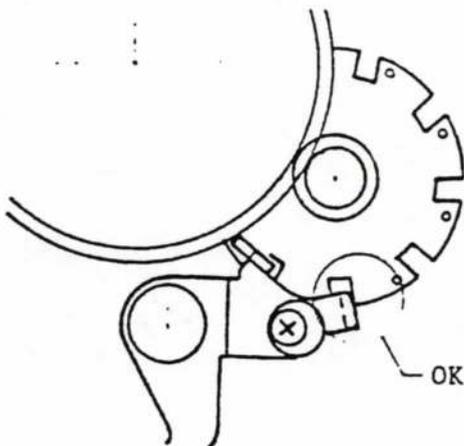


Fig. 5

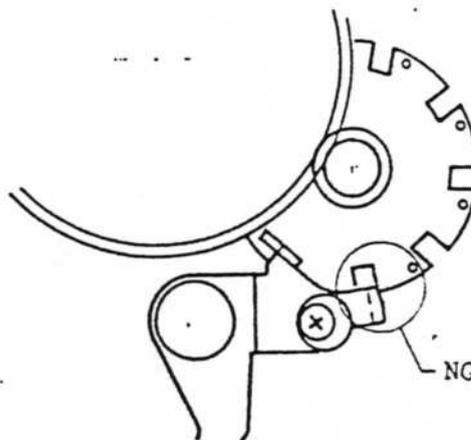


Fig. 6

* Replace the SLS 1584T3 or older one with the latest modified SLS 1584T4 stop lever.



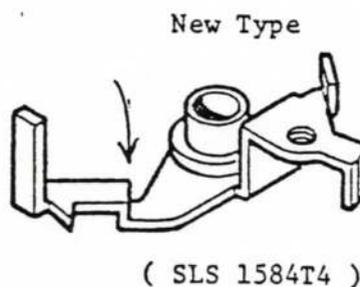


Fig. 7

C. Is the SLS 15811 F.clutch wheel stopped rotating by other end of pawl of the stop lever ? (Fig. 8)

Note : The pawl must be engaged with the SLS 15811 F.clutch wheel on way of film winding.

If the pawl is worn out, it will be able to stop rotation of the F.clutch wheel so that it will happen in uneven wider space

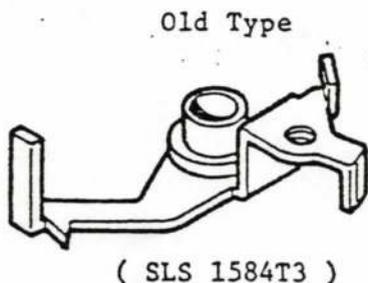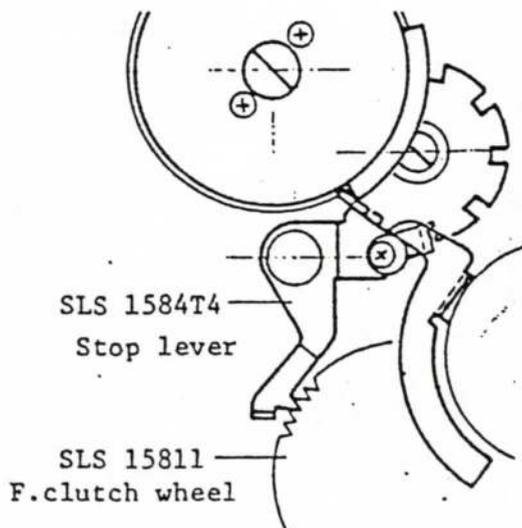

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 1142T2		1	Strap lug R	吊金具(右)
5200 11861	(SLS11861)	1	Catch plate	裏蓋掛板
5200 14711	(SLS14711)	1	F4 Gear	F 4 歯車
5200 14721	(SLS14721)	1	Shaft	F 4 歯車軸
5200 14731	(SLS14731)	1	Screw	F 4 歯車止ネジ
5200 1474T1	(SLS1474T1)	1	Advancing clutch	F クラッチ板
5200 14811	(SLS14811)	1	F clutch wheel	F クラッチ爪車
5200 14822	(SLS14822)	1	Spring	F クラッチレバーバネ
5200 14832	(SLS14832)	1	Spring	F クラッチ押しバネ
5200 14841	(SLS14841)	1	Gear	F クラッチ送り歯車
5200 14851	(SLS14851)	1	F3 Gear	F 3 歯車
5200 14871	(SLS14871)	1	Spring washer	F 3 歯車摩擦バネ
5200 14881	(SLS14881)	1	Screw	F 3 歯車摩擦バネ止
5200 15442	(SLS15442)	1	Anchor	バネ掛
5200 2071T1	(SLS2071T1)	1	Synchro contact	X 接片台
5200 20811	(SLS20811)	1	Insulation plate	上部絶縁板
5200 2082T1	(SLS2082T1)	2	Contact	上部電極
5200 20831	(SLS20831)	1	Contact base plate	上部電極台
5200 20841	(SLS20841)	1	Contact cover	上部電極カバー
5200 20851	(SLS20851)	4	Screw (PD1.7×2.5)	上部電極カバー止ネジ
5200 2086T1	(SLS2086T1)	1	Earth plate	上部電極アース片
5200 2087T1	(SLS2087T1)	1	Contact	E X T 電極
5200 20921	(SLS20921)	4	Collar	上部接点ブッシュ
S00012050	(PB2×5)	4	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	D X 基板止ネジ
S00211435	(PD1.4×3.5)	2	Screw	F 3 歯車止ネジ
00211718	(PD1.7×1.8)	3	Screw	裏蓋掛板止ネジ
S00211745	(PD1.7×4.5)	2	Screw	X 接片台止ネジ


※ DETAIL F Winding Base Gear Ass'y.....Page 18 Common use M645 1000S

Remarks

M645

Body Ass'y 12

1 37

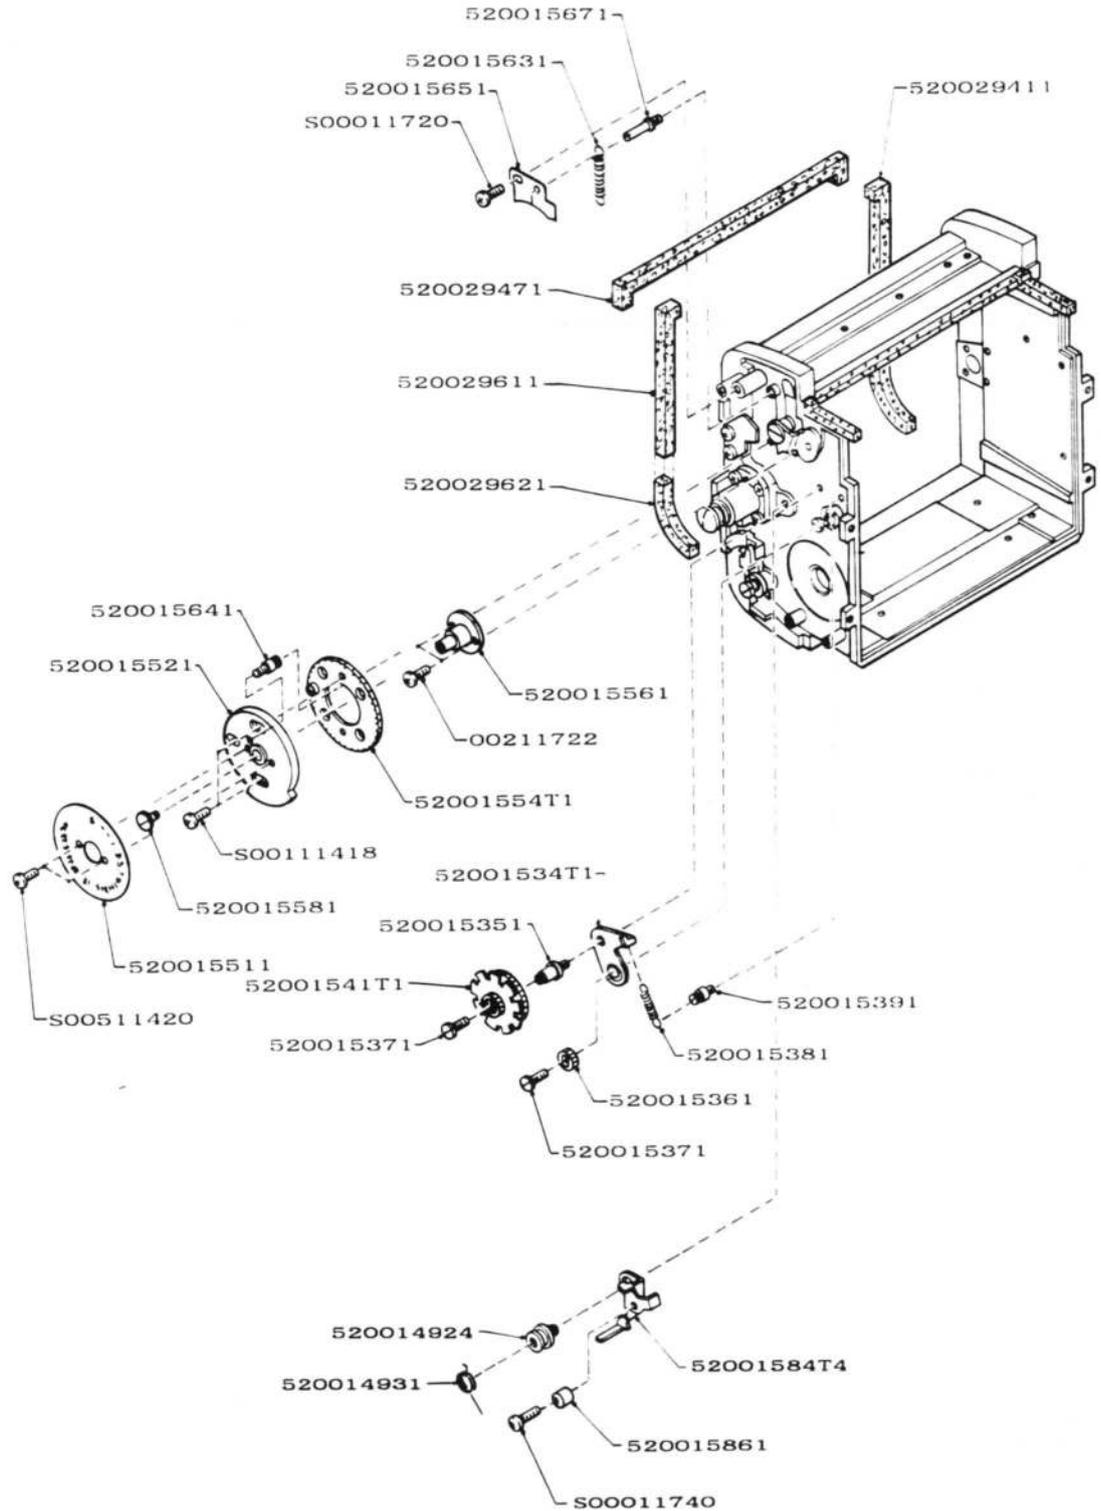

PARTS LIST


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 14924	(SLS14924)	1	Shaft	F 止爪車
5200 14931	(SLS14931)	1	Spring	F 止爪車バネ
5200 1534T1	(SLS1534T1)	1	Lever	C 1 歯車基板
5200 15351	(SLS15351)	1	Shaft	C 1 歯車基板軸
5200 15361	(SLS15361)	1	C2 Gear	C 2 歯車
5200 15371	(SLS15371)	2	Screw	止ネジ
5200 15381	(SLS15381)	1	Spring	C 2 歯車バネ
5200 15391	(SLS15391)	1	Anchor	C 2 歯車バネ掛
5200 1541T1	(SLS1541T1)	1	Counter dividing device	割出板
5200 15511	(SLS15511)	1	Counter	カウンター板
5200 15521	(SLS15521)	1	Counter base	カウンター台
5200 1554T1	(SLS1554T1)	1	Counter gear	カウンター歯車
5200 15561	(SLS15561)	1	Hub	カウンター軸
5200 15581	(SLS15581)	1	Screw	カウンター板止ネジ
5200 15631	(SLS15631)	1	Spring	カウンターバネ
5200 15641	(SLS15641)	1	Anchor	カウンターバネ掛
5200 15651	(SLS15651)	1	Indicator	指標
5200 15671	(SLS15671)	1	Guide screw	指標ガイド
5200 1584T4	(SLS1584T4)	1	Stop lever	割出爪
5200 15861	(SLS15861)	1	Collar	割出爪鉸
5200 29411	(SLS29411)	2	Sealing strip	F ボディ溝モルト
5200 29471	(SLS29471)	1	Sealing strip	F ボディモルト
5200 29611	(SLS29611)	1	Sealing strip	F ボディ溝モルト
5200 29621	(SLS29621)	1	Sealing strip	F ボディ溝モルト
S00011720	(PB1.7×2)	1	Screw	指標止ネジ
S00011740	(PB1.7×4)	1	Screw	割出爪止ネジ
S00111418	(3PB1.4×1.8)	2	Screw	C 歯車止ネジ
00211722	(PD1.7×2.2)	2	Screw	カウンター軸止ネジ
S00511420	(3TB1.4×2)	2	Screw	カウンター板止ネジ

Remarks

M645

Body Ass'y 13

1 38

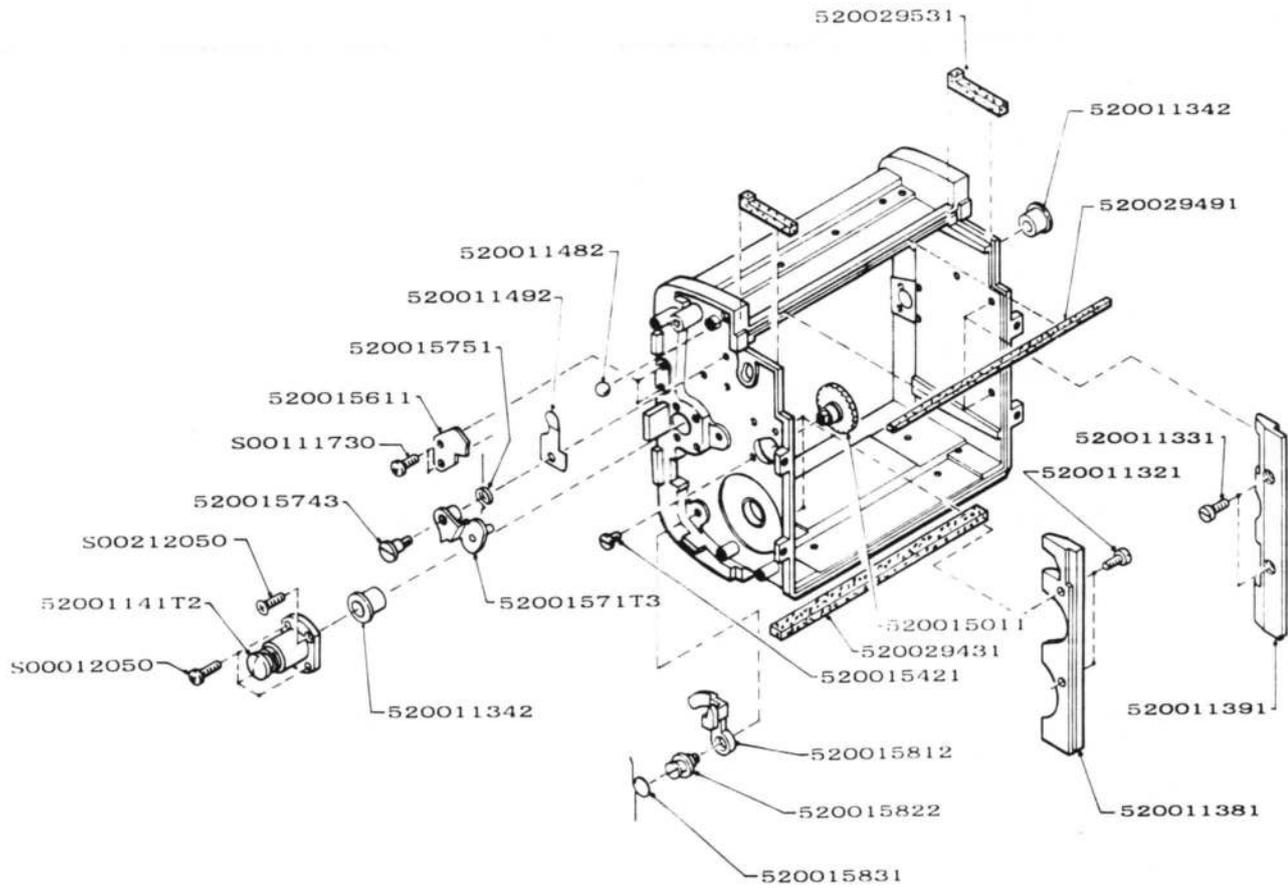

PARTS LIST



Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11321	(SLS11321)	2	Guide screw L	Fホルダーガイド
5200 11331	(SLS11331)	2	Guide screw R	Fホルダーガイド
5200 11342	(SLS11342)	2	Lock guide	中枠ロックガイド
5200 11381	(SLS11381)	1	Guide plate L	F遮光枠(左)
5200 11391	(SLS11391)	1	Guide plate R	F遮光枠(右)
5200 1141T2		1	Strap lug L	吊金具(左)
5200 11482	(SLS11482)	1	Ball	F固定ボール
5200 11492	(SLS11492)	1	Leaf spring	F固定ボールバネ
5200 15011	(SLS15011)	1	C1 Gear	C1歯車
5200 15421	(SLS15421)	1	Screw	ストッパー
5200 15611	(SLS15611)	1	Stopper	カウンター戻し止
5200 1571T3	(SLS1571T3)	1	Change-over lever	カウンター切換板
5200 15743	(SLS15743)	1	Shoulder screw	カウンター切換板軸
5200 15751	(SLS15751)	1	Spring	カウンター切換板バネ
5200 15812	(SLS15812)	1	C release lever	カウンター解除レバー
5200 15822	(SLS15822)	1	Shoulder screw	解除レバー軸
5200 15831	(SLS15831)	1	Spring	解除レバーバネ
5200 29431	(SLS29431)	1	Sealing strip	Fボディ蝶番モルト
5200 29491	(SLS29491)	1	Sealing strip	Fボディ正面溝モルト
5200 29531	(SLS29531)	2	Sealing strip	ボディモルト(小)
S00012050	(PB2×5)	3	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	止ネジ
S00212050	(PD2×5)	1	Screw	吊金具止ネジ

Remarks

M645

5200 16201 Side Panel R Ass'y

1 39

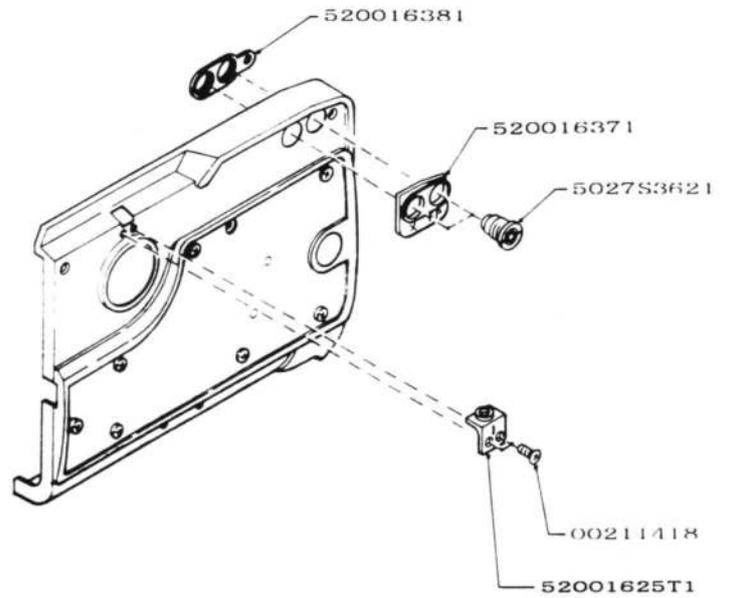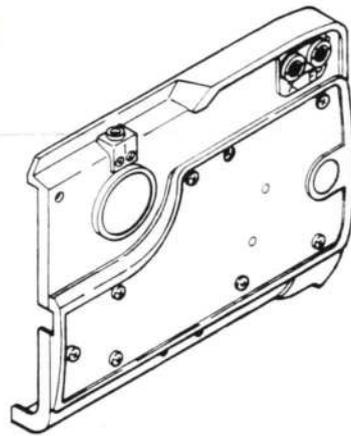

5200 16201

M645

PARTS LIST

1	39
---	----

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 1625T1	(SLS1625T1)	1	Shutter speed indicator	スピード指標
5200 16371	(SLS16371)	1	Terminal base	シンクロ座
5200 16381	(SLS16381)	1	Terminal nut	シンクロ止ナット
5027 S3621	(LE103-362K2)	2	Flash terminal	シンクロAss'y
00211418	(PD1.4×1.8)	2	Screw	スピード指標止ネジ

Remarks

86

M645


Film Advance Knob

Film Advance Knob Ass'y.....40

M645

Film Advance Knob Ass'y

1 40

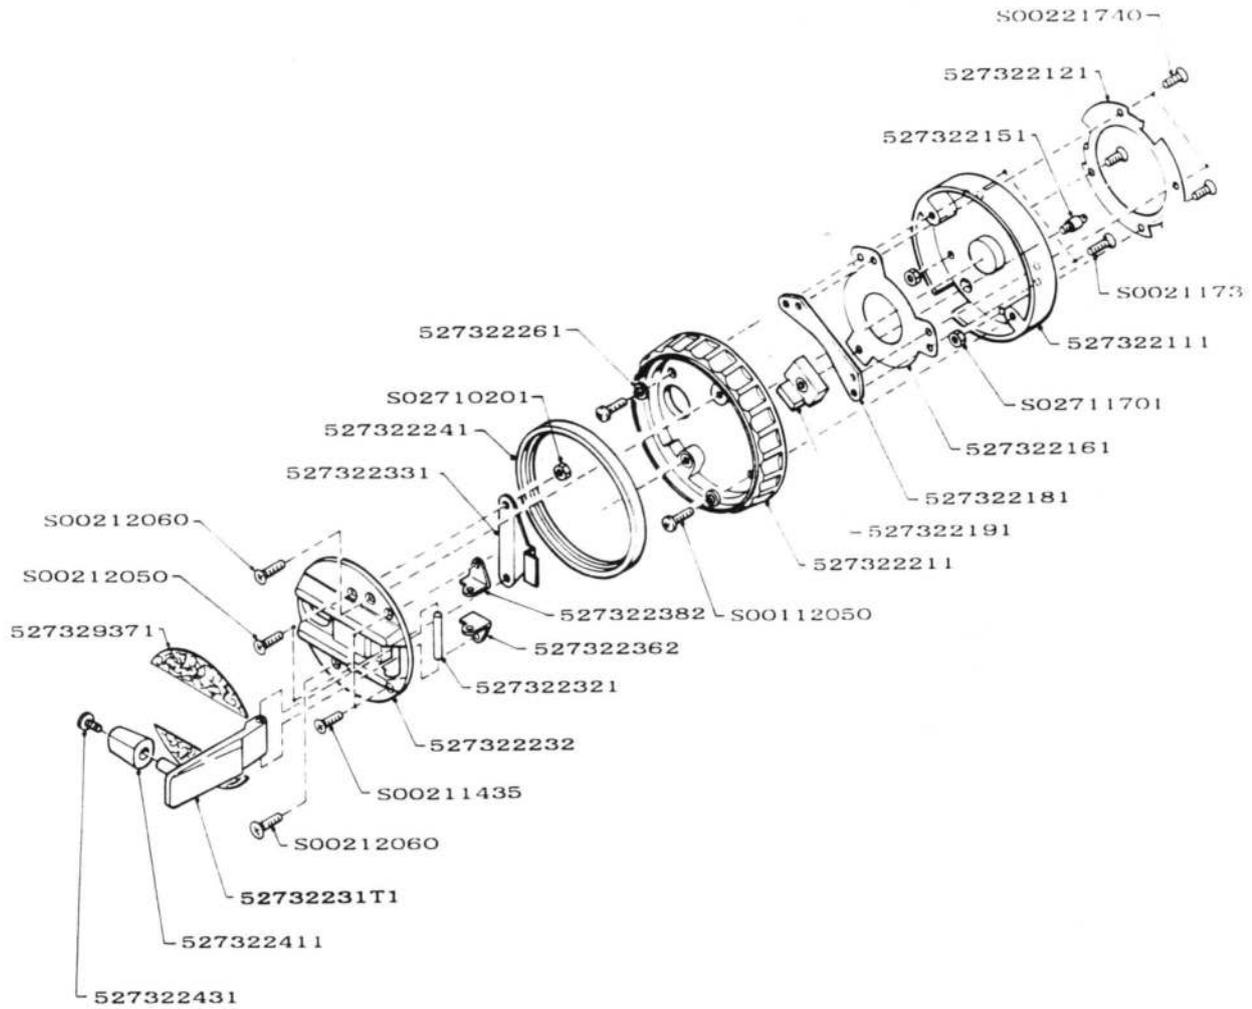

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5273 22111	(SLS22111)	1	Knob base ring	ノブ台
5273 22121	(SLS22121)	1	Bayonet disk	ノブバヨネ
5273 22151	(SLS22151)	1	Pin	ノブバヨネピン
5273 22161	(SLS22161)	1	Leaf spring	ノブバヨネピンバネ
5273 22181	(SLS22181)	1	Plate	ピンバネ止め板
5273 22191	(SLS22191)	1	Knob	つまみ
5273 22211	(SLS22211)	1	Film advance knob	巻上ノブ
5273 22232	(SLS22232)	1	Winding knob lid	巻上レバー台
5273 22241	(SLS22241)	1	Ring	巻上レバー台モール
5273 22261	(SLS22261)	2	Spring washer	バネ座金
5273 2231T1	(SLS2231S1)	1	Advance crank	巻上レバー
5273 22321	(SLS22321)	1	Shaft	巻上レバー軸
5273 22331	(SLS22331)	1	Leaf spring	巻上レバーバネ
5273 22362	(SLS22362)	1	Angle plate	巻上レバー軸押え
5273 22382	(SLS22382)	1	Angle plate	巻上レバー軸押え
5273 22411	(SLS22411)	1	Knob	巻上つまみ
5273 22431	(SLS22431)	1	Screw	巻上つまみ止ネジ
5273 29371	(SLS29371)	2	Leatherette	巻上ノブ革
S00211435	(PD1.4×3.5)	2	Screw	止ネジ
S00211730	(PD1.7×3)	2	Screw	止ネジ
S00221740	(PD1.7×4Cr)	4	Screw	ノブバヨネ止ネジ
S00212050	(PD2×5)	2	Screw	止ネジ
S00212060	(PD2×6)	2	Screw	巻上レバー台止ネジ
S00112050	(3PB2×5)	2	Screw	巻上ノブ止ネジ
S02711701	(N1.7)	2	Nut	ノブバヨネ止ナット
S02710201	(N2)	2	Nut	止ナット

Remarks

ITEM: M645

OUR REF. NO. 080-M645-6 8 September 1980

- * Replace the SLS 1584T3 or older one with the SLS 1584T4 new stop lever.

- D. Is the pawl got in under the F. clutch wheel without engaging with the F. clutch wheel ? (Fig. 9)

It will happen in uneven wider space.

- * Replace the SLS 1584T3 or older one with the SLS 1584T4 new stop lever.

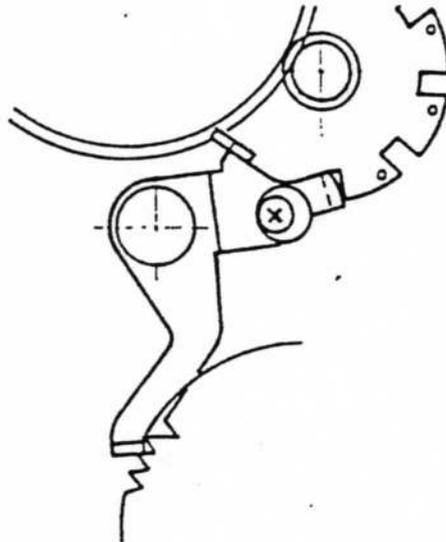


Fig. 9

- E. Does not the stop lever get into the same dent of the SLS 1541T1 dividing device twice ?

- 1) F. clutch in the F. clutch wheel is smeared with some grease or oil ? (Fig.10)

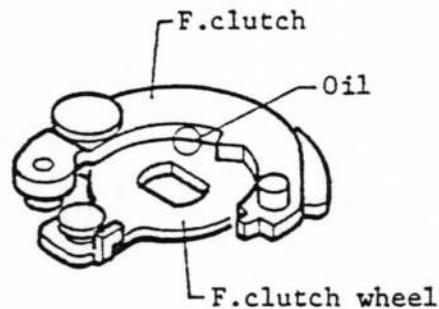


Fig.10

If so, the film will be not advanced properly because of dull function of the F. clutch, therefore the overlapped exposure frame will happen.

- * Clean up the F. clutch and its room.

- 2) The film spool gear engages with the F. gear No.4 without being pushed aside or slipping ? (Fig.11)

If not, the overlapped exposure frame will happen because of worn-out bearing of the film spool gear shaft.

November - 1986

Mamiya CAMERA CO.,LTD.

Shin Meikei Bldg., 3-1, Otsuka 3-Chome, Bunkyo-ku, Tokyo 112, Japan.

Telex call No. 02923110 MAMIYA J

東京：東京都文京区大塚3-3-1新茗溪ビル ☎ 03-947-1111(〒112)

大阪：大阪市西区南堀江1-10-11西谷ビル ☎ 06-541-5631(〒550)

名古屋：名古屋市中区栄5-26-39タカシマ名古屋ビル ☎ 052-263-0383(〒460)

福岡：福岡市博多区博多駅前4-20-23セントラルビル ☎ 092-451-1735(〒812)

仙台：仙台市大町1-1-6青葉ビル ☎ 0222-23-0114(〒980)

札幌：札幌市北区北17条西4丁目マミヤカメラビル ☎ 011-746-9201(〒001)

広島：広島市中区大手町5-17-1モリヤビル ☎ 082-249-6177(〒730)

ITEM: M645

OUR REF. NO. 080-M645-6 8 September 1980

- d. Fix the new SP gear-shaft bearing on the plate by means of the SLS-54 calking tools. (Fig.12)
- e. Apply a fine grease into the SP gear-shaft bearing.
- f. Apply screw-lock tight slightly to threads of the take-up SP stud and SP gear nut and then tighten them.

B. Replacement of SLS 13332 winding stop interlocking-lever axis.

- a. Drill to the SLS 13332 axis from its bottom face with 2.8 ϕ mm drill and pull out it carefully without bending or damaging the winding stop interlock lever. (Fig.11)
- b. Fix the new axis on the winding base plate with the SLS-54 calking tools.

Note : Operation of the winding stop interlock lever must be smooth.

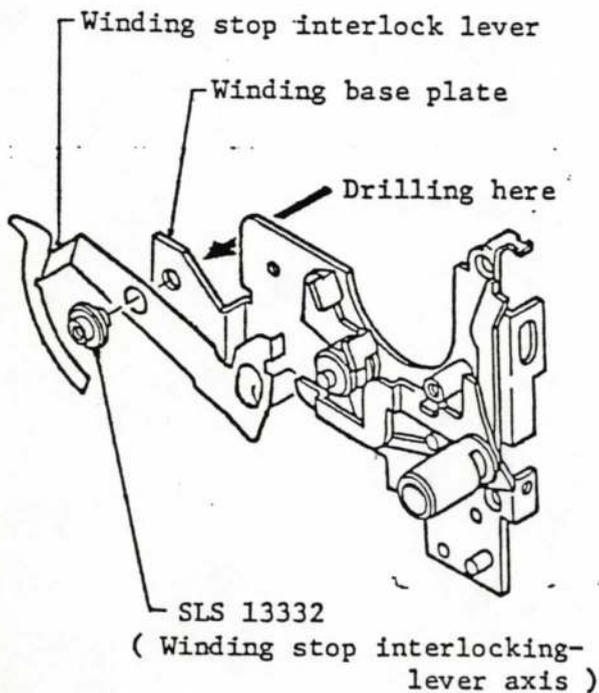


Fig.11

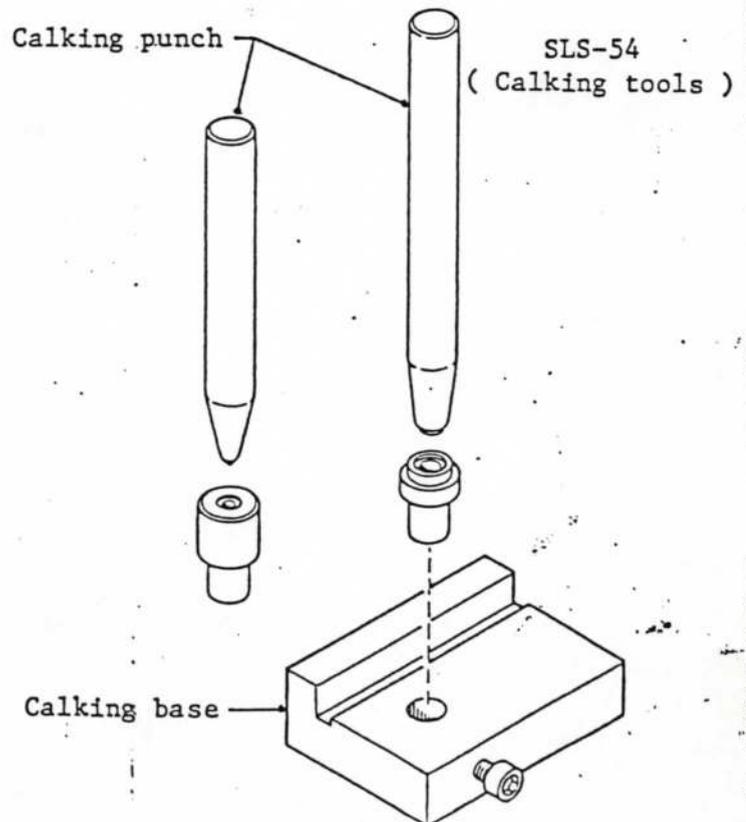
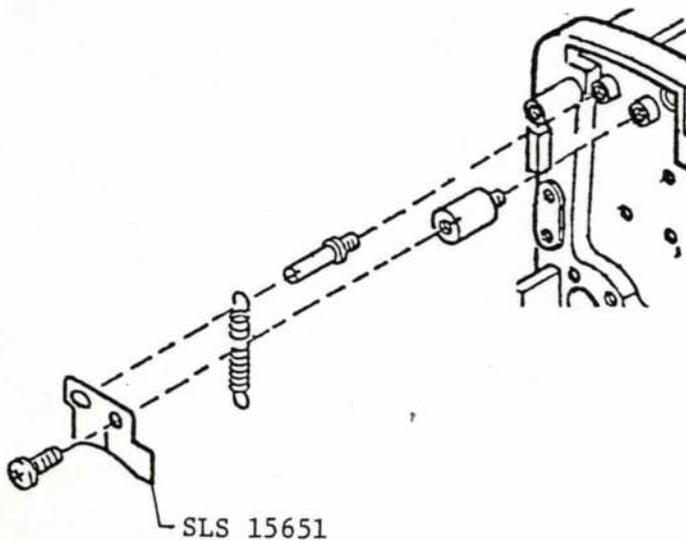
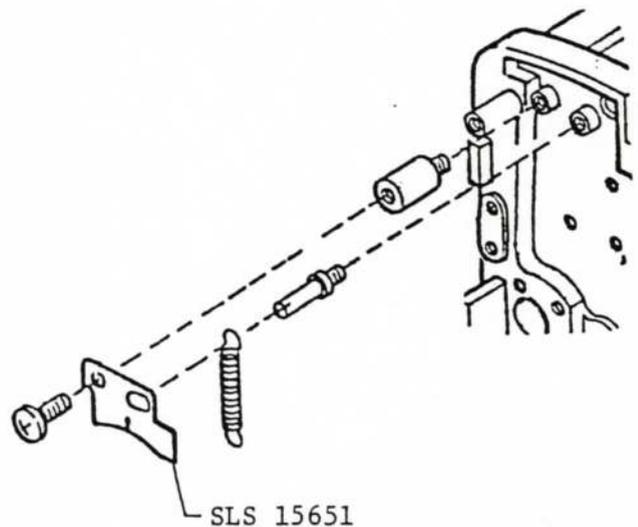


Fig.12

New SLS 15651 Indicator

1. Purpose of modification : For making easier work when assembling.
2. Date of modification : Oct. 1976
3. Replacement of the new part :
New SLS 15651 into old body Possible


*Note : Part Number of the new part is still remain same as the old one.

Old TypeNew Type


New SLS 1721T2 MS gear No.2

1. Purpose of modification : For preventing the play of both gears SLS 1721T1 MS gear No.2 and SLS 17131 M gear No.1, calking mode had been adopted for joining them.
2. Date of modification : March 1977
3. Replacement of new part :
New SLS 1721T2 MS gear No.2 into old body Possible

Old Type

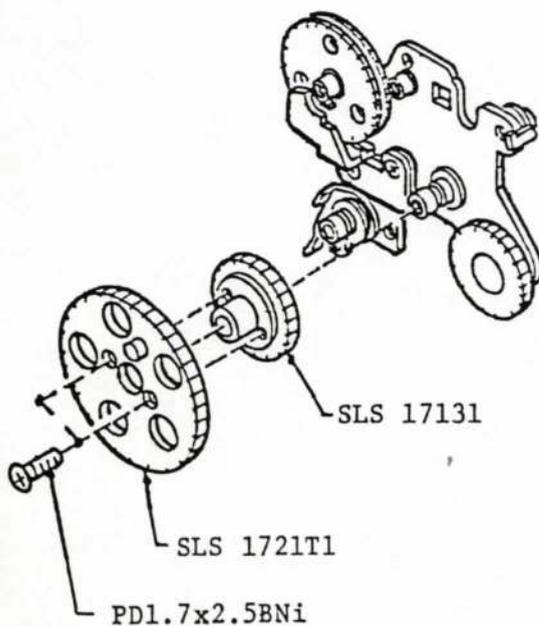

New Type

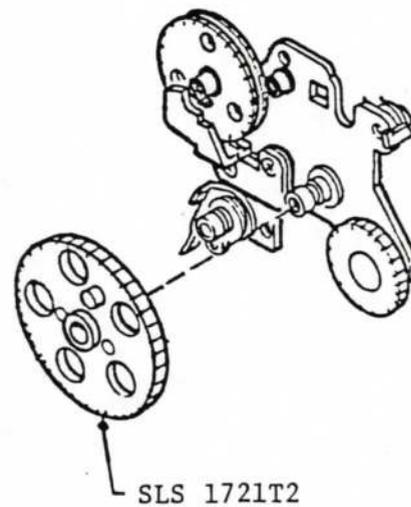

New shape refl. abs. leatherette (SLS 29152)

1. Purpose of modification ; To be liable to turn up the corners of the leatherette, changed its material and shape.

2. Date of modification : Dec. 1977



3. Replacement of new part :

1). New SLS 29152 refl. abs. leatherette into the old body....

.....Possible


Old Type

New Type

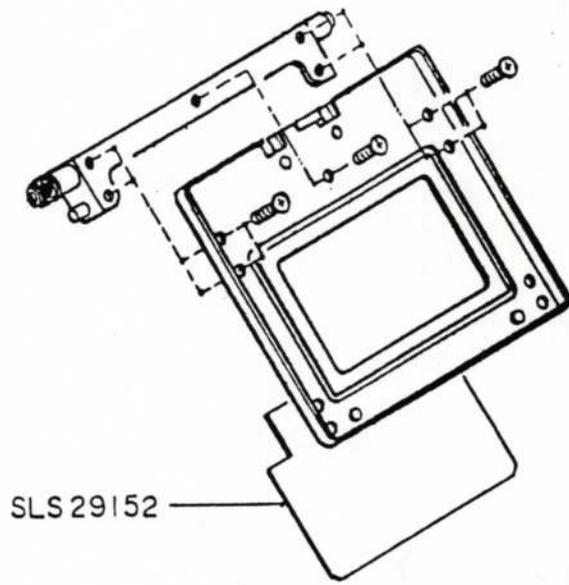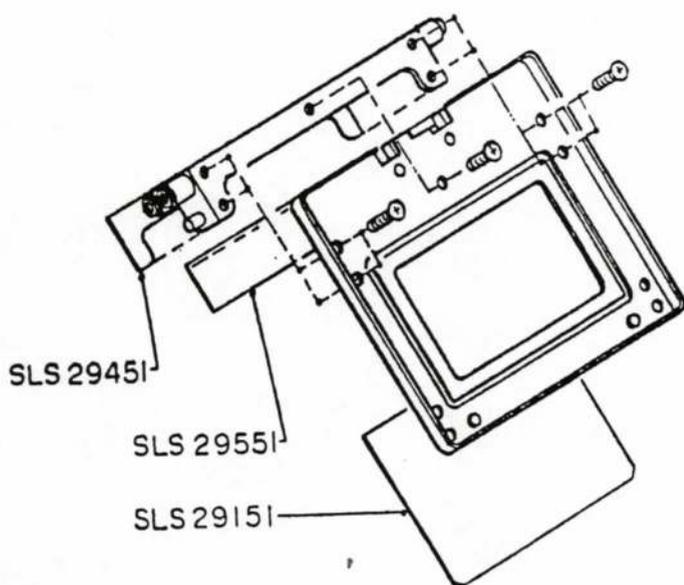

New SLS 15103 change-over lever with the modified shaft

1. Purpose of modification : For common use with the M645 J.
2. Date of modification : Feb. 1979
3. Replacement of new part :
New SLS 15103 change-over lever into old body..... Possible

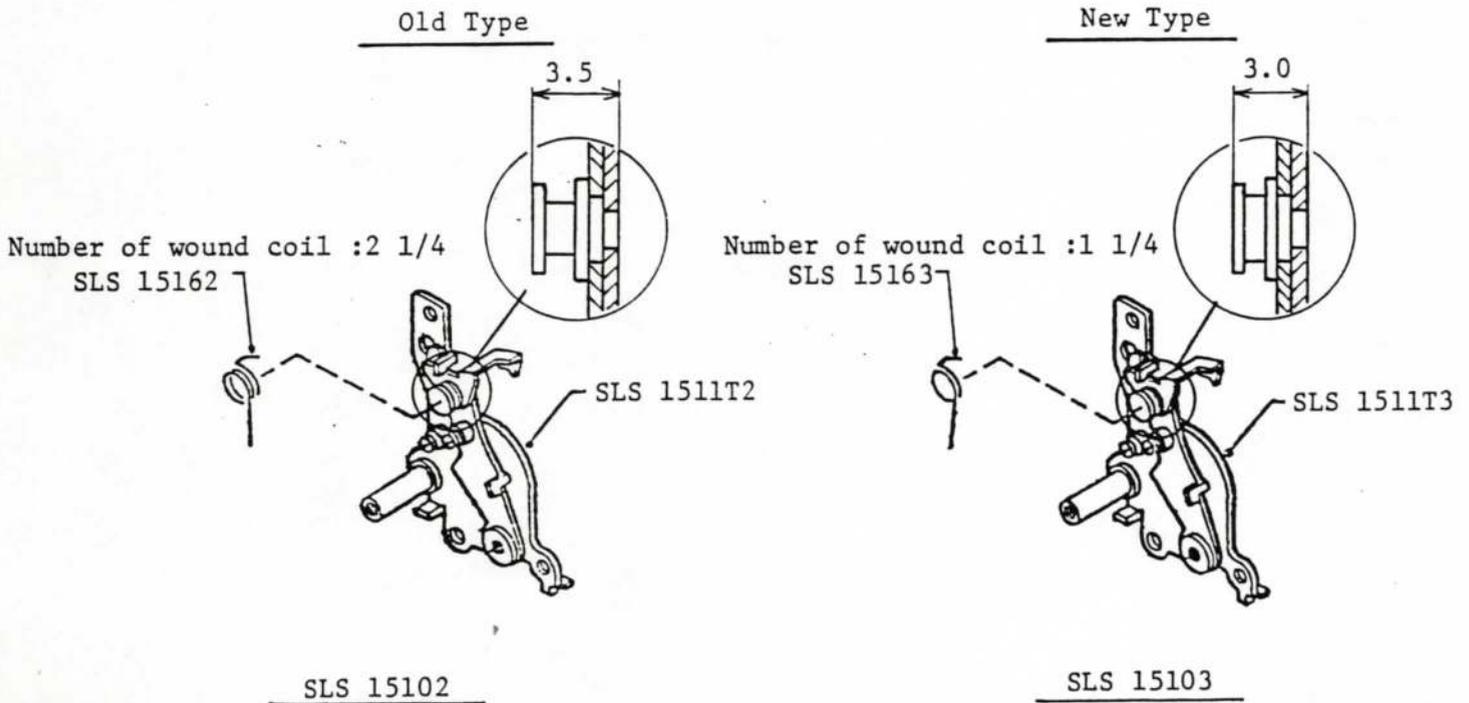


New 1st curtain start latch

1. Purpose of modification : As the SLS 1741T2 1st curtain start latch is liable to run on the stopper of the SLS 1731T1 gear after long time use, the 1st curtain start latch was modified and consequently its relative parts were also modified as shown in drawing below.

2. Date of modification : Feb. 1979


3. Replace the old and new parts :

Replace the old parts with the new parts in set..... Possible.

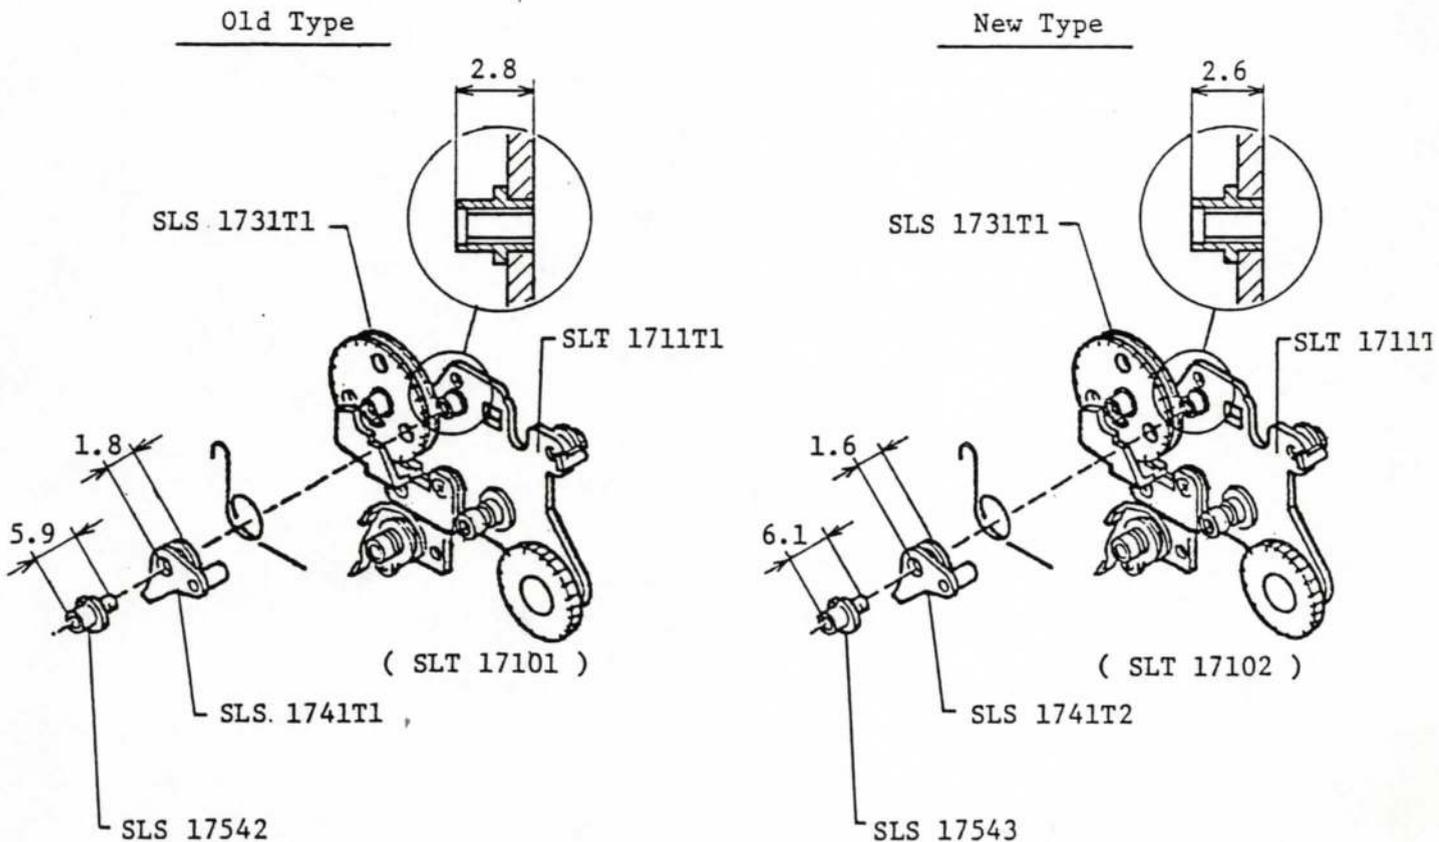

New SLS 1391S2 clutch stopper


1. Purpose of modification : For common use with the M645J.
2. Date of modification : Feb. 1979
3. Replacement of new part :
 - 1) New SLS 1391S2 clutch stopper into the old SLS 13102 winding base..... Impossible

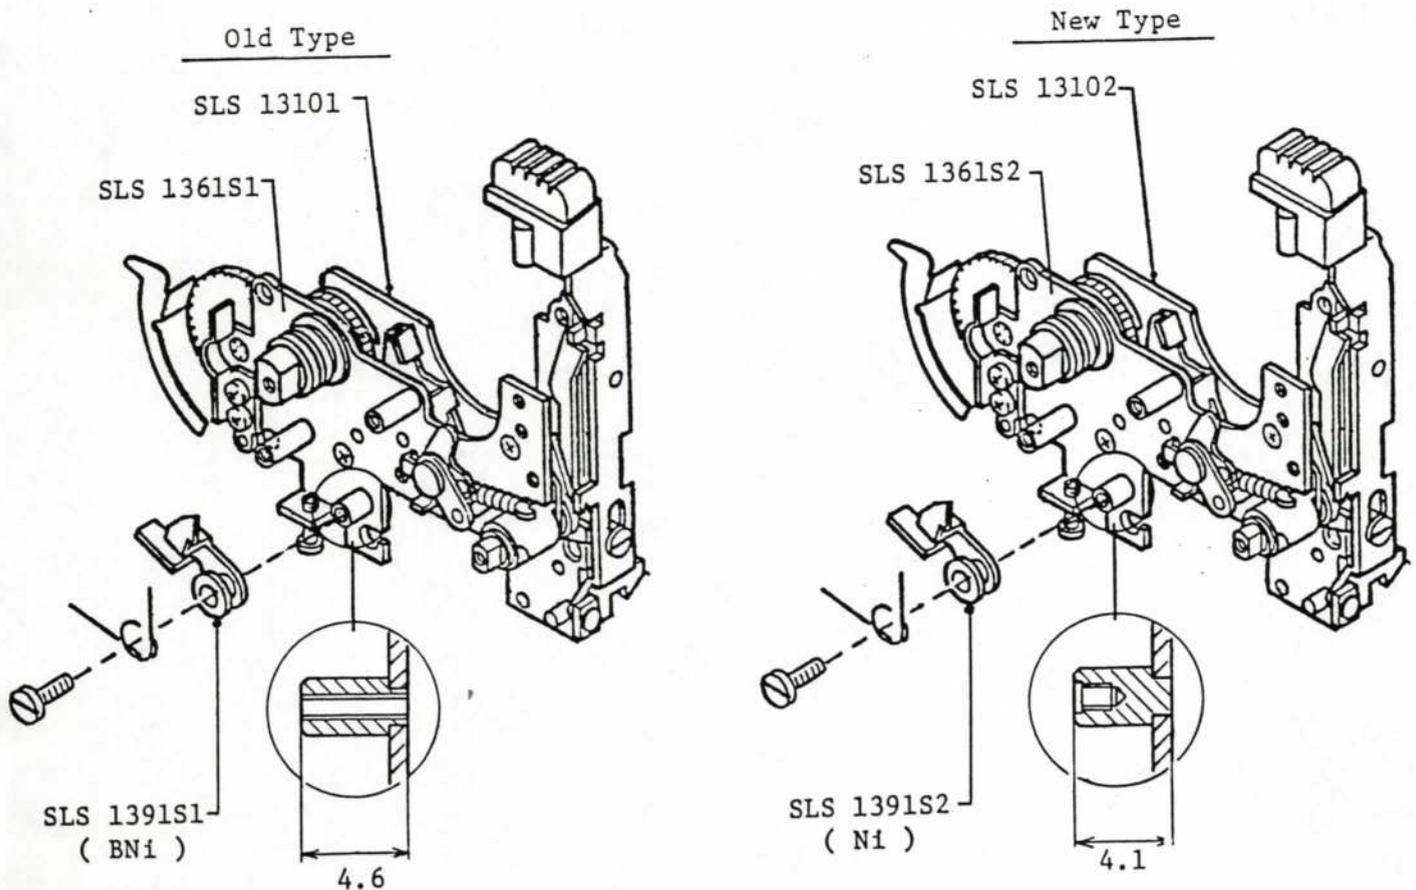


Changing the sealing strip from SLS 29511 to the SLS 29491

1. Purpose of modification : For operator convenience at assembly line.
2. Date of modification : May 1979

Old Type

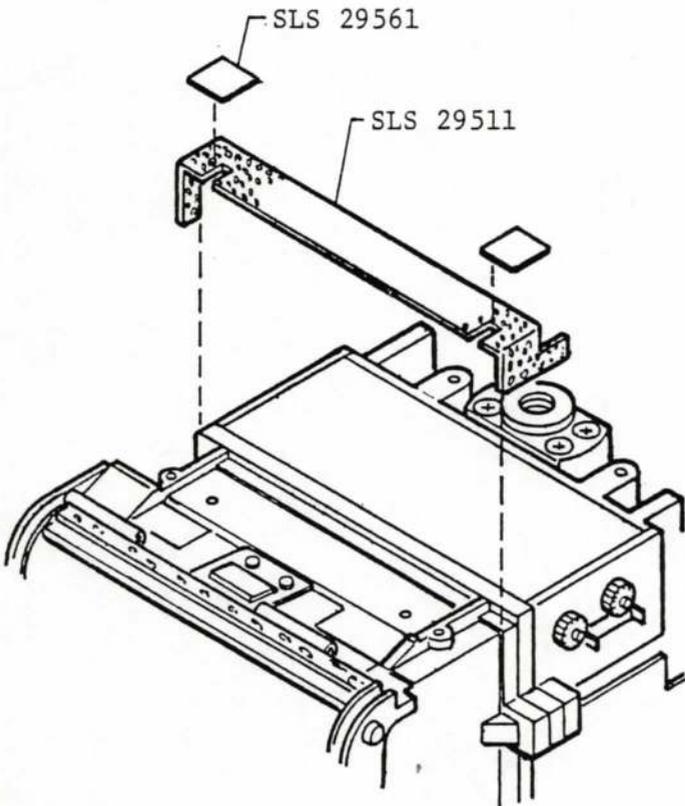


New Type

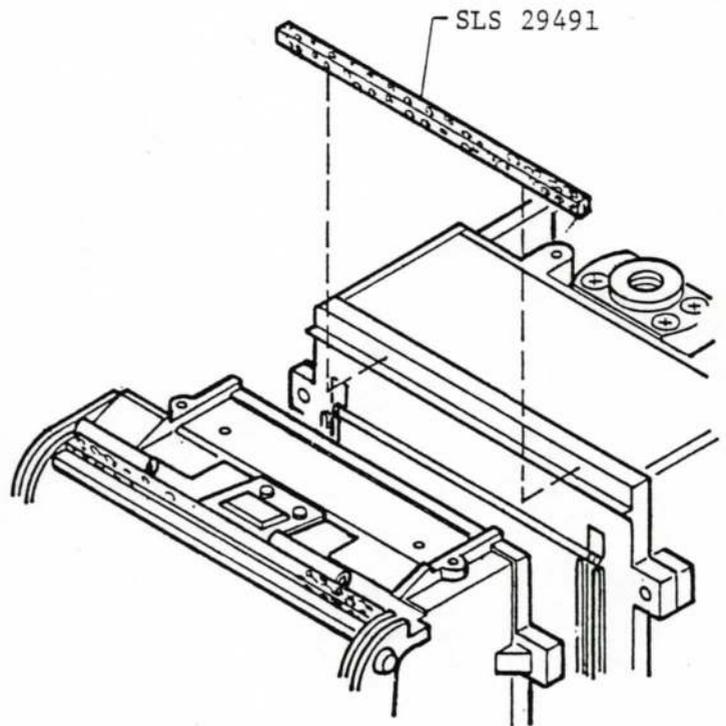


Change of fixing screw for SLS 11621 and SLS 11631 latch

1. Purpose of modification : As the hole of the SLS 11621 and SLS 11631 latch has been changed from countersink to straight, its fixing screw has been also changed to the PB1.7x4Cr screw.
2. Date of modification : Aug. 1979
3. Replacement of old and new parts : Possible

Old Type

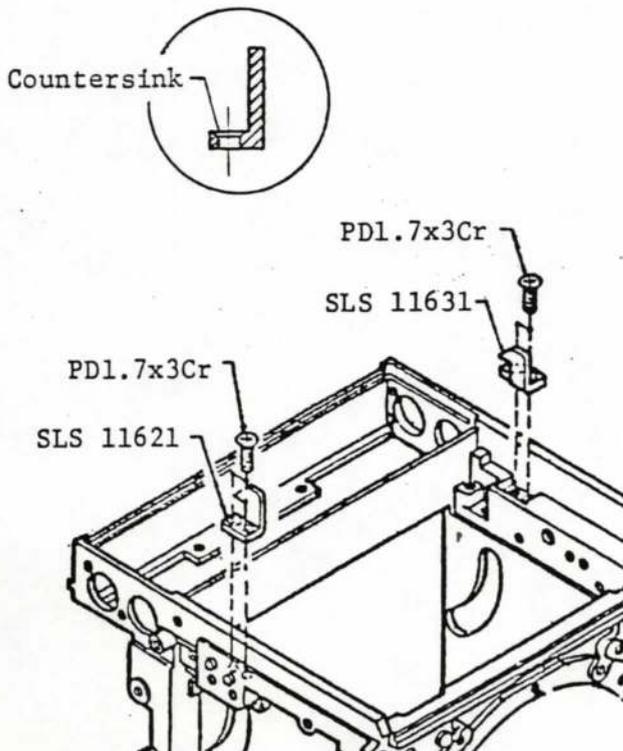


New Type

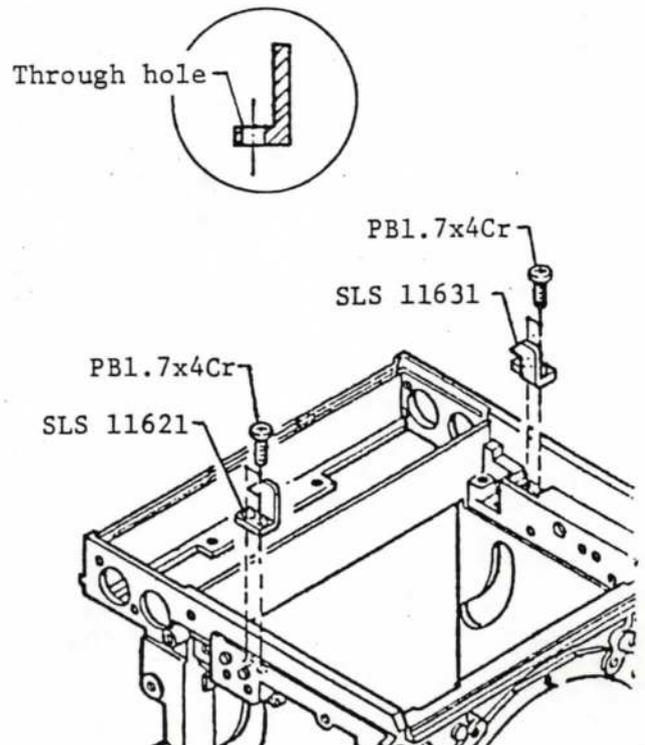

Roll-Film Insert

Correction of the wrong parts number

Please correct four parts numbers of the Roll-Film Insert in the M645, M645J and M645 1000S parts catalog as shown drawing below.

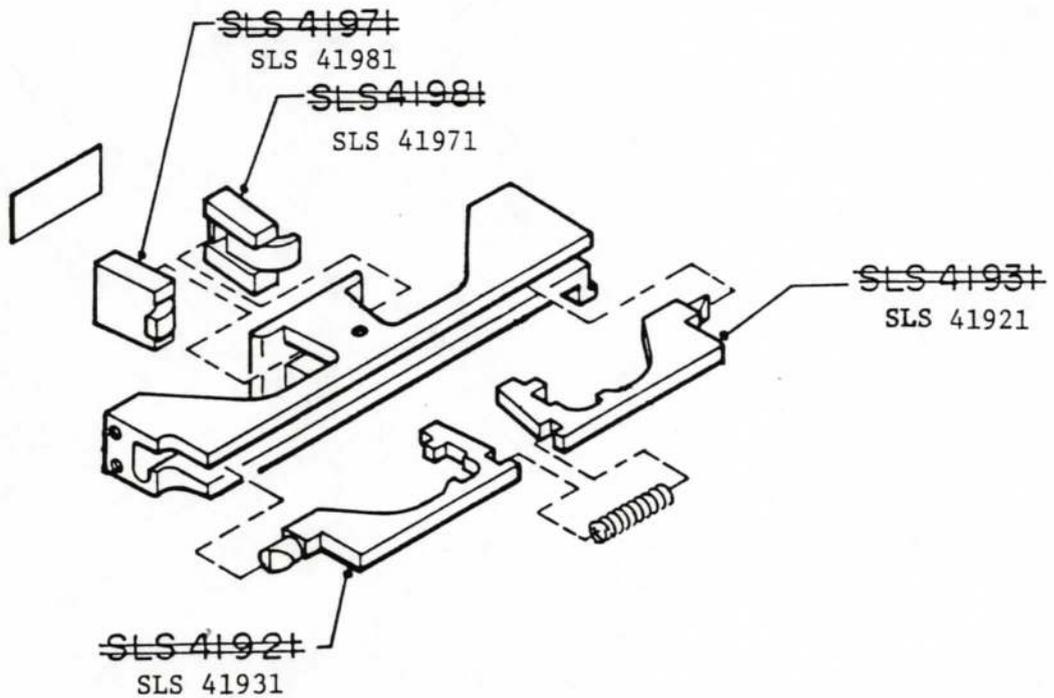

Removal of the SLS 21261 pole


1. Purpose of modification : The SLS 21261 Pole was removed as the die-casting protrusion is suitable for installing the spring instead of the pole.

2. Date of modification : Sept. 1979

3. Replacement of old and new part :

The SLS 21252 new spring into old body Possible

*Note : After removing the pole, install the new spring.

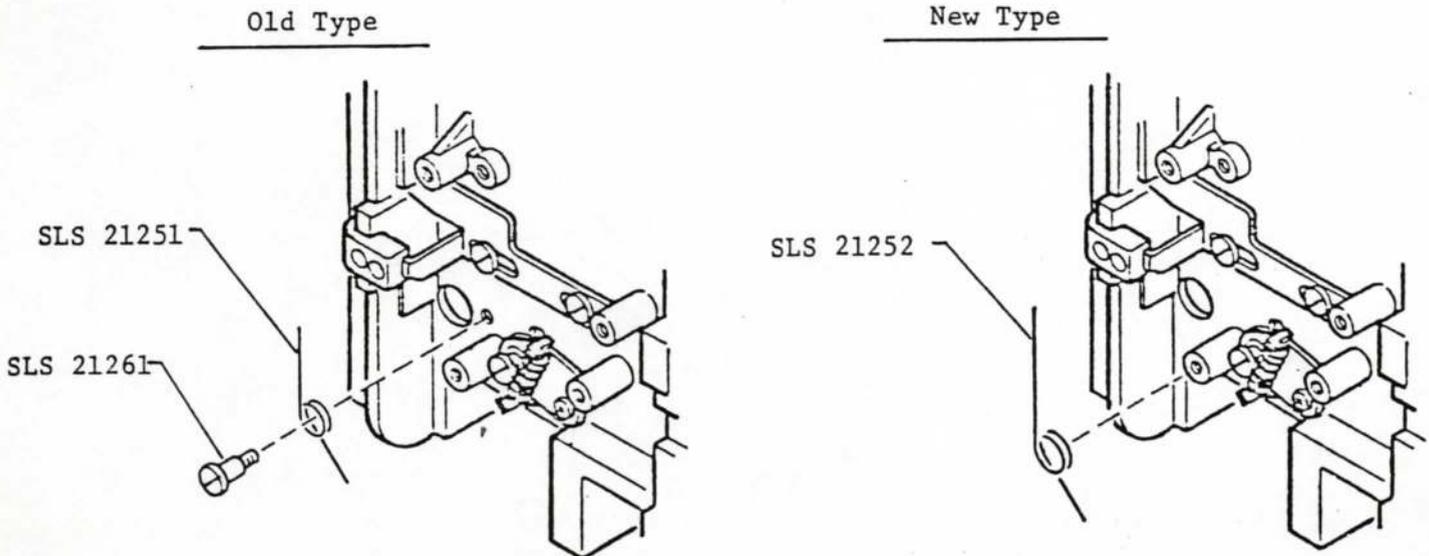

Two new strong F. clutch spring


1. Purpose of modification : For getting regular film space.

2. Date of modification : Sept. 1979


3. Replacement of old and new parts :


The two new springs in pair into the old body..... Possible

Old Type

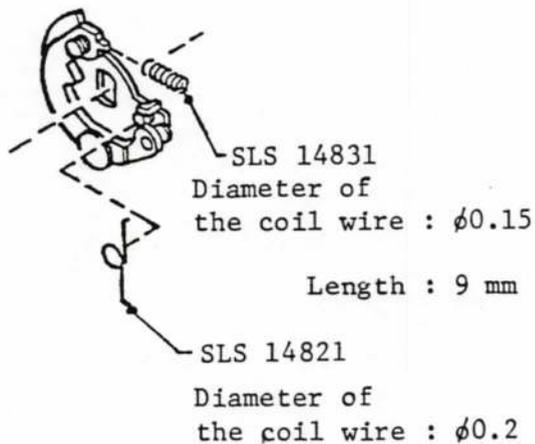


New Type

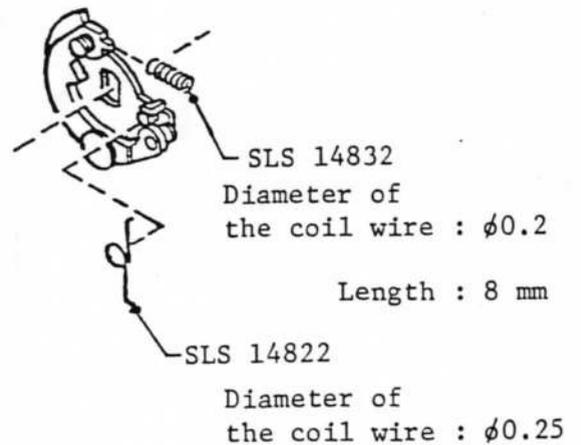

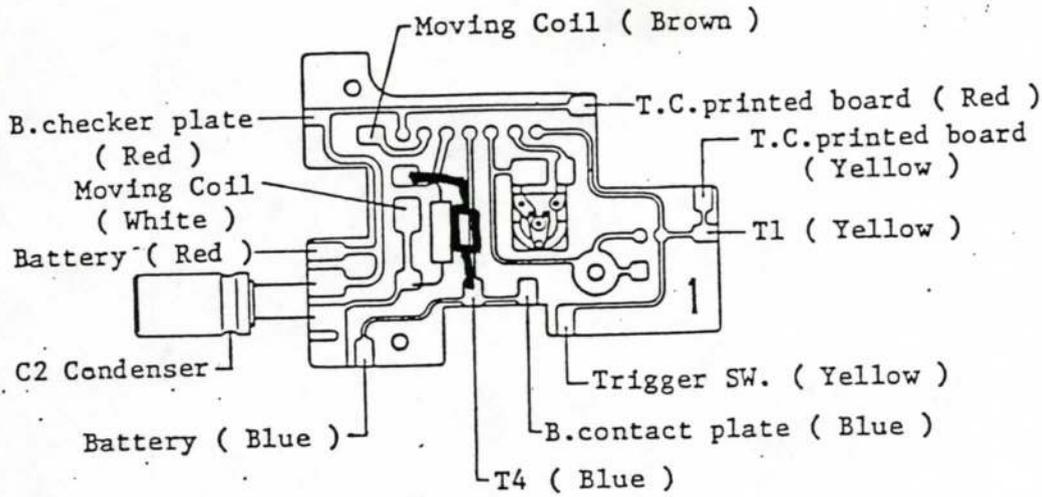

(SLS 2064S1)

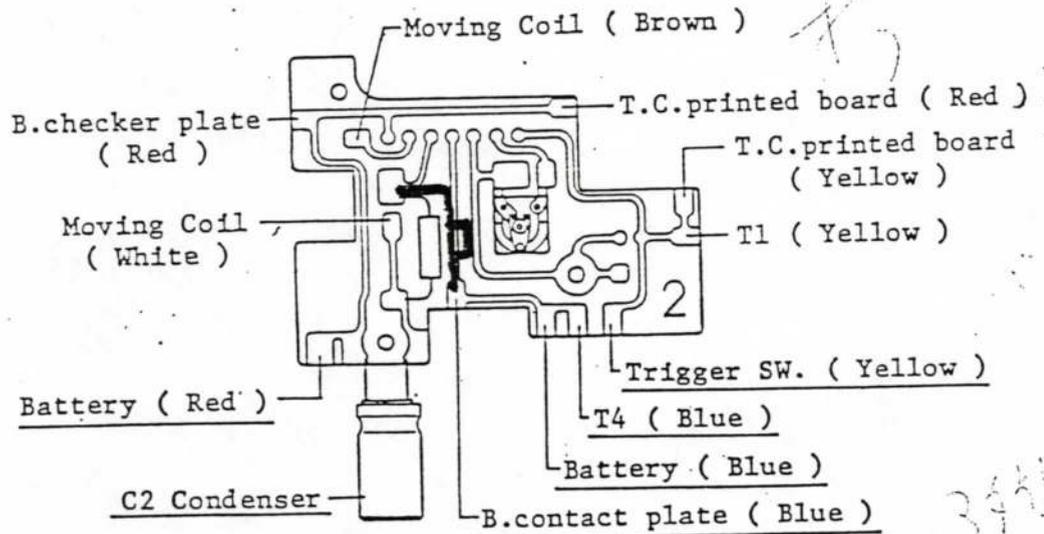

(SLT 2064S1)

Mamiya Camera CO., Ltd. Service Department

カメラ早修りでミラーUP

500Ωの抵抗を付け

340


M645₁₀₀₀S

Camera Body

Body Ass'y	1	1
Body Ass'y	2	2
Body Ass'y	3	3
Body Ass'y	4	4
Body Ass'y	5	5
Body Ass'y	6	6
Body Ass'y	7	7
Body Ass'y	8	8
Body Ass'y	9	9
Body Ass'y	10	10
Body Ass'y	11	11
Body Ass'y	12	12
Body Ass'y	13	13
DETAIL "A" Back Cover Ass'y		14
DETAIL "B" Bottom Cover Ass'y		15
DETAIL "C" Winding Base Plate Ass'y		16
DETAIL "E" Charging Base Ass'y		17
DETAIL "D" MS Clutch Disk Ass'y & "F" Winding Base Gear Ass'y		18
5201 16201 Side Panel R Ass'y		19
5201 18001 Shutter Curtain Ass'y		20

M645_{1000S}

Body Ass'y 1

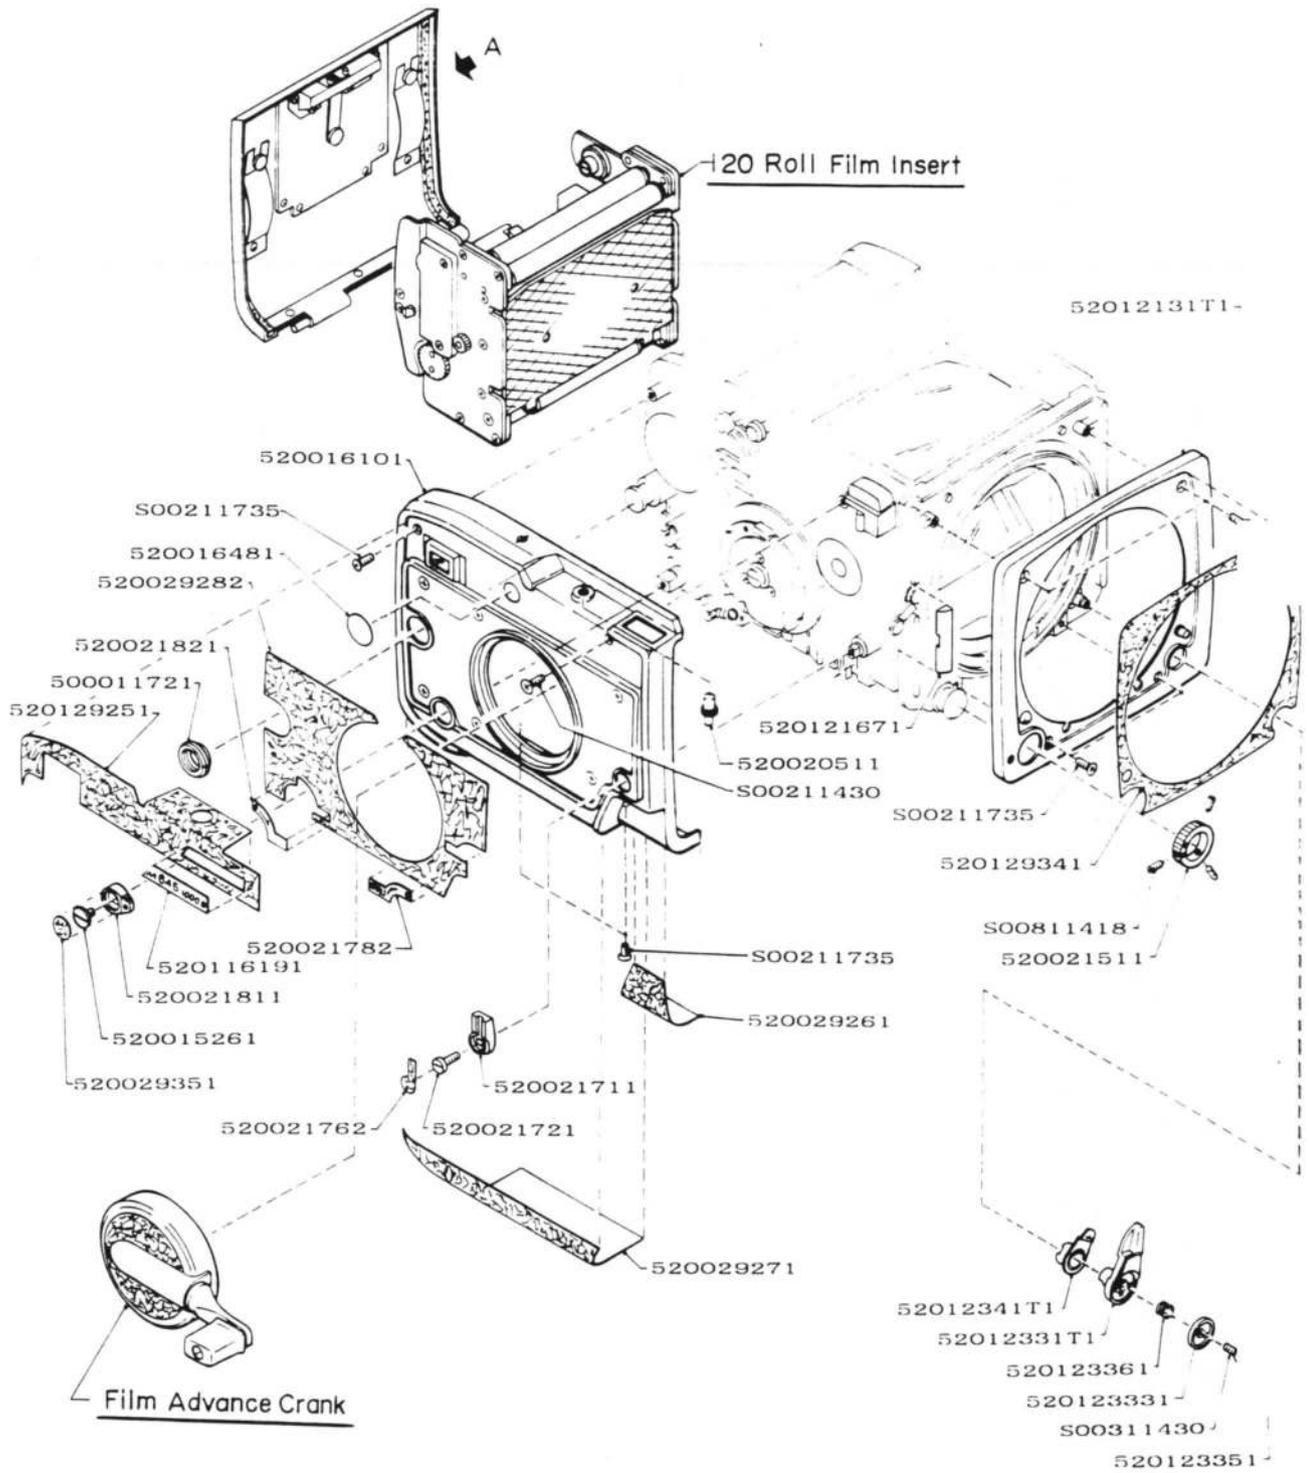


PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 16191	(SLT16191)	1	Name plate	1000S マーク
5201 2131T1	(SLT2131T1)	1	Front panel	前カバー
5201 21671	(SLT21671)	1	Cover	絞り操作板カバー
5201 2331T1	(SLT2331T1)	1	Self-timer lever	セルフつまみ
5201 23331	(SLT23331)	1	Decoration Disk	セルフ軸飾り
5201 23351	(SLT23351)	1	Leatherette	セルフつまみ革
5201 23361	(SLT23361)	1	Spring	つまみ戻しバネ
5201 2341T1	(SLT2341T1)	1	Lever	起動レバー
5201 29251	(SLT29251)	1	Leatherette A	左側板革(上)
5201 29341	(SLT29341)	1	Leatherette B	前カバー革
5200 15261	(SLS15261)	1	Screw	DXカム止ネジ
5200 16101	(SLS16101)	1	Side panel L	左側板
5200 16481	(SLS16481)	1	Disk	左側板盲板
5200 20511	(SLS20511)	1	BC Button	BCボタン
5200 21511	(SLS21511)	1	S Lock ring	Sロックつまみ
5200 21711	(SLS21711)	1	Mirror-up lever	MUつまみ
5200 21721	(SLS21721)	1	Screw	MUつまみ止ネジ
5200 21762	(SLS21762)	1	Leatherette C	MUつまみ革
5200 21782	(SLS21782)	1	Indicator plate	MU表示板
5200 21811	(SLS21811)	1	M exposure lever	DXつまみ
5200 21821	(SLS21821)	1	Indicator plate	DX表示板
5200 29261	(SLS29261)	1	Leatherette D	左側板革(下前)
5200 29271	(SLS29271)	1	Leatherette E	左側板革(下後)
5200 29282	(SLS29282)	1	Leatherette F	左側板飾革
5200 29351	(SLS29351)	1	Leatherette G	DXつまみ革
5000 11721	(RS1172)	1	Nut	吊金具止ネジ
S00211430	(PD1.4×3)	1	Screw	左側板止ネジ
S00211735	(PD1.7×3.5)	7	Screw	止ネジ
S00311430	(3PD1.4×3)	1	Screw	セルフ軸飾り止ネジ
S00811418	(A1.4×1.8)	3	Screw	つまみ止ネジ

- ※ DETAIL A Back Cover Ass'y.....Page 14
- ※ Film Advance Crank.....Page 21
- ※ 120 Roll Film Insert.....Page 22


Remarks

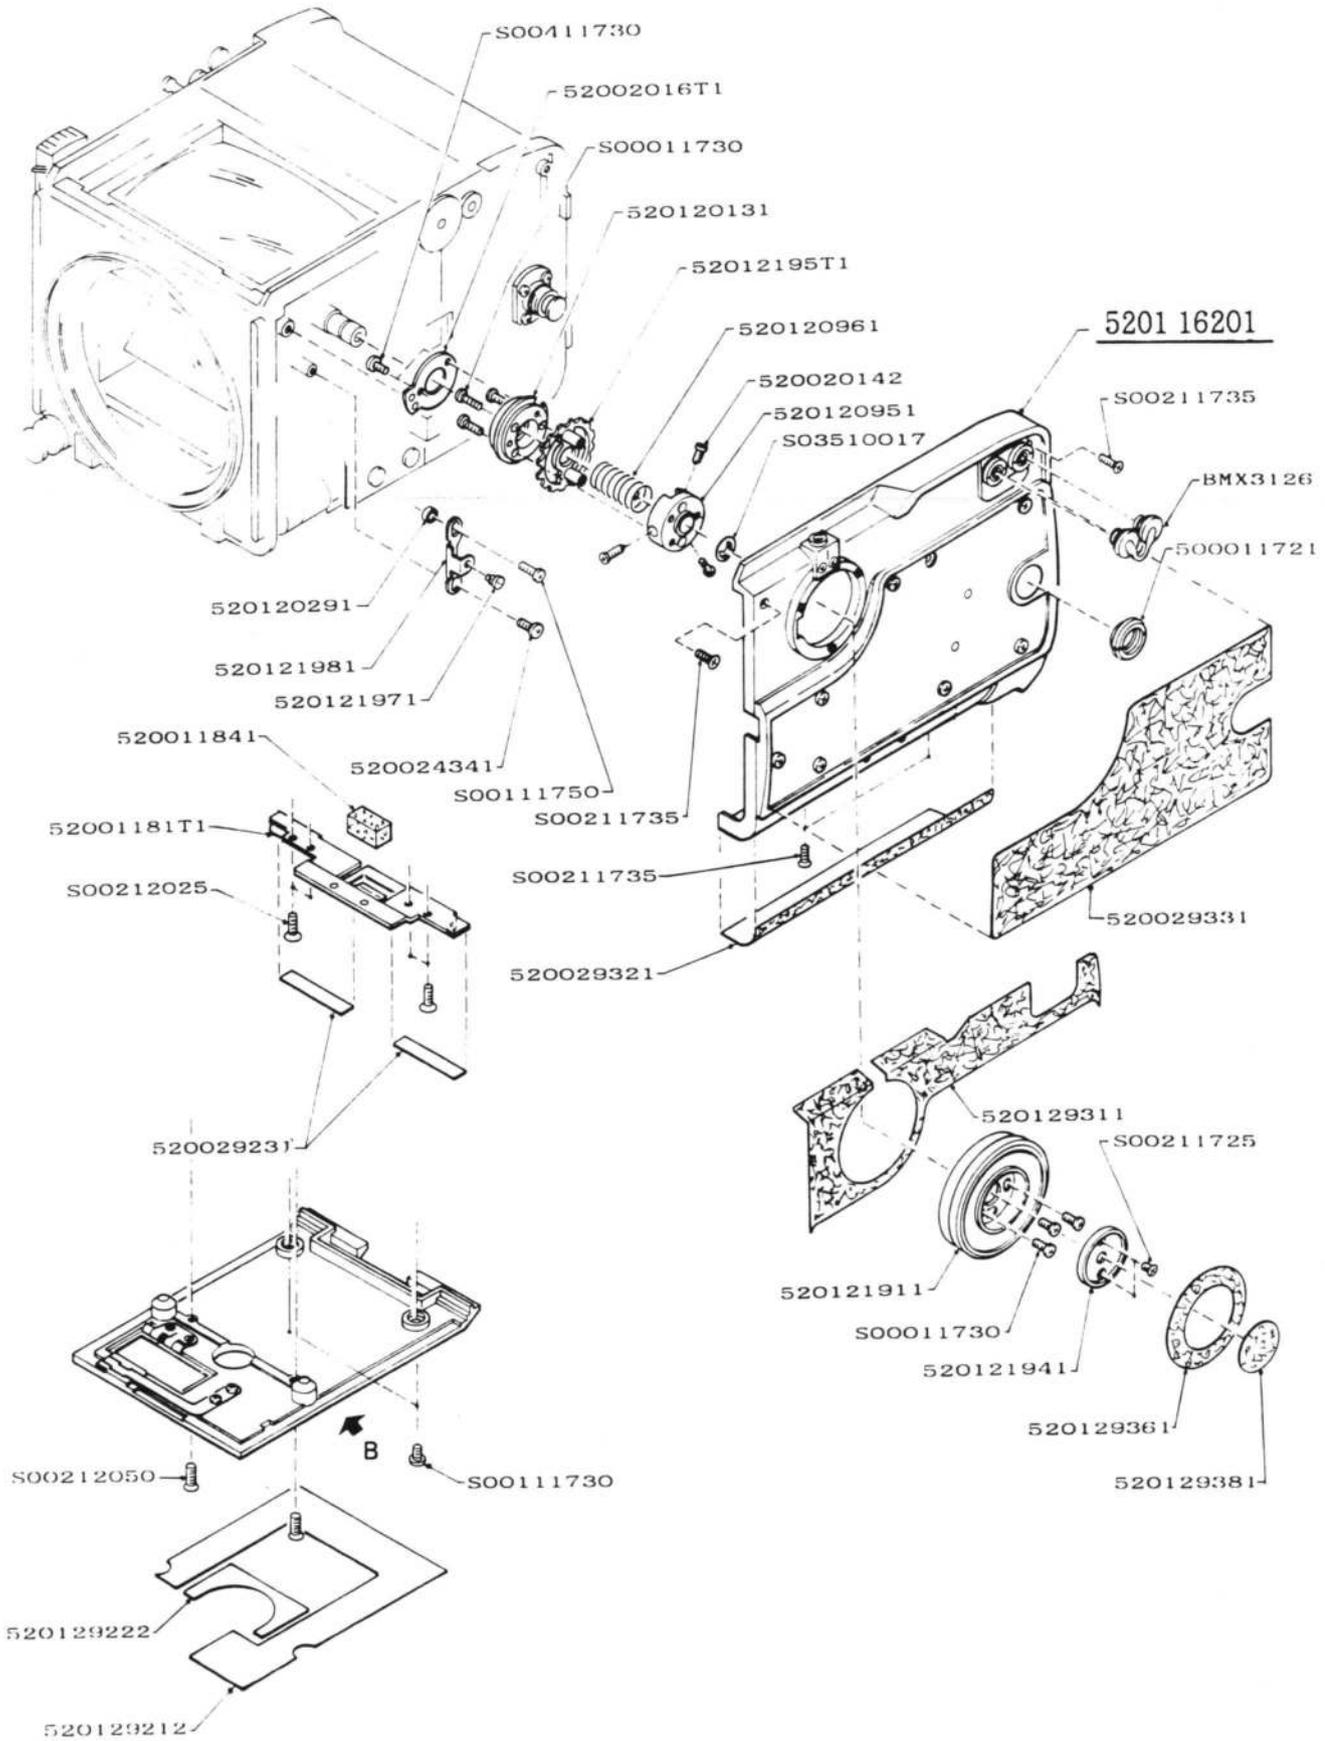

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 16201	(SLT16201)	1	Side panel R	右側板Ass'y
5201 20131	(SLT20131)	1	Shutter dial hub	Tダイヤルハブ
5201 20291	(SLT20291)	1	Collar	ピン台カラー
5201 20951	(SLT20951)	1	Holder	Tダイヤル台
5201 20961	(SLT20961)	1	Spring	Tロックバネ
5201 21911	(SLT21911)	1	Shutter speed dial	Tダイヤル
5201 21941	(SLT21941)	1	Disk	Tダイヤルプレート
5201 2195T1	(SLT2195T1)	1	Click disk	Tロック板
5201 21971	(SLT21971)	1	Shoulder screw	Tロックピン
5201 21981	(SLT21981)	1	Stopper plate	Tロックピン台
5201 29212	(SLT29212)	1	Leatherette L	下部カバー革(大)
5201 29222	(SLT29222)	1	Leatherette S	下部カバー革(小)
5201 29311	(SLT29311)	1	Leatherette U	右側板革(上)
5201 29361	(SLT29361)	1	Leatherette	Tダイヤル革
5201 29381	(SLT29381)	1	Leatherette	Tダイヤルボタン革
5200 1181T1	(SLS1181T1)	1	Hinge plate	蝶番
5200 11841	(SLS11841)	1	Cushion	蝶番止金クッション
5200 20142	(SLS20142)	3	Screw	TDハブ止ネジ
5200 2016T1	(SLS2016T1)	1	Brush disk	Tブラシ台板
5200 24341	(SLS24341)	1	Screw	TDプレート止ネジ
5200 29231	(SLS29231)	2	Leatherette	ボディ蝶番革
5200 29321	(SLS29321)	1	Leatherette	右側板革(下)
5200 29331	(SLS29331)	1	Leatherette	右側板飾り革
5000 11721	(RS1172)	1	Nut	吊金具ナット
BMX3126		1	Cover	シンクロブラグカバー
S00011730	(PB1.7×3)	6	Screw	止ネジ
S00211725	(PD1.7×2.5)	2	Screw	TDプレート止ネジ
S00211735	(PD1.7×3.5)	4	Screw	右側板止ネジ
S00212025	(PD2×2.5)	4	Screw	蝶番止ネジ
S00212050	(PD2×5)	2	Screw	下部カバー止ネジ
S00111730	(3PB1.7×3)	2	Screw	下部カバー止ネジ
S00111750	(3PB1.7×5)	1	Screw	ロックピン台止ネジ
S00411730	(TB1.7×3)	1	Screw	Tブラシ台止ネジ
S03510017	(E-17)	1	E-ring	Tダイヤル止リング


※ 5201 16201 Side Panel R Ass'y.....Page 19

※ DETAIL B Bottom Cover Ass'y.....Page 15

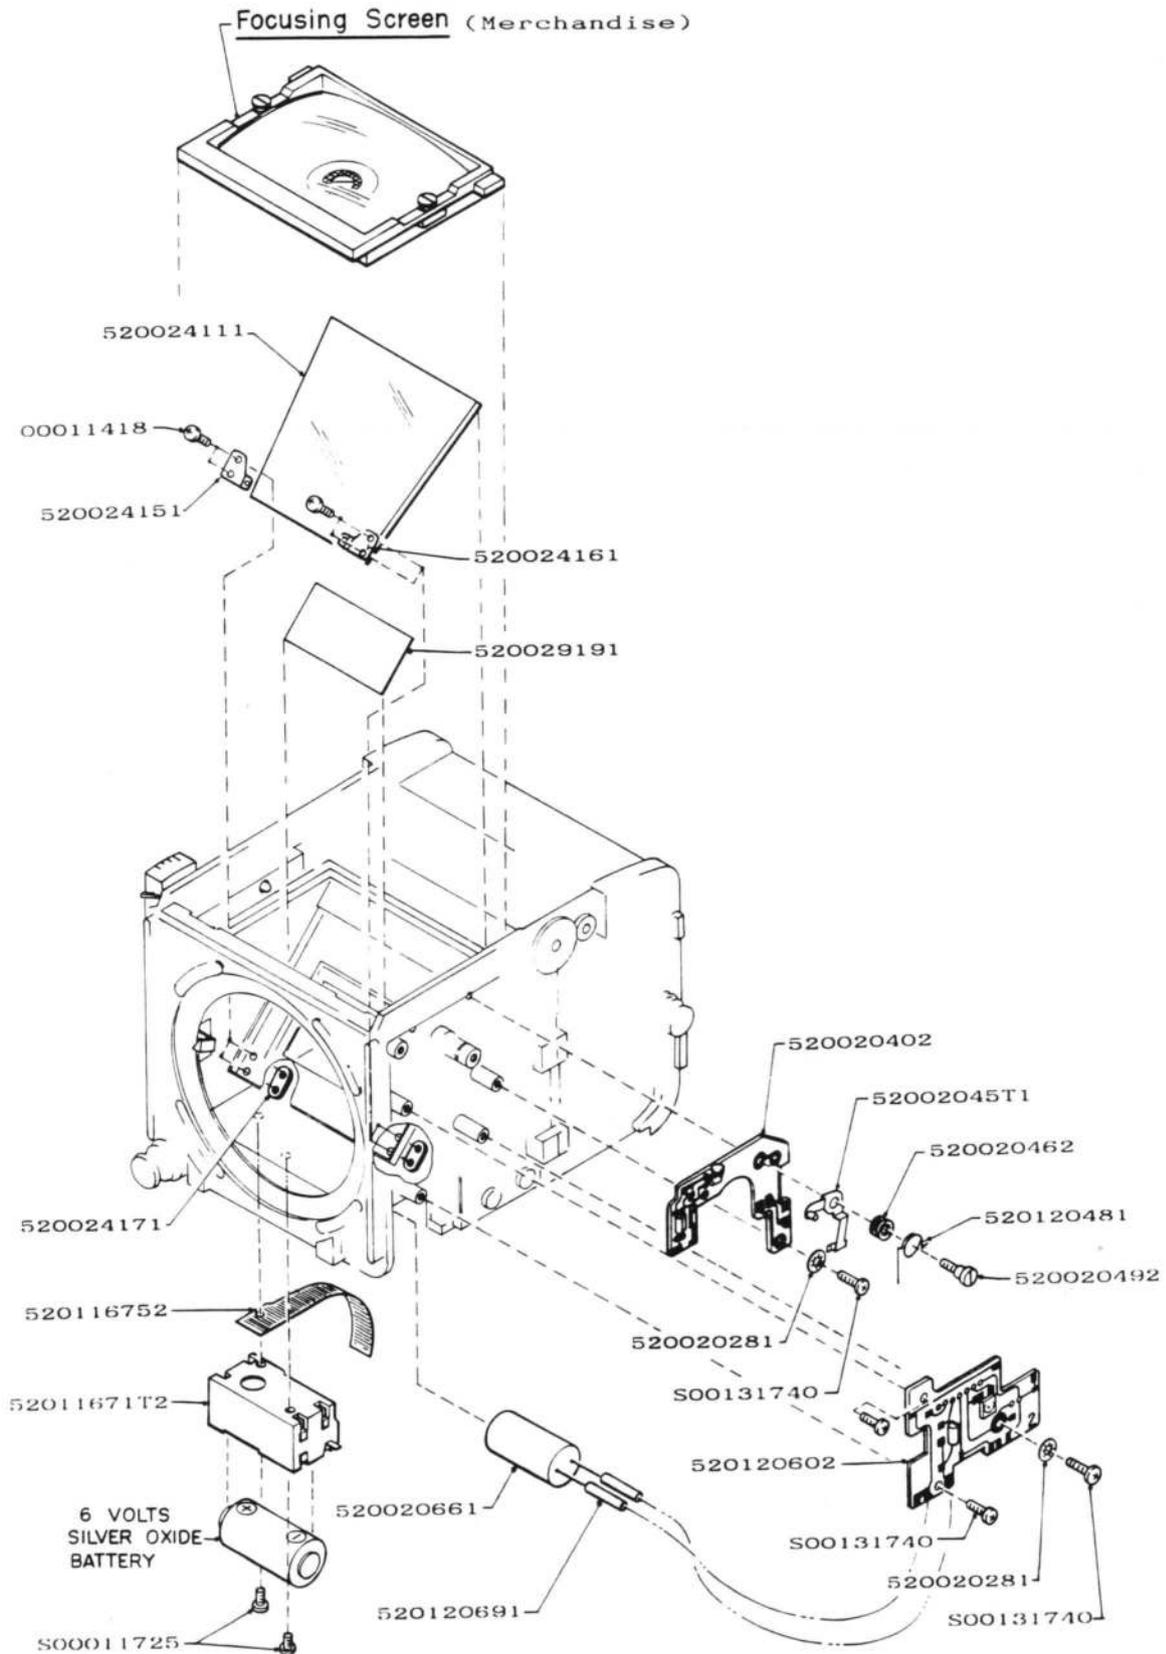

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 1671T2	(SLT1671T2)	1	Battery chamber Ass'y	電池ケースAss'y
5201 16752	(SLT16752)	1	Ribbon	電池リボン
5201 20481	(SLT20481)	1	Spring	切替スイッチバネ
5201 20602	(SLT20602)	1	Shutter PC plate	T回路配線板
5201 20691	(SLT20691)	2	Vinyl tube	チューブ
5200 20281	(SLS20281)	2	Fastener	ネジアース座金
5200 20402	(SLS20402)	1	Battery check PC plate	BC基板
5200 2045T1	(SLS2045T1)	1	Switch lever	切替スイッチレバー
5200 20462	(SLS20462)	1	Hub	スイッチレバー軸
5200 20492	(SLS20492)	1	Shoulder screw	SWレバー止ネジ
5200 20661	(SLS20661)	1	MC condenser	MCコンデンサー
5200 24111	(SLS24111)	1	Mirror	ミラー
5200 24151	(SLS24151)	1	Leaf spring L	ミラー押え(左)
5200 24161	(SLS24161)	1	Leaf spring R	ミラー押え(右)
5200 24171	(SLS24171)	2	Rataining plate	ミラー座金
5200 29191	(SLS29191)	1	Paper	ミラー裏紙
00011418	(PB1.4×1.8)	4	Screw	ミラー押え止ネジ
S00011725	(PB1.7×2.5)	2	Screw	電池ケース止ネジ
S00131740	(3PB1.7×4Ni)	4	Screw	止ネジ

Remarks

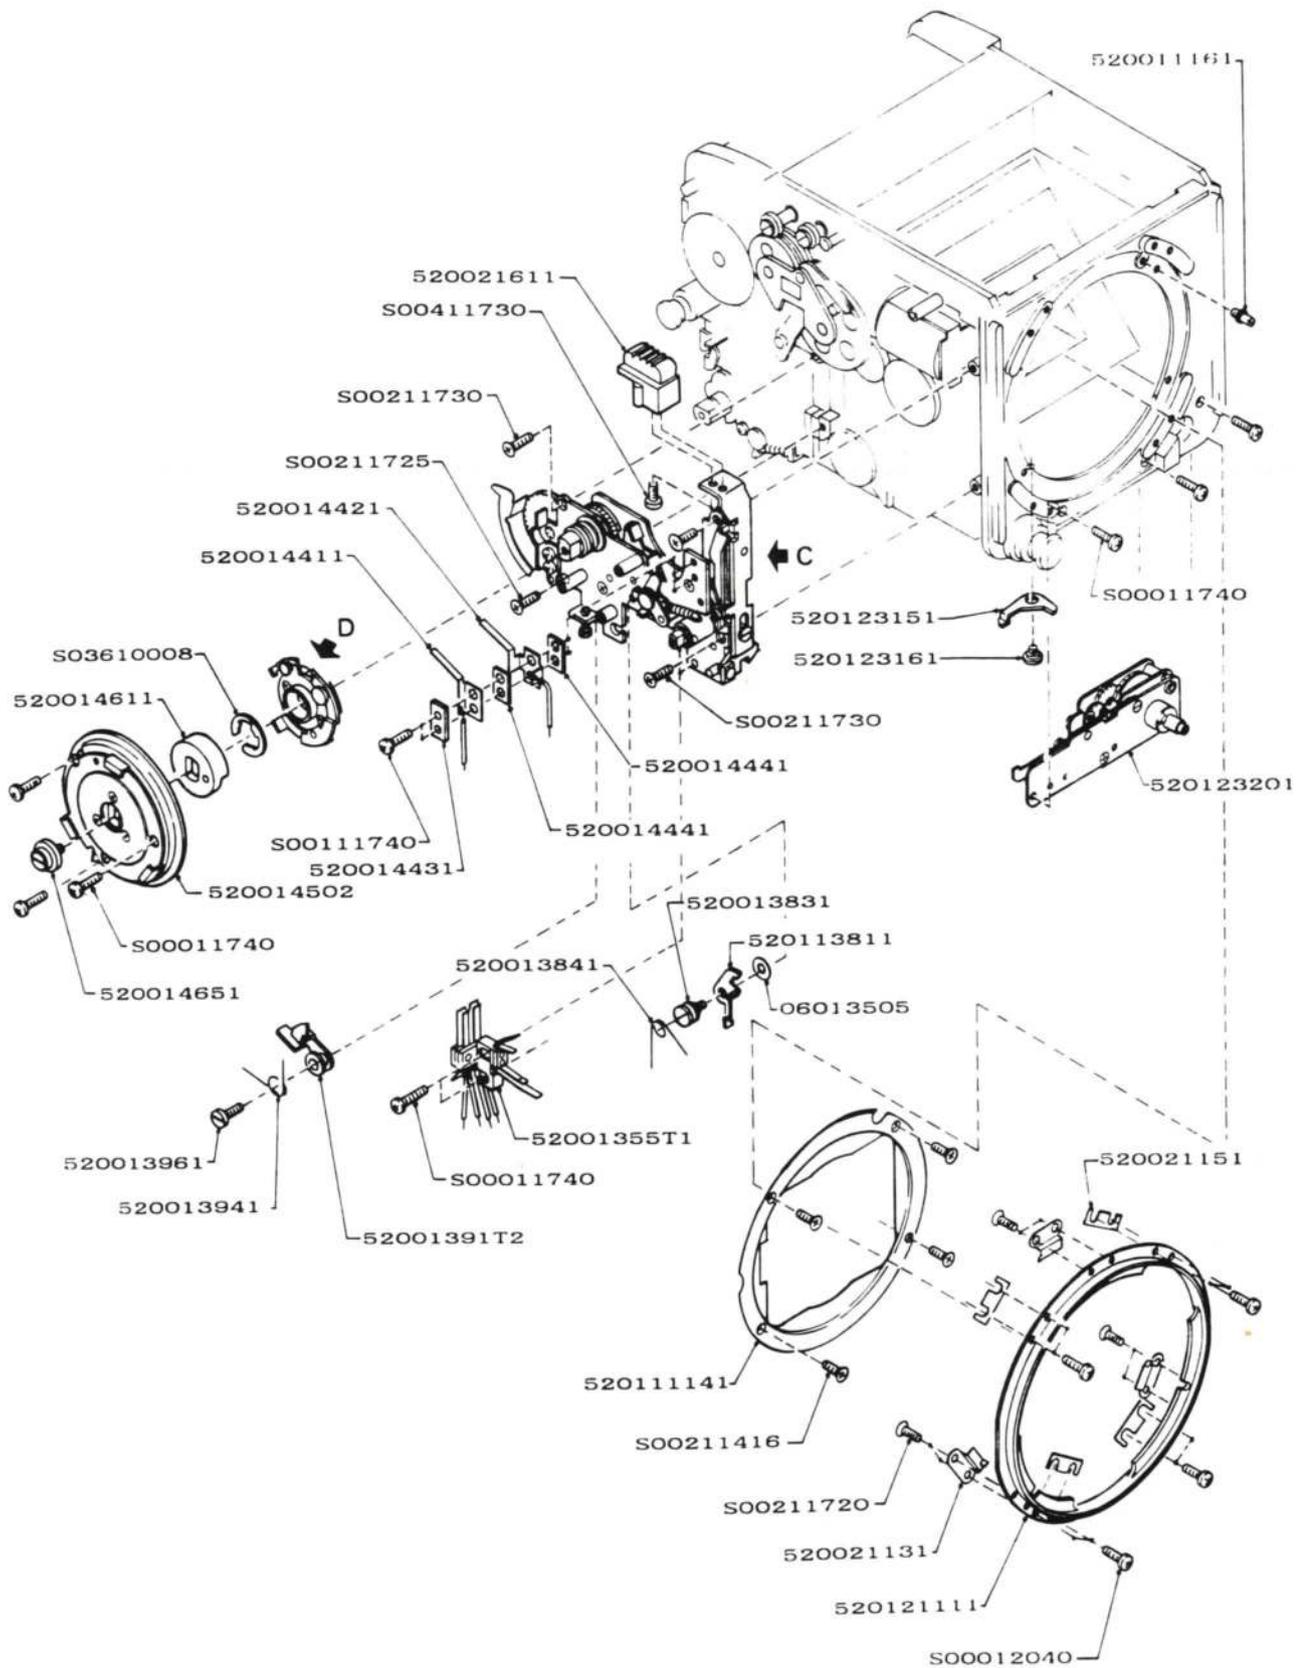

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 11141	(SLT11141)	1	Shading frame	バヨネ下カバー
5201 13811	(SLT13811)	1	Hook	スイッチ掛金
5201 21111	(SLT21111)	1	Bayonet ring	バヨネットリング
5201 23201	(SLT23201)	1	Self-timer Ass'y	セルフタイマー
5201 23151	(SLT23151)	1	Lever	セルフレバー
5201 23161	(SLT23161)	1	Shoulder screw	セルフレバー軸
5200 11161	(SLS11161)	1	Stopper pin	バヨネ回転止ピン
5200 1355T1	(SLS1355T1)	1	Main switch	トリプルSW. Ass'y
5200 13831	(SLS13831)	1	Shoulder screw	スイッチ掛金軸
5200 13841	(SLS13841)	1	Spring	スイッチ掛金バネ
5200 1391T2	(SLS1391T2)	1	Clutch stopper	ストッパー
5200 13941	(SLS13941)	1	Spring	ストッパーバネ
5200 13961	(SLS13961)	1	Screw	ストッパー止ネジ
5200 14411	(SLS14411)	1	FP contact U	上FP接片
5200 14421	(SLS14421)	1	FP contact L	下FP接片
5200 14431	(SLS14431)	1	Insulation plate	FP接片
5200 14441	(SLS14441)	2	Insulation washer	FP接片絶縁板
5200 14502	(SLS14502)	1	Winding knob disk Ass'y	巻上上基板
5200 14611	(SLS14611)	1	Winding cam	MS巻上カム
5200 14651	(SLS14651)	1	Shoulder screw	ノブ受板止め軸
5200 21131	(SLS21131)	3	Leaf spring	バヨネバネ
5200 21151	(SLS21151)	0~4	Washer(t=0.03,0.05,0.1)	バヨネワッシャ
5200 21611	(SLS21611)	1	Shutter release button	リリースボタン
S00011740	(PB1.7×4)	8	Screw	止ネジ
S00012040	(PB2×4)	8	Screw	バヨネ止ネジ
S00111740	(3PB1.7×4)	2	Screw	FP接片台止ネジ
S00211416	(PD1.4×1.6)	4	Screw	カバー止ネジ
S00211720	(PD1.7×2)	6	Screw	バヨネバネ止ネジ
S00211725	(PD1.7×2.5)	1	Screw	巻上中基板止ネジ
S00211730	(PD1.7×3)	3	Screw	巻上下基板止ネジ
S00411730	(TB1.7×3)	2	Screw	Rボタン止ネジ
06013505	(5W2×0.5)	1	Washer	スイッチ掛金座金
S03610008	(C-8)	1	C-ring	MSI歯車止リング

※ DETAIL C Winding Base Ass'y.....Page 16


※ DETAIL D MS Clutch Disk Ass'y.....Page 18

Remarks

M645_{1000S}

Body Ass'y 5


1	5
---	---

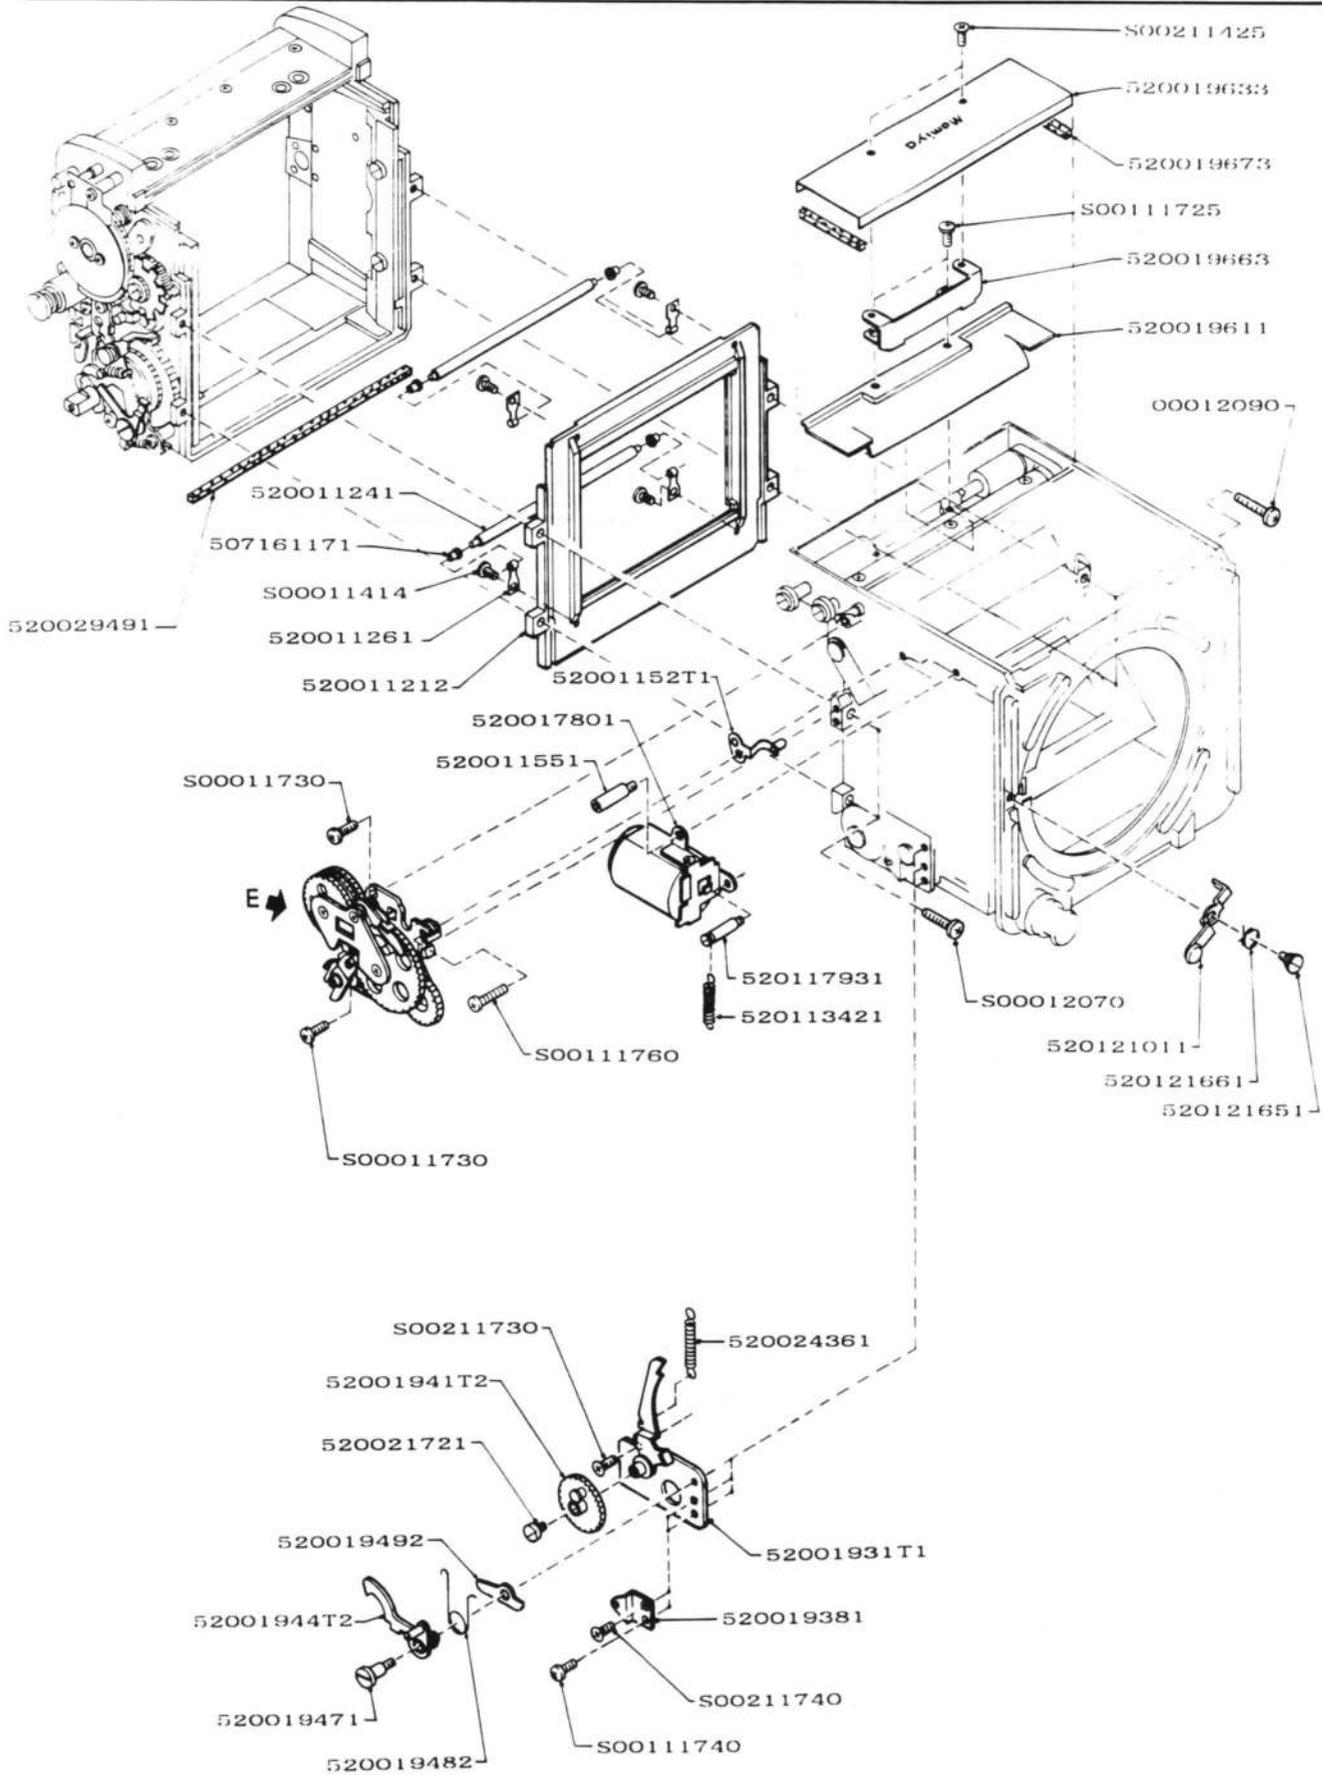

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 13421	(SLT13421)	1	Spring	リリース板バネ
5201 17931	(SLT17931)	1	Shaft	MU受ネジ
5201 21011	(SLT21011)	1	Lever	絞り込み操作板
5201 21651	(SLT21651)	1	Shoulder screw	絞り込み操作板軸
5201 21661	(SLT21661)	1	Spring	絞り込み操作板バネ
5200 11212	(SLS11212)	1	Guide reel frame	ルール板
5200 11241	(SLS11241)	2	Film roller	Fローラー
5200 11261	(SLS11261)	4	Leaf spring	Fローラーバネ
5200 1152T1	(SLS1152T1)	1	Leaf spring	クリックバネ
5200 11551	(SLS11551)	1	Shaft	左側板受柱
5200 17801	(SLS17801)	1	Moving coil Ass'y	MU Ass'y
5200 1931T1	(SLS1931T1)	1	Base plate	スプリング軸左基板
5200 19381	(SLS19381)	1	Bracket	スプリング軸受板
5200 1941T2	(SLS1941T2)	1	Gear	ミラーケリ歯車
5200 1944T2	(SLS1944T2)	1	Braking lever	後幕ブレーキレバー
5200 19471	(SLS19471)	1	Shoulder screw	ブレーキレバー軸
5200 19482	(SLS19482)	1	Spring	ブレーキレバーバネ
5200 19492	(SLS19492)	1	Lever	ミラー下げレバー
5200 19611	(SLS19611)	1	Cover L	幕軸下カバー
5200 19633	(SLS19633)	1	Cover U	幕軸室カバー
5200 19663	(SLS19663)	1	Cover holder	幕軸室カバー受
5200 19673	(SLS19673)	2	Sealing strip	幕軸室モルト
5200 21721	(SLS21721)	1	Screw	歯車止ネジ
5200 24361	(SLS24361)	1	Spring	ミラー下げバネ
5200 29491	(SLS29491)	1	Sealing strip	下カバーモルト
5071 61171	(ARSH6117)	4	Collar	Fローラ受け
S00011414	(PB1.4×1.4)	4	Screw	バネ止ネジ
S00011730	(PB1.7×3)	2	Screw	MS巻上基板止ネジ
S00012070	(PB2×7)	2	Screw	ボディ結合ネジ(左)
00012090	(PB2×9)	2	Screw	ボディ結合ネジ(右)
S00111725	(3PB1.7×2.5)	2	Screw	幕軸下カバー止ネジ
S00111740	(3PB1.7×4)	1	Screw	軸受板止ネジ
S00111760	(3PB1.7×6)	1	Screw	解除レバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	幕軸室止ネジ
S00211730	(PD1.7×3)	1	Screw	左基板止ネジ
S00211740	(PD1.7×4)	1	Screw	軸受板止ネジ

※ DETAIL E Charging Base Ass'y.....Page 17


Remarks

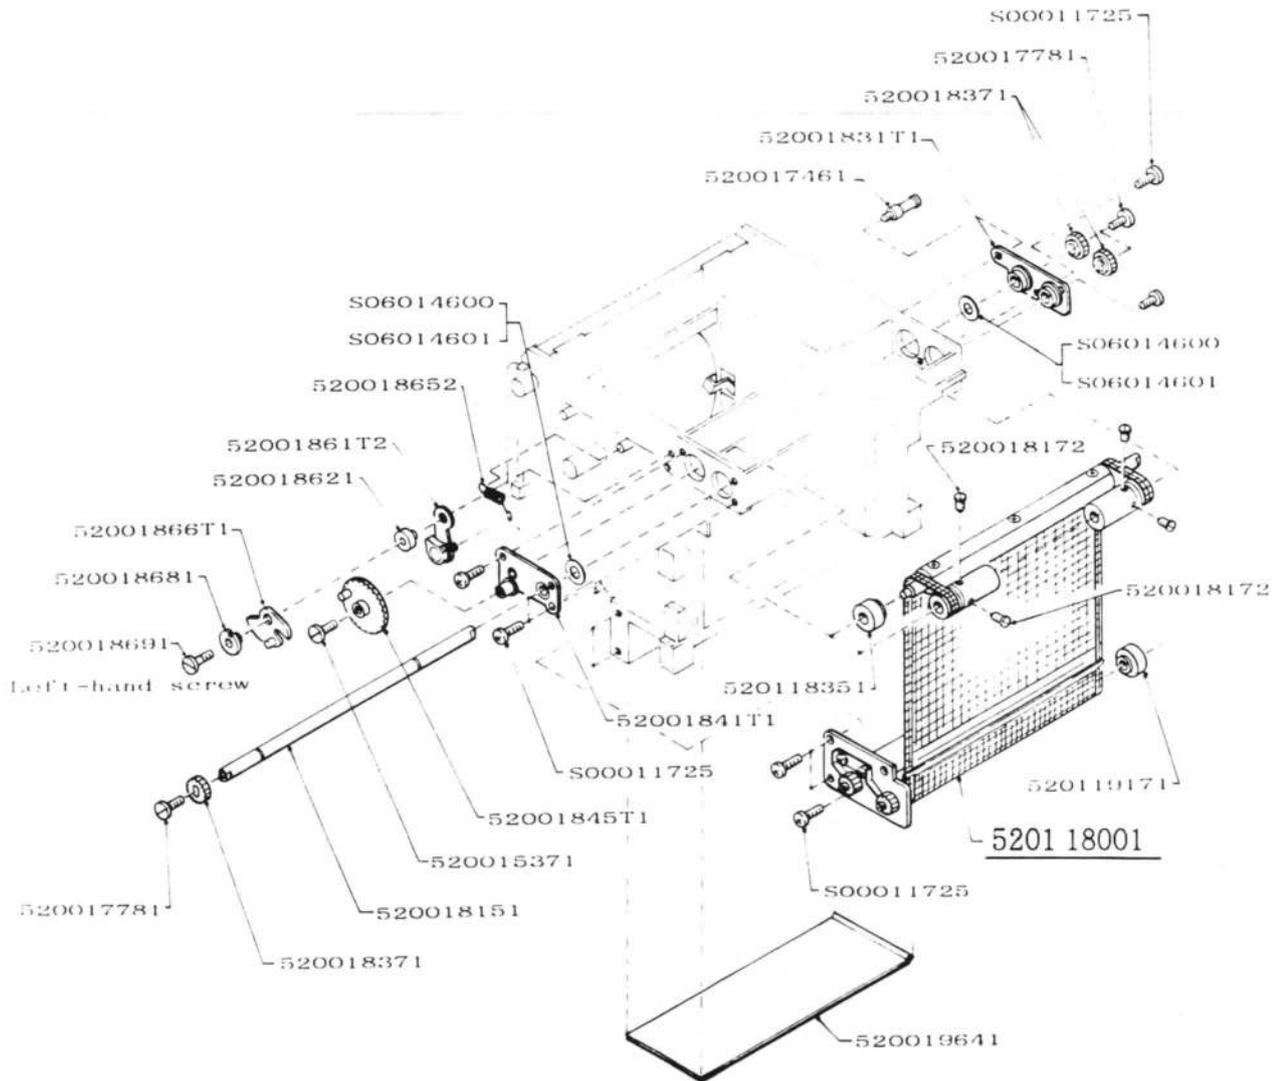

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 18001	(SLT18001)	1	Shutter curtain Ass'y	シャッター-Ass'y
5201 18351	(SLT18351)	1	Pulley A	後幕軸ローラー
5201 19171	(SLT19171)	1	Pulley B	S軸ローラー
5200 15371	(SLS15371)	1	Screw	X歯車止ネジ
5200 17461	(SLS17461)	1	Anchor	S I歯車掛金バネ掛
5200 17781	(SLS17781)	3	Screw	幕軸歯車止ネジ
5200 18151	(SLS18151)	1	Shaft	先幕軸
5200 18172	(SLS18172)	4	Set screw	先幕筒止ネジ
5200 1831T1	(SLS1831T1)	1	Bushing plate	幕軸基板(左)
5200 18371	(SLS18371)	3	Gear	幕軸歯車
5200 1841T1	(SLS1841T1)	1	Bushing plate	幕軸基板(右)
5200 1845T1	(SLS1845T1)	1	X synchro gear	X歯車
5200 1861T2	(SLS1861T2)	1	Braking lever	先幕ブレーキ板(下)
5200 18621	(SLS18621)	1	Hub	先幕ブレーキ板軸
5200 18652	(SLS18652)	1	Spring	ブレーキ戻しバネ
5200 1866T1	(SLS1866T1)	1	Cam	先幕ブレーキ板(上)
5200 18681	(SLS18681)	1	Collar	先幕ブレーキカラー
5200 18691	(SLS18691)	1	Shoulder screw	ブレーキ板止ネジ
5200 19641	(SLS19641)	1	Cover	スプリング軸カバー
S00011725	(PB1.7×2.5)	8	Screw	止ネジ
S06014600	(6W2.5×0.05)	0~2	Washer	先幕軸調整ワッシャ
S06014601	(6W2.5×0.1)	0~2	Washer	先幕軸調整ワッシャ

※ 5201 18001 Shutter Curtain Ass'y.....Page 20

Remarks

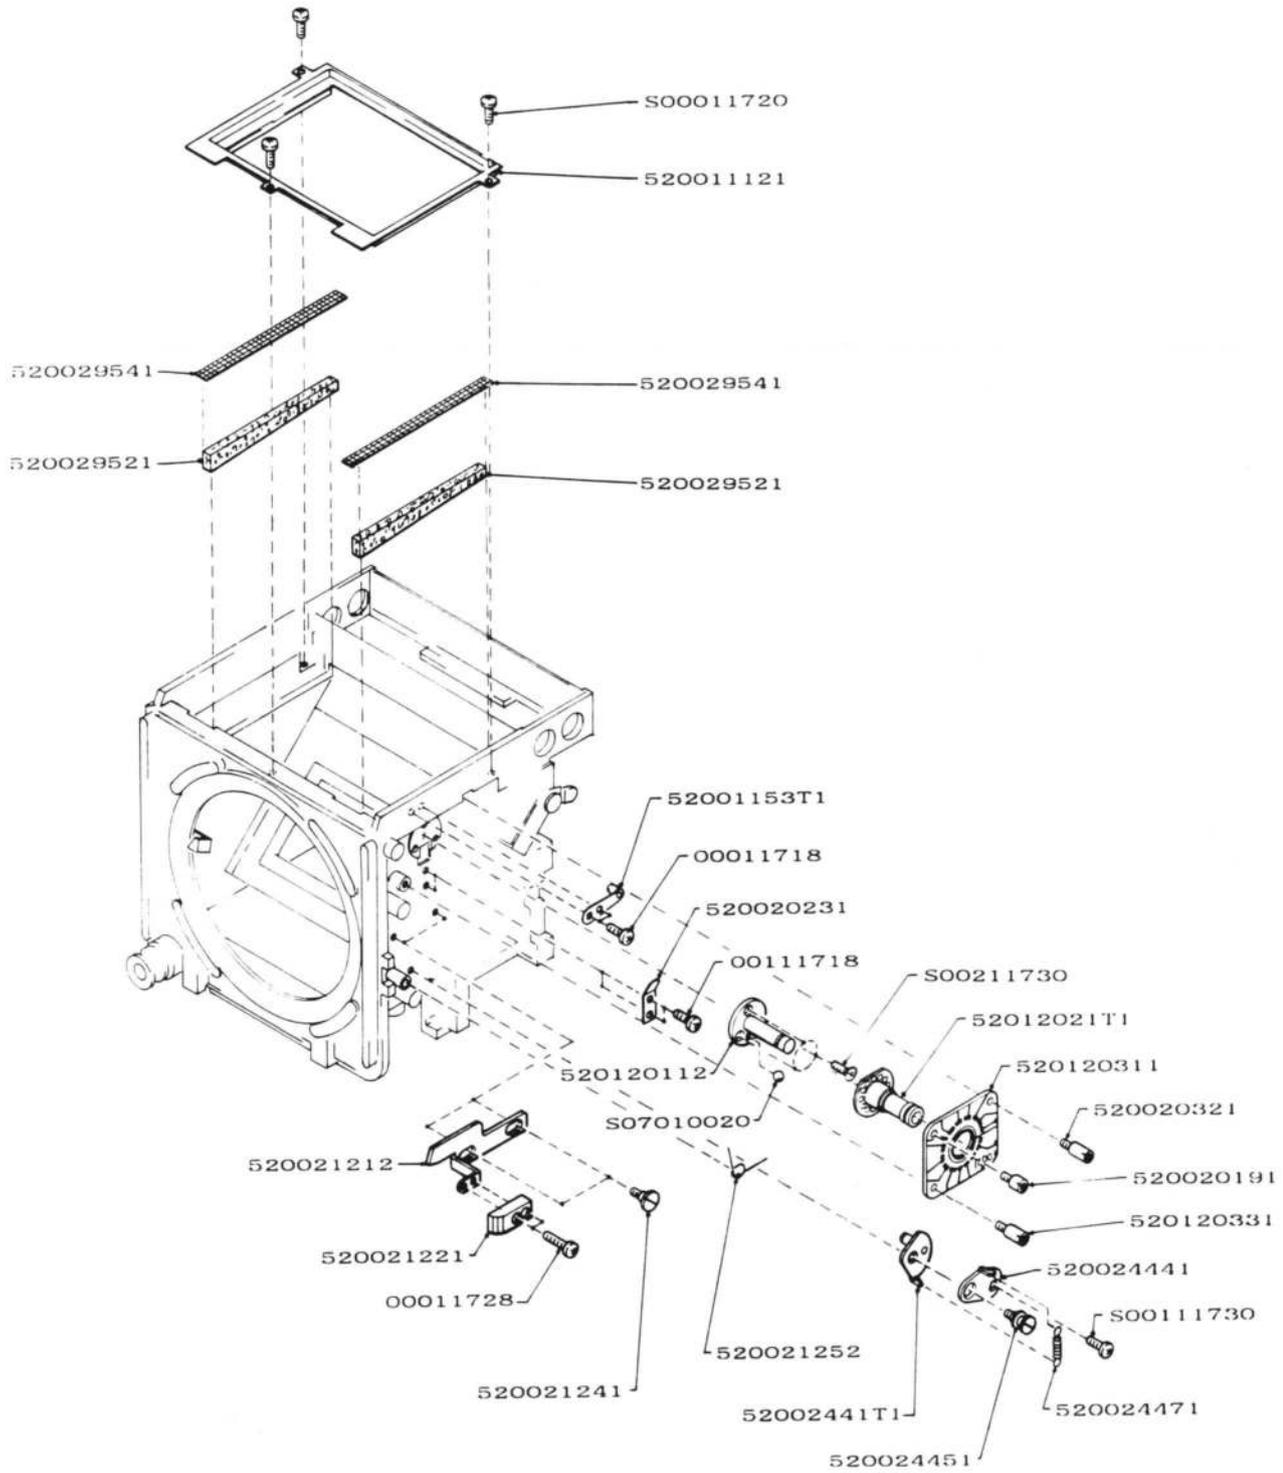

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5201 20112	(SLT20112)	1	Shaft	Tダイヤル軸
5201 2021T1	(SLT2021T1)	1	Dial click	Tクリック軸
5201 20311	(SLT20311)	1	Time PC board	Tプリント板
5201 20331	(SLT20331)	1	Pole	Tロックピン台柱
5200 11121	(SLS11121)	1	Frame	ボディ上カバー
5200 1153T1	(SLS1153T1)	1	Leaf spring R	クリックバネ(右)
5200 20191	(SLS20191)	1	Shaft	Tプリント止柱
5200 20231	(SLS20231)	1	Leaf spring	Tクリックバネ
5200 20321	(SLS20321)	1	Shaft	Tプリント止柱
5200 21212	(SLS21212)	1	Lens release lever	L戻し止
5200 21221	(SLS21221)	1	Button	L戻し止ボタン
5200 21241	(SLS21241)	2	Guide screw	L戻し止ガイド
5200 21252	(SLS21252)	1	Spring	L戻し止バネ
5200 2441T1	(SLS2441T1)	1	Mirror stopper	ミラー角度板
5200 24441	(SLS24441)	1	Adjusting plate	ミラー角度調整板
5200 24451	(SLS24451)	1	Shoulder screw	ミラー角度調整板軸
5200 24471	(SLS24471)	1	Spring	ミラー角度調整板バネ
5200 29521	(SLS29521)	2	Sealing strip	ミラー側面モルト
5200 29541	(SLS29541)	2	Light baffle	ミラー側面遮光幕
00011718	(PB1.7×1.8)	2	Screw	クリックバネ止ネジ
S00011720	(PB1.7×2)	3	Screw	上カバー止ネジ
00011728	(PB1.7×2.8)	2	Screw	ボタン止ネジ
00111718	(3PB1.7×1.8)	2	Screw	Tクリックバネ止ネジ
S00111730	(3PB1.7×3)	1	Screw	角度調整板止ネジ
S00211730	(PD1.7×3)	3	Screw	Tダイヤル軸止ネジ
S07010020	(B020)	1	Steel ball (φ2.0)	クリックボール


Remarks

86

M645₁₀₀₀S


Body Ass'y 8

1	8
---	---

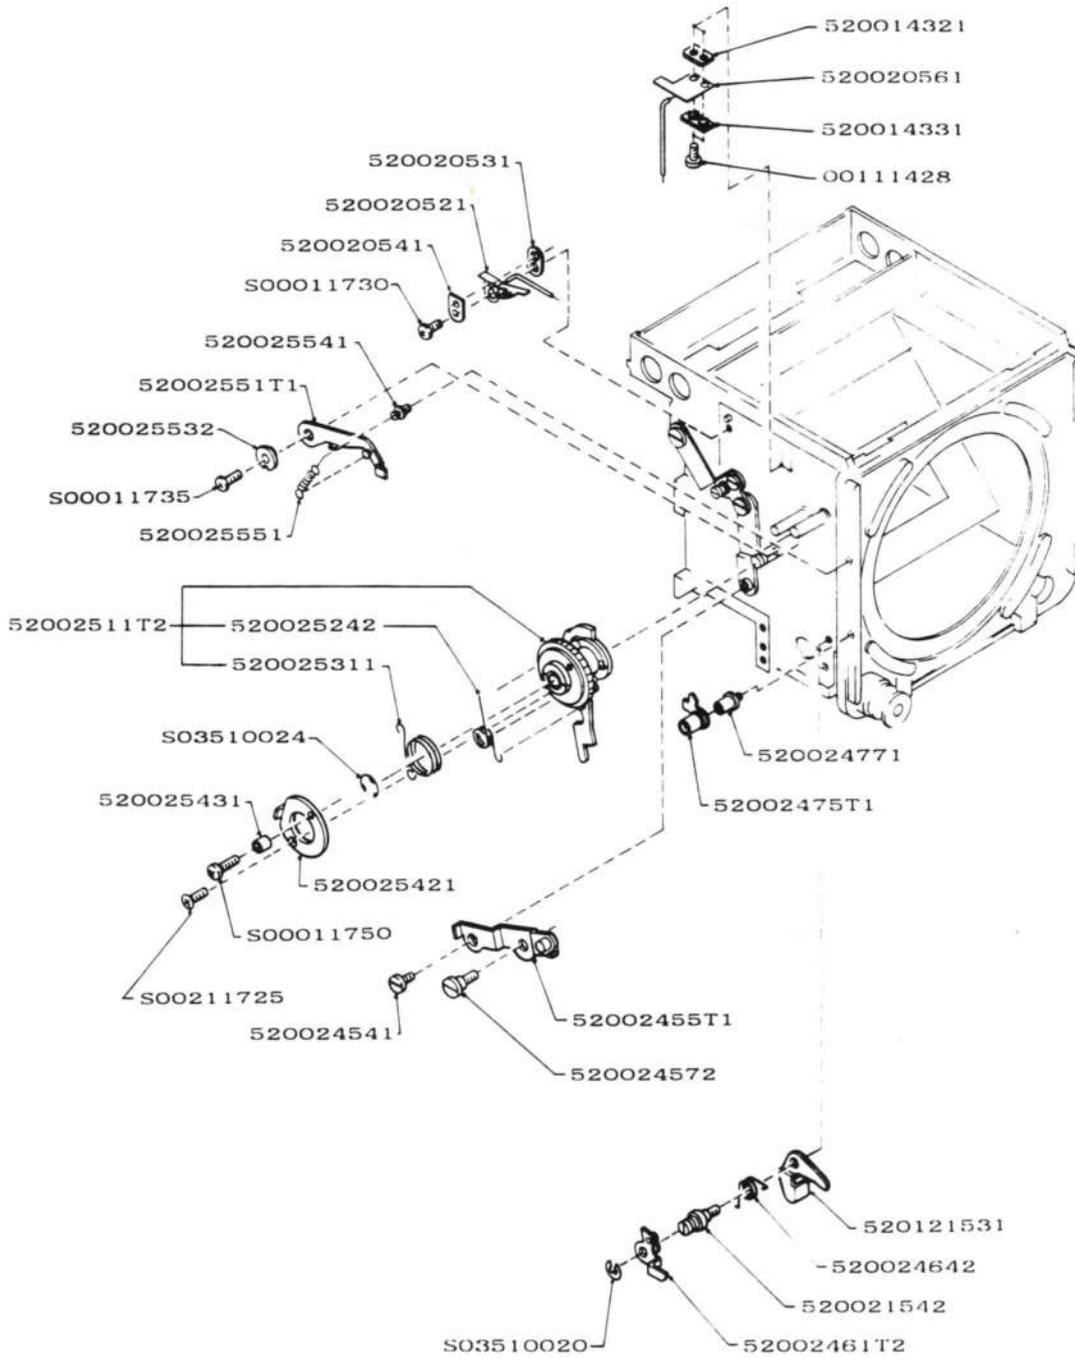

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 21531	(SLT21531)	1	C release lever	Cリリースレバー
5200 14321	(SLS14321)	1	Insulation washer	BC極絶縁座
5200 14331	(SLS14331)	1	Insulation plate	BC極絶縁板
5200 20521	(SLS20521)	1	Leaf spring	BCボタンバネ
5200 20531	(SLS20531)	1	Insulation plate	BCボタンバネ絶縁板
5200 20541	(SLS20541)	1	Insulation holder	BCボタンバネ絶縁台
5200 20561	(SLS20561)	1	Contact plate	BC極
5200 21542	(SLS21542)	1	Shoulder screw	Cリリースレバー軸
5200 24541	(SLS24541)	1	Screw	止ネジ
5200 2455T1	(SLS2455T1)	1	Mirror raising lever	ミラーレバー
5200 24572	(SLS24572)	1	Hub	ミラーレバー軸
5200 2461T2	(SLS2461T2)	1	Stop lever	ミラーストップレバー
5200 24642	(SLS24642)	1	Spring	ストップレバーバネ
5200 2475T1	(SLS2475T1)	1	Link lever	第2MUレバー
5200 24771	(SLS24771)	1	Shaft	第2MUレバー軸
5200 2511T2	(SLS2511T2)	1	Mirror raising crank	ミラー歯車板
5200 25242	(SLS25242)	1	Spring	ミラー上爪バネ
5200 25311	(SLS25311)	1	Spring	ミラーバネ
5200 25421	(SLS25421)	1	Disk	M3歯車板
5200 25431	(SLS25431)	1	Collar	FPスイッチピン
5200 2551T1	(SLS2551T1)	1	M release lever	ミラー歯車板掛金
5200 25532	(SLS25532)	1	Collar	ミラー歯車板掛金軸
5200 25541	(SLS25541)	1	Anchor	バネ柱
5200 25551	(SLS25551)	1	Spring	ミラー歯車板掛金バネ
S00011730	(PB1.7×3)	2	Screw	BCボタンバネ止ネジ
S00011735	(PB1.7×3.5)	1	Screw	掛金軸止ネジ
S00011750	(PB1.7×5)	1	Screw	M3歯車板ピン止ネジ
S00211725	(PD1.7×2.5)	1	Screw	M3歯車板止ネジ
00111428	(3PB1.4×2.8)	2	Screw	BC極止ネジ
S03510020	(E-20)	1	E-ring	止リング
S03510024	(E-24)	1	E-ring	M3歯車止リング

Remarks

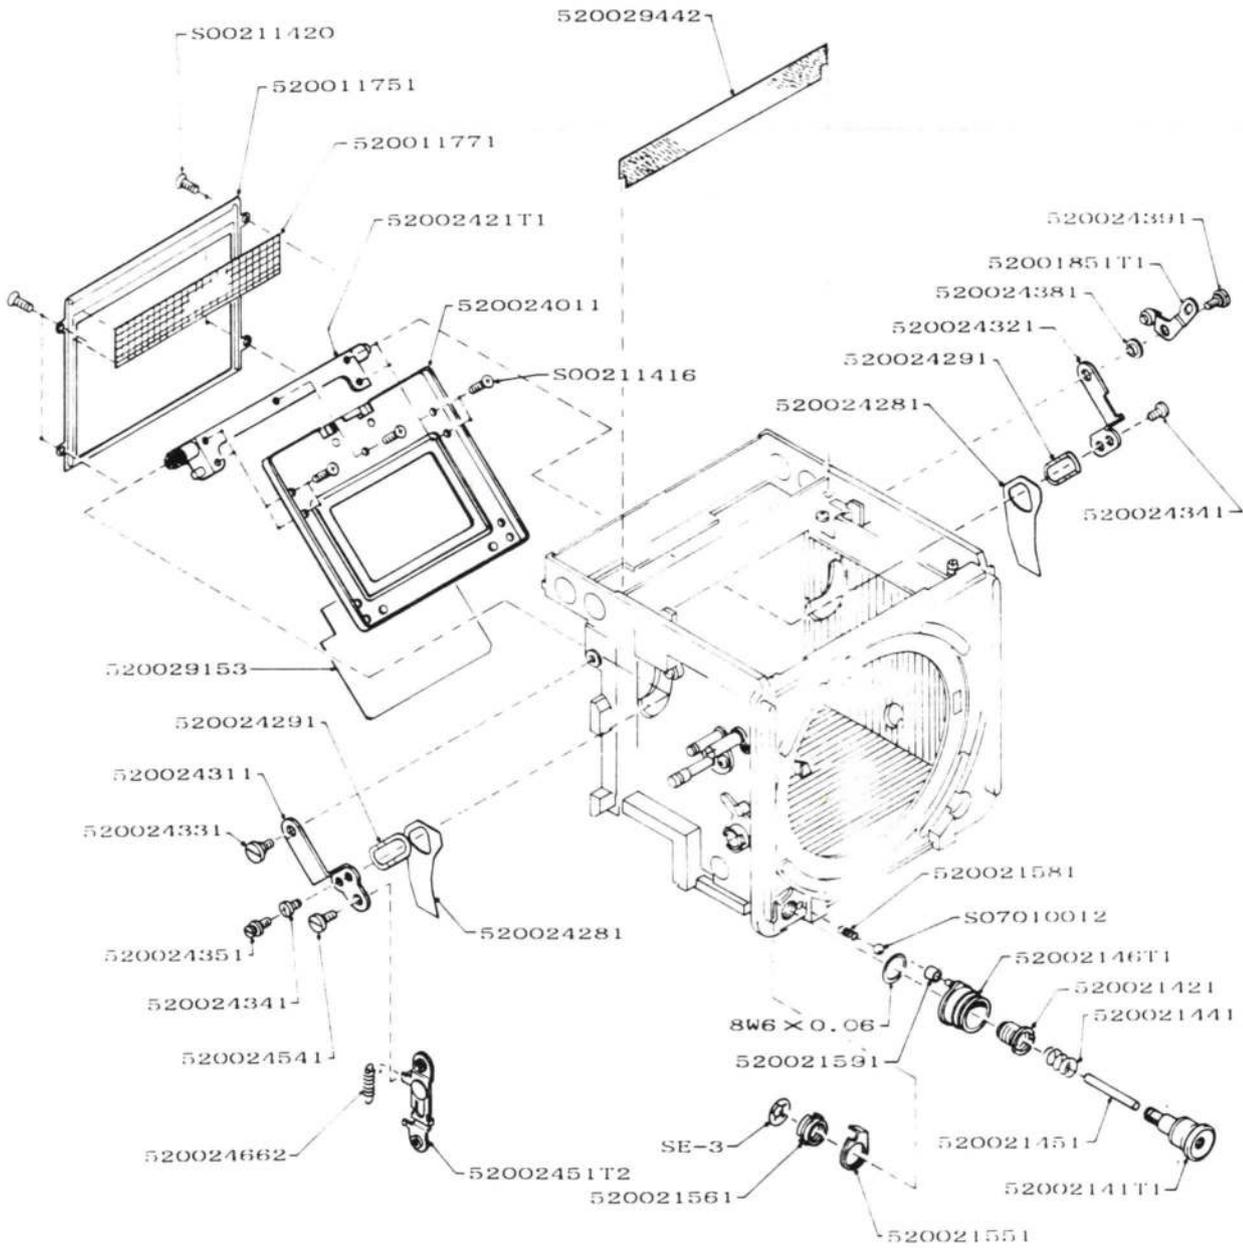


PARTS LIST

1 9

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11751	(SLS11751)	1	Light baffle plate	後カバー
5200 11771	(SLS11771)	1	Light baffle	ミラー遮光幕
5200 1851T1	(SLS1851T1)	1	X Synchro lever	X S W レバー
5200 2141T1	(SLS2141T1)	1	Shutter release button	S ボタン
5200 21421	(SLS21421)	1	Button guide	S ボタンガイド
5200 21441	(SLS21441)	1	Spring	S ボタンバネ
5200 21451	(SLS21451)	1	Shutter release rod	S 棒
5200 2146T1	(SLS2146T1)	1	Release lock ring	S ロックリング
5200 21551	(SLS21551)	1	Lock disk	S ロック板
5200 21561	(SLS21561)	1	Hub	S ロック板軸
5200 21581	(SLS21581)	1	Spring	クリックボールバネ
5200 21591	(SLS21591)	1	Collar	ピンカラー
5200 24011	(SLS24011)	1	Mirror holder plate	ミラーホルダー
5200 2421T1	(SLS2421T1)	1	Holder bracket	ミラーピン台
5200 24281	(SLS24281)	2	Light baffle plate	M ボディ遮光板
5200 24291	(SLS24291)	2	Spring washer	遮光板バネ
5200 24311	(SLS24311)	1	Mirror arm L	ミラーアーム(左)
5200 24321	(SLS24321)	1	Mirror arm R	ミラーアーム(右)
5200 24331	(SLS24331)	1	Shoulder screw	ミラーアーム軸
5200 24341	(SLS24341)	3	Screw (P1.7×3)	ミラーアーム止ネジ
5200 24351	(SLS24351)	1	Screw B	ミラーアーム止ネジ
5200 24381	(SLS24381)	1	Collar	ミラーアーム右カラー
5200 24391	(SLS24391)	1	Shoulder screw	ミラーアーム右軸
5200 2451T2	(SLS2451T2)	1	Coupling arm	ミラー上クランク板
5200 24541	(SLS24541)	1	Screw	クランク板止ネジ
5200 24662	(SLS24662)	1	Spring	クランク板バネ
5200 29153	(SLS29153)	1	RA Leatherette	ミラーホルダー遮光紙
5200 29442	(SLS29442)	1	Light baffle	ボディ上革
S00211416	(PD1.4×1.6)	5	Screw	ミラーピン台止ネジ
S00211420	(PD1.4×2)	4	Screw	後カバー止ネジ
8W6×0.06		1	Washer	S ロック調整ワッシャ
SE-3		1	SE-ring	S ボタン止リング
S07010012	(B012)	1	Steel ball (φ1.2)	クリックボール

Remarks

86

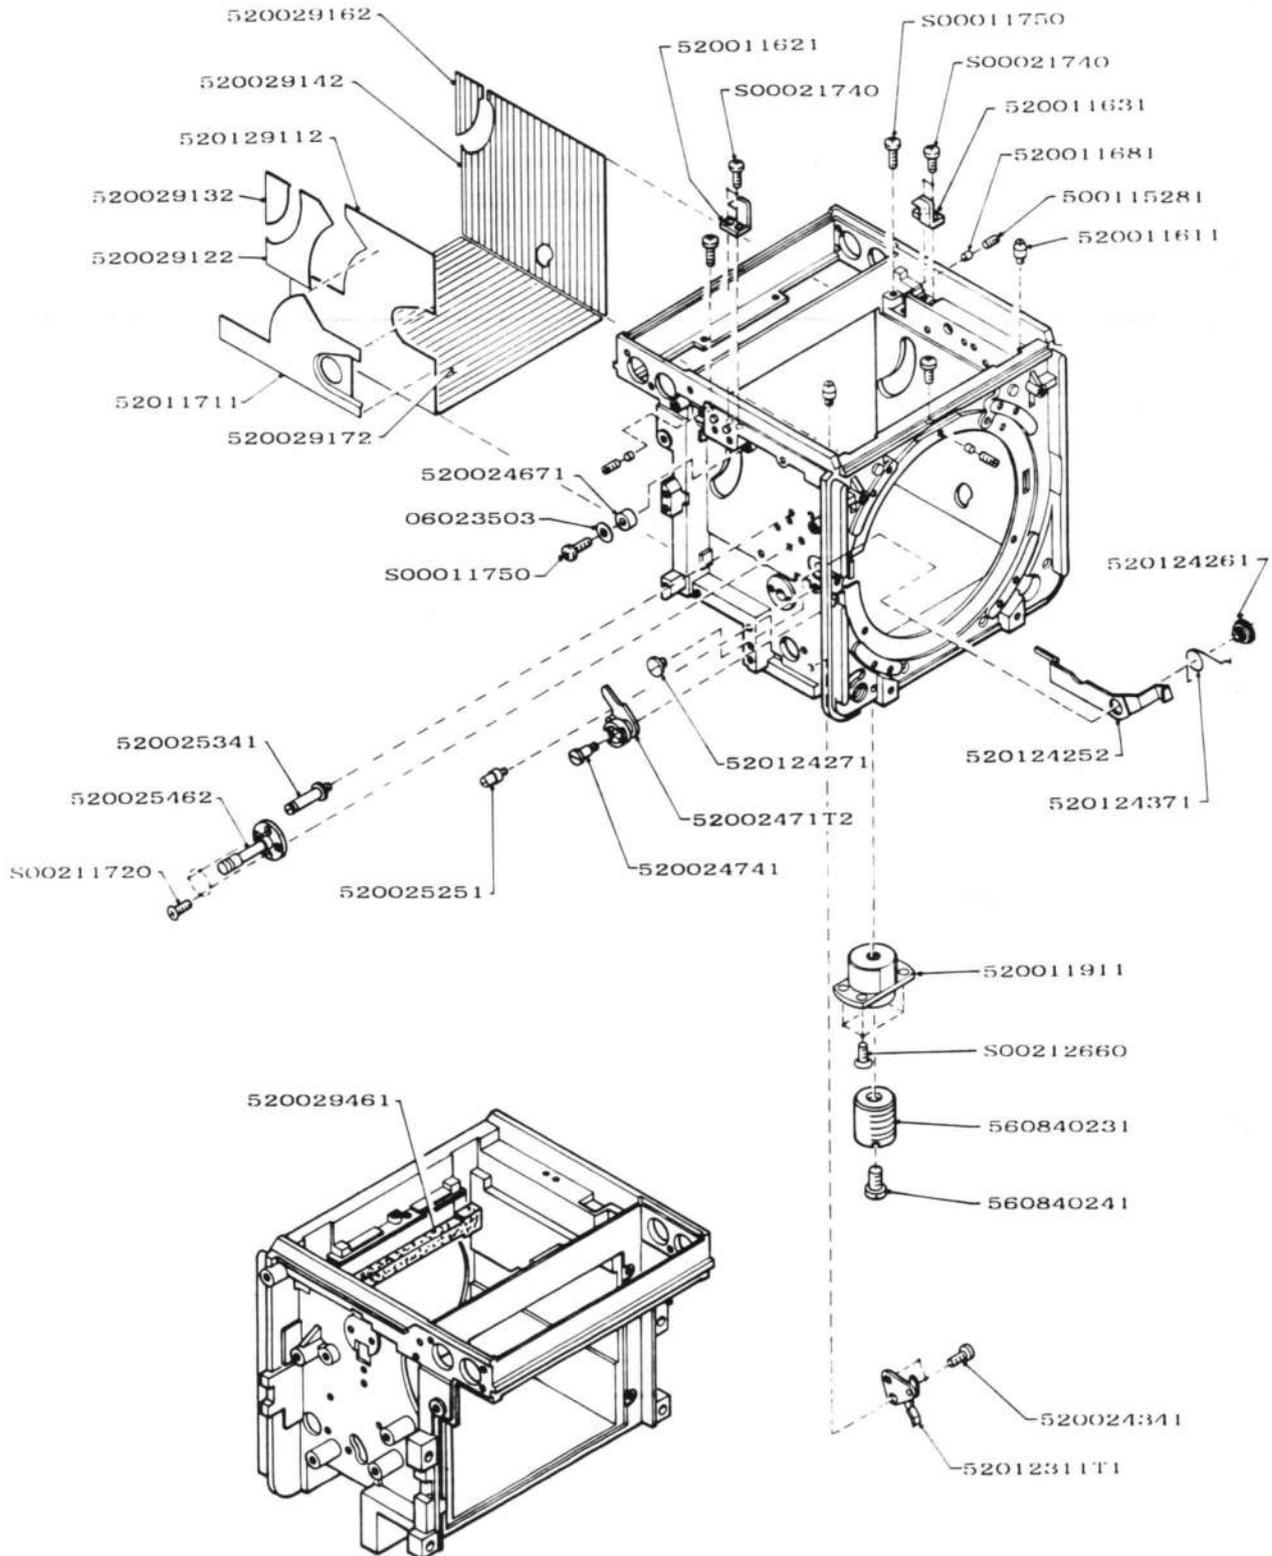


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 11711	(SLT11711)	1	Plate	左遮光紙台板
5201 2311T1	(SLT2311T1)	1	Self-timer lever	セルフレバー
5201 24252	(SLT24252)	1	Aperture coupling lever	絞り込みレバー
5201 24261	(SLT24261)	1	Hub	絞り込みレバー軸
5201 24271	(SLT24271)	1	Screw	絞り込みレバー軸ネジ
5201 24371	(SLT24371)	1	Spring	絞り込みレバーバネ
5201 29112	(SLT29112)	1	RA leatherette	左遮光紙(大)
5200 11611	(SLS11611)	2	Guide screw	プリズム枠ガイド
5200 11621	(SLS11621)	1	Latch L	プリズム枠掛金(左)
5200 11631	(SLS11631)	1	Latch R	プリズム枠掛金(右)
5200 11681	(SLS11681)	3	Stopper piece	ピント調整ネジ押え
5200 11911	(SLS11911)	1	Tripod socket	三脚止
5200 24341	(SLS24341)	2	Screw	止ネジ
5200 24671	(SLS24671)	1	Rubber cushion	ミラーダンパー
5200 2471T2	(SLS2471T2)	1	Mirror-up arm	MUレバー
5200 24741	(SLS24741)	1	Shaft	MUレバー軸
5200 25251	(SLS25251)	1	Guide screw	ミラー上げ爪ガイド
5200 25341	(SLS25341)	1	Shaft	ミラーバネ柱
5200 25462	(SLS25462)	1	Shaft	M3歯車軸
5200 29122	(SLS29122)	1	RA leatherette	左遮光紙(中)
5200 29132	(SLS29132)	1	RA leatherette	左遮光紙(小)
5200 29142	(SLS29142)	1	RA leatherette	右遮光紙(大)
5200 29162	(SLS29162)	1	RA leatherette	右遮光紙(小)
5200 29172	(SLS29172)	1	RA leatherette	下遮光紙
5200 29461	(SLS29461)	1	Sealing strip	ミラーモルト
5001 15281	(ARS1528)	3	Screw	ピント調整止ネジ
5608 40231	(EFC4023)	1	Tripod socket adapter	三脚ネジ
5608 40241	(EFC4024)	1	Screw	三脚ネジ止め
S00021740	(PB1.7×4Cr)	4	Screw	プリズム枠掛金止ネジ
S00011750	(PB1.7×5)	4	Screw	止ネジ
S00211720	(PD1.7×2)	4	Screw	M3歯車軸止ネジ
S00212660	(PD2.6×6)	4	Screw	三脚止め止ネジ
06023503	(5W2×0.3)	1	Washer	ミラーダンパー押え

Remarks

M645_{1000S}

Body Ass'y 11

1	11	A
---	----	---

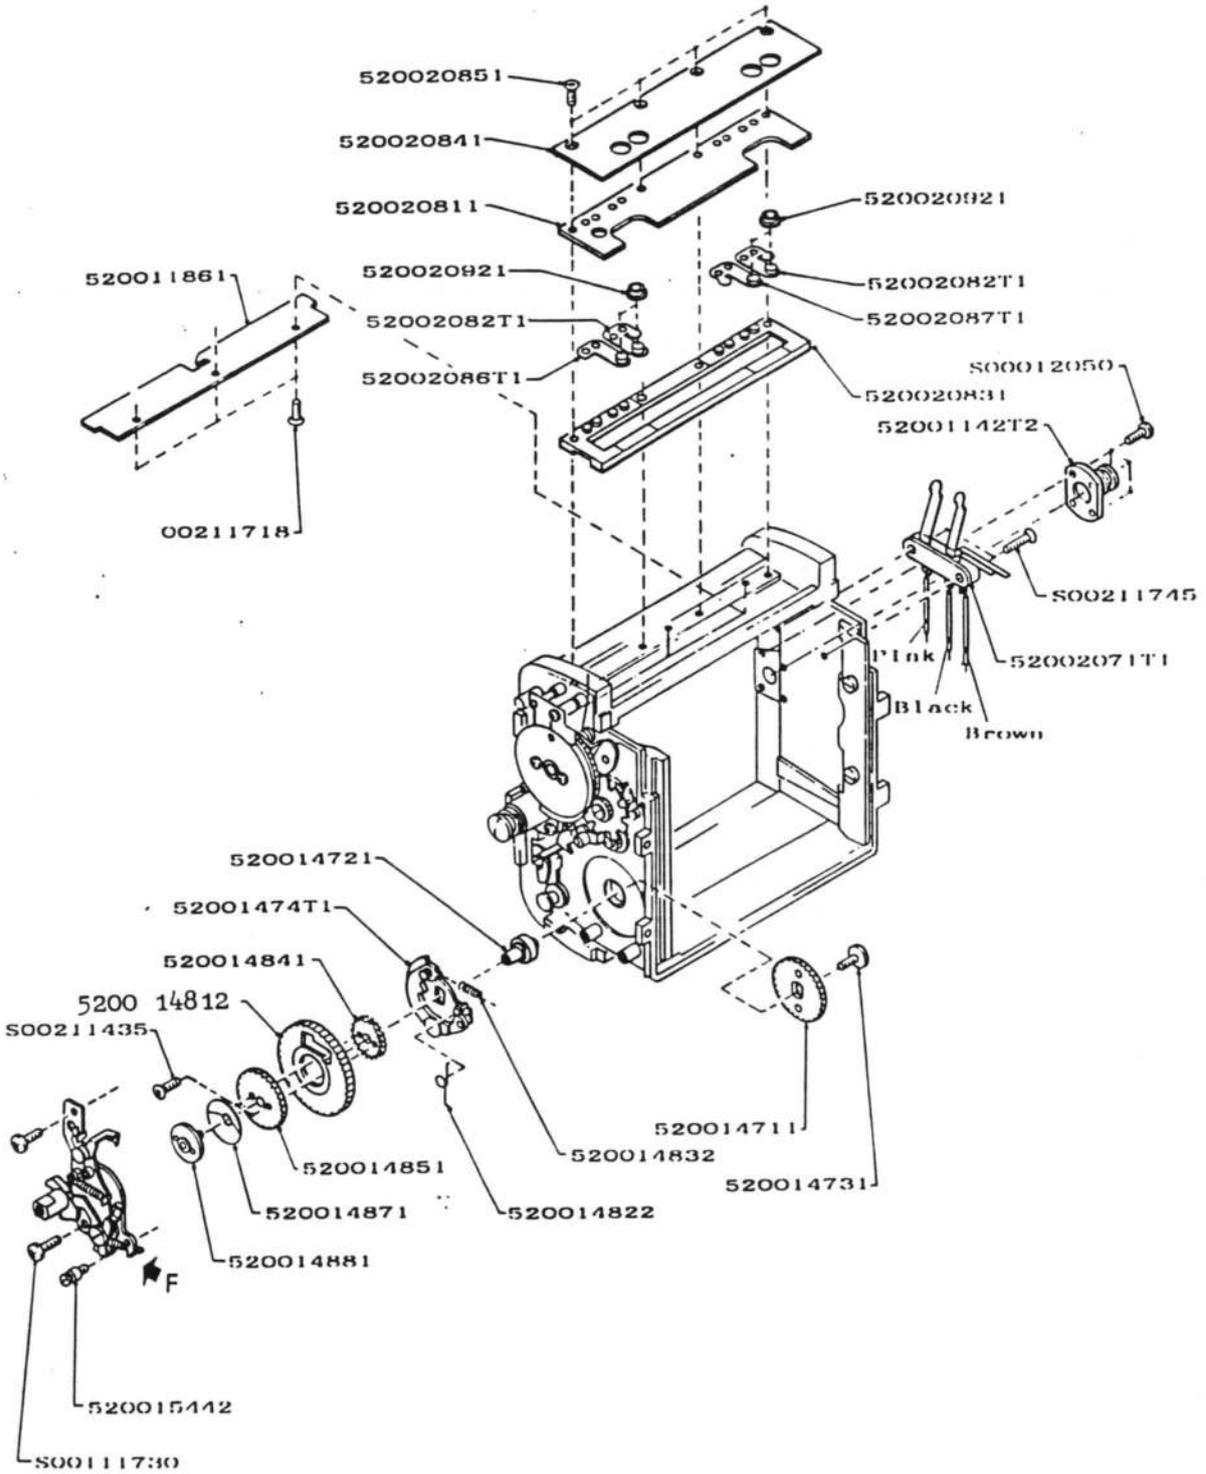


Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5200 1142T2		1	Strap lug R	吊金具(右)
5200 11861	(SLS11861)	1	Catch plate	裏蓋掛板
5200 14711	(SLS14711)	1	F4 Gear	F4 歯車
5200 14721	(SLS14721)	1	Shaft	F4 歯車軸
5200 14731	(SLS14731)	1	Screw	F4 歯車止ネジ
5200 1474T1	(SLS1474T1)	1	Advancing clutch	Fクラッチ板
5200 14812		1	F clutch wheel	Fクラッチ爪車
5200 14822	(SLS14822)	1	Spring	Fクラッチレバーバネ
5200 14832	(SLS14832)	1	Spring	Fクラッチ押しバネ
5200 14841	(SLS14841)	1	Gear	Fクラッチ送り歯車
5200 14851	(SLS14851)	1	F3 Gear	F3 歯車
5200 14871	(SLS14871)	1	Spring washer	F3 歯車摩擦バネ
5200 14881	(SLS14881)	1	Screw	F3 歯車摩擦バネ止
5200 15442	(SLS15442)	1	Anchor	バネ掛
5200 2071T1	(SLS2071T1)	1	Synchro contact	X接片台
5200 20811	(SLS20811)	1	Insulation plate	上部絶縁板
5200 2082T1	(SLS2082T1)	2	Contact	上部電極
5200 20831	(SLS20831)	1	Contact base plate	上部電極台
5200 20841	(SLS20841)	1	Contact cover	上部電極カバー
5200 20851	(SLS20851)	4	Screw (PD1.7×2.5)	上部電極カバー止ネジ
5200 2086T1	(SLS2086T1)	1	Earth plate	上部電極アース片
5200 2087T1	(SLS2087T1)	1	Contact	E X T 電極
5200 20921	(SLS20921)	4	Collar	上部接点ブッシュ
S00012050	(PB2×5)	4	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	D X 基板止ネジ
S00211435	(PD1.4×3.5)	2	Screw	F3 歯車止ネジ
00211718	(PD1.7×1.8)	3	Screw	裏蓋掛板止ネジ
S00211745	(PD1.7×4.5)	2	Screw	X接片台止ネジ

※ DETAIL F Winding Base Gear Ass'y.....Page 18

Remarks

89 SEP

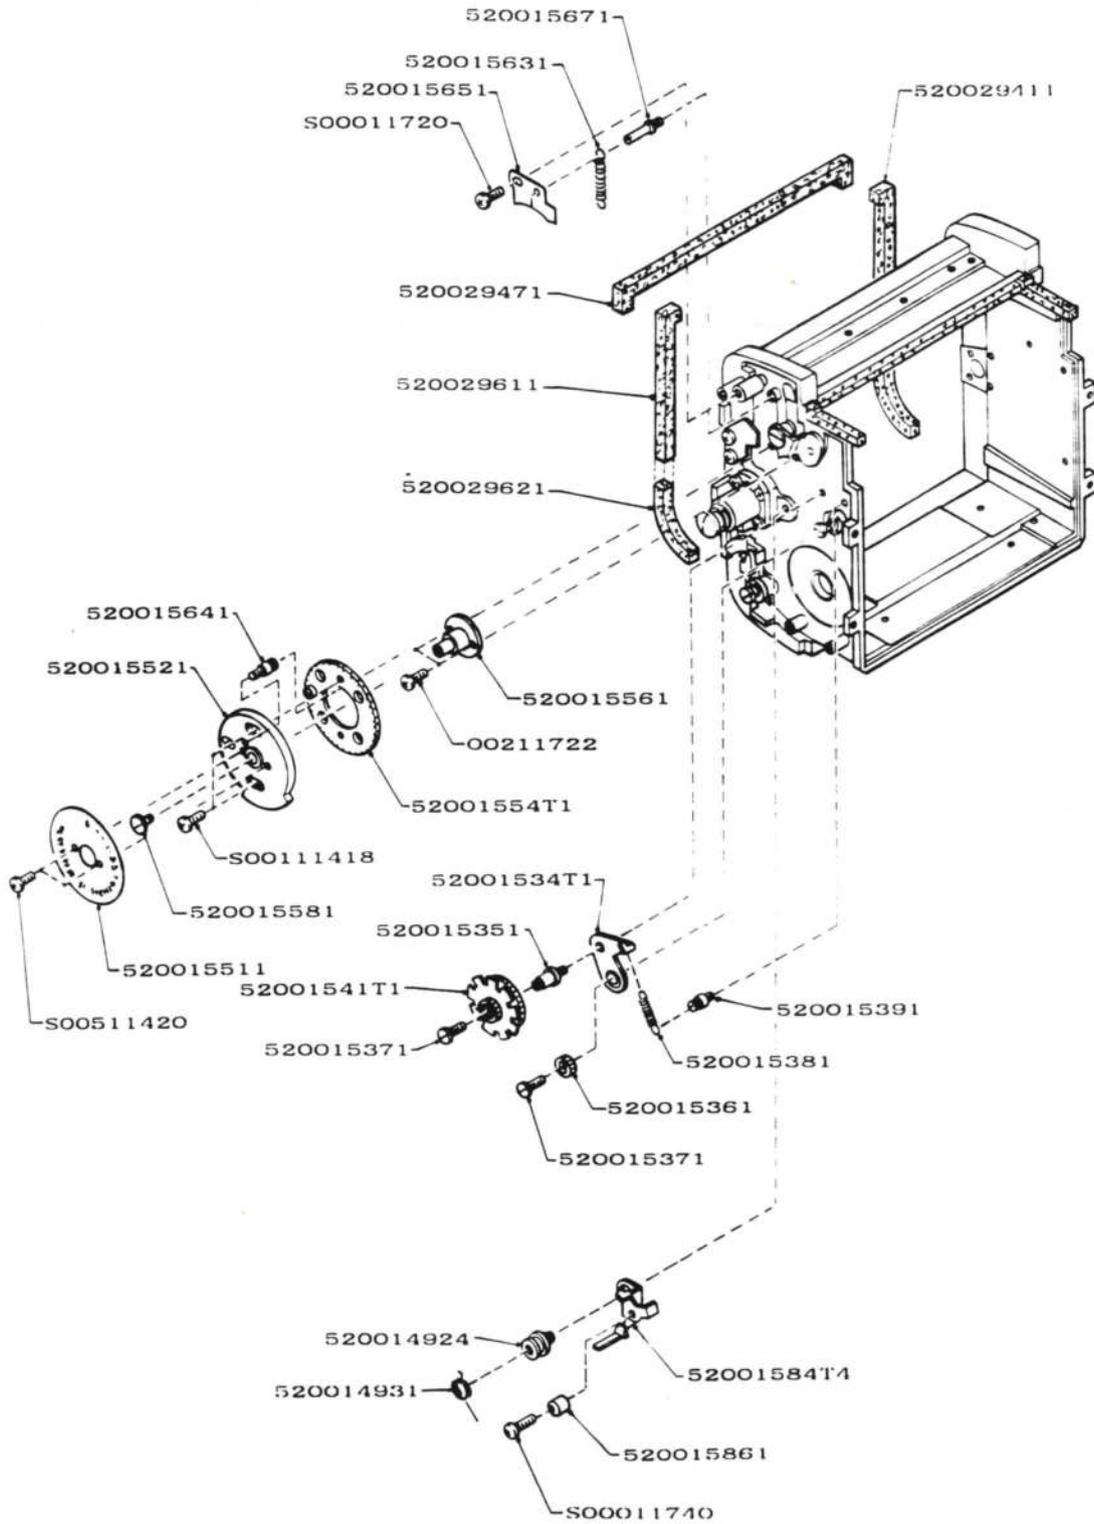


PARTS LIST

1	12
---	----


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 14924	(SLS14924)	1	Shaft	F 止爪車
5200 14931	(SLS14931)	1	Spring	F 止爪車バネ
5200 1534T1	(SLS1534T1)	1	Lever	C 1 歯車基板
5200 15351	(SLS15351)	1	Shaft	C 1 歯車基板軸
5200 15361	(SLS15361)	1	C2 Gear	C 2 歯車
5200 15371	(SLS15371)	2	Screw	止ネジ
5200 15381	(SLS15381)	1	Spring	C 2 歯車バネ
5200 15391	(SLS15391)	1	Anchor	C 2 歯車バネ掛
5200 1541T1	(SLS1541T1)	1	Counter dividing device	割出板
5200 15511	(SLS15511)	1	Counter	カウンタ-板
5200 15521	(SLS15521)	1	Counter base	カウンタ-台
5200 1554T1	(SLS1554T1)	1	Counter gear	カウンタ-歯車
5200 15561	(SLS15561)	1	Hub	カウンタ-軸
5200 15581	(SLS15581)	1	Screw	カウンタ-板止ネジ
5200 15631	(SLS15631)	1	Spring	カウンタ-バネ
5200 15641	(SLS15641)	1	Anchor	カウンタ-バネ掛
5200 15651	(SLS15651)	1	Indicator	指標
5200 15671	(SLS15671)	1	Guide screw	指標ガイド
5200 1584T4	(SLS1584T4)	1	Stop lever	割出爪
5200 15861	(SLS15861)	1	Collar	割出爪鉸
5200 29411	(SLS29411)	2	Sealing strip	F ボディ溝モルト
5200 29471	(SLS29471)	1	Sealing strip	F ボディモルト
5200 29611	(SLS29611)	1	Sealing strip	F ボディ溝モルト
5200 29621	(SLS29621)	1	Sealing strip	F ボディ溝モルト
S00011720	(PB1.7×2)	1	Screw	指標止ネジ
S00011740	(PB1.7×4)	1	Screw	割出爪止ネジ
S00111418	(3PB1.4×1.8)	2	Screw	C 歯車止ネジ
00211722	(PD1.7×2.2)	2	Screw	カウンタ-軸止ネジ
S00511420	(3TB1.4×2)	2	Screw	カウンタ-板止ネジ

Remarks

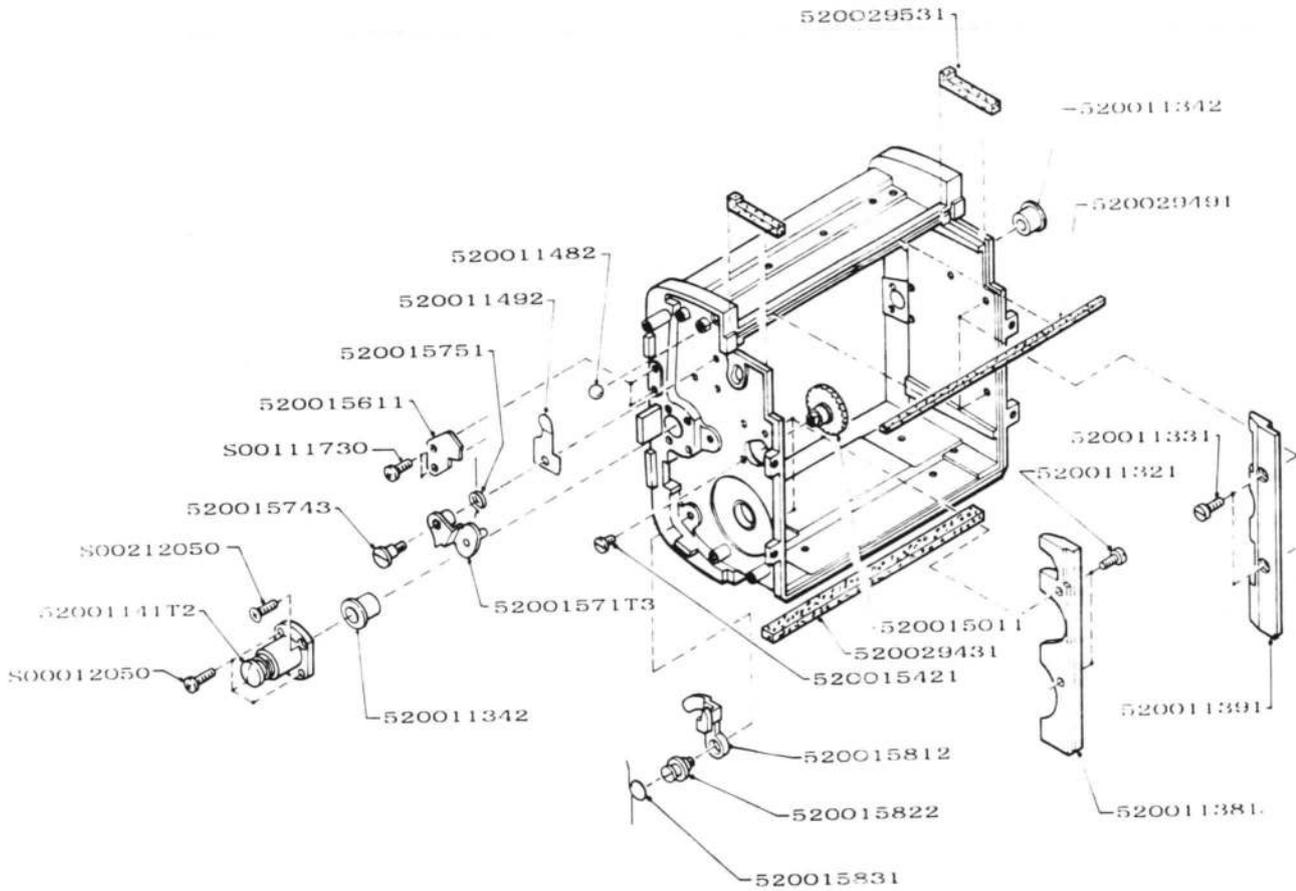

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11321	(SLS11321)	2	Guide screw L	Fホルダーガイド
5200 11331	(SLS11331)	2	Guide screw R	Fホルダーガイド
5200 11342	(SLS11342)	2	Lock guide	中枠ロックガイド
5200 11381	(SLS11381)	1	Guide plate L	F遮光枠(左)
5200 11391	(SLS11391)	1	Guide plate R	F遮光枠(右)
5200 1141T2		1	Strap lug L	吊金具(左)
5200 11482	(SLS11482)	1	Ball	F固定ボール
5200 11492	(SLS11492)	1	Leaf spring	F固定ボールバネ
5200 15011	(SLS15011)	1	C1 Gear	C1歯車
5200 15421	(SLS15421)	1	Screw	ストッパー
5200 15611	(SLS15611)	1	Stopper	カウンター戻し止
5200 1571T3	(SLS1571T3)	1	Change-over lever	カウンター切換板
5200 15743	(SLS15743)	1	Shoulder screw	カウンター切換板軸
5200 15751	(SLS15751)	1	Spring	カウンター切換板バネ
5200 15812	(SLS15812)	1	C release lever	カウンター解除レバー
5200 15822	(SLS15822)	1	Shoulder screw	解除レバー軸
5200 15831	(SLS15831)	1	Spring	解除レバーバネ
5200 29431	(SLS29431)	1	Sealing strip	Fボディ蝶番モルト
5200 29491	(SLS29491)	1	Sealing strip	Fボディ正面溝モルト
5200 29531	(SLS29531)	2	Sealing strip	ボディモルト(小)
S00012050	(PB2×5)	3	Screw	吊金具止ネジ
S00111730	(3PB1.7×3)	2	Screw	止ネジ
S00212050	(PD2×5)	1	Screw	吊金具止ネジ

Remarks

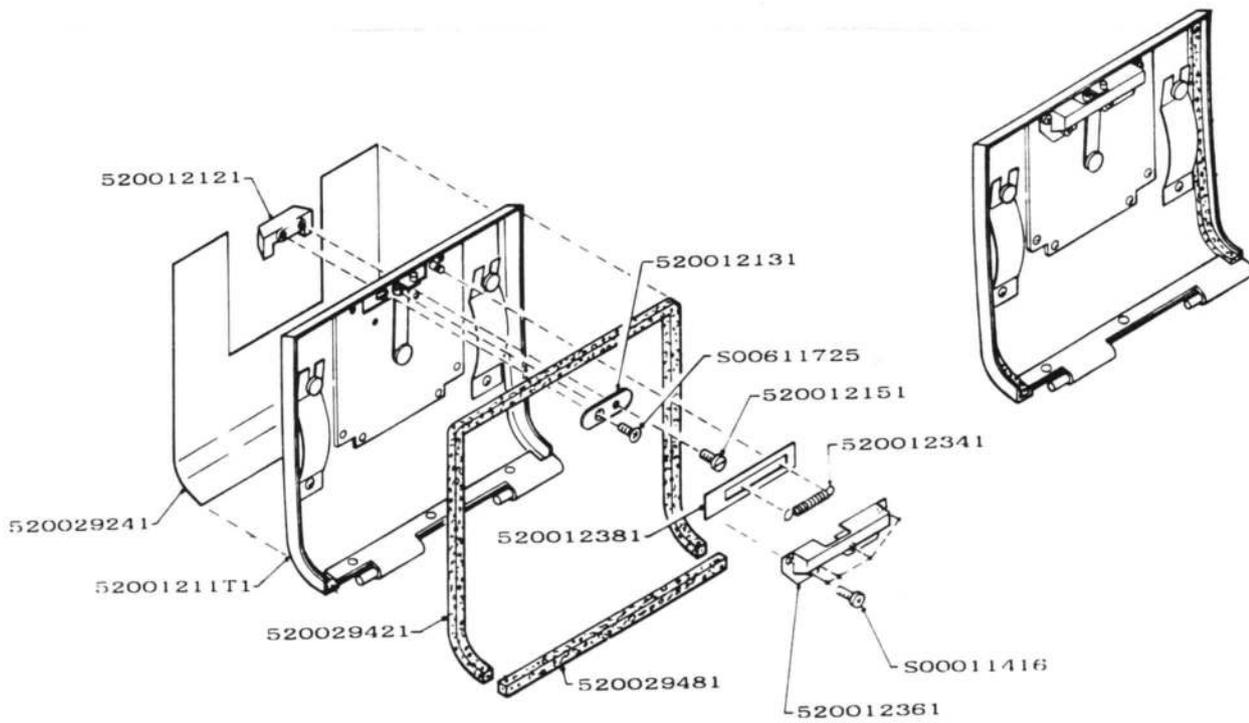


DETAIL A

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 1211T1	(SLS1211T1)	1	Back cover	裏蓋
5200 12121	(SLS12121)	1	Knob	裏蓋つまみ
5200 12131	(SLS12131)	1	Rataining plate	裏蓋つまみ止板
5200 12151	(SLS12151)	1	Screw	裏蓋つまみ止ネジ
5200 12341	(SLS12341)	1	Spring	裏蓋掛金バネ
5200 12361	(SLS12361)	1	Cover	裏蓋掛金ケース
5200 12381	(SLS12381)	1	Light tight seal	裏蓋掛金遮光幕
5200 29241	(SLS29241)	1	Leatherette	裏蓋革
5200 29421	(SLS29421)	1	Sealing strip	裏蓋モルト
5200 29481	(SLS29481)	1	Sealing strip	裏蓋蝶番モルト
S00011416	(PB1.4×1.6)	4	Screw	ケース止ネジ
S00611725	(TD1.7×2.5)	1	Screw	つまみ止板止ネジ

Remarks

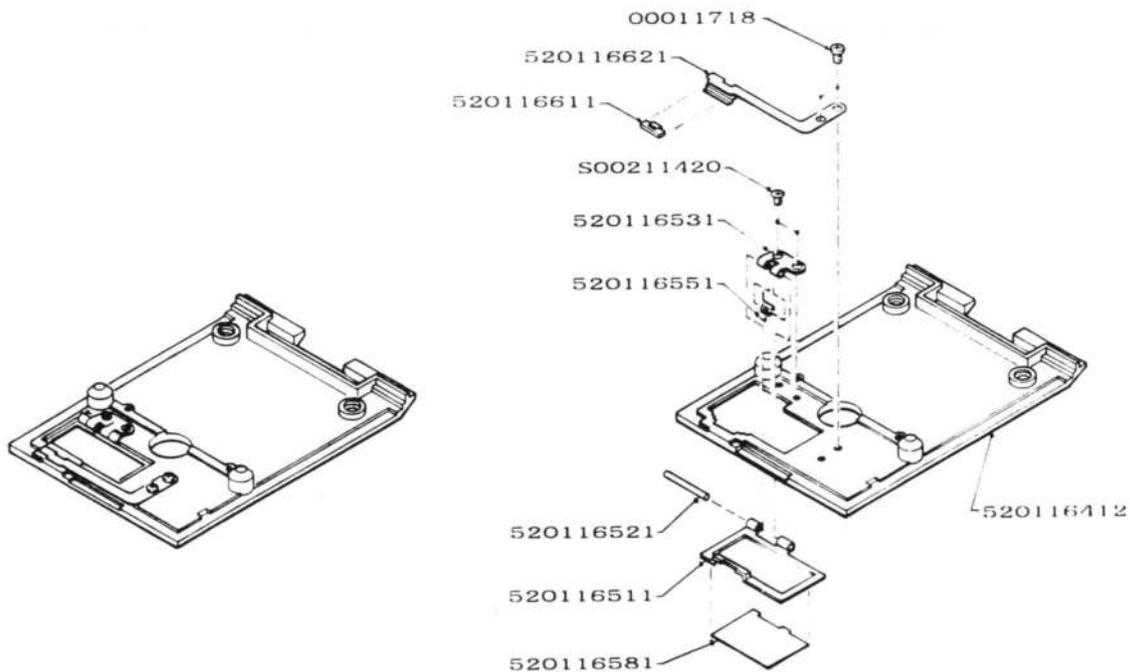


DETAIL B

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 16412	(SLT16412)	1	Bottom cover	下部カバー
5201 16511	(SLT16511)	1	Battery chamber cover	電池蓋
5201 16521	(SLT16521)	1	Shaft	電池蓋軸
5201 16531	(SLT16531)	1	Hinge	電池蓋軸受
5201 16551	(SLT16551)	1	Spring	電池蓋バネ
5201 16581	(SLT16581)	1	Seal	電池蓋シール
5201 16611	(SLT16611)	1	Lock plate	電池蓋爪
5201 16621	(SLT16621)	1	Leaf spring	電池蓋爪カバー
00011718	(PB1.7×1.8)	2	Screw	電池蓋爪カバー止ネジ
S00211420	(PD1.4×2)	2	Screw	電池蓋軸受止ネジ



Remarks

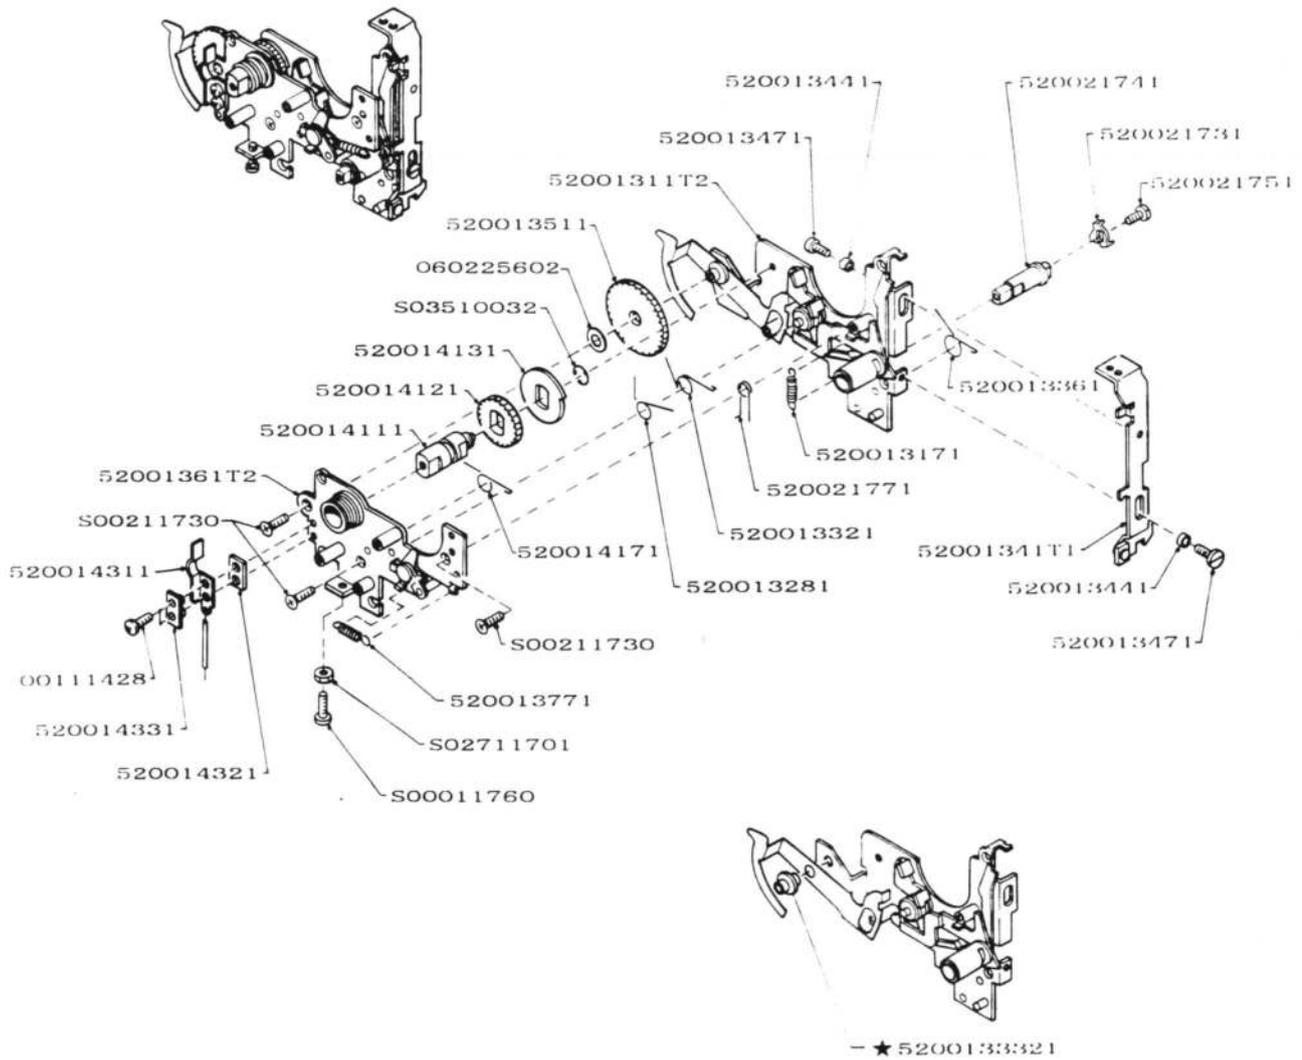

DETAIL C

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 1311T2	(SLS1311T2)	1	Winding base plate L	巻上下基板
5200 13171	(SLS13171)	1	Spring	R 止レバーバネ
5200 13281	(SLS13281)	1	Spring	一回転止レバーバネ
5200 13321	(SLS13321)	1	Spring	巻止連動レバーバネ
5200 13361	(SLS13361)	1	Spring	MU解除レバーバネ
5200 1341T1	(SLS1341T1)	1	Shutter release bar	リリース板
5200 13441	(SLS13441)	2	Collar	リリース板ガイド
5200 13471	(SLS13471)	2	Shoulder screw	リリース板止ネジ
5200 13511	(SLS13511)	1	F2 Gear	F2 歯車
5200 1361T2	(SLS1361T2)	1	Winding base plate M	巻上中基板
5200 13771	(SLS13771)	1	Spring	スイッチレバーバネ
5200 14111	(SLS14111)	1	Shaft	巻上軸
5200 14121	(SLS14121)	1	F1 Gear	F1 歯車
5200 14131	(SLS14131)	1	Wind stop disk	一回転停止板
5200 14171	(SLS14171)	1	Spring	F1 歯車ギチバネ
5200 14311	(SLS14311)	1	Trigger switch	Tスイッチ接片
5200 14321	(SLS14321)	1	Insulation washer	Tスイッチ絶縁座
5200 14331	(SLS14331)	1	Insulation plate	Tスイッチ絶縁板
5200 21731	(SLS21731)	1	MU cam	MUカム
5200 21741	(SLS21741)	1	Shaft	MUカム軸
5200 21751		1	Screw	MUカム止ネジ
5200 21771	(SLS21771)	1	Spring	MUクリックバネ
S00011760	(PB1.7×6)	1	Screw	MSCS調整ネジ
S00211730	(PD1.7×3)	3	Screw	巻上中基板止ネジ
00111428	(3PB1.4×2.8)	2	Screw	Tスイッチ止ネジ
06025602	(6W3×0.2)	1	Washer	F2 歯車ワッシャ
S03510032	(E-32)	1	E-ring	止リング
S02711701	(N1.7)	1	Nut	MSCS調整ナット
★5200 13332		1	Hob	巻止め連動レバー軸

Remarks

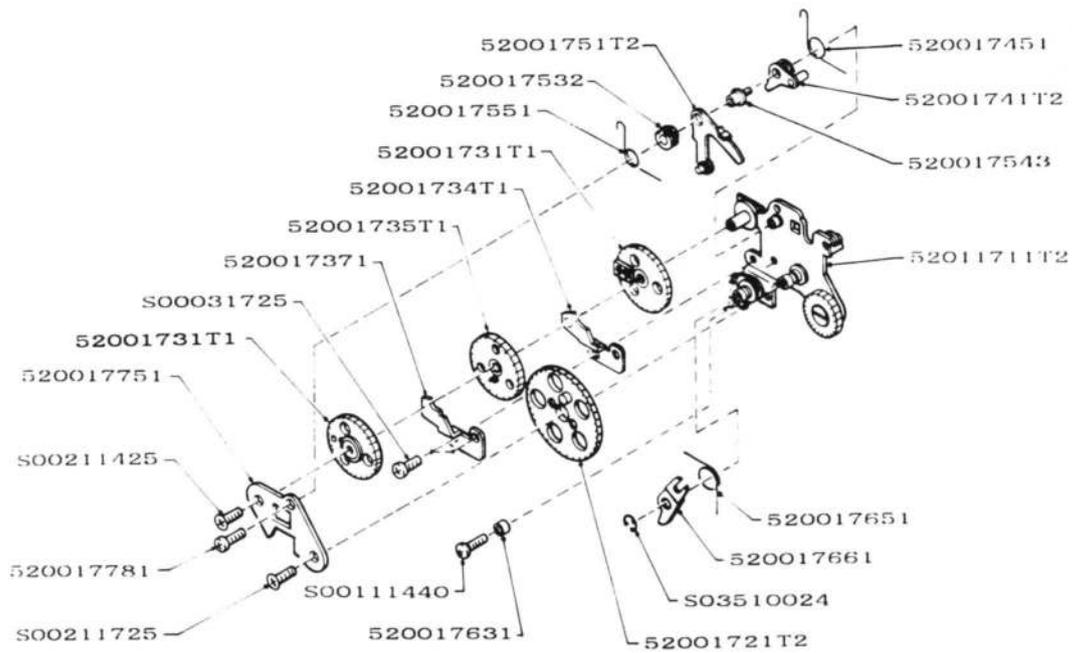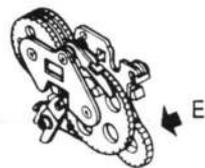


DETAIL E

PARTS LIST


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201	1711T2 (SLT1711T2)	1	Charging base L	M S 卷上基板(下)
5200	1721T2 (SLS1721T2)	1	MS2 gear	M S 2 歯車
5200	1731T1 (SLS1731T1)	2	S1 gear	S 1 歯車
5200	1734T1 (SLS1734T1)	1	Stopper	S 1 歯車止め
5200	1735T1 (SLS1735T1)	1	S2 gear	S 2 歯車
5200	17371 (SLS17371)	1	Stopper	S 3 歯車止め
5200	1741T2 (SLS1741T2)	1	Hook	S 1 歯車掛金
5200	17451 (SLS17451)	1	Spring	S 1 歯車掛金バネ
5200	1751T2 (SLS1751T2)	1	Hook	S 3 歯車掛金
5200	17532 (SLS17532)	1	Hub	S 3 歯車掛金ハブ
5200	17543 (SLS17543)	1	Stud	S 3 歯車掛金軸
5200	17551 (SLS17551)	1	Spring	S 3 歯車掛金バネ
5200	17631 (SLS17631)	1	Eccentric collar	ピン
5200	17651 (SLS17651)	1	Spring	バネ
5200	17661 (SLS17661)	1	Trigger switch lever	Tスタートレバー
5200	17751 (SLS17751)	1	Charging base U	M S 卷上基板(上)
5200	17781 (SLS17781)	1	Screw (※PB1.4×2.8)	M S 卷上基板止ネジ
S00031725	(PB1.7×2.5Ni)	2	Screw	S 3 歯車止止ネジ
S00111440	(3PB1.4×4)	1	Screw	ピン止ネジ
S00211425	(PD1.4×2.5)	1	Screw	M S 卷上基板止ネジ
S00211725	(PD1.7×2.5)	1	Screw	M S 卷上基板止ネジ
S03510024	(E-24)	1	E-ring	止リング

Remarks

DETAIL "D" MS Clutch Disk Ass'y
& "F" Winding Base Gear Ass'y

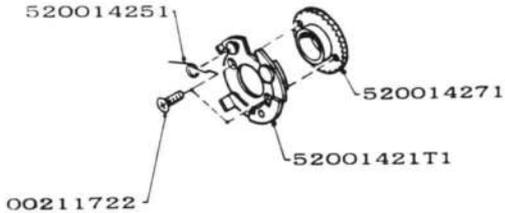

DETAIL D

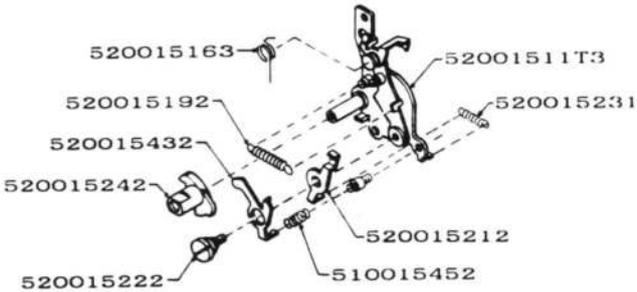


DETAIL F

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 1421T1	(SLS1421T1)	1	MS clutch disk	MS クラッチ基板
5200 14251	(SLS14251)	1	Spring	MS クラッチ爪バネ
5200 14271	(SLS14271)	1	MS gear	MS I 歯車
00211722	(PD1.7×2.2)	2	Screw	基板止ネジ

5200 1511T3	(SLS1511T3)	1	Change-over lever	DX 基板
5200 15163	(SLS15163)	1	Spring	DX 爪バネ
5200 15192	(SLS15192)	1	Spring	DX 爪レバーバネ
5200 15212	(SLS15212)	1	Sub lever	DX 補助レバー
5200 15222	(SLS15222)	1	Shoulder screw	DX 補助レバー軸
5200 15231	(SLS15231)	1	Spring	DX 補助レバーバネ
5200 15242	(SLS15242)	1	Cam	DX カム
5200 15432	(SLS15432)	1	Click lever	DX クリックレバー
5200 15452	(SLS15452)	1	Spring	クリックレバーバネ

Remarks

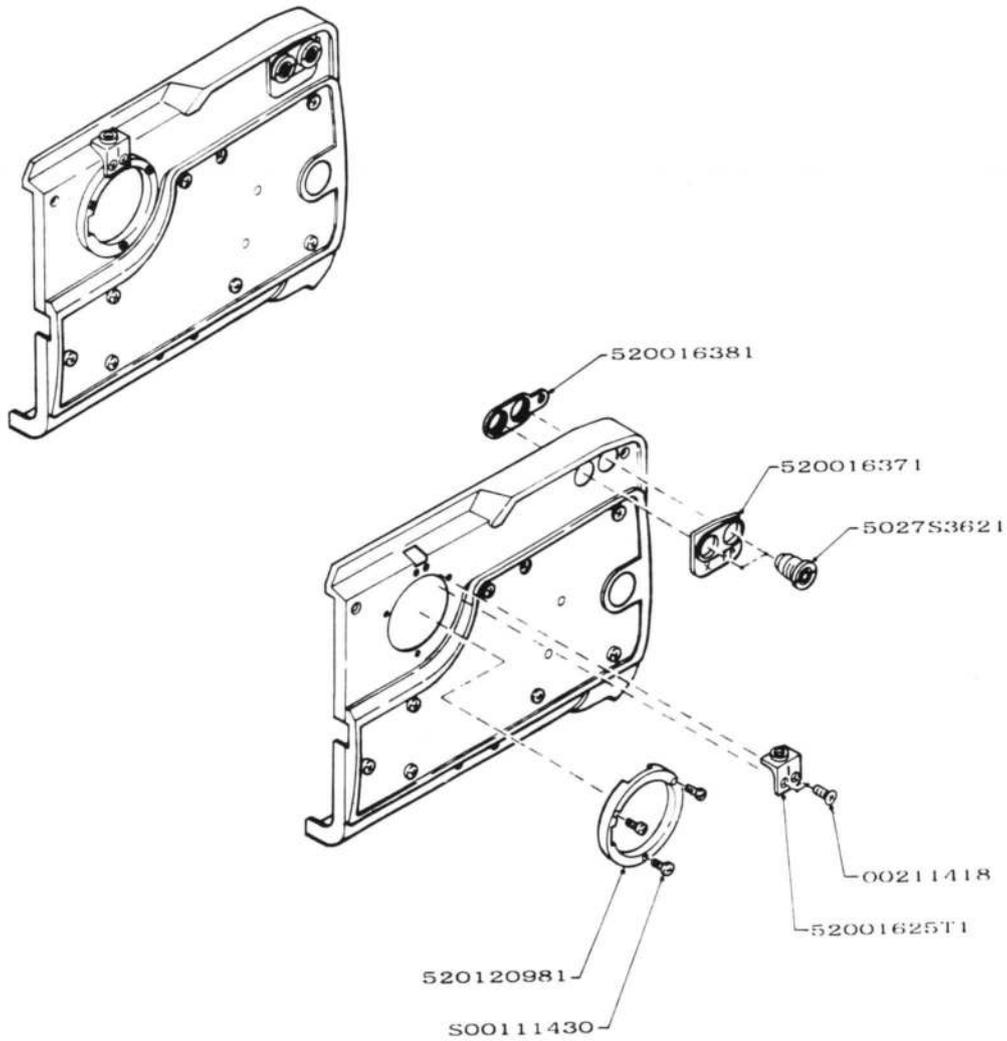


5200 16201

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 20981	(SLT20981)	1	Shutter dial ring	Tダイヤルリング
5200 1625T1	(SLS1625T1)	1	Shutter speed indicator	スピード指標
5200 16371	(SLS16371)	1	Terminal base	シンクロ座
5200 16381	(SLS16381)	1	Terminal nut	シンクロ止ナット
5027 S3621	(LE103-362K2)	2	Flash terminal	シンクロAss'y
S00111430	(3PB1.4×3)	3	Screw	止ネジ
00211418	(PD1.4×1.8)	2	Screw	スピード指標止ネジ

Remarks

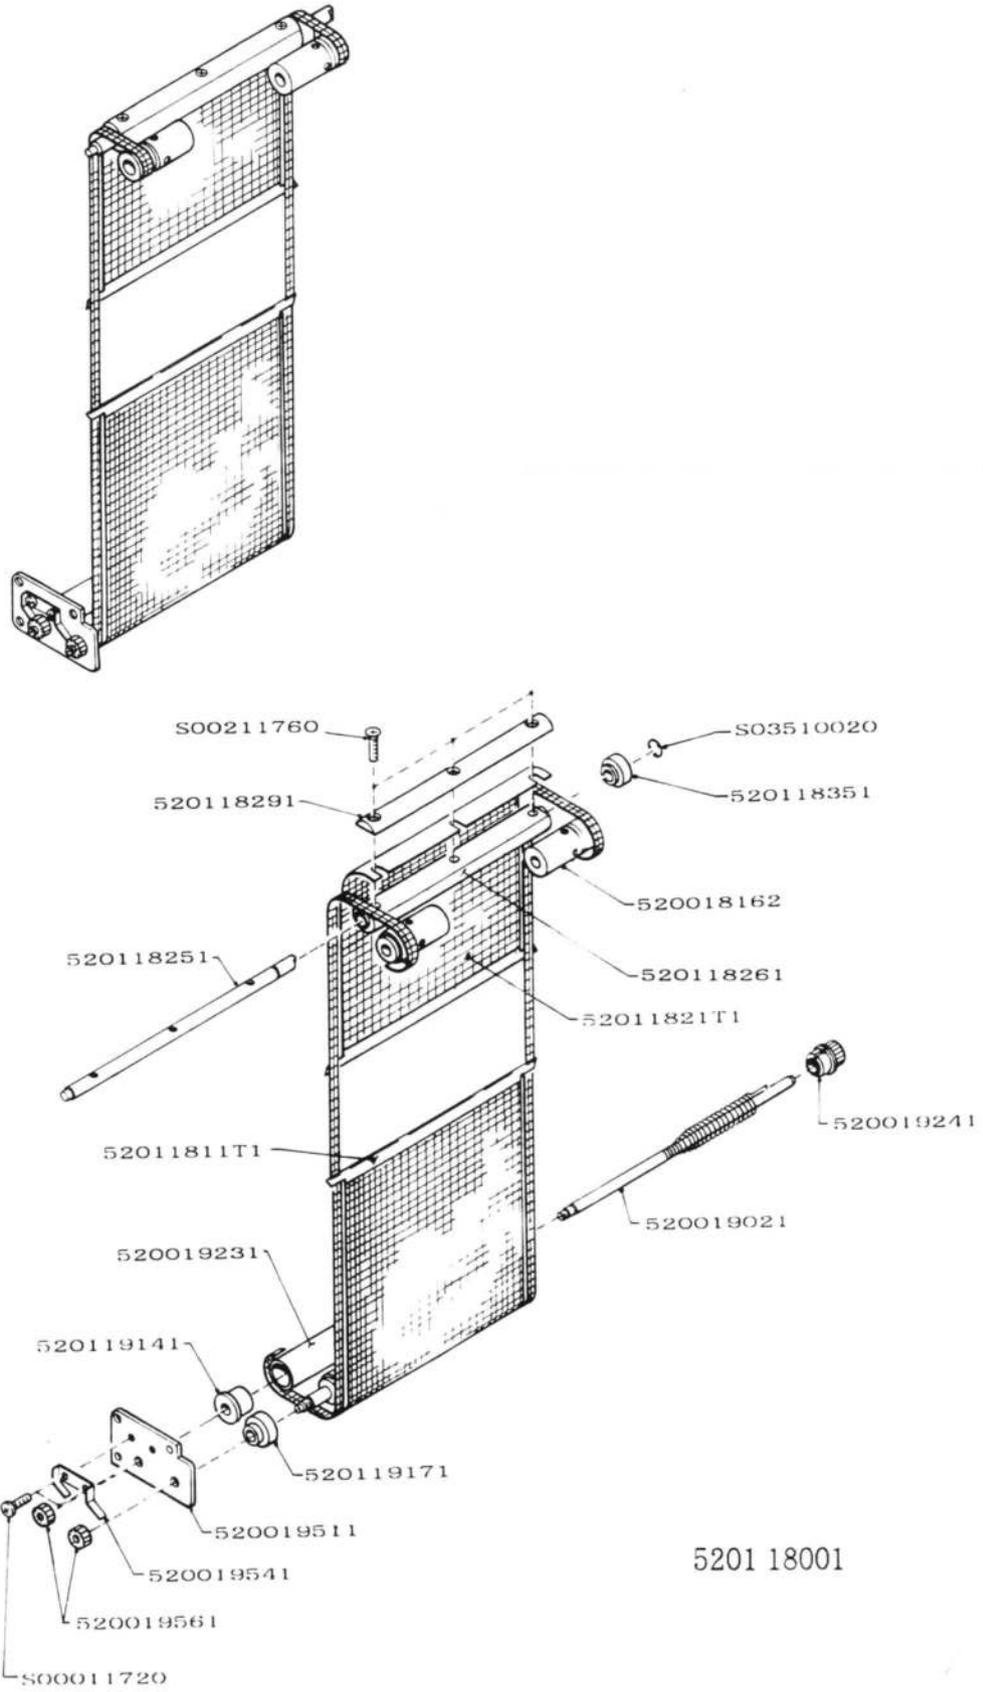

5201 18001

PARTS LIST


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 1811T1	(SLT1811T1)	1	First curtain Ass'y	先幕
5201 1821T1	(SLT1821T1)	1	Second curtain Ass'y	後幕
5201 18251	(SLT18251)	1	Shaft	後幕軸
5201 18261	(SLT18261)	1	Tube	後幕筒
5201 18291	(SLT18291)	1	Rataining plate	後幕止
5201 18351	(SLT18351)	1	Pulley A	後幕軸ローラー
5201 19141	(SLT19141)	1	Hub	スプリング軸受
5201 19171	(SLT19171)	1	Pulley B	スプリング軸ローラー
5200 18162	(SLS18162)	2	Ribbon pipe	先幕筒
5200 19021	(SLS19021)	1	Shaft	後幕スプリング
5200 19231	(SLS19231)	1	Tube	後幕スプリング筒
5200 19241	(SLS19241)	1	Wheel	後幕スプリング軸受
5200 19511	(SLS19511)	1	Base plate	スプリング軸右基板
5200 19541	(SLS19541)	1	Adjusting spring	調整スプリング
5200 19561	(SLS19561)	2	Adjusting gear	スプリング調整歯車
S00011720	(PB1.7×2)	2	Screw	調整スプリング止ネジ
S00211760	(PD1.7×6)	3	Screw	後幕筒止ネジ
S03510020	(E-20)	1	E-ring	後幕軸止リング

Remarks

M645₁₀₀₀S

Film Advance Crank

Film Advance Crank Ass'y.....21

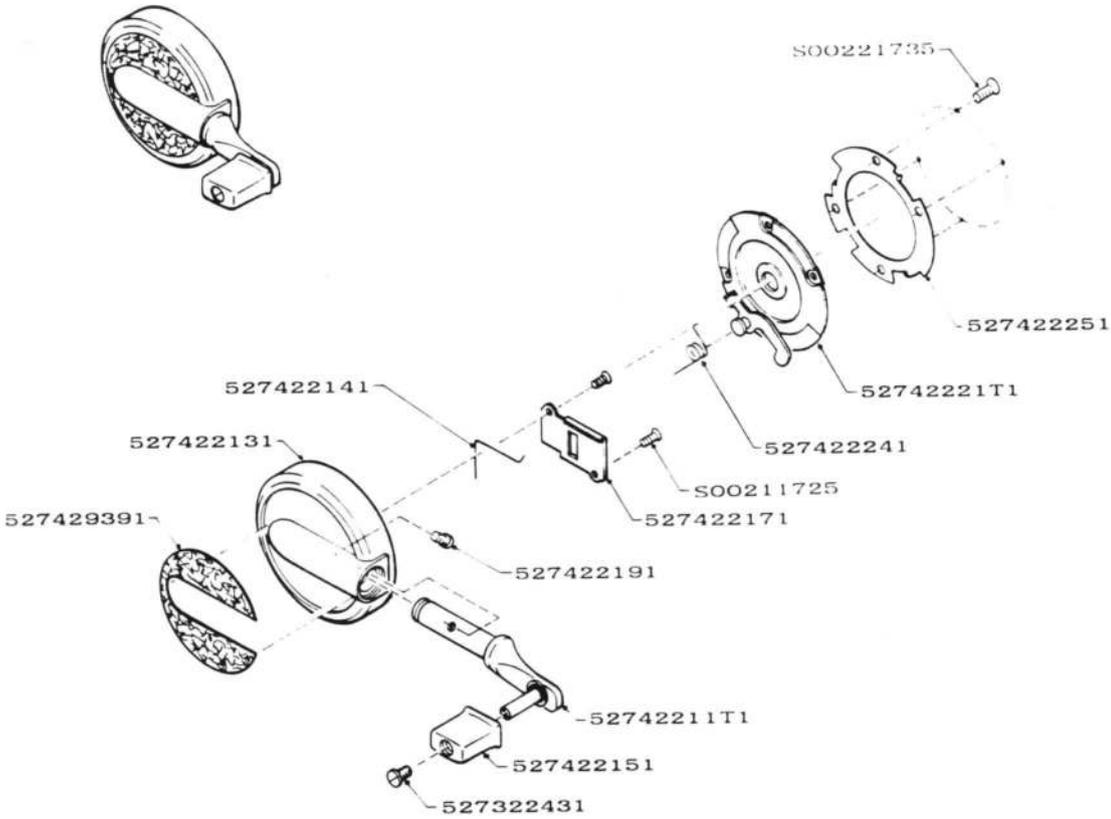

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5274 2211T1		1	Film advance crank	巻上レバー
5274 22131	(SLT22131)	1	Film advance crank lid	巻上レバー台
5274 22141	(SLT22141)	1	Spring	クリックバネ
5274 22151	(SLT22151)	1	Knob	巻上レバーつまみ
5274 22171	(SLT22171)	1	Angle plate	巻上レバー押え
5274 22191	(SLT22191)	1	Screw	巻上レバーピン
5274 2221T1	(SLT2221T1)	1	Base bisk	巻上レバー台板
5274 22241	(SLT22241)	1	Spring	ノブロックレバーバネ
5274 22251	(SLT22251)	1	Bayonet bisk	ノブバヨネ
5274 29391	(SLT29391)	1	Leatherette	巻上レバー台革
5273 22431	(SLS22431)	1	Screw	つまみ止ネジ
S00211725	(PD1.7×2.5)	2	Screw	押え止リング
S00221735	(PD1.7×3.5Cr)	4	Screw	ノブバヨネ止ネジ

Remarks

M645₁₀₀₀S


120 Roll Film Insert & 220 Roll Film Insert

120 Roll Film Insert Ass'y.....	22
DETAIL "A" Left Panel Ass'y.....	23
DETAIL "B" Pressure Plate Ass'y & "C" Release Latch Ass'y....	24
Exclusive use for 220 Roll Film Insert.....	25

M645_{1000S}

120 Roll Film Insert Ass'y

1 22 A

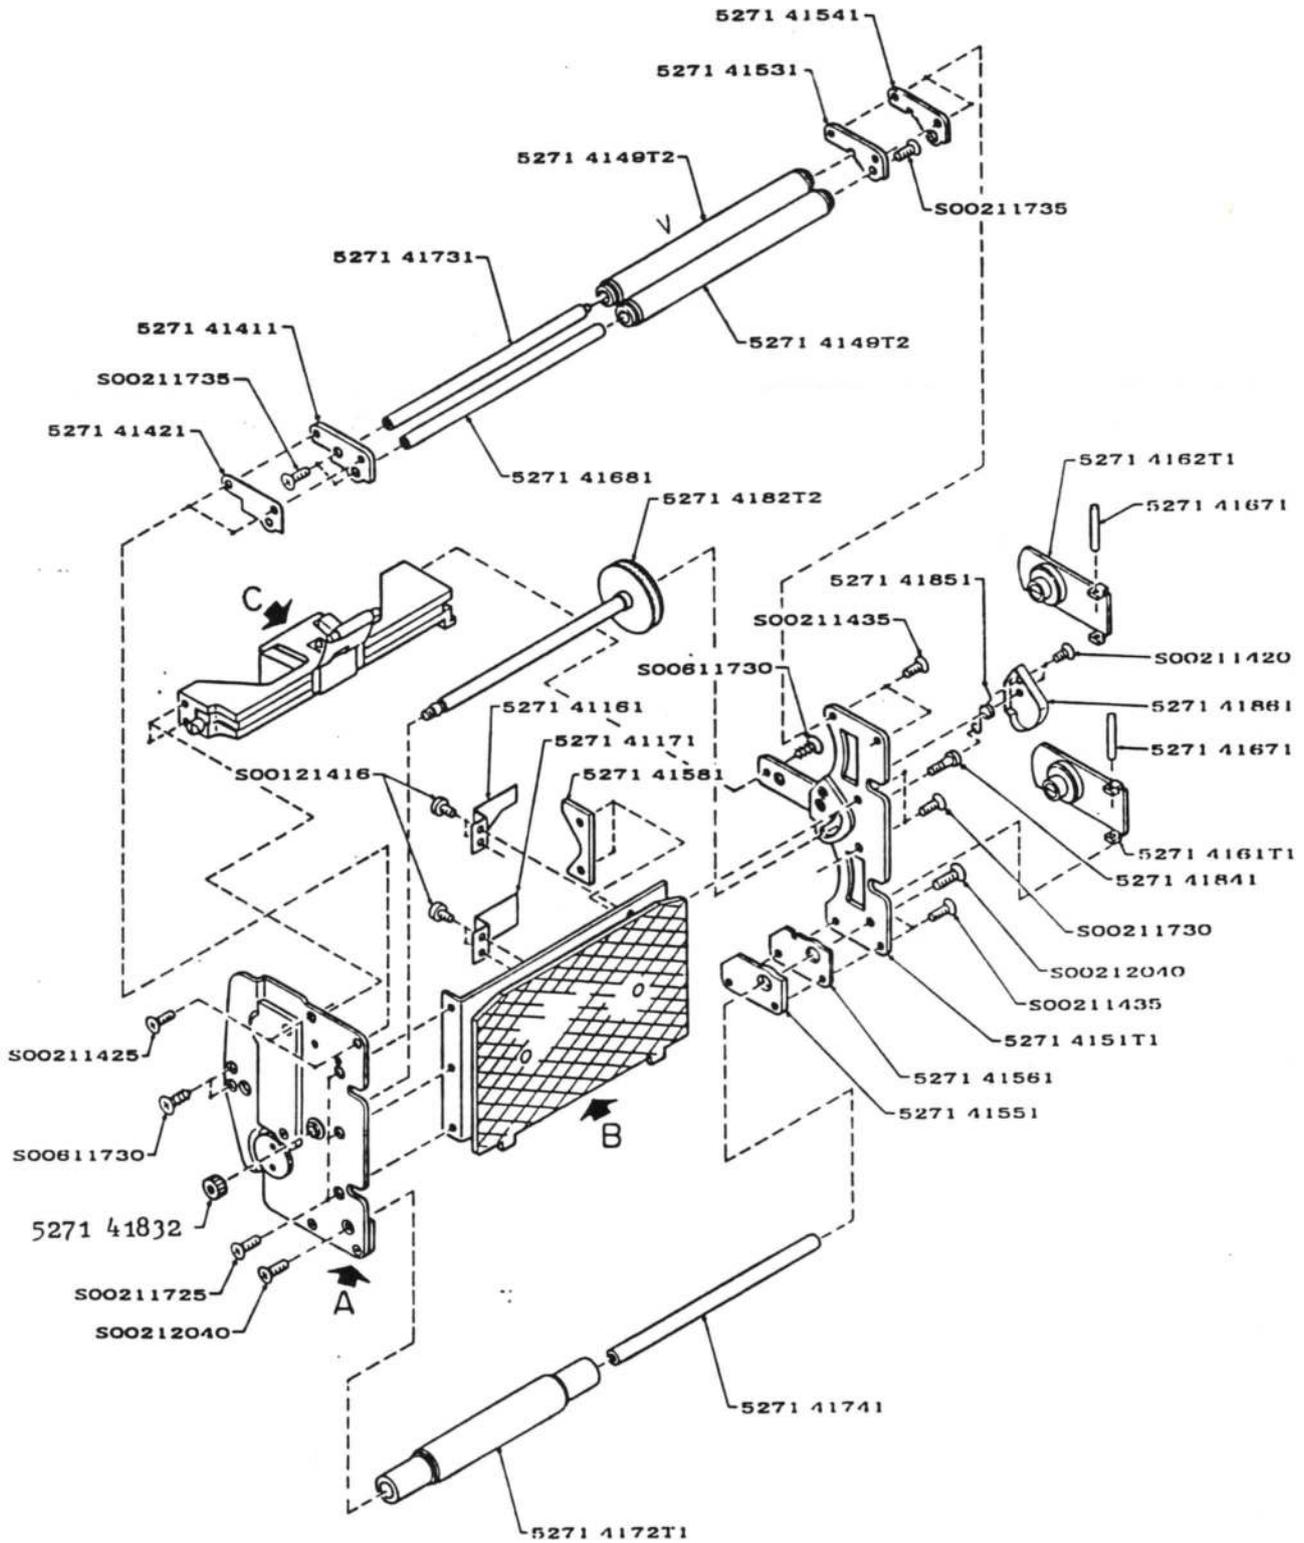

PARTS LIST



I 22 A

Parts No.	Common Use Parts No.	QTY.	Description	部品名称
5271 41161	(SLS41161)	1	Leaf spring U	SP受板バネ(上)
5271 41171	(SLS41171)	1	Leaf spring L	SP受板バネ(下)
5271 41411	(SLS41411)	1	Guide	Fガイド左上
5271 41421	(SLS41421)	1	Spacer	Fガイド左上座金
5271 4149T2	(SLS4149T2)	2	Roller	繰出しローラー
5271 4151T1	(SLS4151T1)	1	Right panel	右基板
5271 41531	(SLS41531)	1	Guide	Fガイド右上
5271 41541	(SLS41541)	1	Spacer	Fガイド右上座金
5271 41551	(SLS41551)	1	Guide	Fガイド右上
5271 41561	(SLS41561)	1	Spacer	Fガイド右上座金
5271 41581	(SLS41581)	1	Plate	右基板止め板
5271 4161T1	(SLS4161T1)	1	Spool clip L	SP受板下
5271 4162T1	(SLS4162T1)	1	Spool clip U	SP受板上
5271 41671	(SLS41671)	2	Shaft	SP受板軸
5271 41681	(SLS41681)	1	Shaft	繰出しローラー軸(前)
5271 4172T1	(SLS4172T1)	1	Film roller	巻取ローラー
5271 41731	(SLS41731)	1	Shaft	繰出しローラー軸(後)
5271 41741	(SLS41741)	1	Shaft	巻取ローラー軸
5271 4182T2	(SLS4182T2)	1	Friction wheel	摩擦コロ軸
5271 41832		1	Gear	摩擦コロ歯車
5271 41841	(SLS41841)	1	Screw	摩擦コロ軸ネジ
5271 41851	(SLS41851)	1	Spring	摩擦コロバネ
5271 41861	(SLS41861)	1	Cover	摩擦コロバネカバー
S00121416	(3PB1.4×1.6Cr)	4	Screw	SP受板バネ止ネジ
S00211420	(PD1.4×2)	2	Screw	カバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	Fガイド左上止ネジ
S00211435	(PD1.4×3.5)	4	Screw	Fガイド右上止ネジ
S00211725	(PD1.7×2.5)	3	Screw	左基板止ネジ
S00211730	(PD1.7×3)	2	Screw	右基板止ネジ
S00211735	(PD1.7×3.5)	3	Screw	ローラー軸止ネジ
S00212040	(PD2×4)	2	Screw	巻取ローラー止ネジ
S00611730	(TD1.7×3)	3	Screw	基板支え止ネジ

Remarks

89 SEP

Detail "A" Left Panel Ass'y

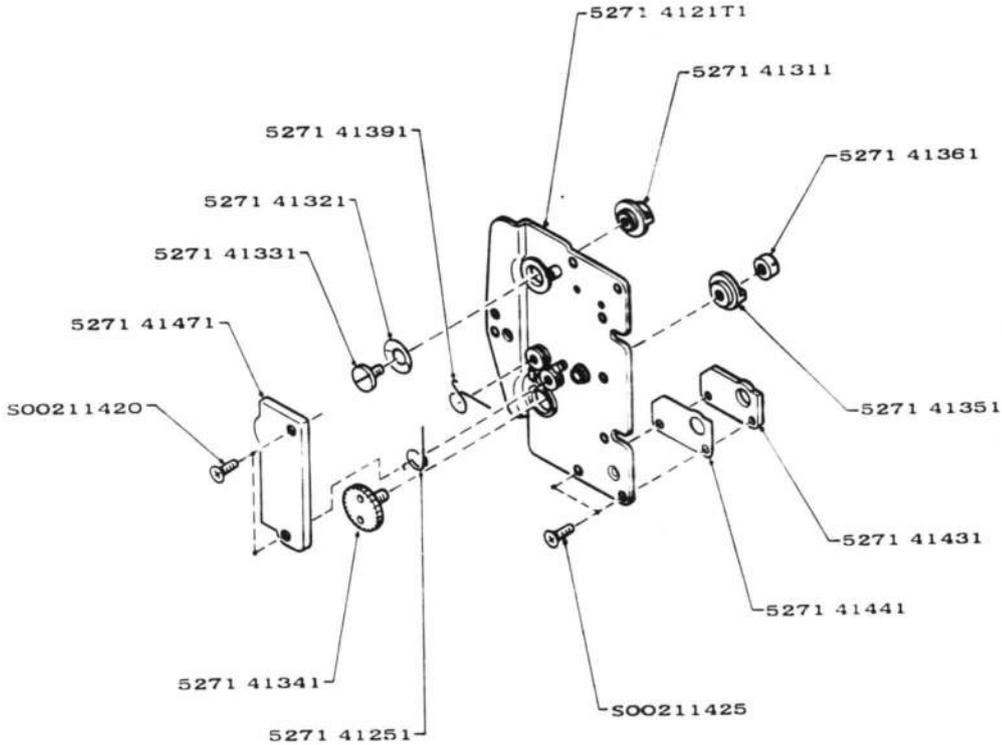
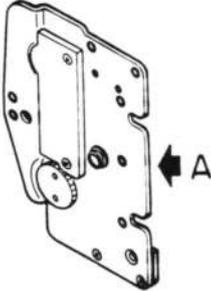


DETAIL "A"



PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5271 4121T1	(SLS4121T1)	1	Left panel	左基板
5271 41251	(SLS41251)	1	Spring	SP歯車バネ
5271 41311	(SLS41311)	1	Spool holder	SP受け
5271 41321	(SLS41321)	1	Friction spring	SP受け摩擦バネ
5271 41331	(SLS41331)	1	Screw	SP受け止ネジ
5271 41341	(SLS41341)	1	Film spool gear	SP歯車
5271 41351	(SLS41351)	1	Film take-up spool	SP歯車爪
5271 41361	(SLS41361)	1	Nut	SP歯車ナット
5271 41391	(SLS41391)	1	Spring	SP歯車サブギチバネ
5271 41431	(SLS41431)	1	Guide	Fサイド左下
5271 41441	(SLS41441)	1	Spacer	Fサイド左下座金
5271 41471	(SLS41471)	1	Cover	左基板カバー
S00211420	(PD1.4×2)	2	Screw	左基板カバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	Fガイド左下止ネジ

Remarks

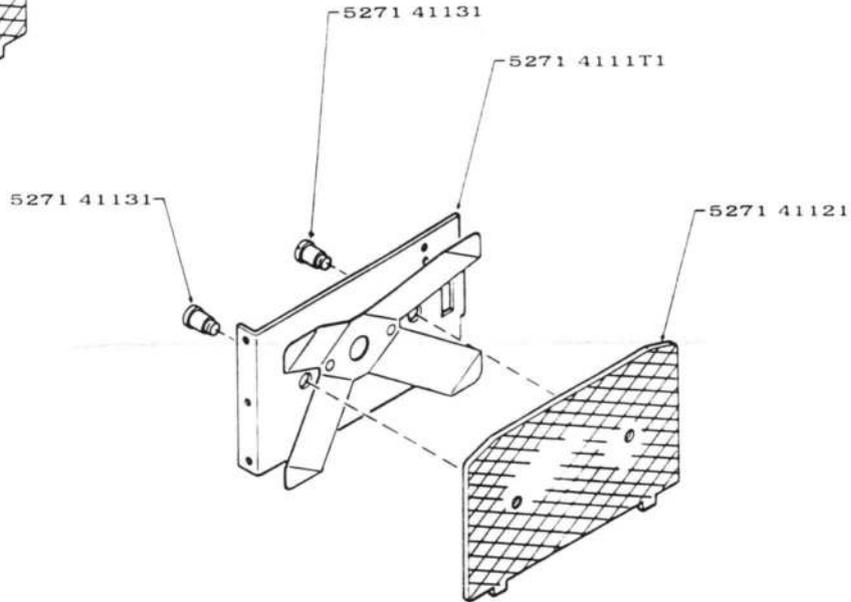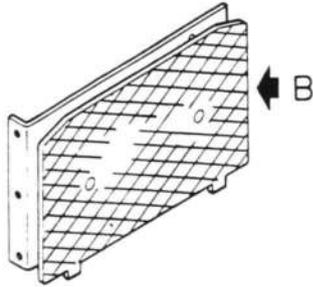

DETAIL "B"

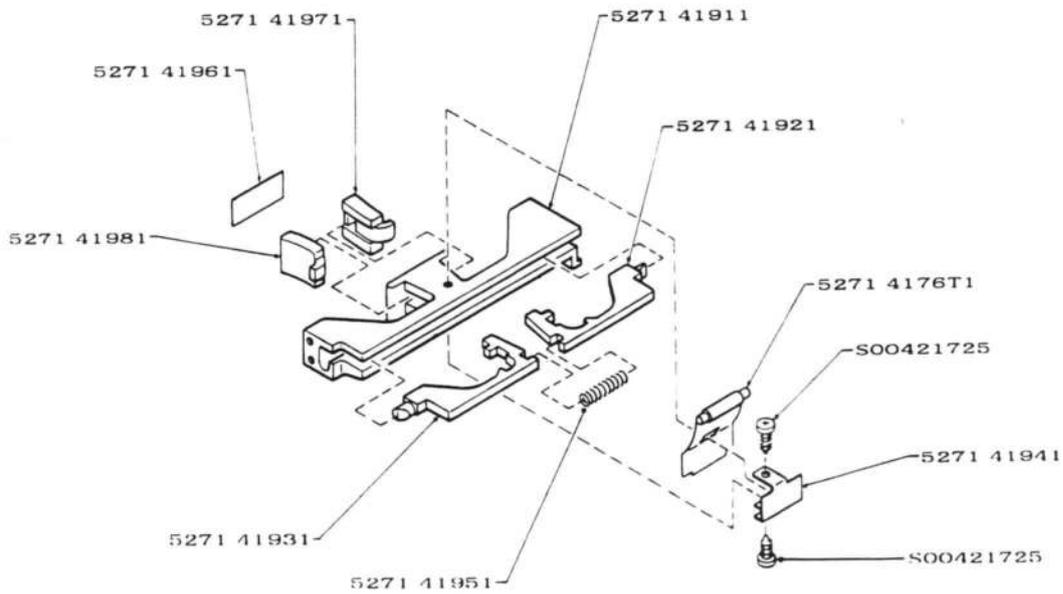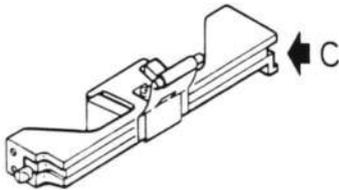

DETAIL "C"

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5271 4111T1	(SLS4111T1)	1	Base plate	H前基板
5271 41121	(SLS41121)	1	Pressure plate	圧板(120用)
5271 41131	(SLS41131)	2	Shoulder screw	圧板軸


5271 4176T1	(SLS4176T1)	1	T-spring	SPバネ
5271 41911	(SLS41911)	1	Release latch base	基板支え
5271 41921	(SLS41921)	1	Locking bracket	中枠ロック軸左
5271 41931	(SLS41931)	1	Locking bracket	中枠ロック軸右
5271 41941	(SLS41941)	1	Bracket	中枠ロック軸支え
5271 41951	(SLS41951)	1	Spring	ロック軸バネ
5271 41961	(SLS41961)	1	Index plate for 120	プレート(120用)
5271 41971	(SLS41971)	1	Release latch	中枠ツマミ左
5271 41981	(SLS41981)	1	Release latch	中枠ツマミ右
S00421725	(TB1.7×2.5Cr)	2	Screw	SPバネ止ネジ

Remarks

M645_{1000S}

Exclusive use for 220 Roll Film Insert

1	25
---	----

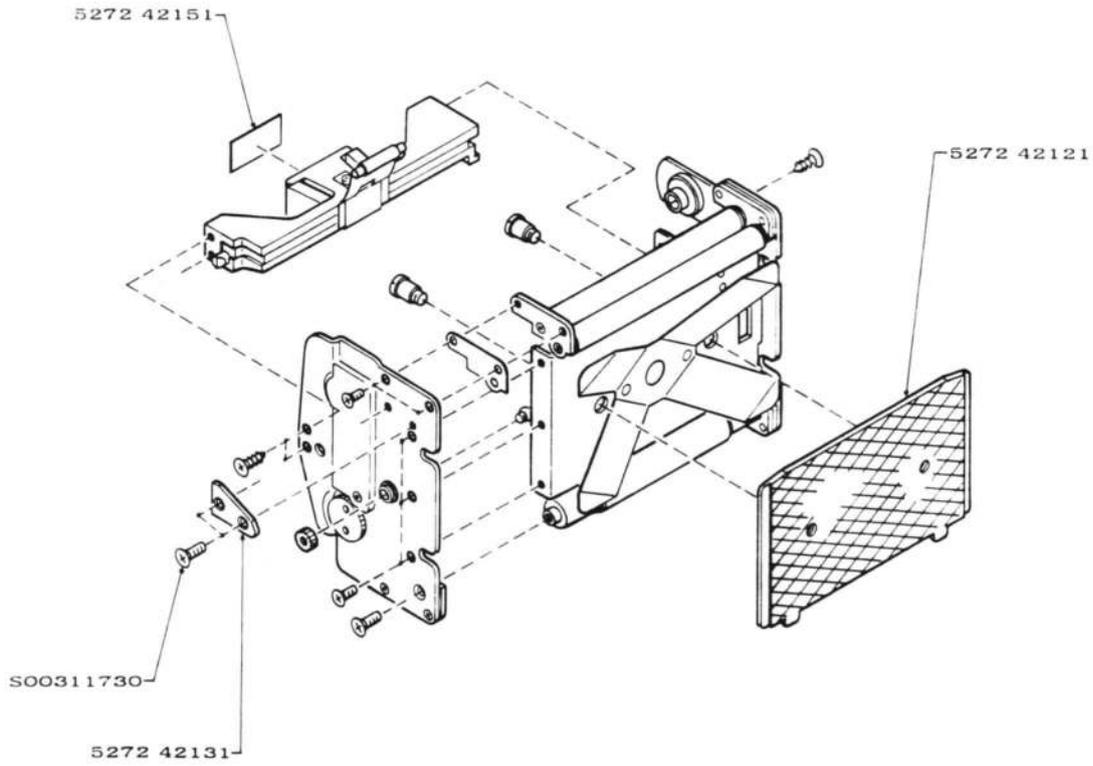

PARTS LIST

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5272 42121	(SLS42121)	1	Pressure plate	圧板(220用)
5272 42131	(SLS42131)	1	Guide	220用フィルムカム
5272 42151	(SLS42151)	1	Index plate for 220	プレート(220用)
S00311730	(3PD1.7×3)	2	Screw	フィルムカム止ネジ

Remarks


M645

Camera Body

Body Ass' y	1.....	26
Body Ass' y	2.....	27
Body Ass' y	3.....	28
Body Ass' y	4.....	29
Body Ass' y	5.....	30
Body Ass' y	6.....	31
Body Ass' y	7.....	32
Body Ass' y	8.....	33
Body Ass' y	9.....	34
Body Ass' y	10.....	35
Body Ass' y	11.....	36
Body Ass' y	12.....	37
Body Ass' y	13.....	38
5200 16201 Side Panel R Ass' y	39

M645

Body Ass'y 1

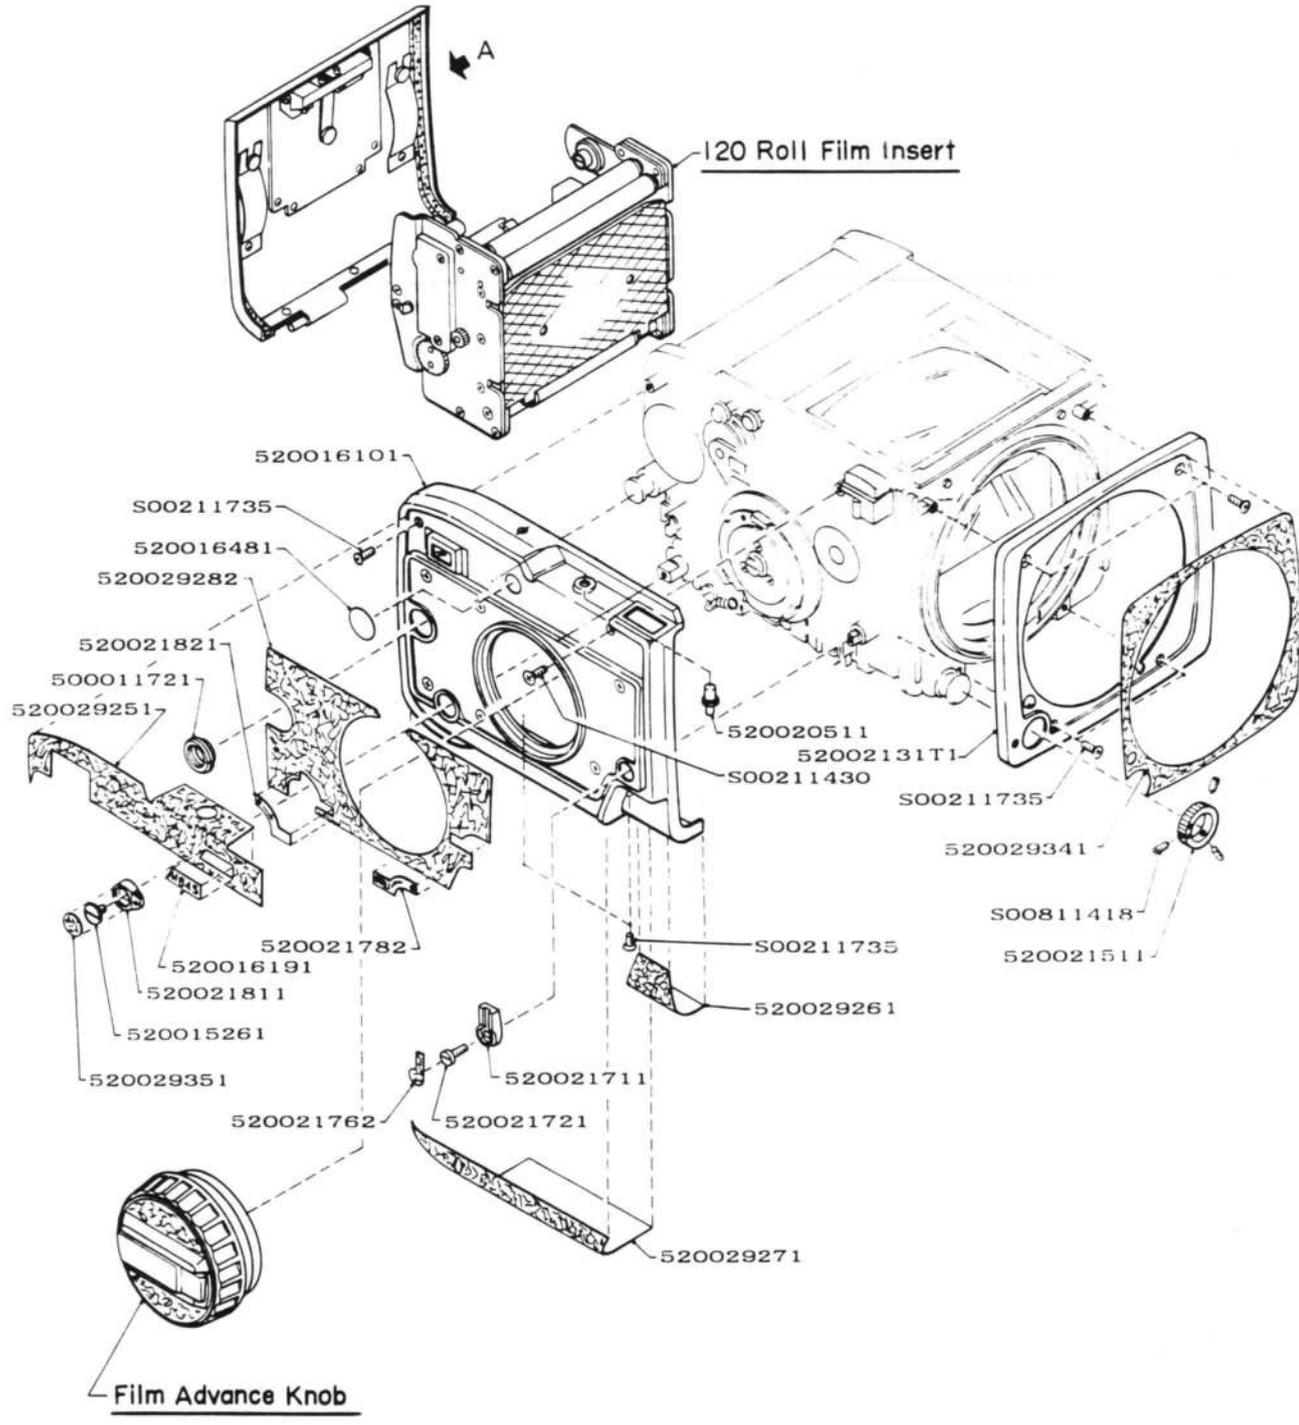

M645

PARTS LIST

1	26
---	----

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 15261	(SLS15261)	1	Screw	D X カム 止ネジ
5200 16101	(SLS16101)	1	Side panel L	左側板
5200 16191	(SLS16191)	1	Name plate	M 6 4 5 マーク
5200 16481	(SLS16481)	1	Disk	左側板盲板
5200 20511	(SLS20511)	1	BC Button	B C ボタン
5200 2131T1	(SLS2131T1)	1	Front panel	前カバー
5200 21511	(SLS21511)	1	S Lock ring	S ロックつまみ
5200 21711	(SLS21711)	1	Mirror-up lever	M U つまみ
5200 21721	(SLS21721)	1	Screw	M U つまみ 止ネジ
5200 21762	(SLS21762)	1	Leatherette C	M U つまみ 革
5200 21782	(SLS21782)	1	Indicator plate	M U 表示板
5200 21811	(SLS21811)	1	M exposure lever	D X つまみ
5200 21821	(SLS21821)	1	Indicator plate	D X 表示板
5200 29261	(SLS29261)	1	Leatherette D	左側板革(下前)
5200 29271	(SLS29271)	1	Leatherette E	左側板革(下後)
5200 29282	(SLS29282)	1	Leatherette F	左側板飾革
5200 29251	(SLS29251)	1	Leatherette	左側板革(上)
5200 29341	(SLS29341)	1	Leatherette	前カバー革
5200 29351	(SLS29351)	1	Leatherette G	D X つまみ 革
5000 11721	(RS1172)	1	Nut	吊金具止ネジ
S00811418	(A1.4×1.8)	3	Screw	ロックつまみ止ネジ
S00211430	(PD1.4×3)	1	Screw	左側板止ネジ
S00211735	(PD1.7×3.5)	7	Screw	止ネジ

- ※ Film Advance Knob.....Page 40
- ※ 120 Roll Film Insert.....Page 22 Common use M645 1000S
- ※ DETAIL A Back Cover Ass'y.....Page 14 Common use M645 1000S


Remarks

86

M645

Body Ass'y 2

1 27

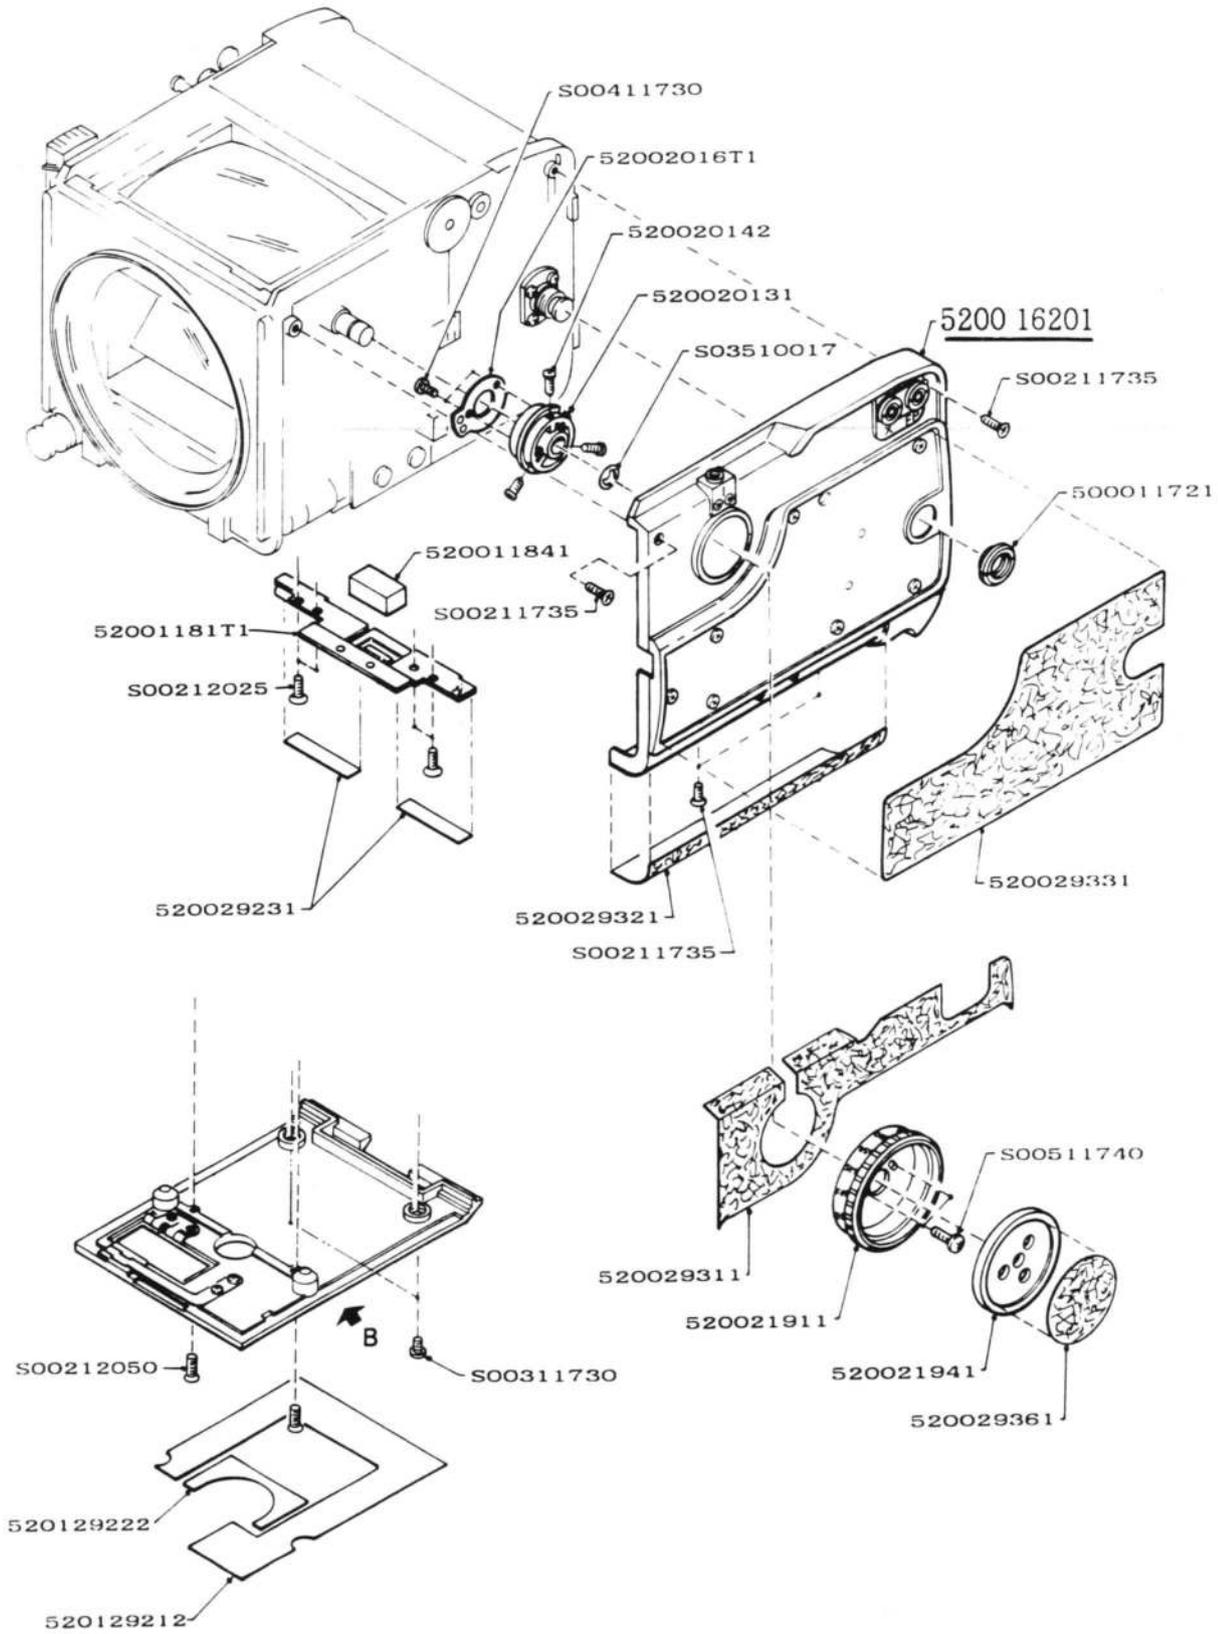


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 1181T1	(SLS1181T1)	1	Hinge plate	蝶番
5200 11841	(SLS11841)	1	Cushion	蝶番止金クッション
5200 16201	(SLS16201)	1	Side panel R	右側板 Ass'y
5200 20131	(SLS20131)	1	Shutter dial hub	Tダイヤルハブ
5200 20142	(SLS20142)	3	Screw	ダイヤルハブ止ネジ
5200 2016T1	(SLS2016T1)	1	Brush disk	Tブラシ台板
5200 21911	(SLS21911)	1	Shutter speed dial	Tダイヤル
5200 21941	(SLS21941)	1	Disk	Tダイヤルプレート
5200 29231	(SLS29231)	2	Leatherette	ボディ蝶番革
5200 29311	(SLS29311)	1	Leatherette	右側板革(上)
5200 29321	(SLS29321)	1	Leatherette	右側板革(下)
5200 29331	(SLS29331)	1	Leatherette	右側板飾り革
5200 29361	(SLS29361)	1	Leatherette	Tダイヤル革
5201 29212	(SLT29212)	1	Leatherette	下部カバー革(大)
5201 29222	(SLT29222)	1	Leatherette	下部カバー革(小)
5000 11721	(RS1172)	1	Nut	吊金具台ナット
S00211735	(PD1.7×3.5)	4	Screw	左側板止ネジ
S00212025	(PD2×2.5)	4	Screw	蝶番止ネジ
S00212050	(PD2×5)	2	Screw	下部カバー止ネジ前
S00311730	(3PD1.7×3)	2	Screw	下部カバー止ネジ後
S00411730	(TB1.7×3)	2	Screw	Tブラシ台板止ネジ
S00511740	(3TB1.7×4)	2	Screw	Tダイヤル止ネジ
S03510017	(E-17)	1	E-ring	Tダイヤル止リング

※ DETAIL B Bottom Cover Ass'y.....Page 15 Common use M645 1000S
 ※ 5200 16201 Side Panel R Ass'y.....Page 39

Remarks

M645

Body Ass'y 3

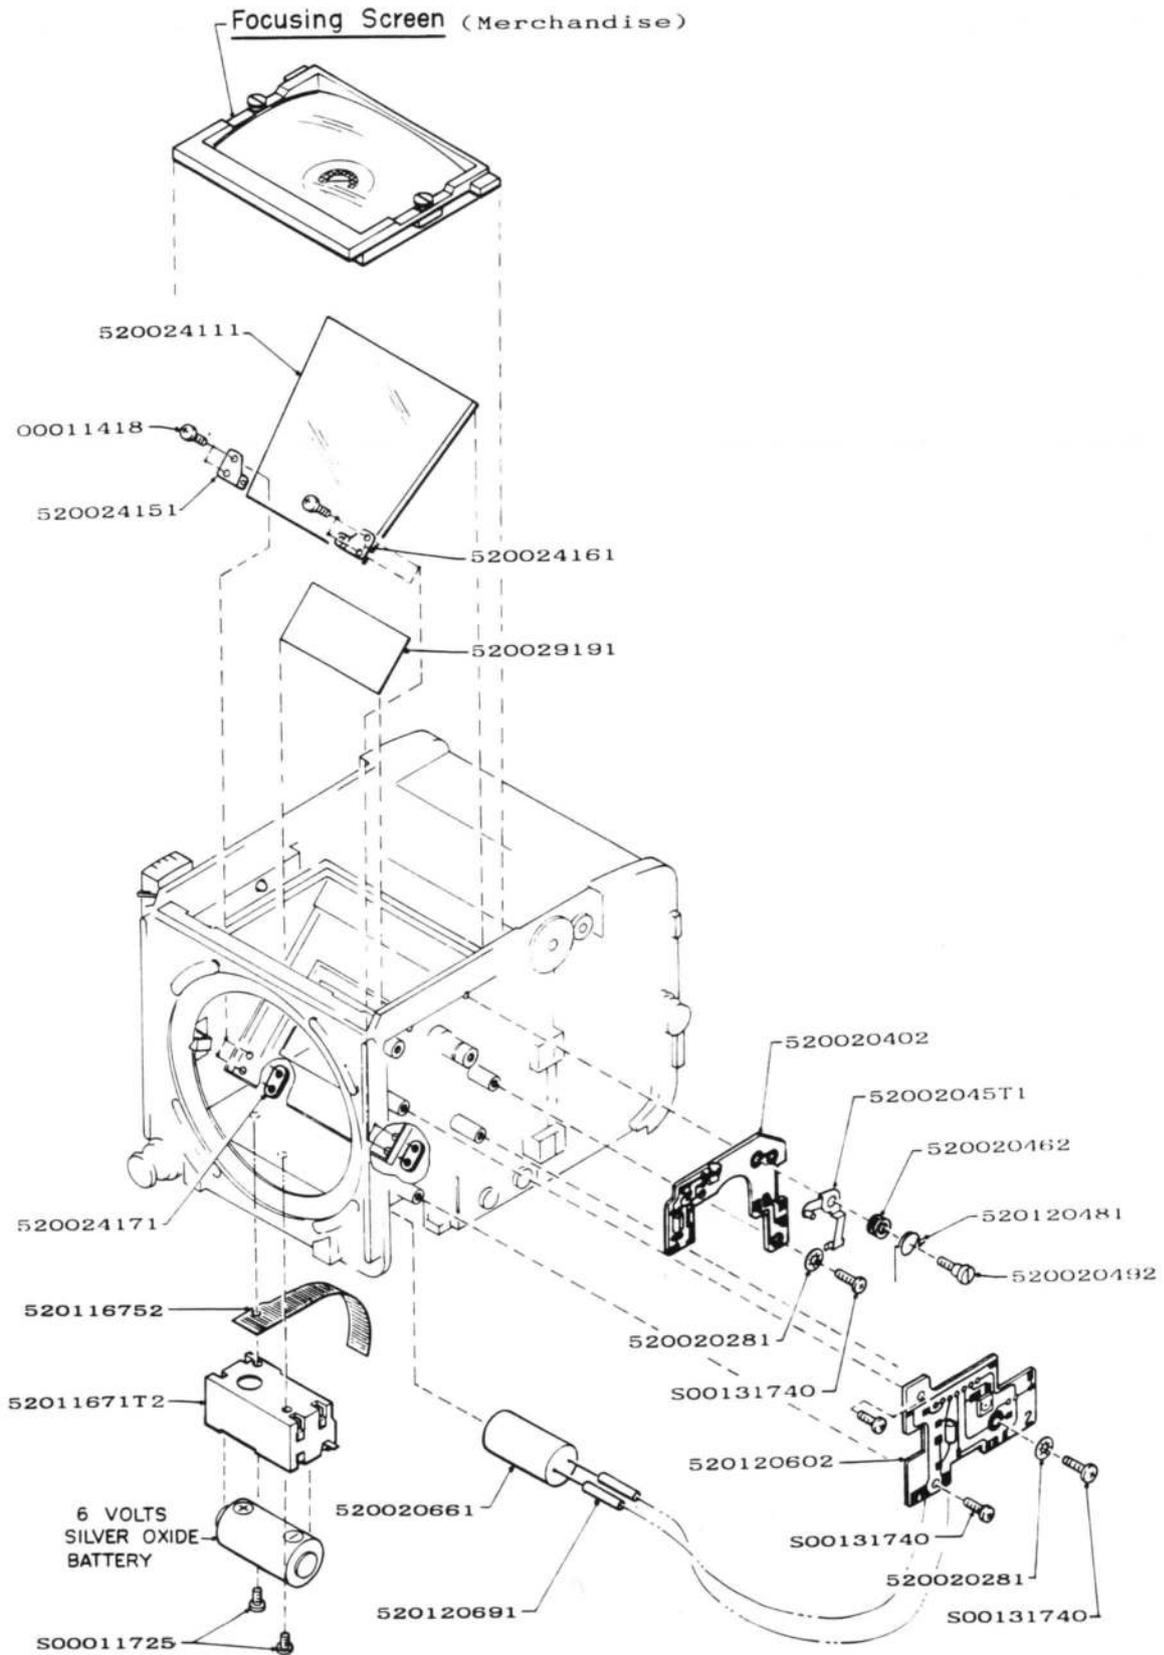


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 1671T2	(SLT1671T2)	1	Battery chamber Ass'y	電池ケースAss'y
5201 16752	(SLT16752)	1	Ribbon	電池リボン
5201 20481	(SLT20481)	1	Spring	切替スイッチバネ
5201 20602	(SLT20602)	1	Shutter PC plate	T回路配線板
5201 20691	(SLT20691)	2	Vinyl tube	チューブ
5200 20281	(SLS20281)	2	Fastener	ネジアース座金
5200 20402	(SLS20402)	1	Battery check PC plate	BC基板
5200 2045T1	(SLS2045T1)	1	Switch lever	切替スイッチレバー
5200 20462	(SLS20462)	1	Hub	スイッチレバー軸
5200 20492	(SLS20492)	1	Shoulder screw	SWレバー止ネジ
5200 20661	(SLS20661)	1	MC condenser	MCコンデンサー
5200 24111	(SLS24111)	1	Mirror	ミラー
5200 24151	(SLS24151)	1	Leaf spring L	ミラー押え(左)
5200 24161	(SLS24161)	1	Leaf spring R	ミラー押え(右)
5200 24171	(SLS24171)	2	Rataining plate	ミラー座金
5200 29191	(SLS29191)	1	Paper	ミラー裏紙
00011418	(PB1.4×1.8)	4	Screw	ミラー押え止ネジ
S00011725	(PB1.7×2.5)	2	Screw	電池ケース止ネジ
S00131740	(3PB1.7×4Ni)	4	Screw	止ネジ

Remarks

M645

Body Ass'y 4

1 29

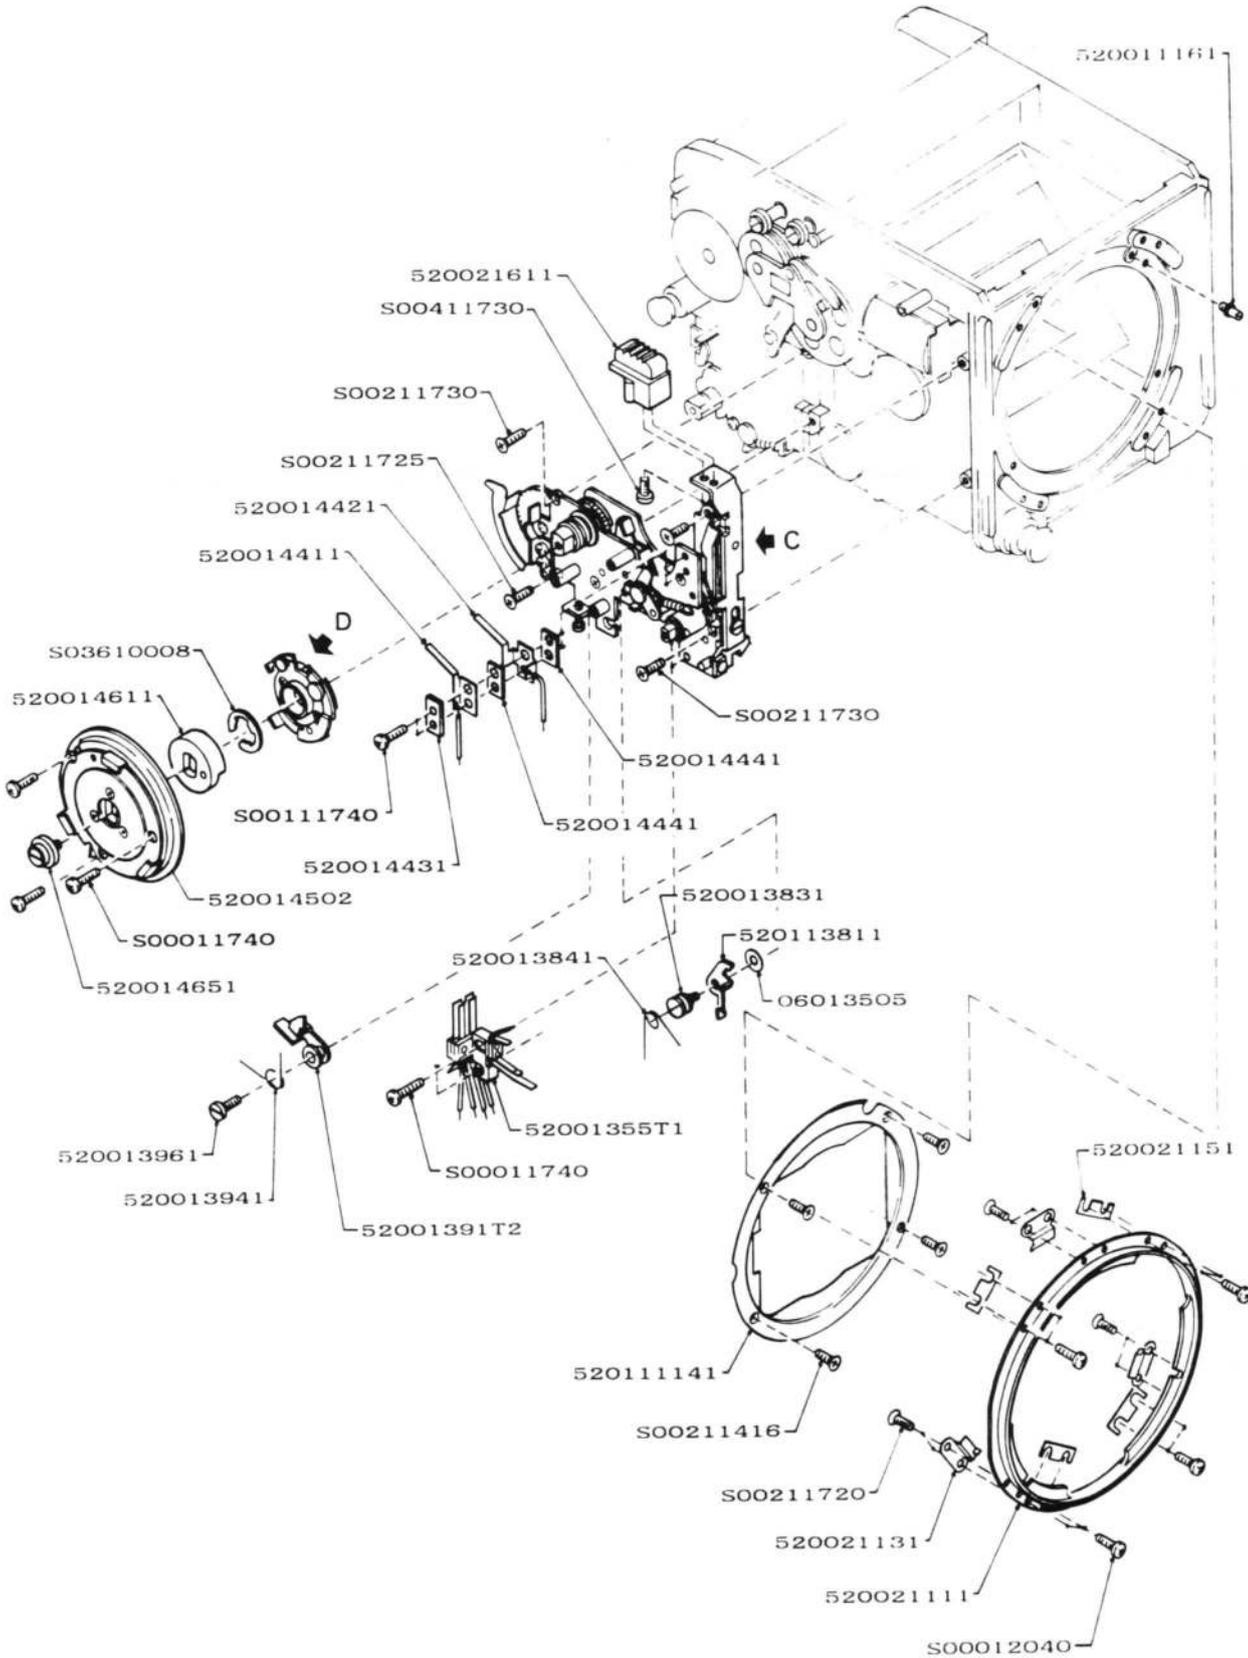


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11161	(SLS11161)	1	Stopper pin	バヨネ回転止ピン
5200 1355T1	(SLS1355T1)	1	Main switch	トリプルスイッチ
5200 13831	(SLS13831)	1	Shoulder screw	スイッチ掛金軸
5200 13841	(SLS13841)	1	Spring	スイッチ掛金バネ
5200 1391T2	(SLS1391T2)	1	Clutch stopper	ストッパー
5200 13941	(SLS13941)	1	Spring	ストッパーバネ
5200 13961	(SLS13961)	1	Screw	ストッパー止ネジ
5200 14411	(SLS14411)	1	FP contact U	上FP接片
5200 14421	(SLS14421)	1	FP contact L	下FP接片
5200 14431	(SLS14431)	1	Insulation plate	FP接片
5200 14441	(SLS14441)	2	Insulation washer	FP接片絶縁板
5200 14502	(SLS14502)	1	Winding knob disk Ass'y	巻上上基板
5200 14611	(SLS14611)	1	Winding cam	MS巻上カム
5200 14651	(SLS14651)	1	Shoulder screw	ノブ受板止め軸
5200 21111	(SLS21111)	1	Bayonet ring	バヨネットリング
5200 21131	(SLS21131)	3	Leaf spring	バヨネバネ
5200 21151	(SLS21151)	0~4	Washer (t=0.03,0.05,0.1)	バヨネワッシャ
5200 21611	(SLS21611)	1	Shutter release button	リリースボタン
5201 11141	(SLT11141)	1	Shading frame	バヨネ下カバー
5201 13811	(SLT13811)	1	Hook	スイッチ掛金
S00011740	(PB1.7×4)	5	Screw	止ネジ
S00012040	(PB2×4)	8	Screw	バヨネ止ネジ
S00111740	(3PB1.7×4)	2	Screw	FP接片台止ネジ
S00211416	(PD1.4×1.6)	4	Screw	カバー止ネジ
S00211720	(PD1.7×2)	6	Screw	バヨネバネ止ネジ
S00211725	(PD1.7×2.5)	1	Screw	巻上中基板止ネジ
S00211730	(PD1.7×3)	3	Screw	巻上下基板止ネジ
S00411730	(TB1.7×3)	2	Screw	Rボタン止ネジ
06013505	(5W2×0.5)	1	Washer	スイッチ掛金座金
S03610008	(C-8)	1	C-ring	MSI歯車止リング

※ DETAIL C Winding Base Ass'y.....Page 16 Common use M645 1000S
 ※ DETAIL D MS Clutch Disk Ass'y.....Page 18 Common use M645 1000S

Remarks

M645

Body Ass'y 5

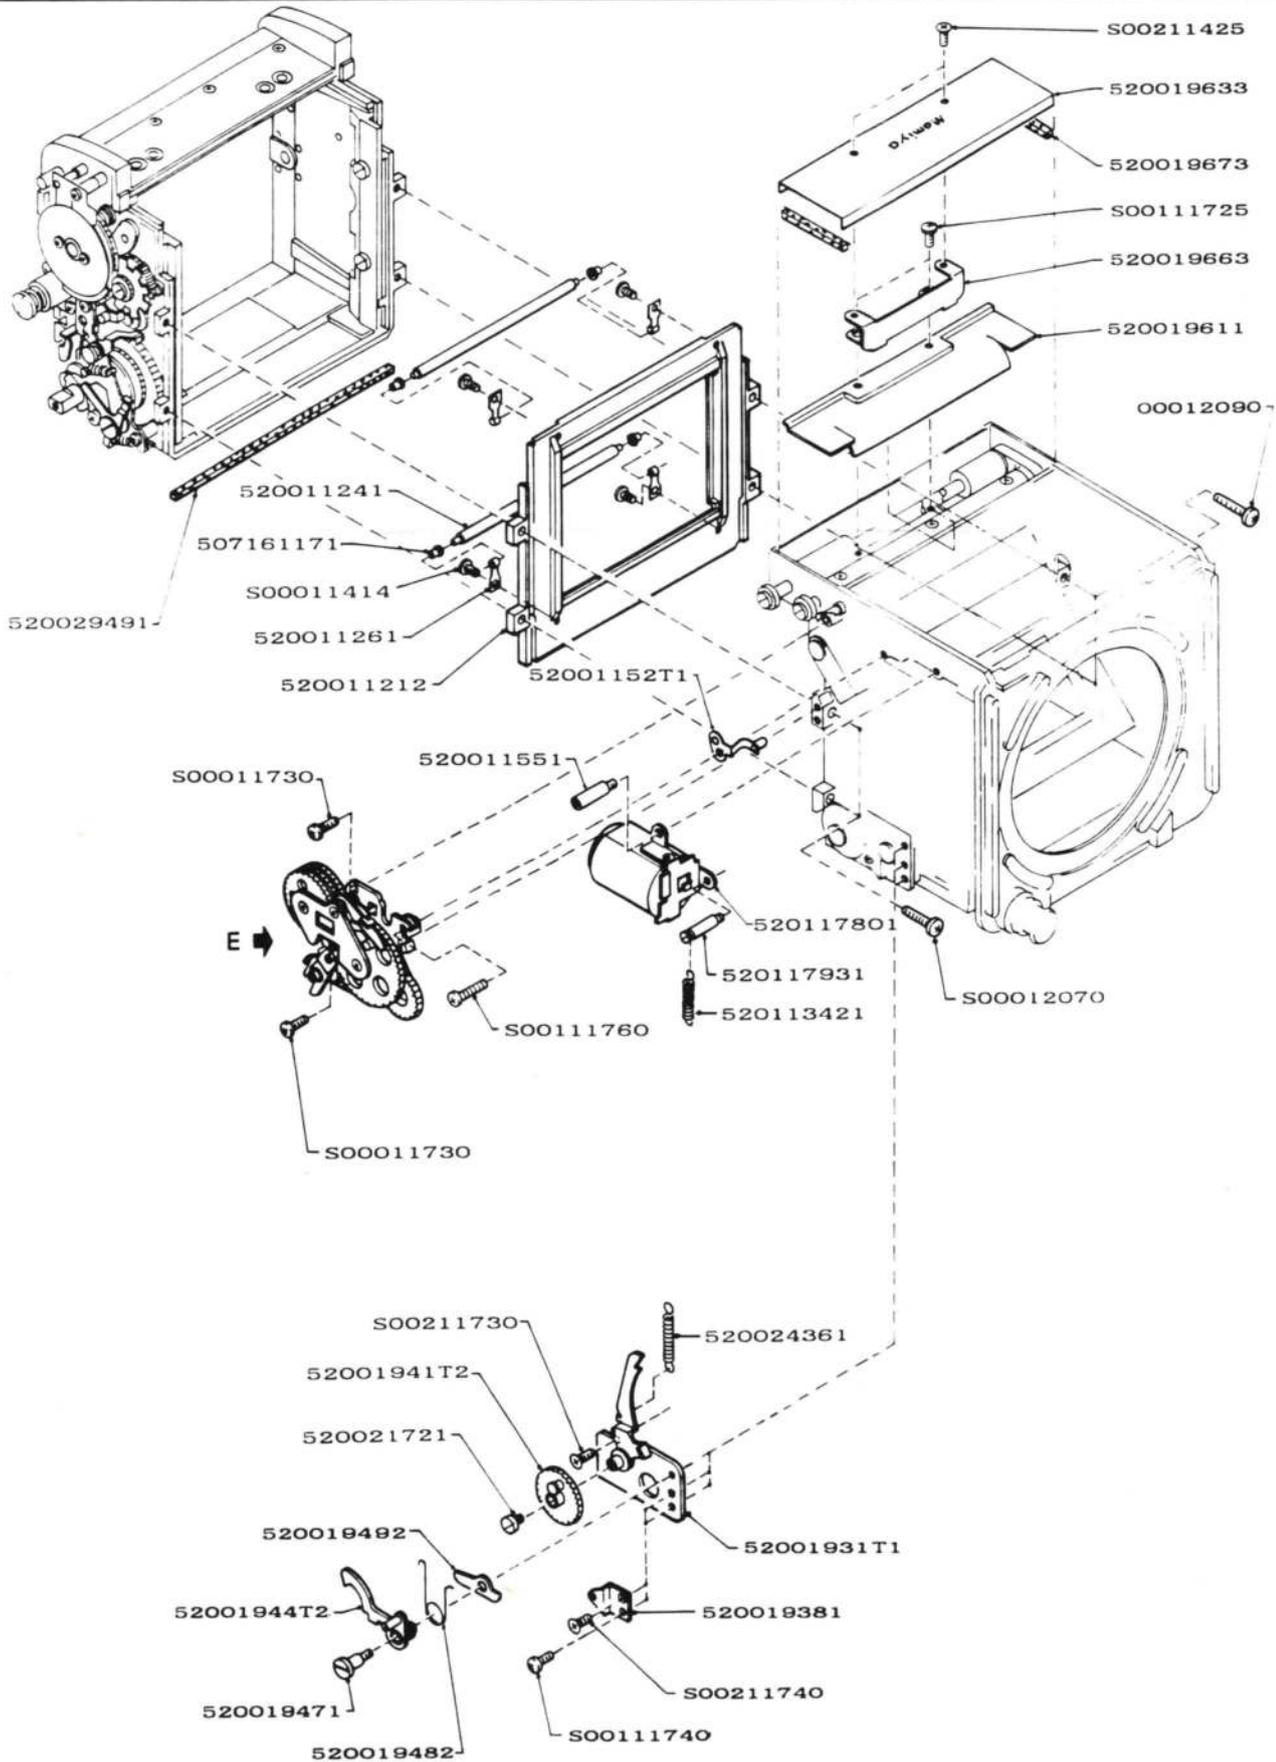

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11212	(SLS11212)	1	Guide reil frame	レール板
5200 11241	(SLS11241)	2	Film roller	F ローラー
5200 11261	(SLS11261)	4	Leaf spring	F ローラーバネ
5200 1152T1	(SLS1152T1)	1	Leaf spring	クリックバネ
5200 11551	(SLS11551)	1	Shaft	左側板受柱
5200 1931T1	(SLS1931T1)	1	Base plate	スプリング軸左基板
5200 19381	(SLS19381)	1	Bracket	スプリング軸受板
5200 1941T2	(SLS1941T2)	1	Gear	ミラーケリ歯車
5200 1944T2	(SLS1944T2)	1	Braking lever	後幕ブレーキレバー
5200 19471	(SLS19471)	1	Shoulder screw	ブレーキレバー軸
5200 19482	(SLS19482)	1	Spring	ブレーキレバーバネ
5200 19492	(SLS19492)	1	Lever	ミラー下げレバー
5200 19611	(SLS19611)	1	Cover L	幕軸下カバー
5200 19633	(SLS19633)	1	Cover U	幕軸室カバー
5200 19663	(SLS19663)	1	Cover holder	幕軸室カバー受
5200 19673	(SLS19673)	2	Sealing strip	幕軸室モルト
5200 21721	(SLS21721)	1	Screw	歯車止ネジ
5200 24361	(SLS24361)	1	Spring	ミラー下げバネ
5200 29491	(SLS29491)	1	Sealing strip	下カバーモルト
5201 13421	(SLT13421)	1	Spring	リリース板バネ
5201 17801	(SLT17801)	1	Moving coil Ass'y	MU Ass'y
5201 17931	(SLT17931)	1	Shaft	MU受ネジ
5071 61171	(ARSH6117)	4	Collar	F ローラー受
S00011414	(PB1.4×1.4)	4	Screw	F ローラーバネ止ネジ
S00011730	(PB1.7×3)	2	Screw	MS巻上基板止ネジ
S00012070	(PB2×7)	2	Screw	ボディ結合ネジ(左)
00012090	(PB2×9)	2	Screw	ボディ結合ネジ(右)
S00111725	(3PB1.7×2.5)	2	Screw	幕軸下カバー止ネジ
S00111740	(3PB1.7×4)	1	Screw	軸受板止ネジ
S00111760	(3PB1.7×6)	1	Screw	解除レバー止ネジ
S00211425	(PD1.4×2.5)	2	Screw	幕軸室止ネジ
S00211730	(PD1.7×3)	1	Screw	左基板止ネジ
S00211740	(PD1.7×4)	1	Screw	軸受板止ネジ


※ DETAIL E Charging Base Ass'y.....Page 17 Common use M645 1000S

Remarks

M645

Body Ass'y 6

1 31

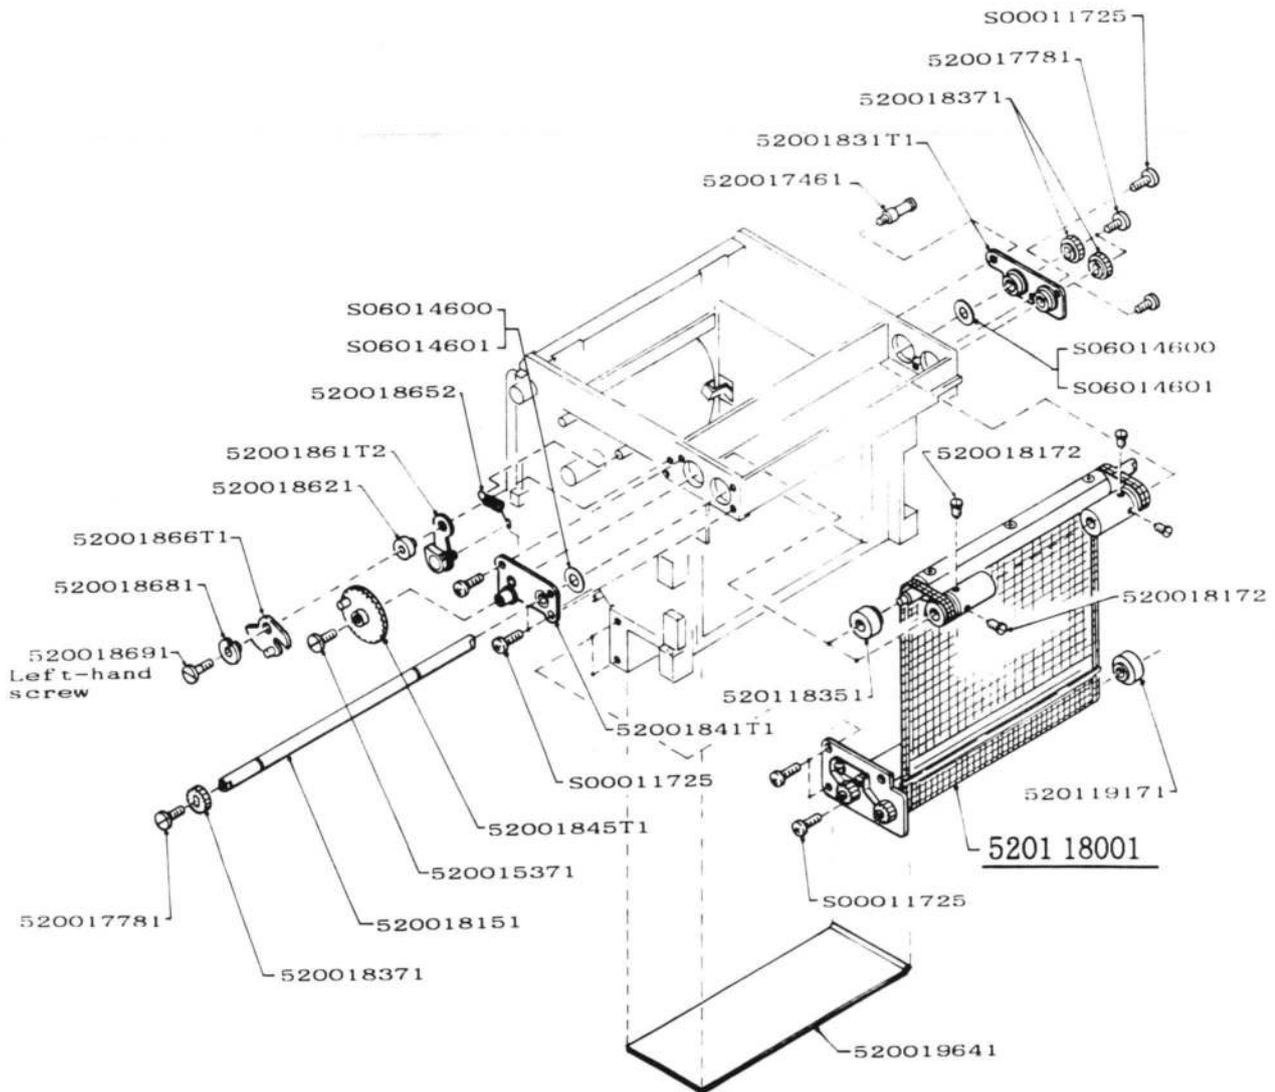

M645

PARTS LIST

1	31
---	----

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201 18001	(SLT18001)	1	Shutter curtain Ass'y	シャッター-Ass'y
5201 18351	(SLT18351)	1	Pulley A	後幕軸ローラー
5201 19171	(SLT19171)	1	Pulley B	S軸ローラー
5200 15371	(SLS15371)	1	Screw	X歯車止ネジ
5200 17461	(SLS17461)	1	Anchor	S I歯車掛金バネ掛
5200 17781	(SLS17781)	3	Screw	幕軸歯車止ネジ
5200 18151	(SLS18151)	1	Shaft	先幕軸
5200 18172	(SLS18172)	4	Set screw	先幕筒止ネジ
5200 1831T1	(SLS1831T1)	1	Bushing plate	幕軸基板(左)
5200 18371	(SLS18371)	3	Gear	幕軸歯車
5200 1841T1	(SLS1841T1)	1	Bushing plate	幕軸基板(右)
5200 1845T1	(SLS1845T1)	1	X synchro gear	X歯車
5200 1861T2	(SLS1861T2)	1	Braking lever	先幕ブレーキ板(下)
5200 18621	(SLS18621)	1	Hub	先幕ブレーキ板軸
5200 18652	(SLS18652)	1	Spring	ブレーキ戻しバネ
5200 1866T1	(SLS1866T1)	1	Cam	先幕ブレーキ板(上)
5200 18681	(SLS18681)	1	Collar	先幕ブレーキカラー
5200 18691	(SLS18691)	1	Shoulder screw	ブレーキ板止ネジ
5200 19641	(SLS19641)	1	Cover	スプリング軸カバー
S00011725	(PB1.7×2.5)	8	Screw	止ネジ
S06014600	(6W2.5×0.05)	0~2	Washer	先幕軸調整ワッシャ
S06014601	(6W2.5×0.1)	0~2	Washer	先幕軸調整ワッシャ

※ 5201 18001 Shutter Curtain Ass'y.....Page 20 Common use M645 1000S


Remarks

86

M645

Body Ass'y 7

1	32
---	----

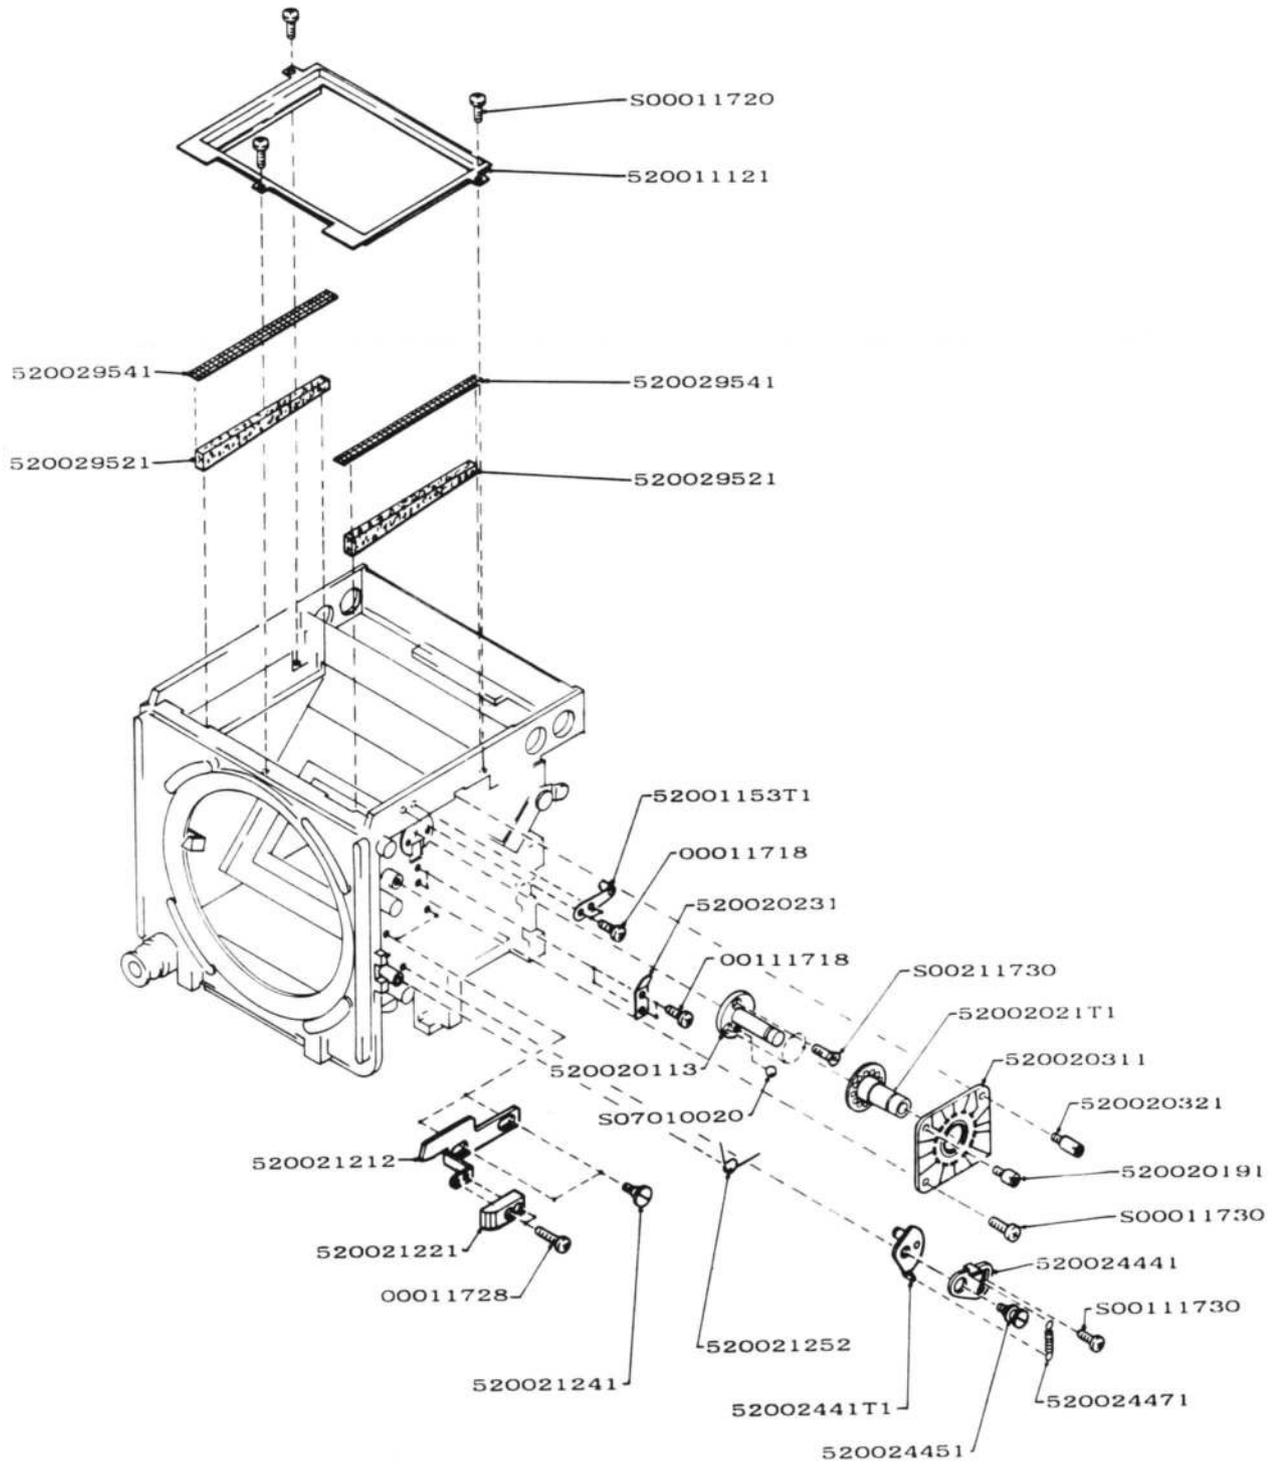


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11121	(SLS11121)	1	Frame	ボディ上カバー
5200 1153T1	(SLS1153T1)	1	Leaf spring R	枠クリックバネ(右)
5200 20113	(SLS20113)	1	Shaft	Tダイヤル軸
5200 20191	(SLS20191)	1	Shaft	Tプリント止柱
5200 2021T1	(SLS2021T1)	1	Dial click	Tクリック軸
5200 20231	(SLS20231)	1	Leaf spring	Tクリックバネ
5200 20311	(SLS20311)	1	Time PC board	Tプリント板
5200 20321	(SLS20321)	1	Shaft	Tプリント止柱
5200 21212	(SLS21212)	1	Lens release lever	L戻し止
5200 21221	(SLS21221)	1	Button	L戻し止ボタン
5200 21241	(SLS21241)	2	Guide screw	L戻し止ガイド
5200 21252	(SLS21252)	1	Spring	L戻し止バネ
5200 2441T1	(SLS2441T1)	1	Mirror stopper	ミラー角度板
5200 24441	(SLS24441)	1	Adjusting plate	ミラー角度調整板
5200 24451	(SLS24451)	1	Shoulder screw	ミラー角度調整板軸
5200 24471	(SLS24471)	1	Spring	ミラー角度調整板バネ
5200 29521	(SLS29521)	2	Sealing strip	ミラー側面モルト
5200 29541	(SLS29541)	2	Light baffle	ミラー側面遮光幕
00011718	(PB1.7×1.8)	2	Screw	クリックバネ止ネジ
S00011720	(PB1.7×2)	3	Screw	上カバー止ネジ
00011728	(PB1.7×2.8)	2	Screw	ボタン止ネジ
S00011730	(PB1.7×3)	1	Screw	Tプリント止ネジ
S00211730	(PD1.7×3)	3	Screw	Tダイヤル軸止ネジ
00111718	(3PB1.7×1.8)	2	Screw	Tクリックバネ止ネジ
S00111730	(3PB1.7×3)	1	Screw	調整板止ネジ
S07010020	(B020)	1	Steel ball (φ2.0)	クリックボール

Remarks

M645

Body Ass'y 8

1 33

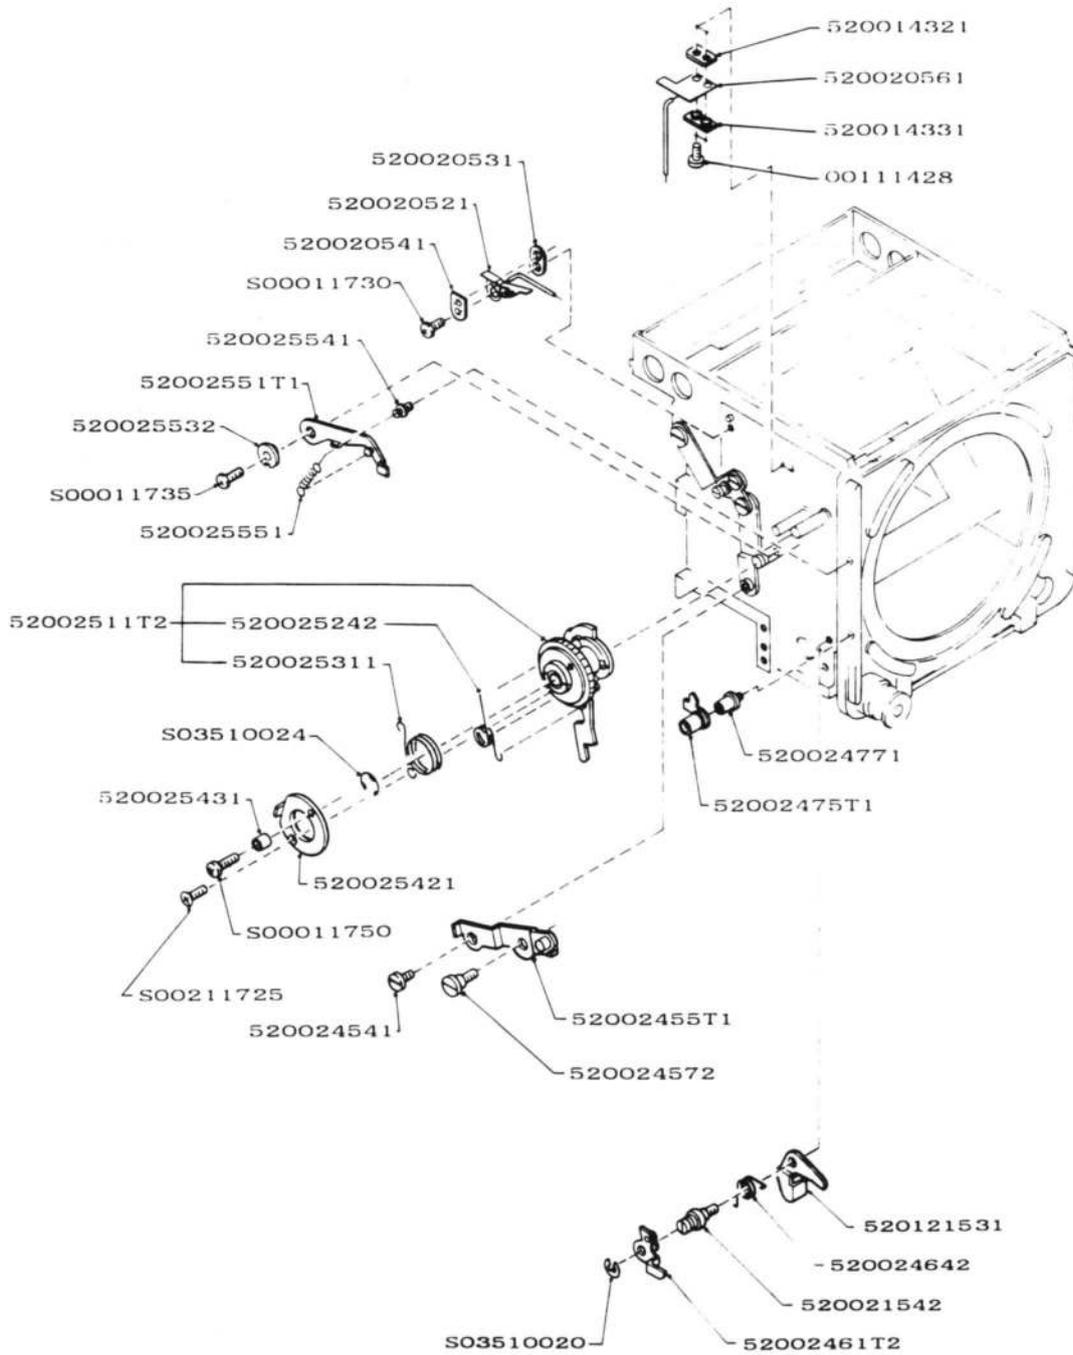


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5201	21531 (SLT21531)	1	C release lever	Cリリースレバー
5200	14321 (SLS14321)	1	Insulation washer	BC極絶縁座
5200	14331 (SLS14331)	1	Insulation plate	BC極絶縁板
5200	20521 (SLS20521)	1	Leaf spring	BCボタンバネ
5200	20531 (SLS20531)	1	Insulation plate	BCボタンバネ絶縁板
5200	20541 (SLS20541)	1	Insulation holder	BCボタンバネ絶縁台
5200	20561 (SLS20561)	1	Contact plate	BC極
5200	21542 (SLS21542)	1	Shoulder screw	Cリリースレバー軸
5200	24541 (SLS24541)	1	Screw	止ネジ
5200	2455T1 (SLS2455T1)	1	Mirror raising lever	ミラーレバー
5200	24572 (SLS24572)	1	Hub	ミラーレバー軸
5200	2461T2 (SLS2461T2)	1	Stop lever	ミラーストップレバー
5200	24642 (SLS24642)	1	Spring	ストップレバーバネ
5200	2475T1 (SLS2475T1)	1	Link lever	第2MUレバー
5200	24771 (SLS24771)	1	Shaft	第2MUレバー軸
5200	2511T2 (SLS2511T2)	1	Mirror raising crank	ミラー歯車板
5200	25242 (SLS25242)	1	Spring	ミラー上爪バネ
5200	25311 (SLS25311)	1	Spring	ミラーバネ
5200	25421 (SLS25421)	1	Disk	M3歯車板
5200	25431 (SLS25431)	1	Collar	FPスイッチピン
5200	2551T1 (SLS2551T1)	1	M release lever	ミラー歯車板掛金
5200	25532 (SLS25532)	1	Collar	ミラー歯車板掛金軸
5200	25541 (SLS25541)	1	Anchor	バネ柱
5200	25551 (SLS25551)	1	Spring	ミラー歯車板掛金バネ
S00011730	(PB1.7×3)	2	Screw	BCボタンバネ止ネジ
S00011735	(PB1.7×3.5)	1	Screw	掛金軸止ネジ
S00011750	(PB1.7×5)	1	Screw	M3歯車板ピン止ネジ
S00211725	(PD1.7×2.5)	1	Screw	M3歯車板止ネジ
00111428	(3PB1.4×2.8)	2	Screw	BC極止ネジ
S03510020	(E-20)	1	E-ring	止リング
S03510024	(E-24)	1	E-ring	M3歯車止リング

Remarks

M645

Body Ass'y 9

1 34

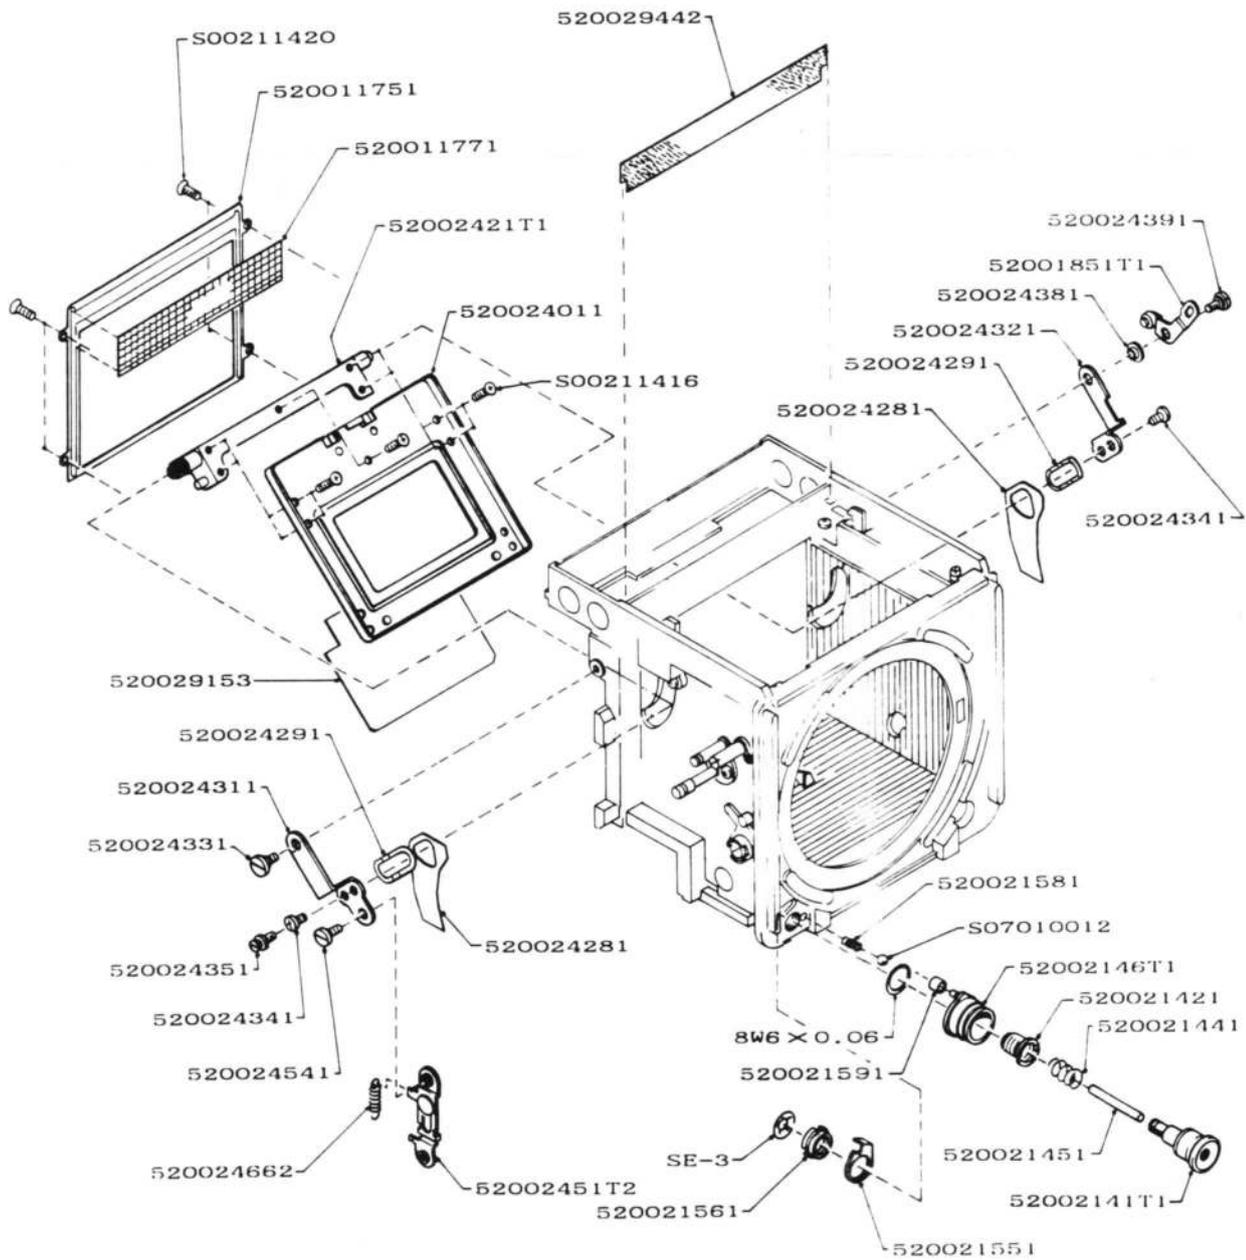

PARTS LIST


Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11751	(SLS11751)	1	Light baffle plate	後カバー
5200 11771	(SLS11771)	1	Light baffle	ミラー遮光幕
5200 1851T1	(SLS1851T1)	1	X Synchro lever	X SWレバー
5200 2141T1	(SLS2141T1)	1	Shutter release button	Sボタン
5200 21421	(SLS21421)	1	Button guide	Sボタンガイド
5200 21441	(SLS21441)	1	Spring	Sボタンバネ
5200 21451	(SLS21451)	1	Shutter release rod	S棒
5200 2146T1	(SLS2146T1)	1	Release lock ring	Sロックリング
5200 21551	(SLS21551)	1	Lock disk	Sロック板
5200 21561	(SLS21561)	1	Hub	Sロック板軸
5200 21581	(SLS21581)	1	Spring	クリックボールバネ
5200 21591	(SLS21591)	1	Collar	ピンカラー
5200 24011	(SLS24011)	1	Mirror holder plate	ミラーホルダー
5200 2421T1	(SLS2421T1)	1	Holder bracket	ミラーピン台
5200 24281	(SLS24281)	2	Light baffle plate	Mボディ遮光板
5200 24291	(SLS24291)	2	Spring washer	遮光板バネ
5200 24311	(SLS24311)	1	Mirror arm L	ミラーアーム(左)
5200 24321	(SLS24321)	1	Mirror arm R	ミラーアーム(右)
5200 24331	(SLS24331)	1	Shoulder screw	ミラーアーム軸
5200 24341	(SLS24341)	3	Screw (Pl.7×3)	ミラーアーム止ネジ
5200 24351	(SLS24351)	1	Screw B	ミラーアーム止ネジ
5200 24381	(SLS24381)	1	Collar	ミラーアーム右カラー
5200 24391	(SLS24391)	1	Shoulder screw	ミラーアーム右軸
5200 2451T2	(SLS2451T2)	1	Coupling arm	ミラー上クランク板
5200 24541	(SLS24541)	1	Screw	クランク板止ネジ
5200 24662	(SLS24662)	1	Spring	クランク板バネ
5200 29153	(SLS29153)	1	RA Leatherette	ミラーホルダー遮光紙
5200 29442	(SLS29442)	1	Light baffle	ボディ上革
S00211416	(PD1.4×1.6)	5	Screw	ミラーピン台止ネジ
S00211420	(PD1.4×2)	4	Screw	後カバー止ネジ
8W6×0.06		1	Washer	Sロック調整ワッシャ
SE-3		1	SE-ring	Sボタン止リング
S07010012	(B012)	1	Steel ball (φ1.2)	クリックボール

Remarks

M645

Body Ass'y 10

1 35

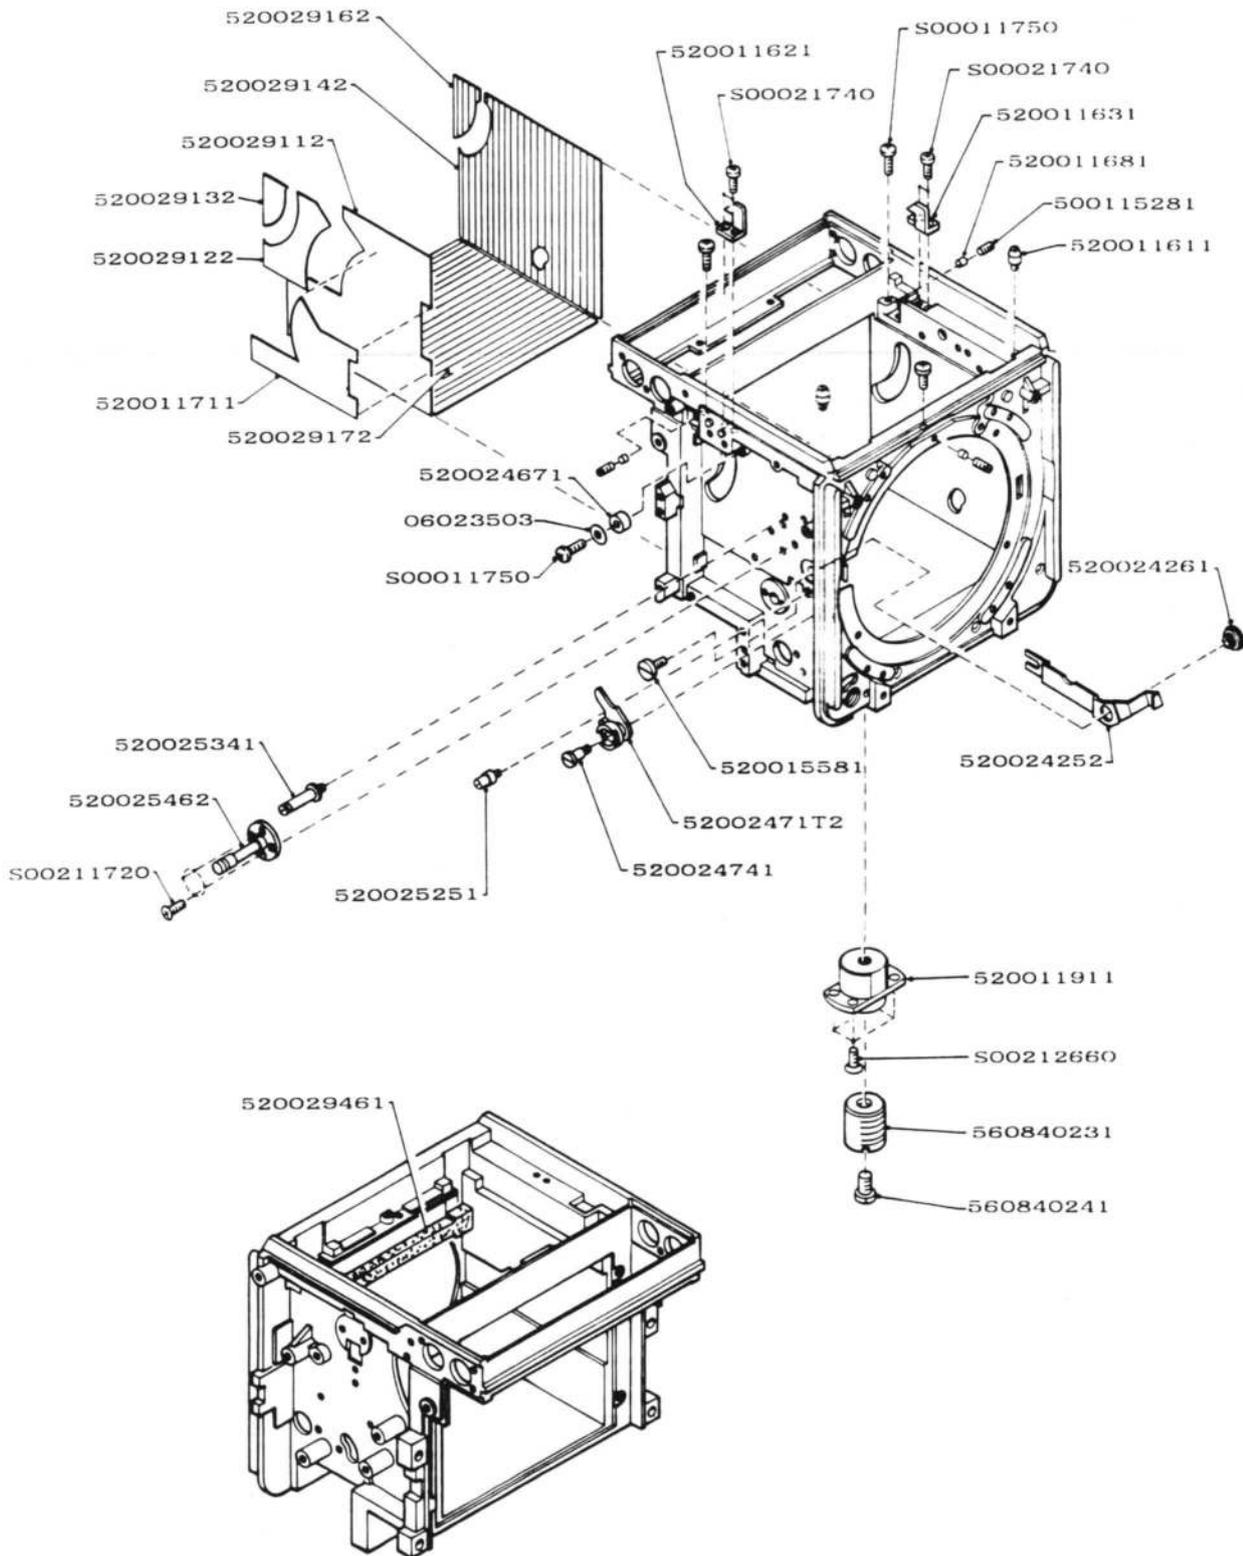

Parts No.	Common Use Parts No.	QTY.	Description	部 品 名 称
5200 11611	(SLS11611)	2	Guide screw	プリズム枠ガイド
5200 11621	(SLS11621)	1	Latch L	プリズム枠掛金(左)
5200 11631	(SLS11631)	1	Latch R	プリズム枠掛金(右)
5200 11681	(SLS11681)	3	Stopper piece	ピント調整ネジ押え
5200 11711	(SLS11711)	1	Plate	左遮光紙台板
5200 11911	(SLS11911)	1	Tripod socket	三脚止
5200 15581	(SLS15581)	1	Screw	レバー軸ネジ
5200 24252	(SLS24252)	1	Aperture coupling lever	絞り込みレバー
5200 24261	(SLS24261)	1	Hub	絞り込みレバー軸
5200 24671	(SLS24671)	1	Rubber cushion	ミラーダンパー
5200 2471T2	(SLS2471T2)	1	Mirror-up arm	MUレバー
5200 24741	(SLS24741)	1	Shaft	MUレバー軸
5200 25251	(SLS25251)	1	Guide screw	ミラー上げ爪ガイド
5200 25341	(SLS25341)	1	Shaft	ミラーバネ柱
5200 25462	(SLS25462)	1	Shaft	M3歯車軸
5200 29112	(SLS29112)	1	RA leatherette	左遮光紙(大)
5200 29122	(SLS29122)	1	RA leatherette	左遮光紙(中)
5200 29132	(SLS29132)	1	RA leatherette	左遮光紙(小)
5200 29142	(SLS29142)	1	RA leatherette	右遮光紙(大)
5200 29162	(SLS29162)	1	RA leatherette	右遮光紙(小)
5200 29172	(SLS29172)	1	RA leatherette	下遮光紙
5200 29461	(SLS29461)	1	Sealing strip	ミラーモルト
5001 15281	(ARS1528)	3	Screw	ピント調整止ネジ
5608 40231	(EFC4023)	1	Tripod socket adapter	三脚ネジ
5608 40241	(EFC4024)	1	Screw	三脚ネジ止め
S00021740	(PB1.7×4Cr)	4	Screw	掛金止ネジ
S00011750	(PB1.7×5)	4	Screw	止ネジ
S00211720	(PD1.7×2)	4	Screw	M3歯車軸止ネジ
S00212660	(PD2.6×6)	4	Screw	三脚止め止ネジ
06023503	(5W2×0.3)	1	Washer	ミラーダンパー押え

Remarks

M645

Body Ass'y 11

1 36

