



YASHICA

FX-D QUARTZ

ASSEMBLING CHART

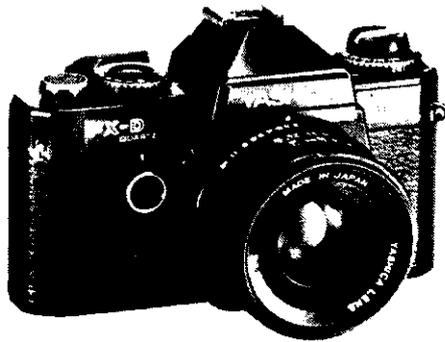


YASHICA CO., LTD.
TOKYO JAPAN

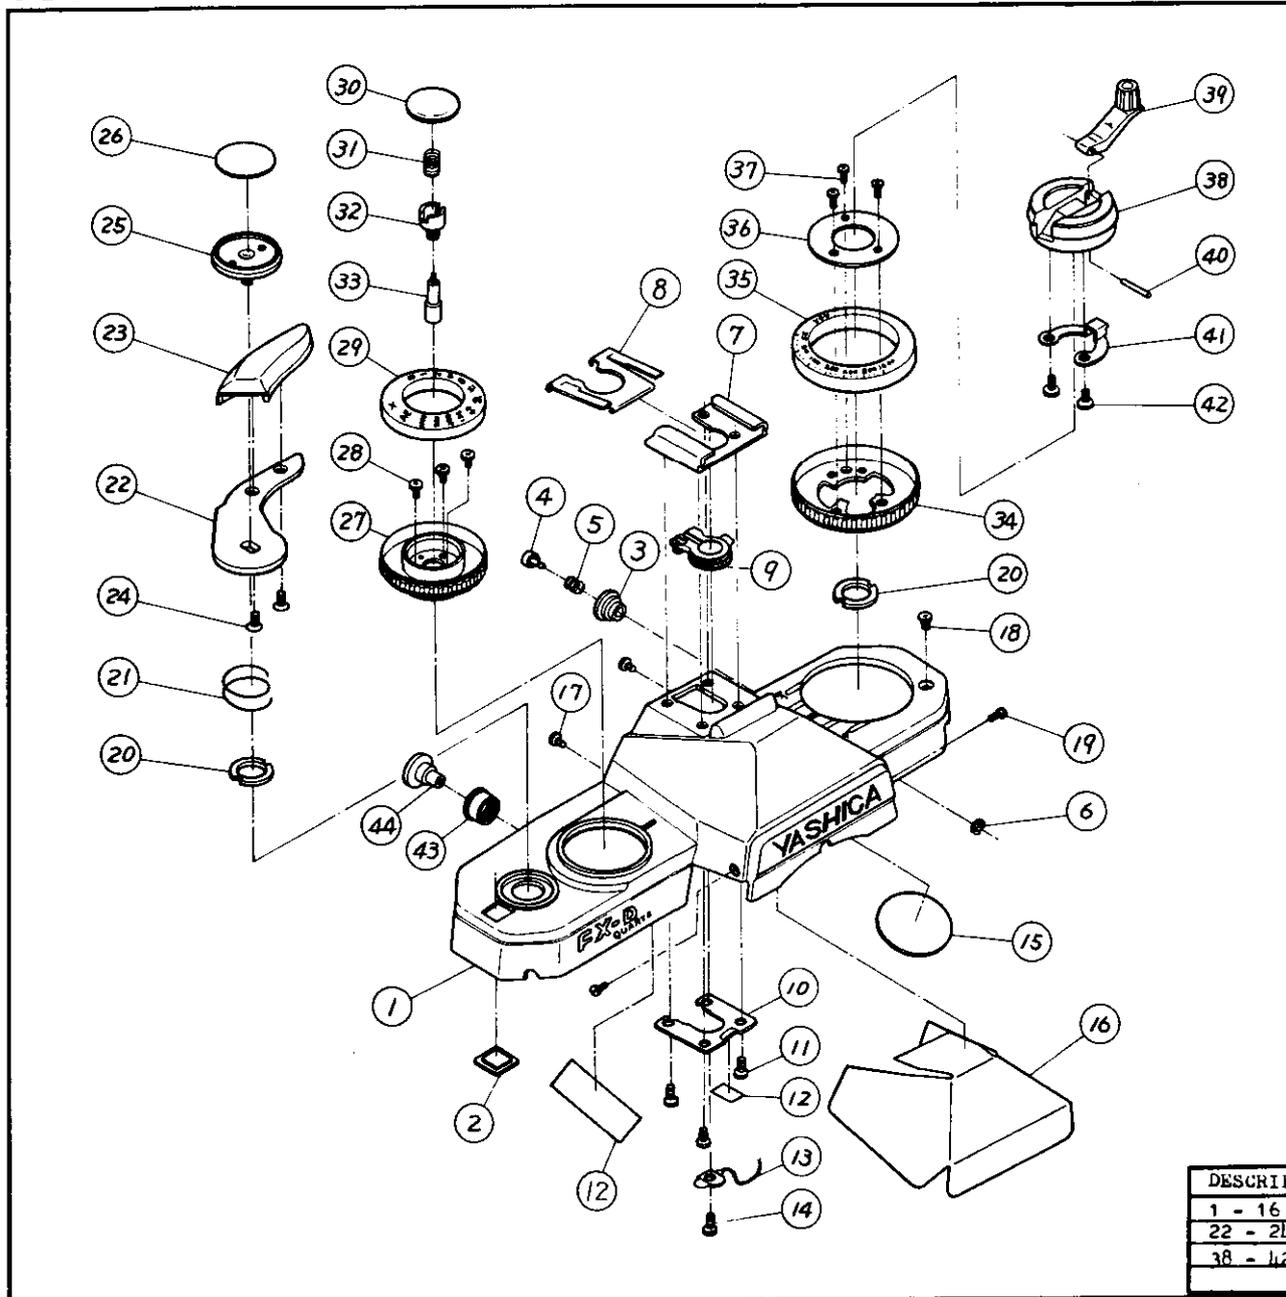

PARTS NO.	DESCRIPTION	QTY
1	★ Top Cover	1
2	152121 Counter Window	1
3	139191 S. Lock Button Holder	1
4	139161 S. Lock Button	1
5	139192 S. Lock Button Spring	1
6	66101225 E - Ring (E-12)	1
7	139169 Accessory Shoe	1
8	139178 Shoe Plate Spring	1
9	069461 Shoe Contact Ass'y	1
10	152125 Shoe Reinforcement Plate	1
11	61912822 Shoe Reinforcement Plate S.S.	3
12	- Acetate Cloth Tape	2
13	152128 Shoe Contact Plate (2) Ass'y	1
14	61914024 Shoe Contact Plate(2)Ass'y SS	1
15	152513 P.C.V.	1
16	152126 Insulation Sheet	1
17	61912529 Top Cover S.S.	2
18	61912029 " "	1
19	61903029 " "	2
20	322312 Top Cover Nut	2
21	152636 Winding Lever Spring	1
22	152630 Winding Lever	1
23	152632 Winding Lever Knob	1
24	61824022 Winding Lever Knob S.S.	2
25	152633 Winding Lever S.S.	1
26	152634 Winding Lever Leather	1
27	152402 S. Dial	1
28	61913024 S. Dial S.S.	3
29	152403 S. Dial Name Plate	1
30	139311 Release Button	1
31	139313 Release Spring	1
32	152409 Shutter Button Shaft Stopper	1
33	152408 Shutter Button Shaft	1
34	152421 ASA Dial	1
35	152422 A. Dial Name Plate	1
36	152423 A. Dial Cover	1
37	61912229 A. Dial Cover S.S.	3
38	139368 Rewind Knob	1
39	139369 Crank Arm Ass'y	1
40	66670830 Crank Arm Pin	1
41	139373 Crank Arm Spring	1
42	69112554 Crank Arm Spring S.S.	2

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 16	069160	Top Cover Ass'y
22 - 24	069661	Winding Lever Ass'y
38 - 42	065920	Rewind Knob Ass'y


NOTE: (Parts with marked "★" are not available.)

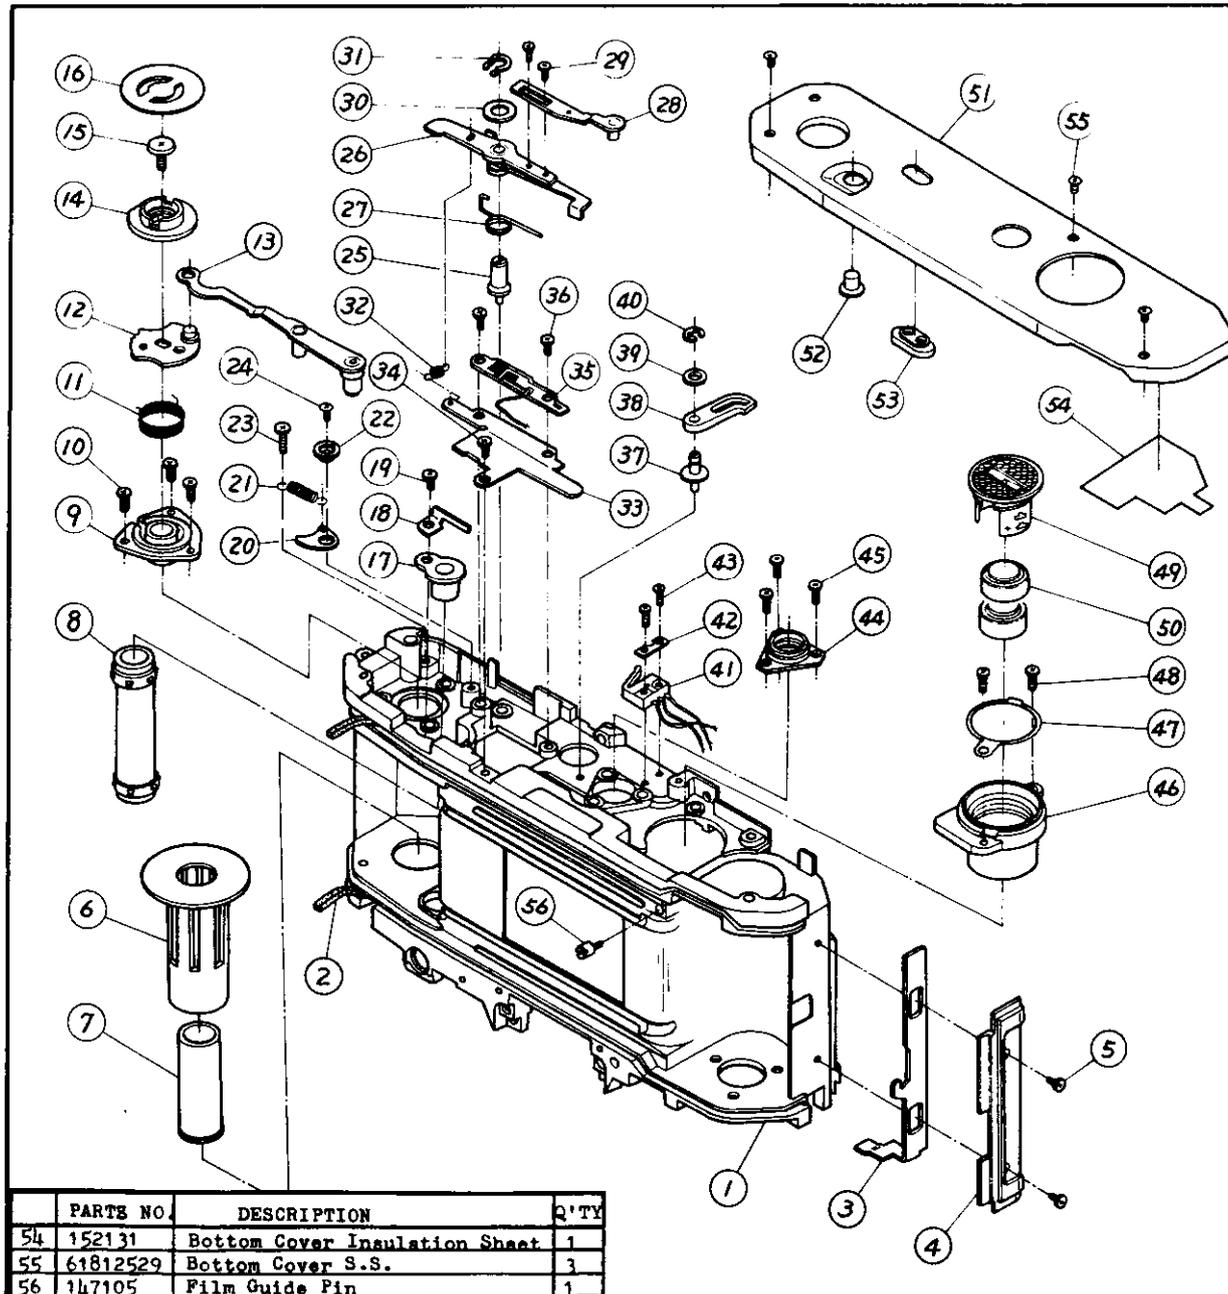

PARTS NO.	DESCRIPTION	Q'TY
1	★ Body	1
2	147153 Body Light-Proof Moquette	2
3	152102 Back Cover Lock Plate	1
4	152103 Lock Plate Cover	1
5	61913024 Lock Plate Cover S.S.	2
6	139641 Outside Spool	1
7	305658 Inside Spool	1
8	139648 Sprocket	1
9	147631 Winding Holder	1
10	63913024 Winding Holder S.S.	3
11	152622 Winding Spring	1
12	066617 Set Cam Plate Ass'y	1
13	066717 SM. Set Lever Ass'y	1
14	152621 MD. Cap Ring	1
15	66001037 MD. Cap Ring S.S.	1
16	139680 MD. Light-Proof Plate	1
17	139646 Sprocket Metal	1
18	147630 Sprocket Reverse Spring	1
19	63912524 Sprocket Reverse Spring S.S.	1
20	147638 Anti-Rewind Claw	1
21	147636 Anti-Rewind Claw Spring	1
22	147637 Anti-Rewind Collar	1
23	61915524 Anti-Rewind Claw Spring S.S.	1
24	61814024 Anti-Rewind Collar S.S.	1
25	139690 W. Obstruction Lever Shaft	1
26	065716 W. Obstruction Lever Ass'y	1
27	139691 W. Obstruction Spring (B)	1
28	065436 TF. Sw. Lever (A) Ass'y	1
29	63901524 TF. Sw. Lever (A) Ass'y S.S.	2
30	60332621 Washer	1
31	66172525 Snap Ring (GS - 2,5)	1
32	139688 W. Obstruction Spring (A)	1
33	139692 SM. Set Lever Fixer	1
34	61913024 SM. Set Lever Fixer S.S.	1
35	139697 Connector Base	1
36	61913024 Connector Base S.S.	2
37	139695 TF. Sw. Shaft	1
38	139670 TF. Sw. Lever (B)	1
39	60122610 Washer	1
40	66101525 E - Ring (E - 15)	1
41	139664 TF. SW.	1
42	139652 TF. SW. Fixer	1
43	63904024 TF. SW. Fixer S.S.	2
44	139144 Tripod Socket	1
45	61924022 Tripod Socket S.S.	3
46	069110 Battery Case Ass'y	1
47	139154 Battery Case Contact (B)	1
48	61914522 Battery Case S.S.	2
49	065930 Battery Cap Ass'y	1
50	★ Battery	2
51	152130 Bottom Cover	1
52	139651 Sprocket Button	1
53	139194 Connector Frame	1

PARTS NO.	DESCRIPTION	Q'TY
54	152131 Bottom Cover Insulation Sheet	1
55	61812529 Bottom Cover S.S.	3
56	147105 Film Guide Pin	1


NOTE : (Parts with marked "★" are not Available)

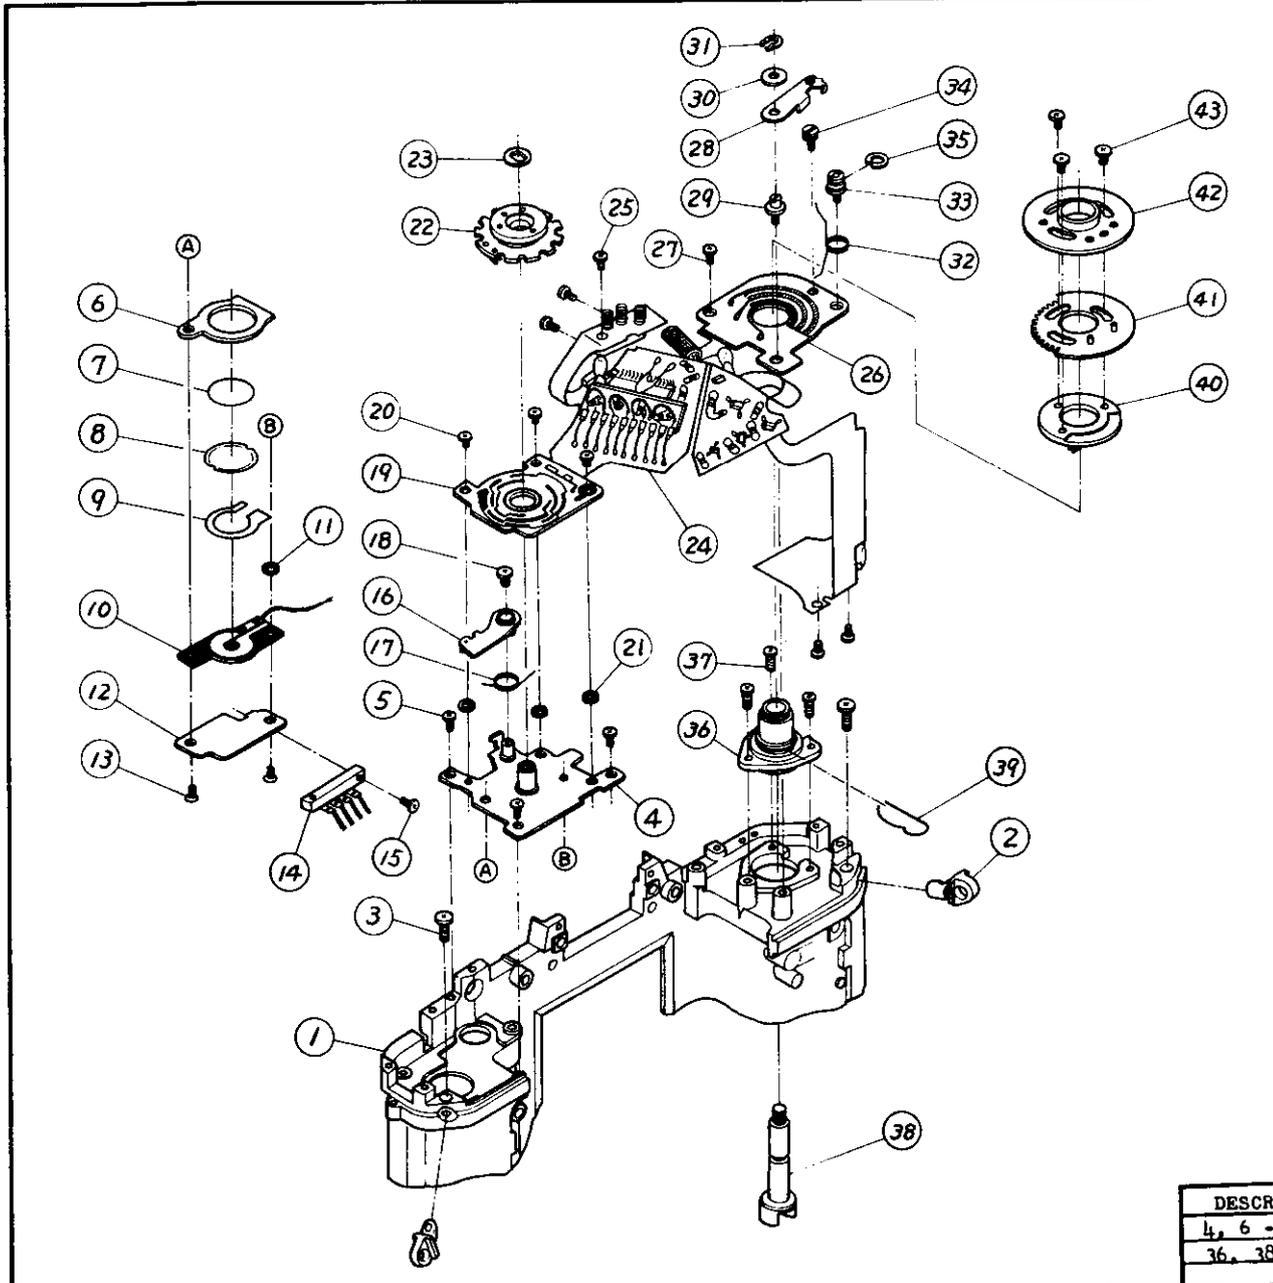

	PARTS NO.	DESCRIPTION	Q'TY
	★	Body	1
2	152104	Strap Holder	2
3	69226054	Strap Holder S.S.	2
4	152401-A	S. Base Plate Sub Ass'y	1
5	61912522	S. Base Plate Ass'y S.S.	3
6	152417	R. Base Holder	1
7	131814	Check Insulation Sheet	1
8	152520	PS. SW.	1
9	152416	Release Base Washer	1
10	152506	Release Base	1
11	60301812	Washer	1
12	152418	Release Base Fixer	1
13	61813022	Release Base Fixer S.S.	2
14	139339	Combination Connector	1
15	63903024	Combination Connector S.S.	1
16	069301	S. Click Lever Ass'y	1
17	152414	S. Click Spring	1
18	66001033	S. Click Lever Ass'y S.S.	1
19	152504	S. Base	1
20	61912522	S. Base S.S.	3
21	60151812	Washer	3
22	069442	S. Dial Shaft Ass'y	1
23	152407	S. Dial Shaft Stopper	1
24	069503	Amp.	1
25	61912522	Amp. S.S.	5
26	152505	ASA Base	1
27	61912522	ASA Base S.S.	1
28	069428	A. Lock Lever Ass'y	1
29	152430	A. Lock Lever Shaft	1
30	60322110	Washer	1
31	66172025	E - Ring (GS - 2)	1
32	152431	A. Lock Spring	1
33	152432	A. Lock Spring Shaft	1
34	152433	A. Lock Spring Post	1
35	66150325	E - Ring (CE - 3)	1
36	152640	Rewind Shaft Holder	1
37	63924524	Rewind Shaft Holder S.S.	3
38	139342	Rewind Shaft	1
39	139343	Rewind Shaft Spring	1
40	152436-7	A. Contact Holder Ass'y	1
41	152426-7	A. Click Plate Ass'y	1
42	152424	A. Dial Shaft	1
43	63912824	A. Dial Shaft S.S.	3

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
4, 6 - 13	069445	S. Base Plate Ass'y
36, 38, 39	069610	Rewind Shaft Ass'y


NOTE: (Parts marked "★" are not Available)

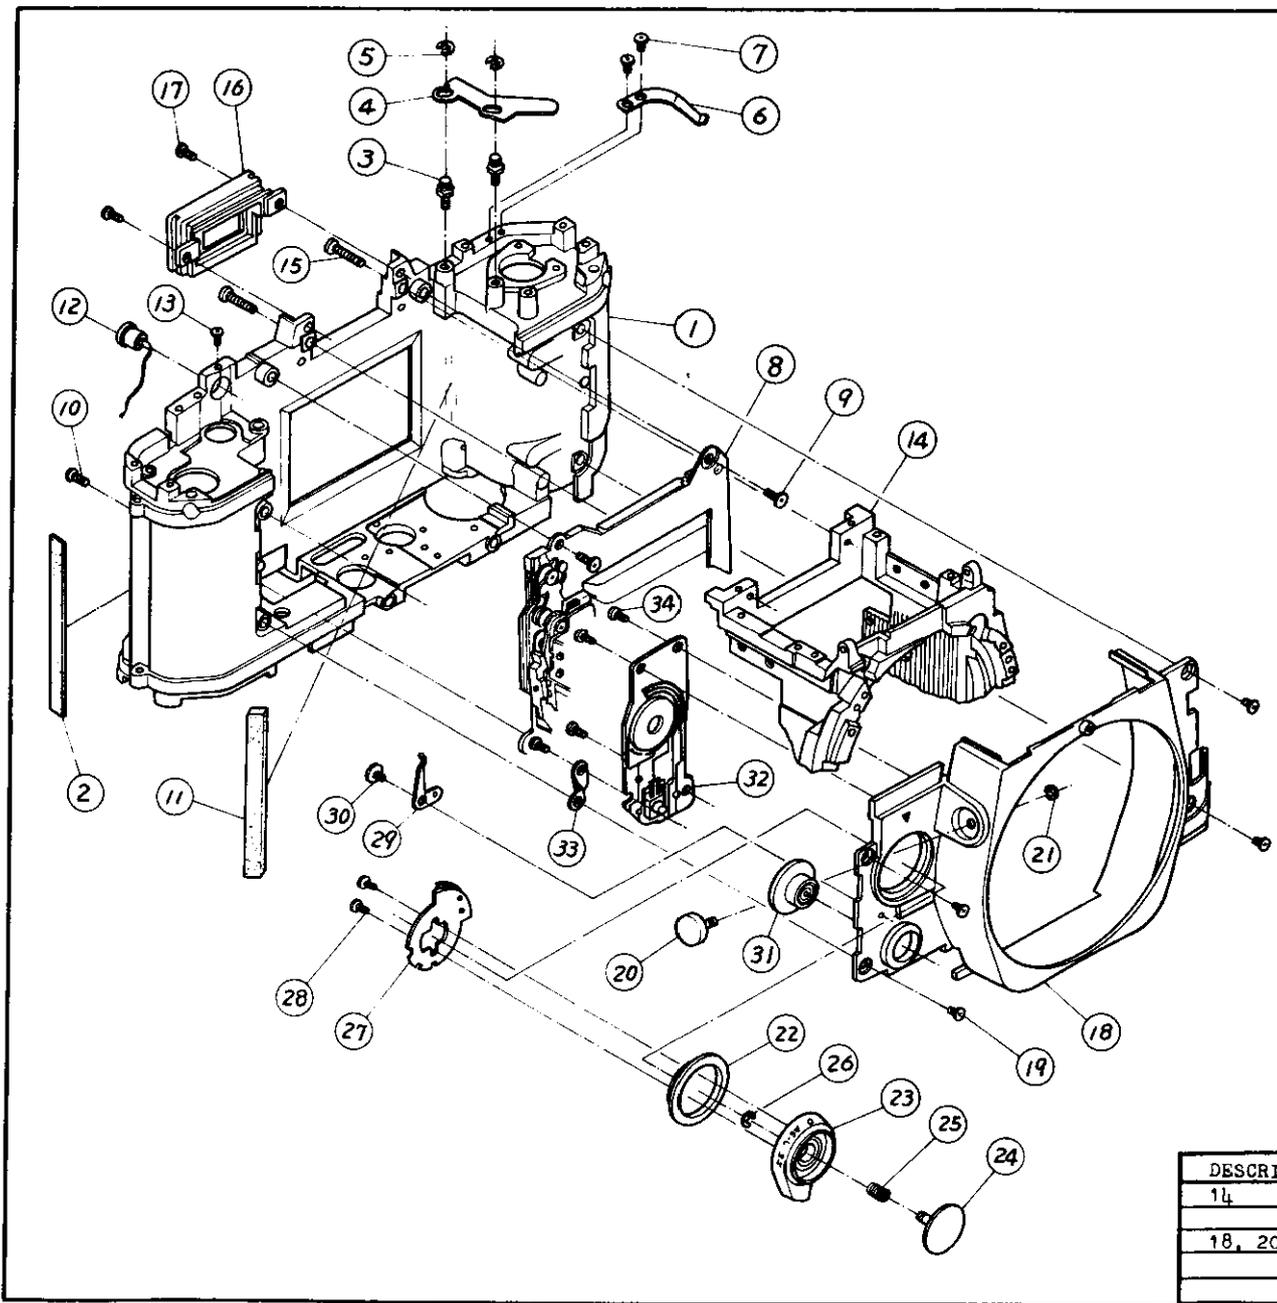

PARTS NO	DESCRIPTION	QTY
1	★ Body	1
2	152116 Body Hinge Moquette	1
3	152435 A. Reverse Lever Shaft	2
4	152434 A. Reverse Lever	1
5	66101525 E. Ring (E - 15)	2
6	147142 Lock Plate Spring	1
7	61912224 Lock Plate Spring S.S.	2
8	139201 Complete Shutter	1
9	61824522 Shutter S.S.	2
10	61924022 " "	1
11	147206 Shutter Light-Proof Moquette	1
12	065462 R. Socket Ass'y	1
13	61812521 R. Socket Ass'y S.S.	1
14	★ Mirror Box	1
15	61927024 Mirror Box S.S.	2
16	139168 Eye-Piece Frame	1
17	61913524 Eye-Piece Frame S.S.	2
18	152801-A Mount Cover Sub Ass'y	1
19	63912224 Mount Cover S.S.	4
20	147803 Set Off Button	1
21	66101225 E - Ring (E - 12)	1
22	★ EL. Lever Holder	1
23	152205-A EL. Lever Ass'y	1
24	139209 EC. Button	1
25	139210 EC. Button Spring	1
26	66101225 E - Ring (E - 12)	1
27	152208-9 EL. Rotation Plate Ass'y	1
28	61913024 EL Rotation Plate Ass'y S.S.	2
29	152210 EL. Click Spring	1
30	66001041 EL. Click Spring S.S.	1
31	152212 Self Window	1
32	152507-A EC. Base Ass'y	1
33	152213 Earth Plate	1
34	69112554 EC. Base Ass'y S.S.	4

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
14	069750	Mirror Box Ass'y
		See Page No. 6, 7, 8
18, 20-34	069801	Mount Cover Ass'y


NOTE: (Parts with marked "★" are not available.)

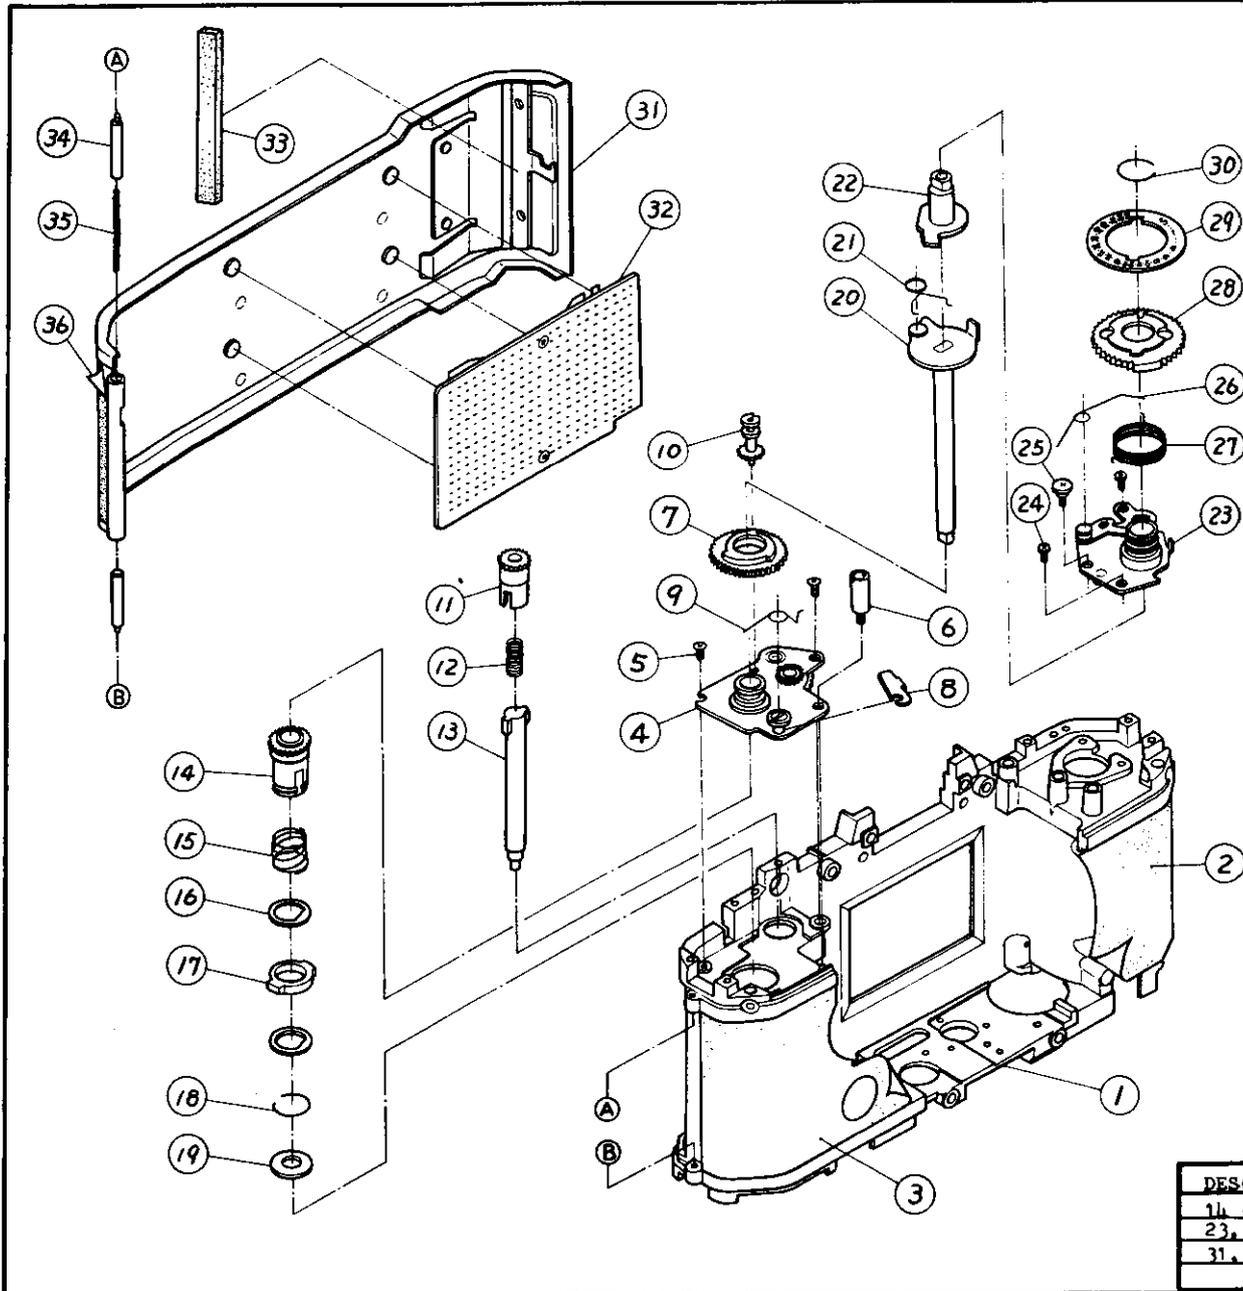

PARTS NO	DESCRIPTION	Q'TY
1	★ Body	1
2	152114 Front Leather (Right)	1
3	152115 Front Leather (Left)	1
4	069200 W. Base Plate Ass'y	1
5	61813524 W. Base Plate Ass'y S.S.	2
6	152610 S. Base Plate Post	1
7	147603 A. Gear	1
8	147611 A. Gear Stopper	1
9	147619 A. Gear Stopper Spring	1
10	147863 Counter Gear - 1	1
11	139644 Sprocket Gear	1
12	139650 Sprocket Spring	1
13	139647 Sprocket Shaft	1
14	147616 Spool Gear	1
15	147640 Friction Washer	1
16	139640 Friction Washer	2
17	139639 Friction Plate	1
18	147642 Spring Cover Stopper	1
19	60284110 Washer	1
20	069641-A Winding Shaft Ass'y	1
21	147625 Ratchet Claw Spring	1
22	069645 Winding Lever Shaft Ass'y	1
23	★ Counter Base Plate Ass'y	1
24	61913024 Counter Base Plate Ass'y S.S.	2
25	147816 Lock Lever Shaft	1
26	152870 Counter Reverse Lever Spring	1
27	139890 Counter Spring	1
28	139888 Counter Gear - 2	1
29	152864 Counter Name Plate	1
30	139891 Counter Gear Stopper	1
31	★ Back Cover Ass'y	1
32	066287 Pressure Plate Ass'y	1
33	132108 Back Cover Lock Moquette	1
34	152106 Hinge Shaft	2
35	131133 Hinge Shaft Spring	1
36	152109 Back Cover Leather	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
14 - 19	066601	Spool Gear Ass'y
23, 26 - 30	069830	Counter Base Plate Ass'y
31, 33, 36	069103	Back Cover Ass'y


NOTE: (Parts with marked "★" are not available.)

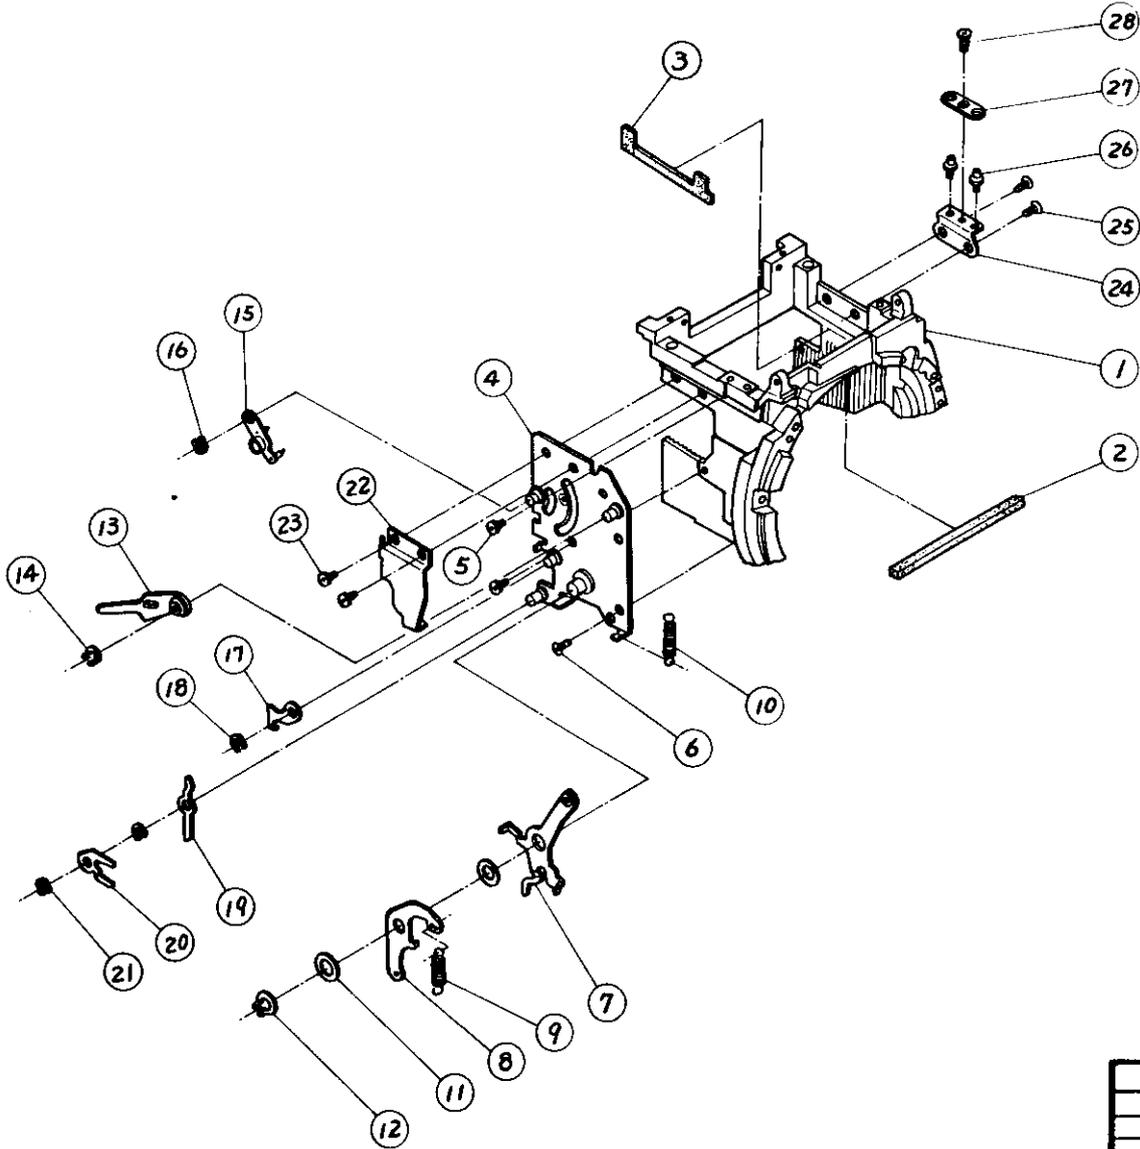

PARTS NO.	DESCRIPTION	Q'TY
1	★ Mirror Box	1
2	139787 Mirror Cushion } (Select)	1
-	147787 " "	-
3	139859 M. Moquette	1
4	139753-A MC. Base Plate Sub Ass'y	1
5	152782 MC. Base Plate S.S.	2
6	152781 " "	1
7	065212 MCL - 2 Ass'y	1
8	065297 MCL - 1 Ass'y	1
9	139760 MC. Driving Spring	1
10	139761 MC. Restore Spring	1
11	60223122 MCL - 1 Washer	2
12	66173025 Snap Ring (GS - 3)	1
13	065213 MCL - 3 Ass'y	1
14	66172025 Snap Ring (GS - 2)	1
15	065214 MCL - 4 Ass'y	1
16	66172025 Snap Ring (GS-2)	1
17	139770 MCL - 5	1
18	66172025 Snap Ring (GS-2)	1
19	139771 MCL - 6	1
20	139772 MCL - 7	1
21	66172025 Snap Ring (GS-2)	2
22	139773 MC. Light-Proof Plate	1
23	63901524 MC. Light-Proof Plate S.S.	2
24	139875 S-LED Adjusting Plate - 1	1
25	61812524 S-LED Adjusting Plate - 1, S.S.	2
26	139879 S-LED Adjusting Screw	2
27	139877 S-LED Adjusting Plate - 2	1
28	61914522 S-LED Adjusting Plate - 2, S.S.	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 21	069750	Mirror Box Ass'y
		(See Page No. 4,7,8)
4, 7-14, 17-21	069195	MC. Base Plate Ass'y


NOTE: (Parts with marked "★" are not available.)

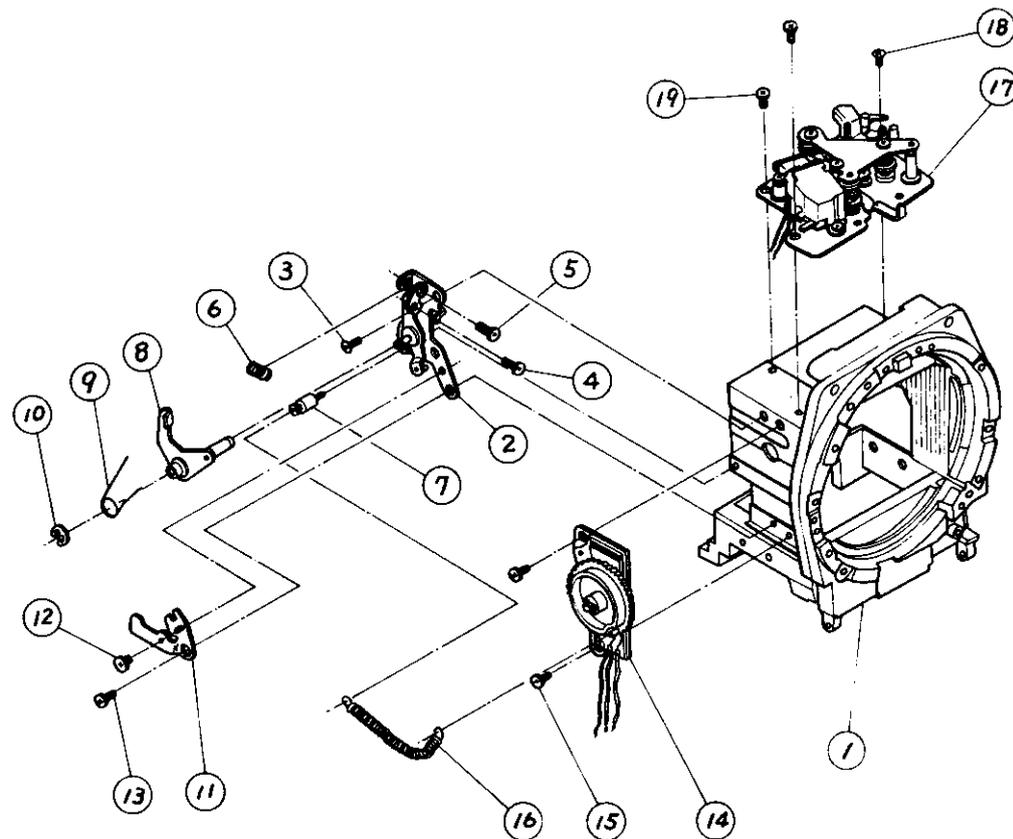

PARTS NO	DESCRIPTION	Q'TY
1	★ Mirror Box	1
2	069250 ML. Base Plate Ass'y	1
3	152781 ML. Base Plate Ass'y S.S.	1
4	63913024 " " "	1
5	63914022 " " "	1
6	139833 ML. Base Plate Spring	1
7	147831 Aperture Resister Spring Post	1
8	065255 ML - 5 Ass'y	1
9	139808 ML - 4, 5 Spring	1
10	66101525 E- Ring (E-15)	1
11	065256 ML - 6 Ass'y	1
12	63911524 ML - 6 Ass'y S.S.	1
13	139834 " " "	1
14	069637 AVR Ass'y	1
15	152782 AVR Ass'y S.S.	2
16	147830 Aperture Resister Spring	1
17	069197 QR Base Plate Ass'y	1
18	152781 QR Base Plate Ass'y S.S.	1
19	152782 " " "	2

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 19	069-750	Mirror Box Ass'y (See Page No. 4, 6, 8)

NOTE : (Parts marked "★" are not Available)

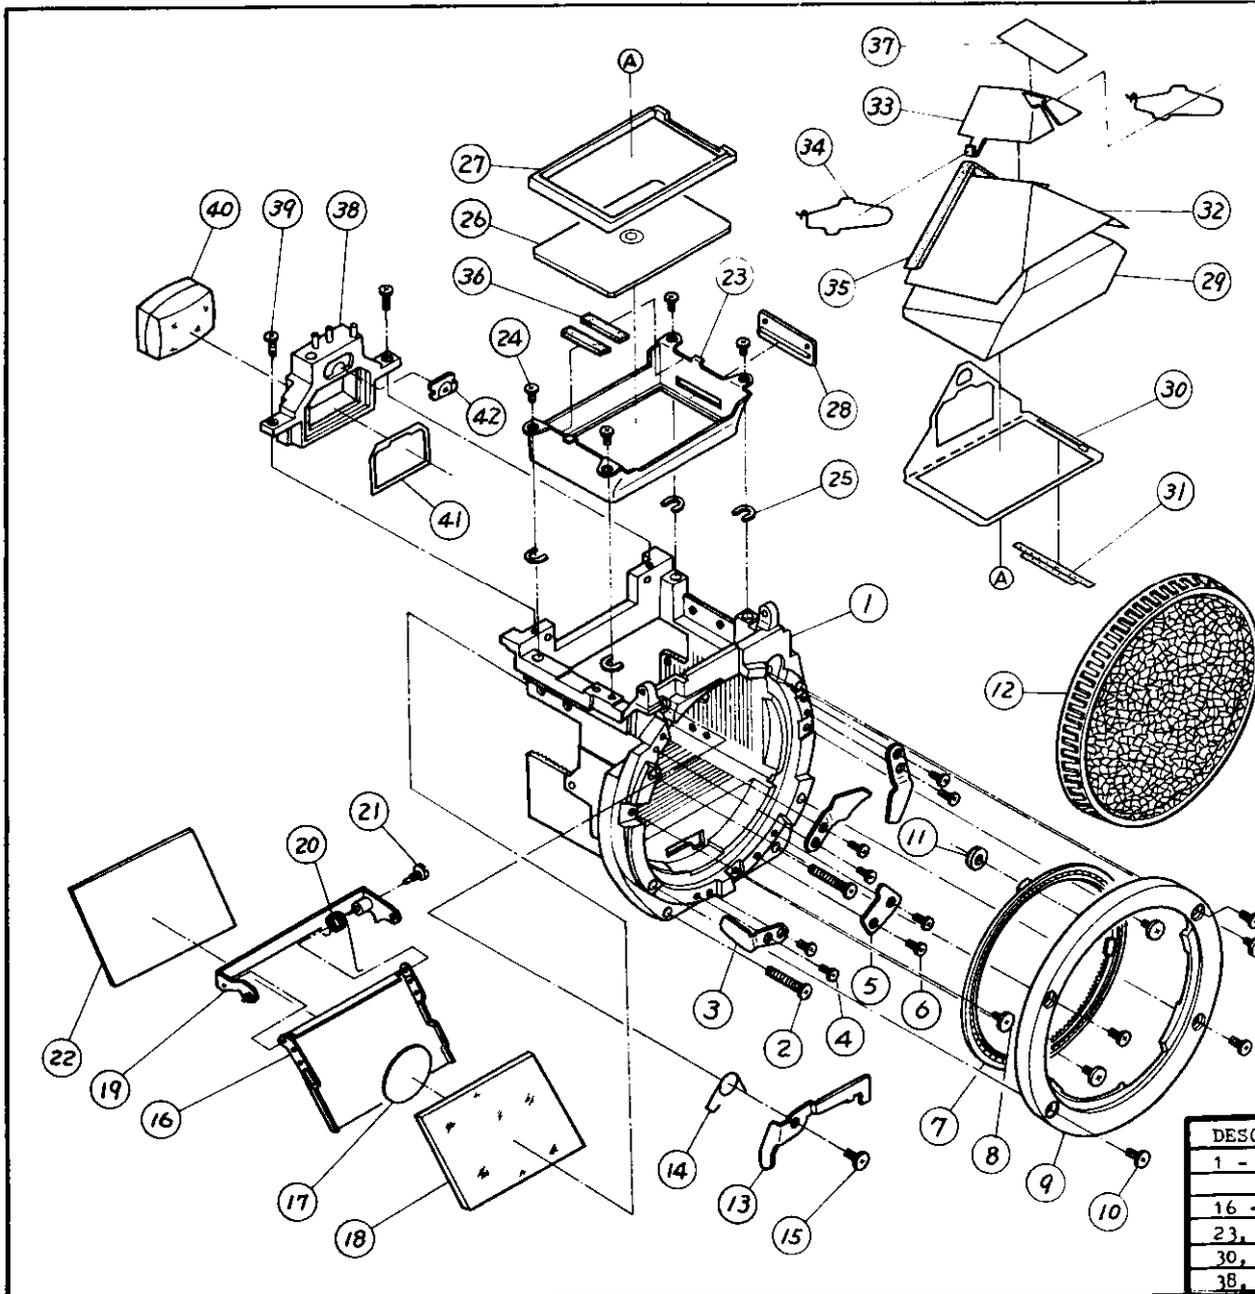

PARTS NO.	DESCRIPTION	Q'T
1	★ Mirror Box	1
2	132143 Strap Holder S.S.	2
3	139812 Mount Spring	3
4	61913024 Mount Spring S.S.	6
5	139813 Mount Stopper	1
6	61913024 Mount Stopper S.S.	2
7	139823 F. Stop Connecting Ring	1
8	66001041 F. Stop Connecting Ring S.S.	4
9	147821 Body Mount	1
10	131177 Body Mount S.S.	4
11	147822 Lock Lever Washer	1
12	128118 Body Cap	1
13	139815 Lock Lever	1
14	147817 Lock Lever Spring	1
15	147816 Lock Lever Shaft	1
16	065741 M. Frame Sub Ass'y	1
17	139774 Mirror Adhesive Tape	1
18	147791 Mirror	1
19	065253 ML -3 Ass'y	1
20	139798 M. Spring	1
21	139706 M. Pin - 2	1
22	139799 M. Frame Light-Proof Sheet	1
23	139864 Penta Prism Holder	1
24	63913024 Penta Prism Holder S.S.	4
25	139871 P. Adjusting Washer(t 0.5)	-
-	139872 " " (t 0.2)	4
-	139873 " " (t 0.3)	-
26	152866 Focusing Glass	1
27	139870 Penta Spacer	1
28	139865 S. Prism	1
29	152860 Penta Prism	1
30	139868 Finder Mask Frame	1
31	139869 S. Name Plate	1
32	139861 Penta Cover	1
33	139862 Penta Prism Fixer	1
34	139863 Penta Prism Fixer Spring	2
35	139858 Penta Dust-Proof Moquette	1
36	131710 Mirror Cushion	2
37	- Acetate Cloth Tape	1
38	139873 SPD Holder - 3	1
39	63904024 SPD Holder S.S.	2
40	139878 Eye-Piece Lens	1
41	139882 Eye-Piece Mask	1
42	142-819 Light-Gathering Lens	1

DESCRIPTION	ORDER NO	ASSEMBLY PARTS
1 - 11, 13 - 22	069750	Mirror Box Ass'y (See! Page No. 4,6,7)
16 - 22	066741	M. Frame Ass'y
23, 26 - 37	069815	Penta Prism Holder Ass'y
30, 31	065856	Finder Mask Frame Ass'y
38, 40 - 42	065662	SPD Holder Ass'y

NOTE : (Parts marked "★" are not Available)